



Cascadia Driver's Manual

Models: CA113 DC
CA113 SLP
CA125 DC
CA125 SLP

Table of Contents

1. Foreword.....	5
2. Vehicle Identification	9
3. Vehicle Access	17
4. Electrical System	27
5. Instruments	41
6. Driver Controls	77
7. Driver Assistance Features.....	111
8. Seats and Restraints	145
9. Climate Control.....	163
10. Cab Features.....	175
11. Engine Starting, Operation, and Shutdown.....	183
12. Optional Engine Systems.....	191
13. Emissions and Fuel Efficient Components	197
14. Brake Systems	207
15. Manual Transmissions and Hydraulic Clutch	217
16. Automated Transmissions	229
17. Drive Axles	255
18. Steering System	261
19. Fifth Wheels	265
20. Trailer Couplings.....	285
21. Pre- and Post-Trip Checklists.....	289
22. Pre- and Post-Trip Inspections and Maintenance.....	295
23. Cab Appearance	323
24. Headlight Aiming.....	329
25. In an Emergency.....	335
26. Natural Gas Vehicle	353
27. Specifications	369
28. Telematics Data	377

1.01 Foreword.....	6
1.02 Customer Assistance Center.....	6
1.03 Environmental Concerns and Recommendations	6
1.04 Data Logging	6
1.05 Emissions and Fuel Efficiency Compliance.....	7
1.06 Reporting Safety Defects	7

1. Foreword

1.01 Foreword

Foreword

Instructions and procedures are those recommended by Freightliner Trucks, or the component manufacturer. Maintenance schedules and additional service information are included in the product Maintenance Manual.

IMPORTANT: Descriptions and specifications in this manual were in effect at the time of printing. Daimler Truck North America LLC reserves the right to discontinue models and to change specifications or design at any time without notice and without incurring obligation. Descriptions and specifications contained in this publication provide no warranty, expressed or implied, and are subject to revision and editions without notice.

Refer to <https://northamerica.daimlertruck.com/> for more information, or contact Daimler Truck North America LLC at the address below.

Environmental Concerns and Recommendations

Whenever you see instructions in this manual to discard materials, you should attempt to reclaim and recycle them. To preserve our environment, follow appropriate environmental rules and regulations when disposing of materials.

**NOTICE:**

Do not replace suspension, axle, or steering parts (such as springs, wheels, hubs, and steering gears) with used parts. Used parts may have been subjected to collisions or improper use and have undetected structural damage.

© 2025 Daimler Truck North America LLC

All rights reserved. No part of this publication, in whole or in part, may be translated, reproduced, stored in a retrieval system, or transmitted in any form by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Daimler Truck North America LLC. Daimler Truck North America LLC is a Daimler company.

Daimler Truck North America LLC Service Systems and Documentation

P.O. Box 3849

Portland, OR

97208-3849

1.02 Customer Assistance Center

Having trouble finding service? Call the Customer Assistance Center at 1-800-385-4357 or 1-800-FTL-HELP. For dealer referrals and breakdown support, call night or day, weekdays or weekends. For specification requests and all other concerns and inquiries, the Customer Assistance Center is available 5:00 A.M. to 4:00 P.M. PST Monday through Friday. Our people are knowledgeable, professional, and committed to following through to help you keep your truck moving.

1.03 Environmental Concerns and Recommendations

Whenever you see instructions in this manual to discard materials, you should first attempt to reclaim and recycle them. To preserve our environment, follow appropriate environmental rules and regulations when disposing of materials.

1.04 Data Logging

This vehicle is equipped with a control module that performs data logging capabilities.

This vehicle is equipped with one or more devices that record specific vehicle data and may perform some of the same functionality as a regulated Event Data Recorder but the device(s) are not subject to, nor designed pursuant to, 49 C.F.R. Part 563.

The type and amount of data recorded varies depending on how the vehicle is equipped (such as the brand of engine, if an air bag is installed, or if the vehicle features a collision avoidance system, etc.). GPS location data, fault codes, and other technical data may be recorded.

This data may help provide a better understanding of the circumstances of a crash.

Personal data such as name, gender, and age are not recorded. However, other parties such as law enforcement, could combine the data logger's contents with the type of personally identifying data routinely acquired during a crash investigation.

1.05 Emissions and Fuel Efficiency Compliance

This vehicle must be regularly inspected and maintained as indicated in the *Cascadia Maintenance Manual*, and in the *Pre- and Post-Trip Inspections and Maintenance* chapter in this manual, in order to continue satisfactory performance and ensure coverage of the vehicle under the manufacturer's warranty.

Many maintenance procedures ensure that the vehicle and engine continue to comply with applicable emissions standards. Maintenance procedures, using components engineered to comply with greenhouse gas emissions and fuel efficiency regulations, may be performed by an authorized Daimler Truck North America dealer, an independent outlet, or the vehicle owner or operator.

The vehicle owner is responsible for determining the suitability of replacement components to maintain compliance with federal and local jurisdictional regulations. Components including, but not limited to, low-rolling resistance tires are specifically designed and manufactured to exacting standards for regulatory fuel efficiency and greenhouse gas emissions compliance. It is important that these components are always replaced with components that meet or exceed the performance of the originally installed components.

1.06 Reporting Safety Defects

Vehicles domiciled in the USA thought to have a defect that could cause a crash, injury, or death, should immediately be reported to the National Highway Traffic Safety Administration (NHTSA) and Daimler Truck North America LLC.

If the NHTSA receives similar complaints, it may open an investigation; if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However NHTSA cannot become involved in individual problems between you, your dealer, or Daimler Truck North America LLC.

To contact NHTSA, call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153).

To e-mail NHTSA, go to www.safertruck.gov/.

You can contact NHTSA by mail at: Administrator, NHTSA Headquarters, 1200 New Jersey Avenue SE, West Building, Washington, DC 20590.

For more information about motor vehicle safety, go to www.safertruck.gov/.

To contact Freightliner about a concern about a specific vehicle call the Customer Assistance Center at 1-800-385-4357 or complete a Product Concern Form.

Vehicles domiciled in Canada thought to have a defect that could cause a crash, injury, or death, should immediately be reported to Transport Canada and Daimler Truck North America LLC.

If Transport Canada receives similar complaints, it may open an investigation; if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, Transport Canada cannot become involved in individual problems between you, your dealer, or Daimler Truck North America LLC.

To contact Freightliner about a concern about a specific vehicle call the Customer Assistance Center at 1-800-385-4357 or complete a Product Concern Form.

To contact Transport Canada, call the Defect Investigations and Recalls Division toll-free in Canada at 1-800-333-0510 or 819-994-3328 in the Gatineau-Ottawa area or internationally.

You can also contact Transport Canada by mail at: Transport Canada, 330 Sparks Street, Ottawa, Ontario, K1A 0N5 Canada.

The following websites contain more information on Canadian recalls:

English: www.tc.gc.ca/recalls.

French: www.tc.gc.ca/rappels.

For additional road safety information, please visit the Road Transportation website:

English: www.tc.gc.ca/en/services/road

French: www.tc.gc.ca/fr/services/routier

© 2016–2023 Daimler Truck North America LLC. All rights reserved. Daimler Truck North America LLC is a Daimler company.

No part of this publication, in whole or part, may be translated, reproduced, stored in a retrieval system, or transmitted in any form by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Daimler Truck North America LLC. For additional information, please contact Daimler Truck North America LLC, Service Systems and Documentation, P.O. Box 3849, Portland OR 97208–3849 U.S.A. or see <https://northamerica.daimlertruck.com/> and <https://freightliner.com/>.

2.01 Component Information Label 10

2.02 Component GWR Label..... 10

2.03 Federal Motor Vehicle Safety Standard Labels 10

2.04 Canadian Motor Vehicle Safety Standard Labels 11

2.05 Aftertreatment System Indicators Label..... 12

2.06 EPA Noise Emission Control Label 13

2.07 Vehicle Emission Control Information Label..... 14

2.08 Certified Clean Idle Label..... 15

2. Vehicle Identification

2.01 Component Information Label

NOTE: Labels shown in this chapter are examples only. Actual specifications may vary from vehicle to vehicle.

The component information label lists the vehicle model, identification number, and major component models. It also lists the major assemblies and installations shown on the chassis specification sheet. The component information label is attached to the inside of the glove box. An illustration of the label is see Fig.1,Component Information Label.

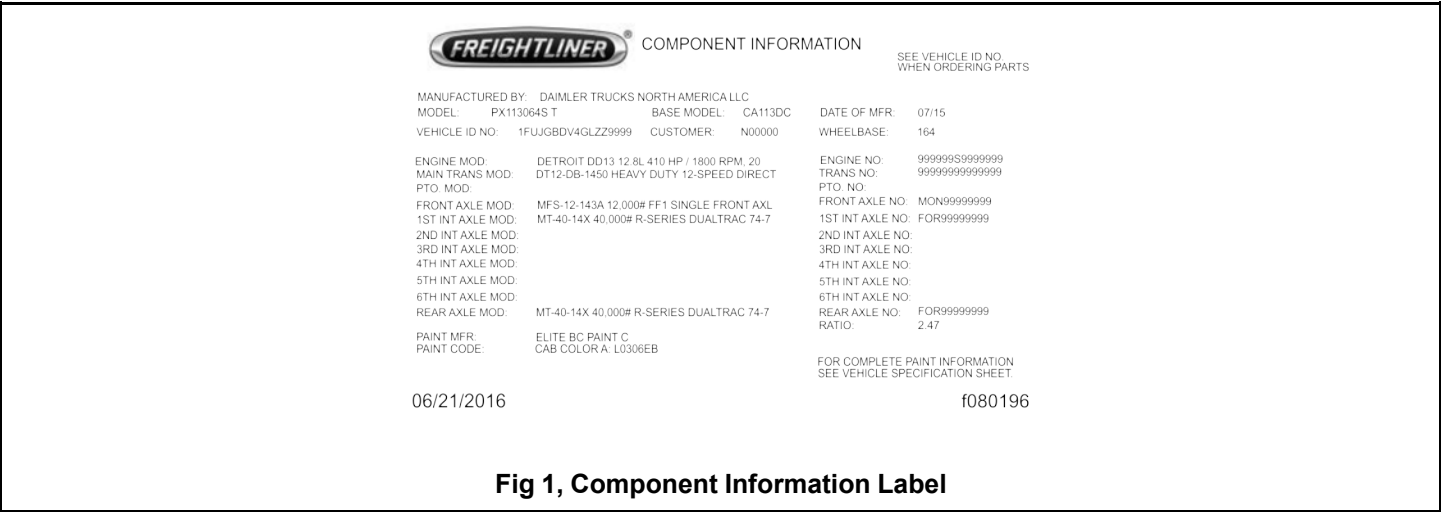


Fig 1, Component Information Label

2.02 Component GWR Label

The component GWR label is located on the passenger-side B-pillar. The label provides maximum GWR ratings for each component.

See Fig.2,Component GWR Label for a typical component GWR label.

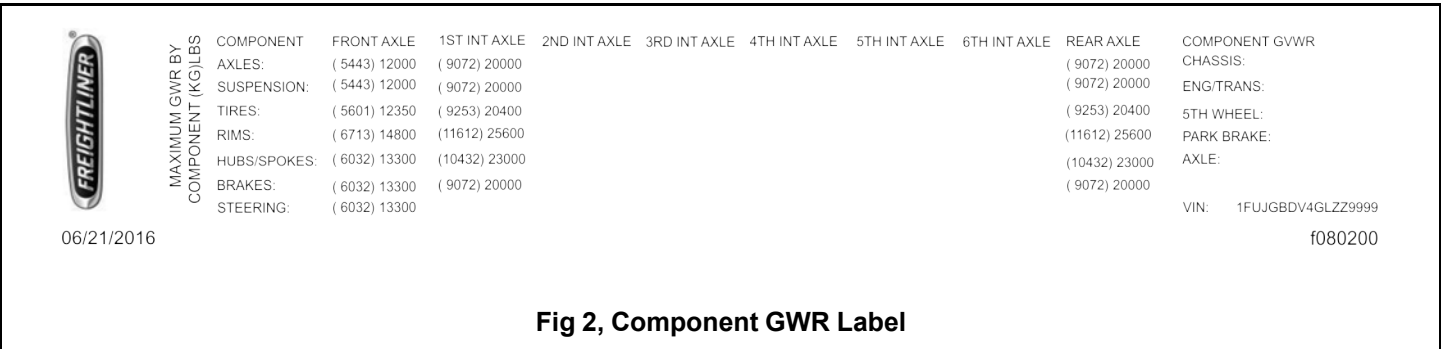


Fig 2, Component GWR Label

2.03 Federal Motor Vehicle Safety Standard Labels

NOTE: Due to the variety of Federal Motor Vehicle Safety Standard (FMVSS) certification requirements, not all of the labels shown will apply to your vehicle.

Tractors with or without fifth wheels purchased in the U.S. are marked as certified by means of an FMVSS certification label. See Fig.3,Vehicle Certification Label. This label is attached to the driver-side B-pillar, see Fig.4,Label Locations.




08/31/2020

MANUFACTURED BY: DAIMLER TRUCKS N.A. LLC
DATE OF MFR: 07/15
GVWR/PNBV-KG: 23,587
GVWR/PNBV-LBS: 52,000
THIS VEHICLE COMPLIES WITH ALL
APPLICABLE FEDERAL MOTOR VEHICLE
SAFETY STANDARDS IN EFFECT AT THE DATE
OF MANUFACTURE SHOWN ABOVE.
VEHICLE ID NO: 1FUJGBDV4GLZZ9999
TYPE: TRUCK/TRACTOR TT/CT
COUNTRY OF ORIGIN: U.S.A.

GAWR/PNBE	GAWR/PNBE	TIRES	RIMS	KPA COLD	PSI COLD	"S"
KGS	LBS					
FRONT AXLE: 5,443	12,000	275/80R22.5(G)	22.5X8.25	758	110	S
1ST INT AXLE: 9,072	20,000	445/50R22.5(L)	22.5X14.0	827	120	S
2ND INT AXLE:						
3RD INT AXLE:						
4TH INT AXLE:						
5TH INT AXLE:						
6TH INT AXLE:						
REAR AXLE: 9,072	20,000	445/50R22.5(L)	22.5X14.0	827	120	S

f080199

Fig 3, Vehicle Certification Label

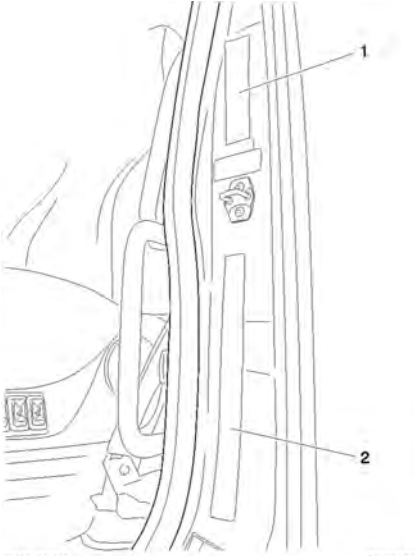

02/28/2012

f080182

1. EPA Noise Emission Control Label

2. FMVSS Certification Label

Fig 4, Label Locations

The tire and rim portion of the FMVSS certification label certifies suitable tire and rim combinations that can be installed on the vehicle, for the given gross axle weight rating. Tires and rims installed on the vehicle at the time of manufacture may have a higher load capacity than that certified by the tire and rim label. If the tires and rims currently on the vehicle have a lower load capacity than that shown on the tire and rim label, then the tires and rims determine the load limitations on each of the axles.

Trucks built without a cargo body that are intended for service in the U.S. have an incomplete vehicle certification label attached by the final-stage manufacturer. This label will be attached to the incomplete vehicle document included with the vehicle, and certifies that the vehicle conforms to all applicable FMVSS regulations in effect on the date of completion.

2.04 Canadian Motor Vehicle Safety Standard Labels

In Canada, tractors with fifth wheels are marked as certified by means of a statement of compliance label with the Canadian National Safety Mark attached to the driver-side door frame B-pillar. See Fig.5,[Canadian National Safety Mark](#).

Trucks built without a cargo body and tractors built without a fifth wheel that are intended for service in Canada have an incomplete vehicle certification label attached to the driver-side B-pillar. After completion of the vehicle, a complete certification label must be attached by the final-stage manufacturer to certify that the vehicle conforms to all applicable Canada Motor Vehicle Safety Standard (CMVSS) regulations in effect on the date of completion.



Fig 5, Canadian National Safety Mark

2.05 Aftertreatment System Indicators Label

Engines and vehicles manufactured after December 31, 2006 and domiciled in the U.S. or Canada are required to meet all EPA regulations effective as of the vehicle build date, and are equipped with an emission aftertreatment system (ATS). Vehicles domiciled outside of the U.S. and Canada may not have aftertreatment equipment, depending upon local statutory emissions guidelines. See .

A warning label on the driver-side visor contains important warning indicators in the instrument cluster that pertain to the ATS. See 1, [Applicable Emissions System Based on Build Date and EPA Regulations](#) . see Fig. 6, [ATS Indicators, EPA07](#) or see Fig.7, [ATS Indicators, EPA10 and Newer](#).

It is a violation of U.S. federal law to alter exhaust plumbing, ATS, or other components in any way that would bring the engine/vehicle out of compliance with certification requirements [Ref: 42 U.S.C. S7522(a) (3)]. It is the owner’s responsibility to maintain the vehicle so that it conforms to EPA regulations.

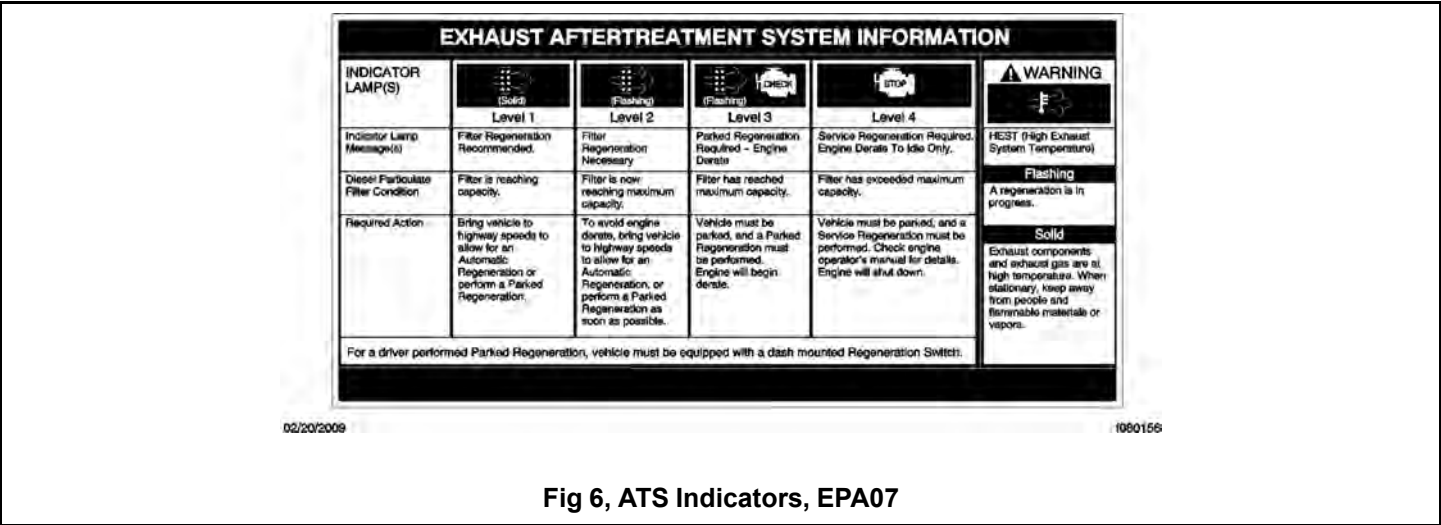


Fig 6, ATS Indicators, EPA07

Applicable Emissions System Based on Build Date and EPA Regulations	
Build Date	Regulation: Emissions Components
January 1, 2007–December 31, 2009	EPA07 (reduce nitrogen oxides (NOx) emissions to 1.1 g/bhp-hr, and reduce particulate matter emissions to 0.01 g/bhp-hr): After-treatment device (ATD) containing a diesel particulate filter that traps soot and ash.*
January 1, 2010–December 31, 2012	EPA10 (reduce NOx emissions to 0.2 g/bhp-hr): EPA07-type ATD, with additional selective catalyst reduction (SCR) technology that

Table 1, Applicable Emissions System Based on Build Date and EPA Regulations

	utilizes diesel exhaust fluid (DEF) to convert NOx to nitrogen and water vapor.
From March 5, 2012–December 31, 2015	GHG14: Aerodynamic and fuel efficiency components including, but not limited to, tires, cab/sleeper side extenders, chassis fairings, bumper, hood, vehicle speed limiters, and idle reduction timers specifically designed to meet regulatory fuel efficiency and greenhouse gas emissions standards.
From January 1, 2016	GHG17: GHG14 components plus OBD16 instrumentation and sensor upgrades, and component technology that meets NHTSA and EPA 2017 fuel efficiency and greenhouse gas emission standards (GHG17) requirements.

* Cummins, Detroit, and Mercedes-Benz ATD's are also equipped with a diesel oxidation catalyst to break down pollutants.

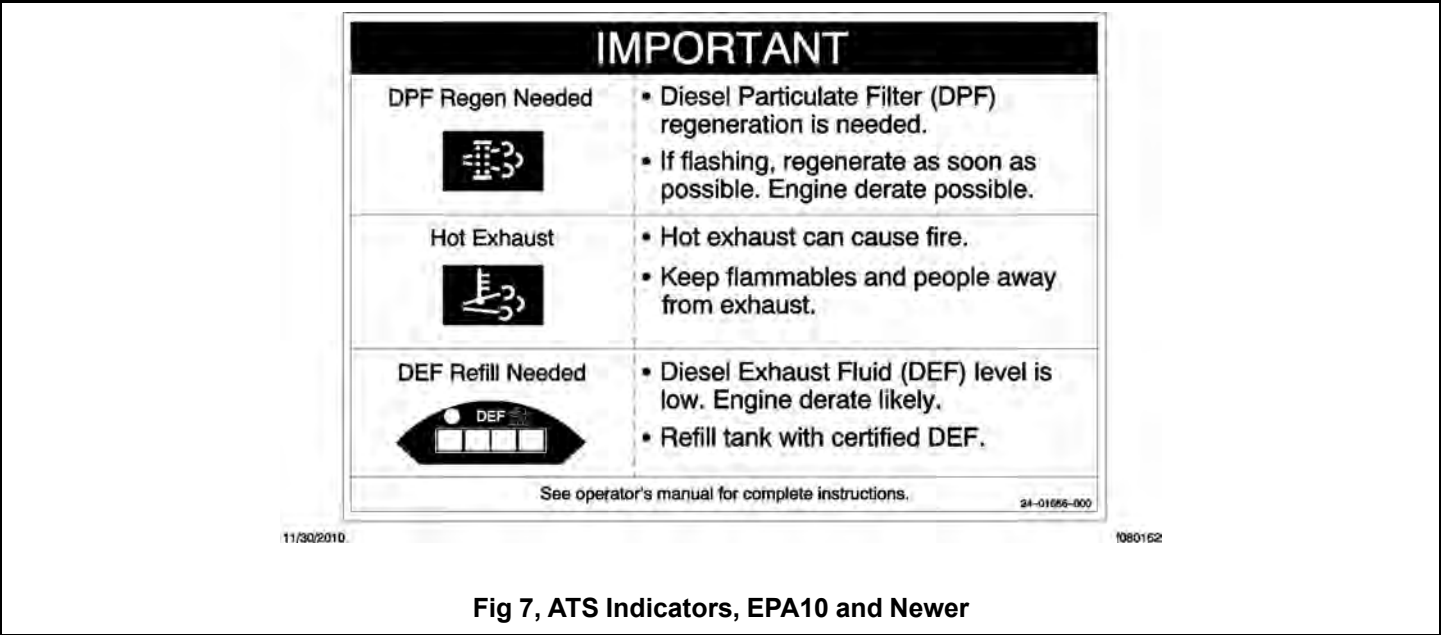


Fig 7, ATS Indicators, EPA10 and Newer

2.06 EPA Noise Emission Control Label

A vehicle noise emission control label (see Fig.8,Vehicle Noise Emission Control Label (complete vehicle).) is located on the driver-side B-pillar as see Fig.9,Label Locations. It is the owner's responsibility to maintain the vehicle so that it conforms to EPA regulations.



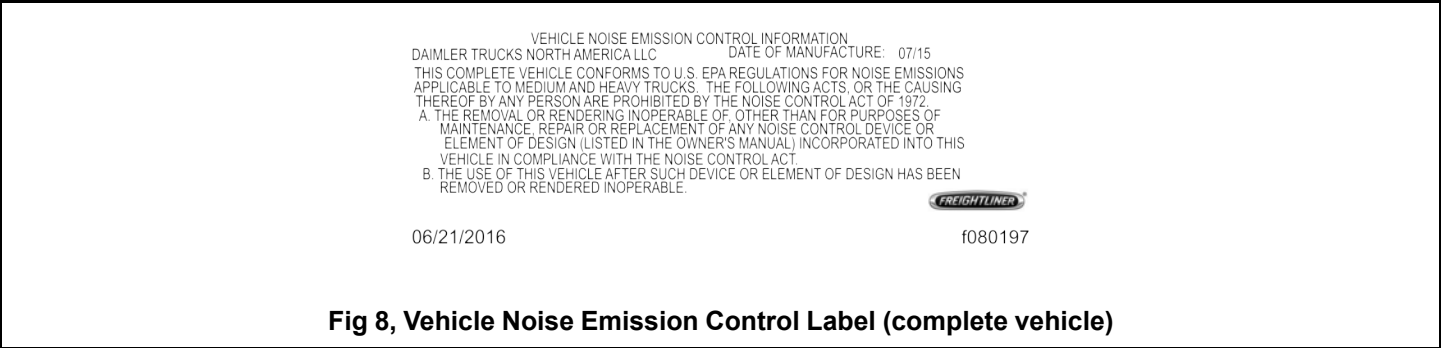


Fig 8, Vehicle Noise Emission Control Label (complete vehicle)

IMPORTANT: Certain Freightliner incomplete vehicles may be produced with incomplete noise control hardware. Such vehicles will have an incomplete vehicle noise emission control information label (see Fig.

10, [Vehicle Noise Emission Control Label \(incomplete vehicle\)](#)). For such vehicles, it is the final-stage manufacturer's responsibility to complete the vehicle in conformity to U.S. EPA regulations (40 CFR Part 205) and label it for compliance.

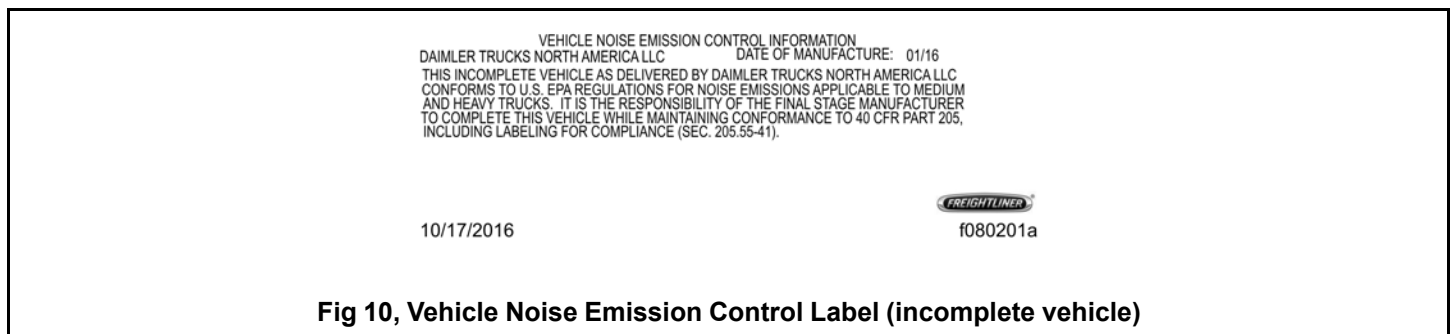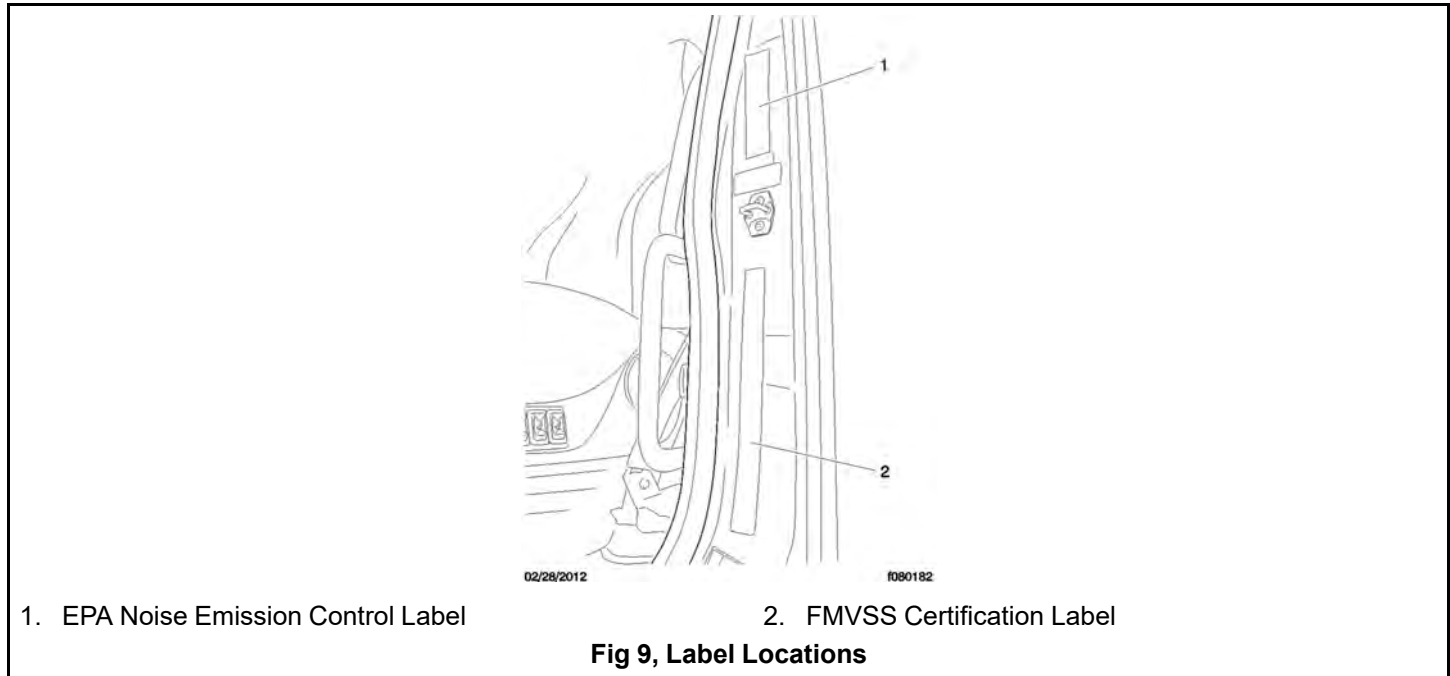


2.07 Vehicle Emission Control Information Label

Model year 2013 and later vehicles meet additional requirements as specified by federal greenhouse gas and fuel efficiency regulations (GHG14). Model year 2017 and later vehicles meet similar requirements as specified by GHG17 requirements. These vehicles are equipped with components that increase fuel efficiency and reduce GHG emissions. Components may include, but are not limited to, low-rolling resistance tires; aerodynamic devices such as hood, cab side extenders, and fuel tank fairings; vehicle speed limiters; and idle shutdown timers.

A Vehicle Emission Control Information Label is located on the driver-side door. See Fig.

11, [Vehicle Emission Control Information Label](#). It is the owner's responsibility to maintain the vehicle so that it conforms to EPA and NHTSA regulations.

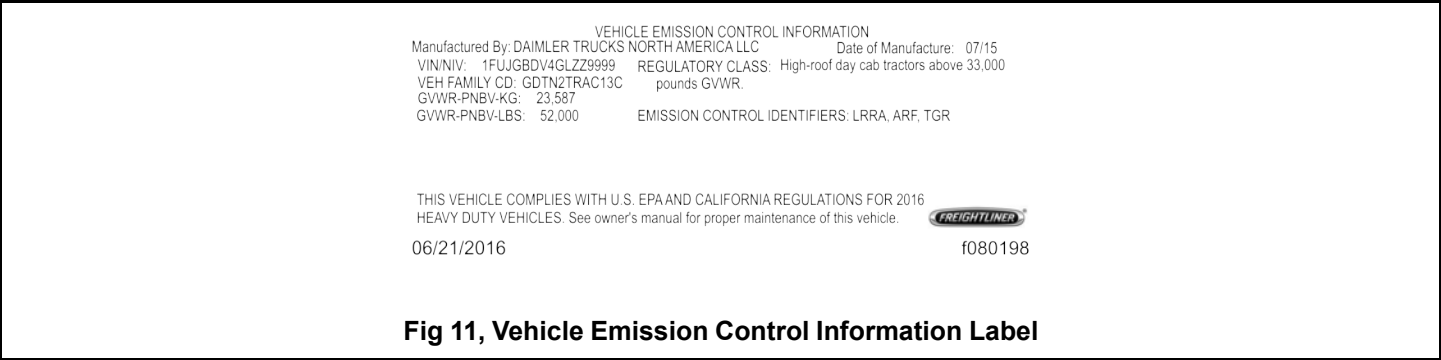

2.08 Certified Clean Idle Label

The California Air Resources Board (CARB) requires model year 2008 and newer heavy-duty diesel engines to meet CARB's Heavy-Duty Diesel Engine Idling Requirement in order to limit emissions of particulate matter and NOx.

Certified vehicles are equipped with a label placed near the bottom edge of the driver-side door. See Fig. 12, [CARB Clean Idle Label](#).



3.01 Door Locks and Handles.....	18
3.02 Grab Handles and Access Steps	19
3.02.01 Entering the Driver Side.....	19
3.02.02 Exiting the Driver Side	20
3.02.03 Entering the Passenger Side	20
3.02.04 Exiting the Passenger Side	21
3.03 Cab-to-Sleeper Access.....	22
3.04 Sleeper Door	22
3.05 Sleeper Luggage Door.....	23
3.06 Back-of-Cab Access.....	23
3.06.01 General Description	23
3.06.02 Entering the Back-of-Cab	24
3.06.03 Climbing the Down from Back-of-Cab	24
3.07 Opening and Closing of the Hood	25
3.07.01 To Tilt the Hood.....	25
3.07.02 To Return the Hood	25


3. Vehicle Access

3.01 Door Locks and Handles

One common key operates the ignition switch and all of the door locks.

IMPORTANT: Each key is numbered. Record the number so a duplicate key can be made, if needed.

To unlock the driver's door from outside the cab, insert the key in the lockset and turn it one-quarter turn clockwise. See Fig. 13, [Exterior Door Handle](#). To remove the key, turn it counterclockwise to the original position. Pull out on the door pull handle to open the door.

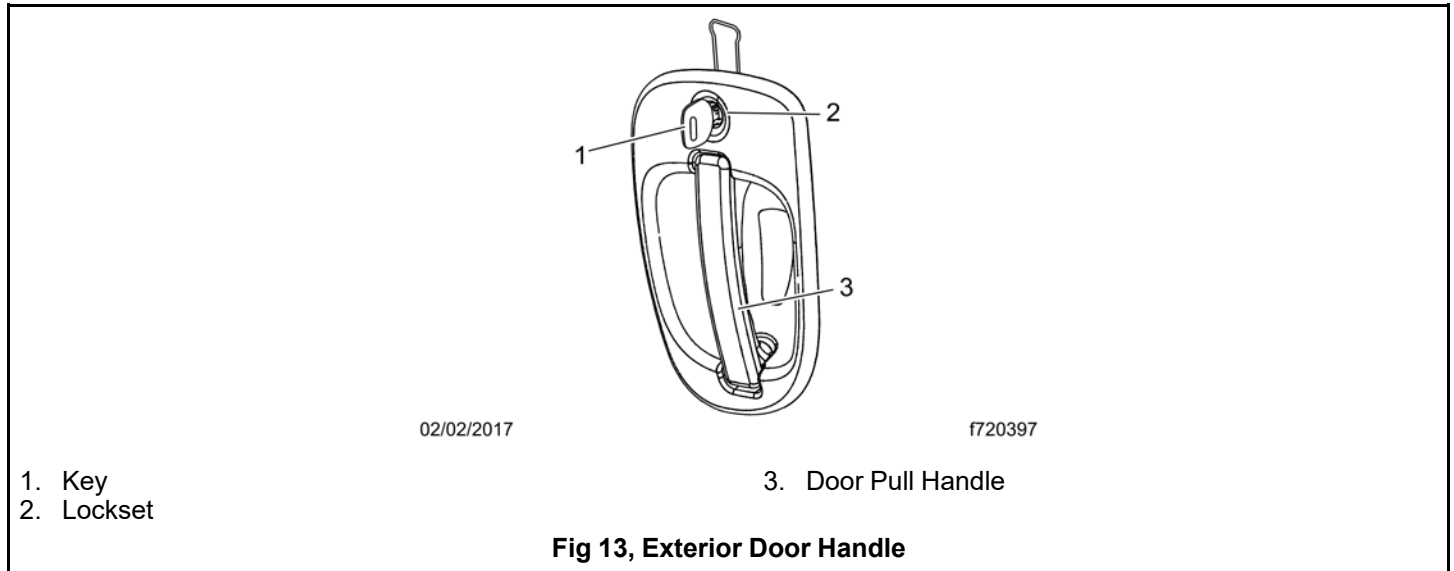


To unlock the passenger's door from outside the cab, insert the key in the lockset and turn it one-quarter turn counterclockwise. Turn the key clockwise to the original position to remove it.

NOTE: The cab door locks can be operated when the doors are open.

To lock a door from outside the cab, insert the key in the lockset and turn it in the direction opposite to the unlocking direction (counterclockwise for the driver's door, clockwise for the passenger's door). Close the door if it is open.

To lock either door from inside the cab, push the lock button downwards. See Fig. 14, [Door Interior](#).

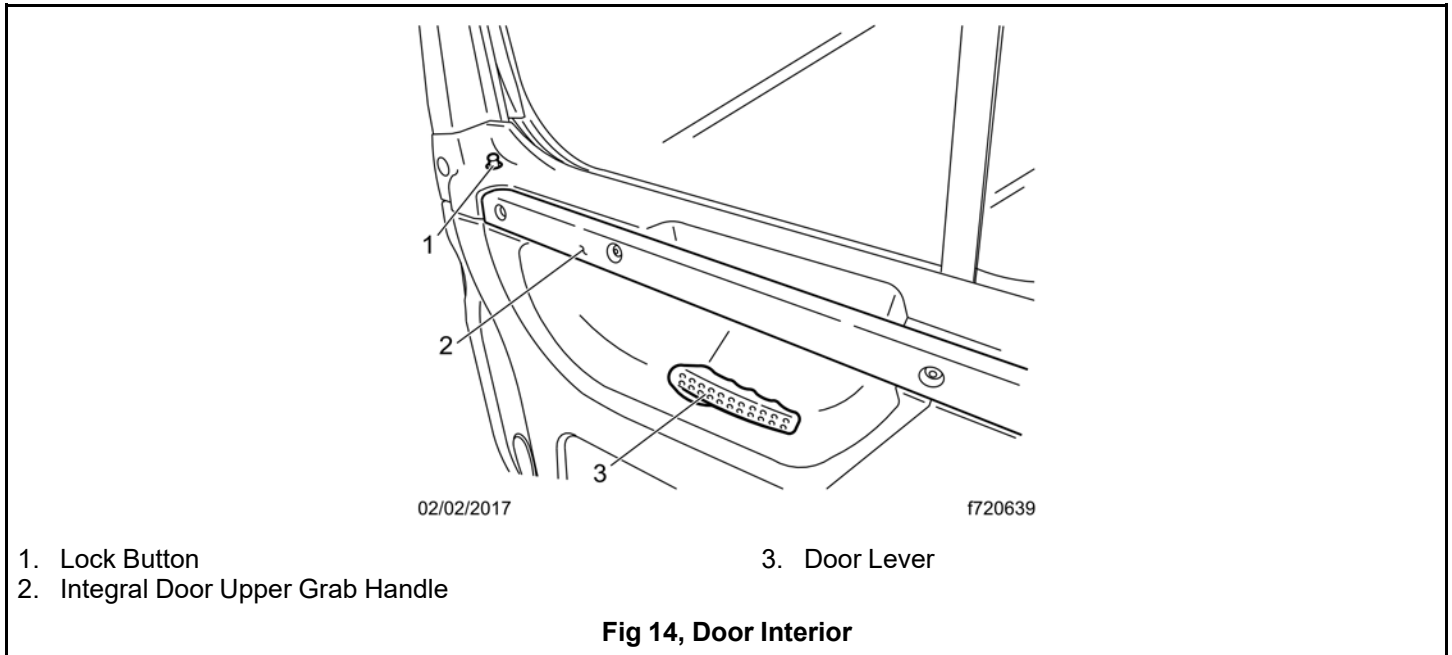

To open the door from the inside, lift up on the door lever. This will unlatch the door whether or not it is locked.

To unlock the door without unlatching it, pull the lock button upwards.

3.02 Grab Handles and Access Steps

3.02.01 Entering the Driver Side



WARNING:


Wet or dirty shoe soles greatly increase the chance of slipping or falling. If your soles are wet or dirty, be especially careful when climbing onto, or down from, the back-of-cab area.

Always maintain three-point contact with the back-of-cab access supports while entering and exiting the back-of-cab area. Three-point contact means both feet and one hand, or both hands and one foot, on the grab handles, steps, and deck plates. Other areas are not meant to support back-of-cab access, and grabbing or stepping in the wrong place could lead to a fall, and personal injury.

Be careful not to get hands or feet tangled in hoses or other back-of-cab equipment. Carelessness could cause a person to trip and fall, with possible injury.

When entering the cab from the driver side, use the grab handle and access steps as follows:

1. Open the driver-side door and place anything that you are carrying in the cab.
2. Using both hands, grasp the grab handle that is on the B-pillar, or use your left hand on the integral door lower grab handle. See Fig.15,[Driver-Side Steps and Grab Handle](#). Reach up as far as is comfortable.

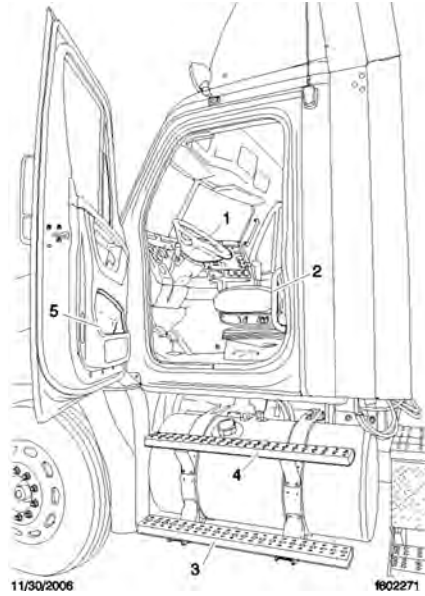

1. Steering Wheel
2. B-Pillar Grab Handle
3. Bottom Step

4. Top Step
5. Integral Door Lower Grab Handle

Fig 15, Driver-Side Steps and Grab Handle

3. Place your right foot on the bottom step, and pull yourself up. Move your left hand to the integral door upper grab handle.
4. Place your left foot on the top step.
5. Grasp the steering wheel with your left hand, and step up.
6. Step into the cab with your right foot first, and grasp the steering wheel with your right hand.

3.02.02 Exiting the Driver Side

Exit the cab from the driver side as follows:


IMPORTANT: Do not attempt to exit the cab while carrying any items in your hands.

1. Grasp the steering wheel with both hands, place your left foot on the top step, then stand on the threshold facing into the cab.
2. Using your right hand, grasp the grab handle, located on the B-pillar.
3. Move your right foot to the bottom step.
4. Move your left hand to the integral door lower grab handle.
5. Step to the ground with your left foot first.

3.02.03 Entering the Passenger Side

When entering the cab from the passenger side, use the grab handles and access steps as follows:

1. Open the passenger-side door and place anything that you are carrying in the cab.
2. Using your left hand, grasp the grab handle that's on the rear of the door opening. See Fig. 16, [Passenger-Side Steps and Grab Handles](#).

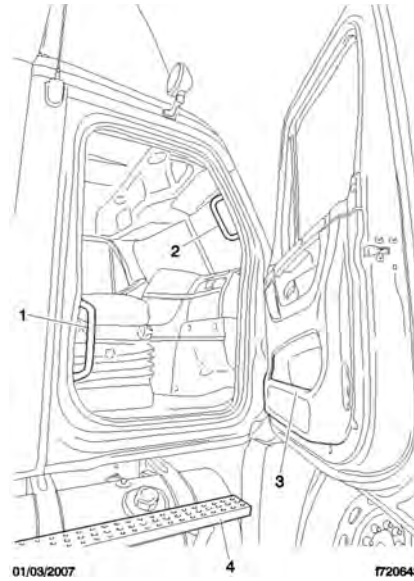

1. Lower Grab Handle
2. Upper Grab Handle

3. Integral Door Lower Grab Handle
4. Top Step

Fig 16, Passenger-Side Steps and Grab Handles


3. Using your right hand, grasp the integral door lower grab handle.
4. Place your right foot on the bottom step, and step up to the upper step with your left foot.
5. Place your right foot on the top step, and step up.
6. Move your right hand to the upper grab handle on the windshield post.
7. Step into the cab with your left foot first.

3.02.04 Exiting the Passenger Side

Exit the cab from the passenger side as follows:

IMPORTANT: Do not attempt to exit the cab while carrying any items in your hands.

1. Using both hands, grasp the grab handle that's on the windshield post, and place your right foot on the top step while standing up from the seat facing inward.
2. Place your left foot on the bottom step.
3. Move your left hand to the lower grab handle located at the rear edge of the door opening. See Fig. 17, [Passenger-Side Steps and Grab Handles](#).

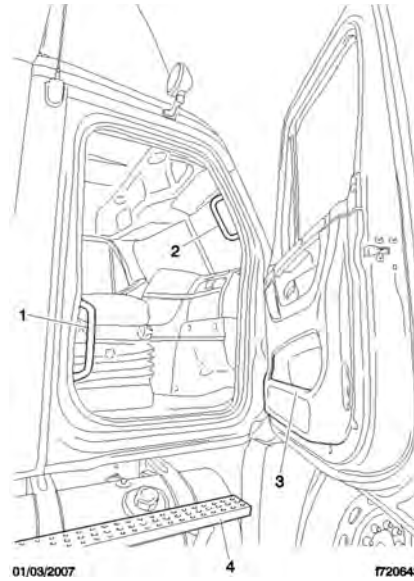

1. Lower Grab Handle
2. Upper Grab Handle

3. Integral Door Lower Grab Handle
4. Top Step

Fig 17, Passenger-Side Steps and Grab Handles

4. Move your right hand to the integral door lower grab handle.
5. Step to the ground with your right foot first.

3.03 Cab-to-Sleeper Access

To open the sleeper access on vehicles with vinyl sleeper curtains, unzip the sleeper curtains. If desired, unsnap the curtains all the way around the sides and top, and remove the curtains.

To open the sleeper access on vehicles with velour sleeper curtains, unfasten the snaps at one side, then push the curtain to the opposite side.

3.04 Sleeper Door


The sleeper door (see Fig.18, [Sleeper Doors](#), Ref. 1) is not intended for entry or exit. The door is intended only as a convenient means to stow or remove personal belongings in and from the sleeper area. To open the sleeper door from the inside, push down on the lever handle located inside the sleeper compartment aft of the door, or pull out on the upper lever located inside the cab door opening; see Fig.19, [Sleeper Door Levers](#). To open the sleeper door from outside, open the cab door, then pull out on the upper lever located inside the cab door opening. To close the door, pull on the strap attached to the inside of the door, or push it closed from the outside, until it latches.

IMPORTANT: The sleeper doors have two-stage latching. When closing the doors, ensure that they are completely latched to prevent wind noise and water intrusion.



1. Sleeper Door

2. Luggage Compartment Door

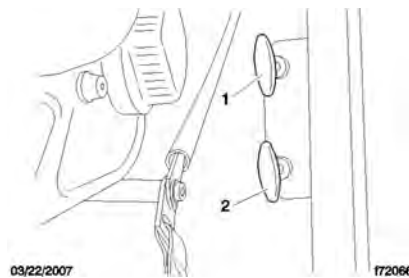Fig 18, Sleeper Doors


1. Sleeper Door Lever

2. Luggage Door Lever

Fig 19, Sleeper Door Levers

3.05 Sleeper Luggage Door

To open the sleeper luggage door, pull out on the lower lever located inside the cab door opening. See Fig. 20, [Sleeper Door Levers](#). To close the sleeper luggage door, push it closed until it latches.

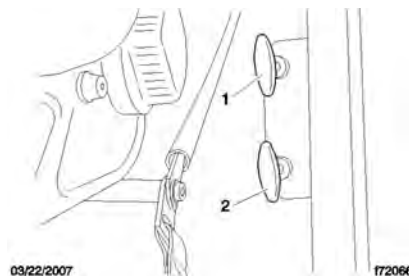

1. Sleeper Door Lever

2. Luggage Door Lever

Fig 20, Sleeper Door Levers


3.06 Back-of-Cab Access

3.06.01 General Description

When trailer air and electrical connections cannot be reached conveniently from the ground, Federal Motor Carrier Safety Regulations require commercial carriers to provide back-of-cab access.

Optional grab handles are mounted either on both cab sidewalls, or on the left sidewall only. See Fig. 21, [Back-of-Cab Access](#). Steps are mounted either on the fuel tank(s) or on metal brackets. When a deck plate is necessary, it is mounted across the top of the frame rails.

IMPORTANT: Climb onto, and down from, back-of-cab access facing in toward the vehicle, as you would on a ladder. Do not climb up or down facing out away from the vehicle.

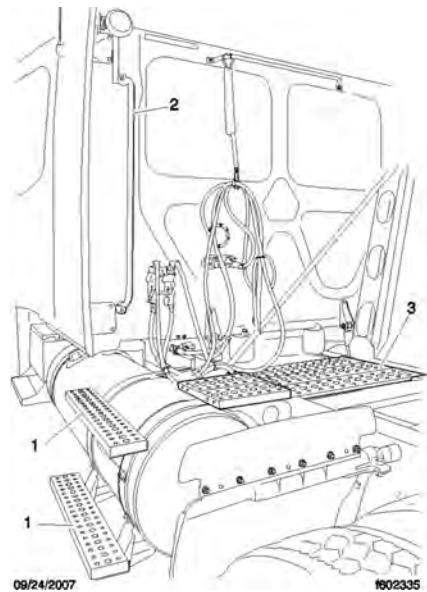

- 1. Steps
- 2. Deck Plate

- 3. Grab Handle

Fig 21, Back-of-Cab Access



WARNING:

Wet or dirty shoe soles greatly increase the chance of slipping or falling. If your soles are wet or dirty, be especially careful when climbing onto, or leaving, the back-of-cab area.

Always maintain three-point contact with the back-of-cab access supports while entering and exiting the back-of-cab area. Three-point contact means both feet and one hand, or both hands and one foot, on the grab handles, steps, and deck plates. Other areas are not meant to support back-of-cab access, and grabbing or stepping in the wrong place could lead to a fall, and personal injury.

Be careful not to get hands or feet tangled in hoses or other back-of-cab equipment. Carelessness could cause a person to trip and fall, with possible injury.

3.06.02 Entering the Back-of-Cab

When climbing onto the deck plate, do the following:

1. Grasp the sidewall grab handle with both hands. Reach up as far as is comfortable.
2. Place one foot on the bottom step and pull yourself up.
3. Place your other foot on the top step.
4. Move your lower hand to a higher position on the grab handle.
5. Step onto the deck plate.

3.06.03 Climbing the Down from Back-of-Cab

To climb down from the back-of-cab area:


1. Grasp the sidewall grab handle with both hands.
2. Step one foot at a time onto the top step.
3. Move your upper hand to a lower position on the grab handle.
4. Move one foot to the bottom step.
5. Move your upper hand to a lower position on the grab handle.
6. Step to the ground with your upper foot first.

3.07 Opening and Closing of the Hood

3.07.01 To Tilt the Hood

A grab handle at the front of the hood provides a hand-hold for hood tilting. Two tilt-assist struts help to tilt the hood open, and to return it to the operating position. A damper controls the closing rate of the hood and hood straps prevent the hood from overtravel. In the operating position, the hood is secured by a hold-down latch on each side of the hood.

1. Apply the parking brakes.
2. Release both hood hold-down latches by pulling the ends outward.
3. Using the bumper step and grab handle, slowly tilt the hood until the straps support it. See Fig.22, [Hood Tilting](#).

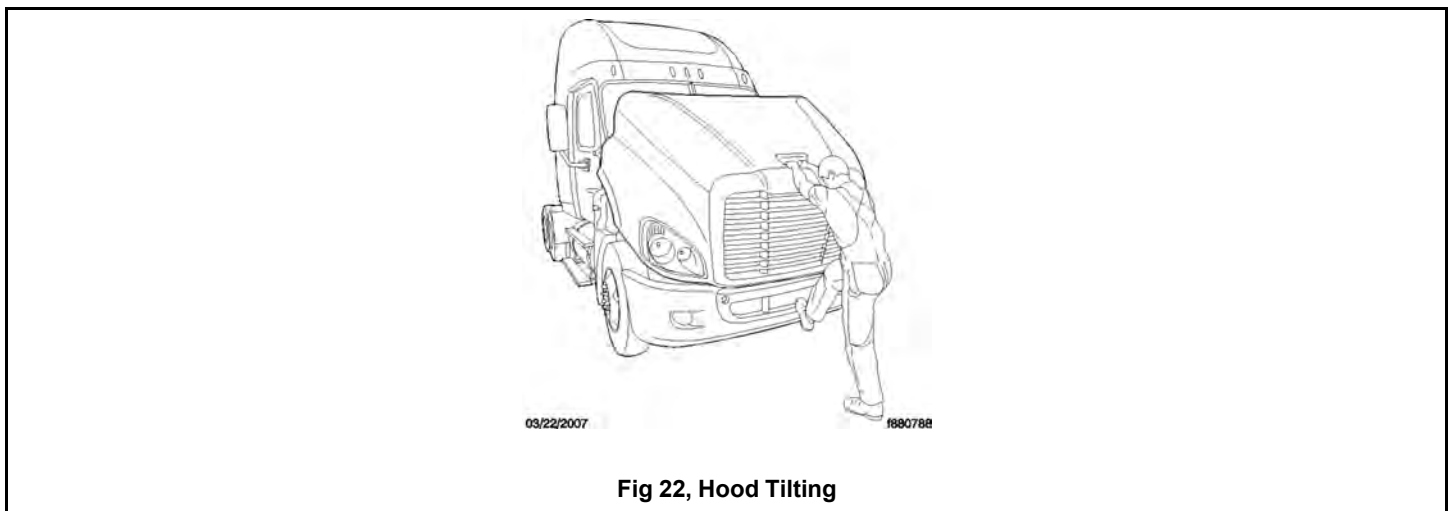

3.07.02 To Return the Hood

1. Grasp the grab handle, and lift the hood a just-over-center position.
2. As the hood goes over center, the hood damper controls the rate of descent to the operating position.
3. Make sure the hood is flush with the cowl, then secure the hood by engaging both hood hold-down latches.

IMPORTANT: Make sure that both hood hold-down latches are fully engaged before operating the vehicle.

4.01 Electrical Power Distribution.....	28
4.01.01 General Information	28
4.01.02 MEGA Fuse Junction Block, EPA07	29
4.01.03 Powernet Distribution Box, EPA10 and Newer.....	29
4.01.04 Power Distribution Modules	29
4.01.05 Circuit Protection Features	31
4.01.06 Cab Load Disconnect Switch	32
4.02 Emergency Power Supply.....	33
4.02.01 SAM Cab Fault	33
4.02.02 SAM Chassis Fault	34
4.03 Progressive Low Voltage Disconnect	34
4.04 Inverter/Charger.....	37

4. Electrical System


4.01 Electrical Power Distribution

4.01.01 General Information

Electrical power distribution provides battery power to the electrical and electronic systems. See Fig. 23, [Component Locations](#) for power distribution component locations.

The following components make up the power distribution system:

- MEGA Fuse Junction Block (MFJB), EPA07 only
- Powertrain Power Distribution Module (PT-PDM)

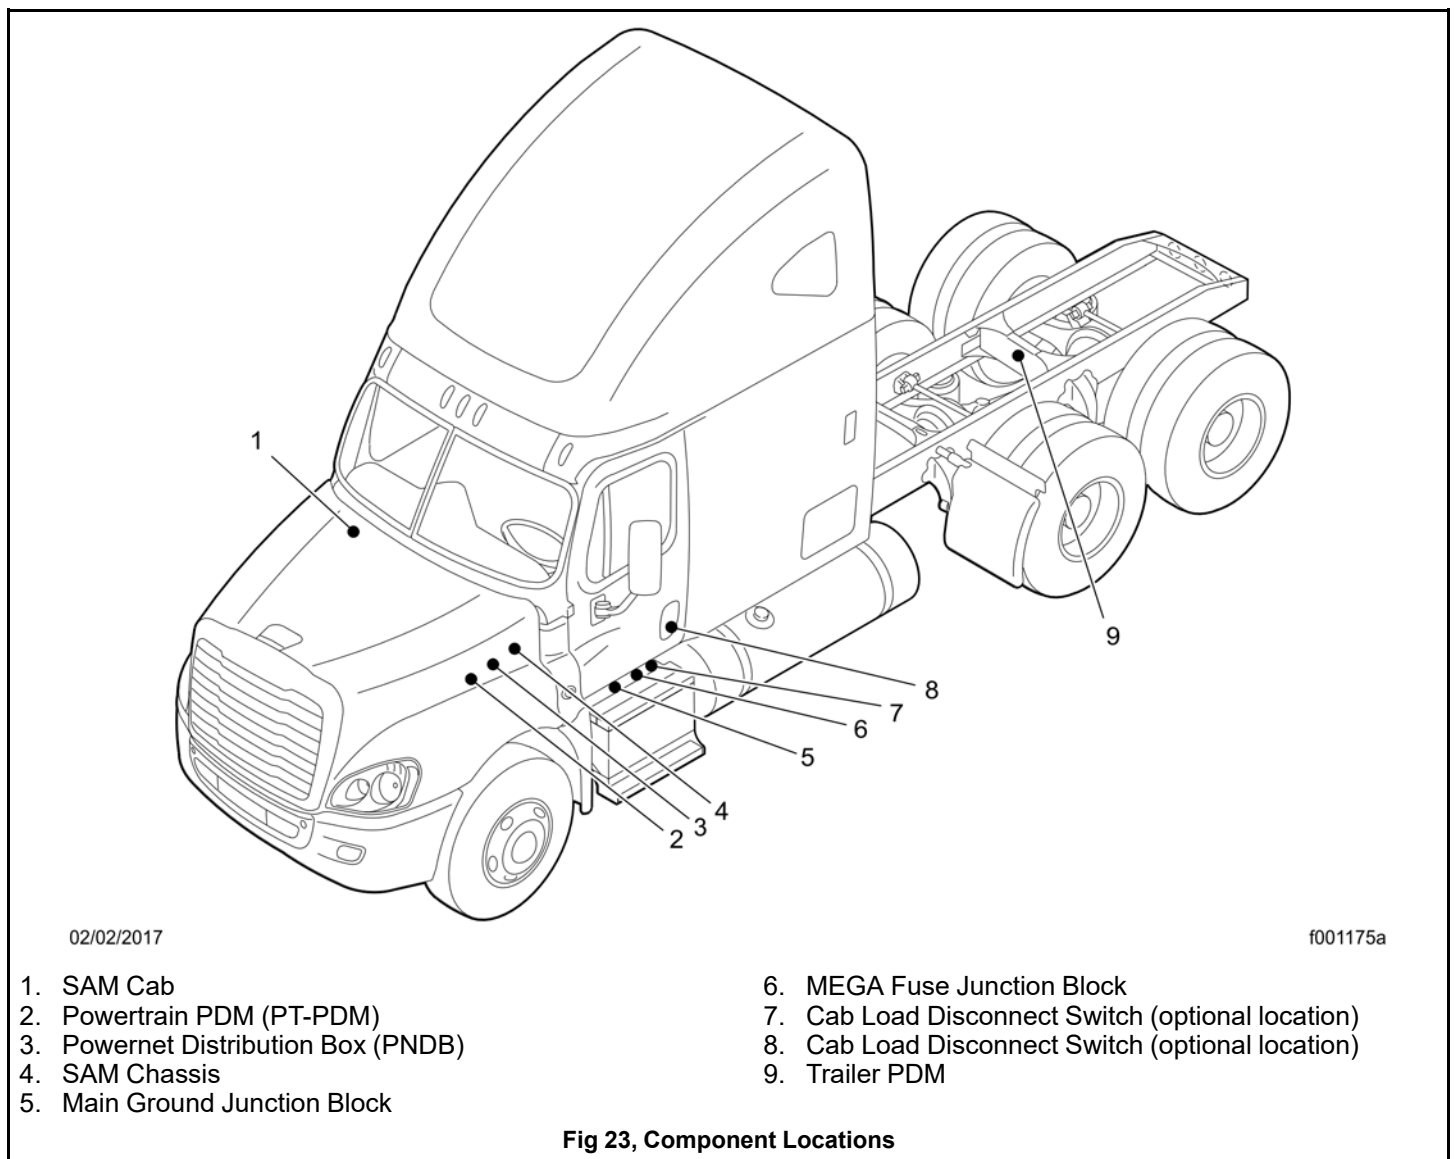


- Powernet Distribution Box (PNDB), EPA10 and newer
- Cab Load Disconnect Switch

- Auxiliary PDM

4.01.02 MEGA Fuse Junction Block, EPA07


On EPA07 vehicles, the MFJB distributes battery power to the alternator, SAM cab, SAM chassis, and powertrain PDM. Battery power may also be routed to an inverter and a trailer PDM. The MFJB houses up to five MEGA fuses, and is located on the left frame rail in front of the batteries. See Fig. 24, [EPA07 MEGA Fuse Junction Block](#).

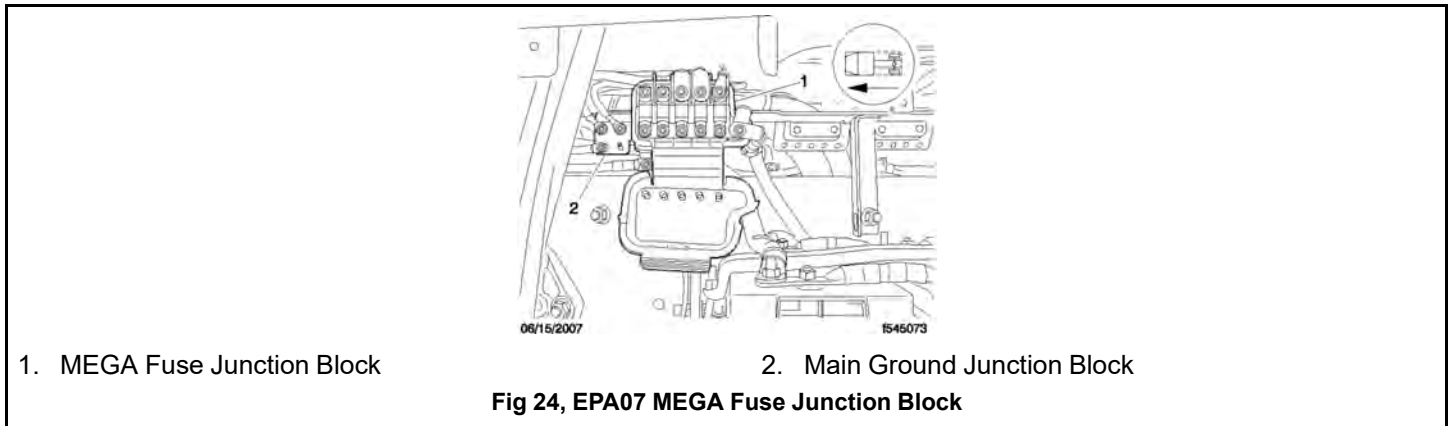

4.01.03 Powernet Distribution Box, EPA10 and Newer

The PNDB distributes battery power to the SAM cab, SAM chassis, powertrain PDM, and other keep-alive circuits.

The PNDB is mounted in the engine compartment on the frontwall near the steering column. The label on the PNDB fuse cover identifies typical circuits. See Fig. 25, [Engine Compartment Power Distribution Components](#).

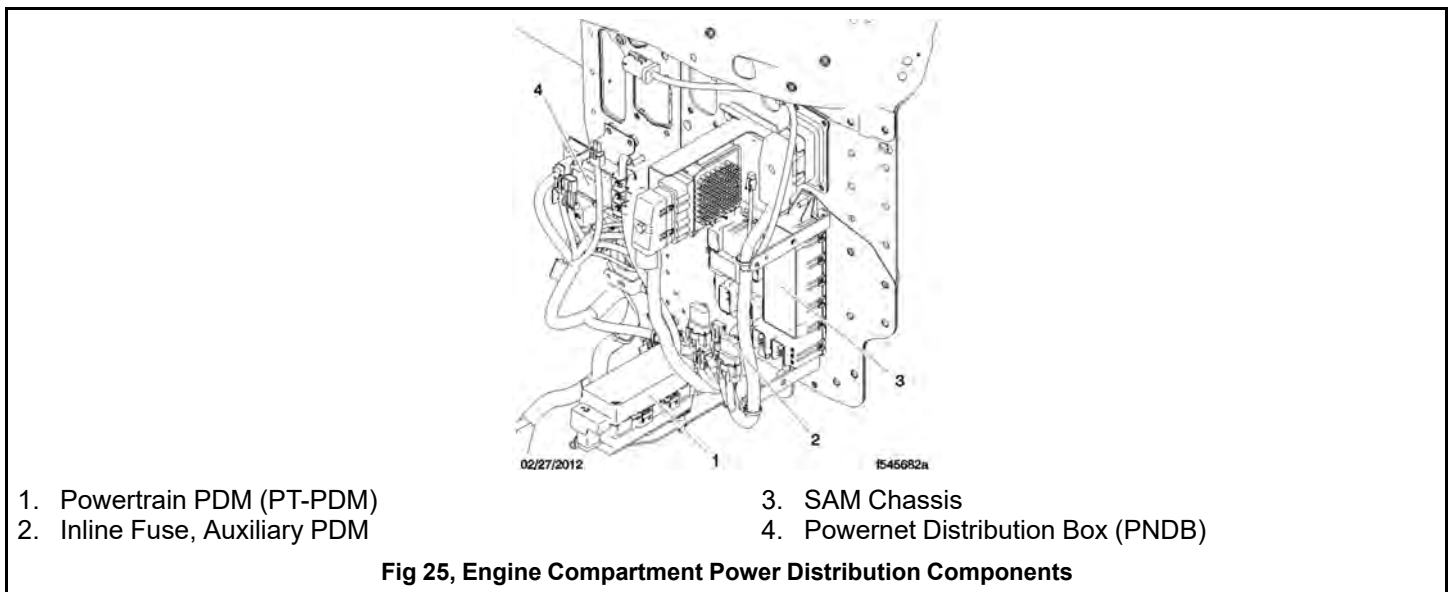

4.01.04 Power Distribution Modules

Powertrain PDM

The powertrain PDM contains fuses and relays that provide battery and ignition power to the engine, aftertreatment device, transmission, and other powertrain-related circuits. It is mounted in the engine compartment, above the driver-side inner fender.

Auxiliary PDM

The optional auxiliary PDM is used when additional circuit protection is needed for optional features. For example, if a beacon light is added to the Cascadia, it may require an auxiliary PDM. The auxiliary PDM may contain fuses and relays for these devices. It is mounted in the cab, behind the doghouse cover.


Trailer PDM

The optional trailer PDM, mounted on the frame rail, is used to supply trailer power to the chassis-mounted trailer receptacles. The SAM chassis supplies control signals to the relays in the trailer PDM.

SAM Cab


The SAM cab is located behind the glove box inside the vehicle cab. See Fig. 26, [SAM Cab Location](#). The SAM cab contains fuses and relays in addition to solid state circuit protection devices that will trip when a circuit is overloaded.

Refer to **Chapter 25** for fuse and relay locations.

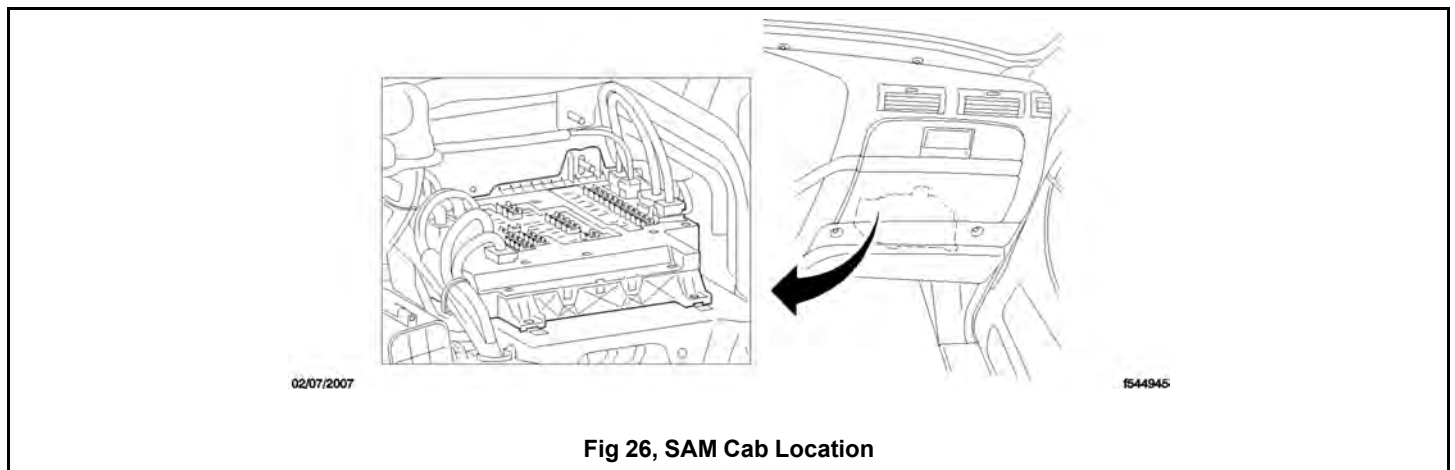

SAM Chassis

The SAM Chassis is located in the engine compartment on the driver-side frontwall. See Fig. 27, [Engine Compartment Power Distribution Components](#). The SAM chassis contains fuses and relays in addition to solid state circuit protection devices that will trip when a circuit is overloaded.

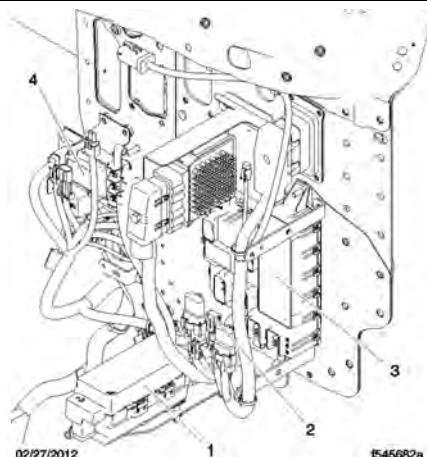

1. Powertrain PDM (PT-PDM)
2. Inline Fuse, Auxiliary PDM

3. SAM Chassis
4. Powernet Distribution Box (PNDB)

Fig 27, Engine Compartment Power Distribution Components

Refer to **Chapter 25** for fuse and relay locations.

4.01.05 Circuit Protection Features

The SAM chassis and SAM cab may be equipped with self-resetting circuit breakers instead of fuses. Self-resetting circuit breakers are tripped when they reach 170°F (77°C), then self-reset once the temperature drops sufficiently. When the circuit overload is removed, this circuit protection will self-reset. Some of these circuits require the ignition switch to be cycled off then back on again for the self-reset to occur.

Some ECU's are equipped with a self-resetting circuit breaker removal tool.




WARNING:

Always wear heat-protective gloves when handling a self-resetting circuit breakers, which can reach extremely high temperatures. Failure to use appropriate heat protection can lead to serious injury.

**NOTICE:**

Self-resetting circuit breakers can be permanently damaged if improperly handled. Use the guidelines below to handle them safely.

- Disconnect the batteries before removing a self-resetting circuit breaker.
- Use a circuit breaker removal tool to remove a self-resetting circuit breaker. See Fig. , page . Use of any other tool, including pliers, may damage the circuit breaker.

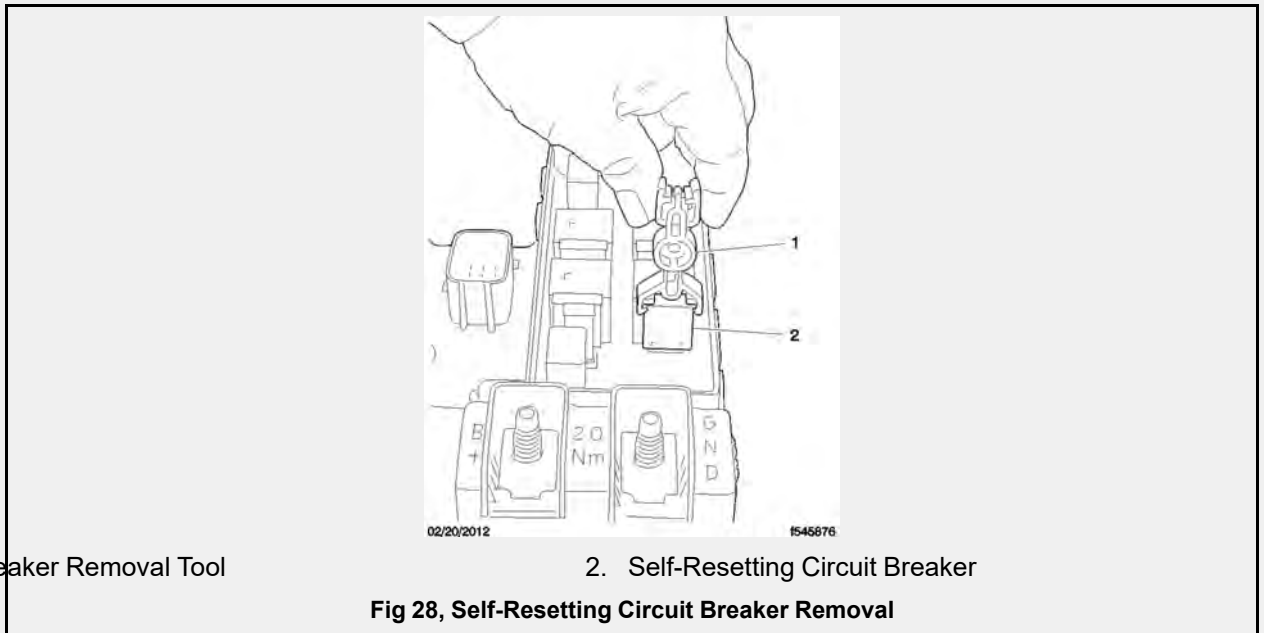

1. Circuit Breaker Removal Tool

2. Self-Resetting Circuit Breaker

Fig 28, Self-Resetting Circuit Breaker Removal

- Never attempt to probe a self-resetting circuit breaker while installed on the SAM Cab or SAM Chassis. Remove the circuit breaker first, or use a non-contact infrared thermometer to measure temperature.

4.01.06 Cab Load Disconnect Switch

**WARNING:**

Turning the cab load disconnect switch (CLDS) to the off position does not disconnect the connection between the battery and the starter. To work on the vehicle safely, the negative leads must be disconnected from the battery.

IMPORTANT: The ignition should be turned off before turning the CLDS to on or off.

The CLDS is used to avoid excessive draw on the battery when the vehicle is parked for an extended period of time by disconnecting (or opening) the connection between the battery and the most of the vehicle electrical system.

The CLDS may be mounted:

- inside the cab on the outboard side of the driver's seat;
- at the battery box;
- outboard on the left frame rail.

See Fig. 29, [Cab Load Disconnect Switch, EPA07](#) for an EPA07 CLDS; see Fig. 30, [Cab Load Disconnect Switch, EPA10 and Newer](#) for an EPA10 and newer switch.

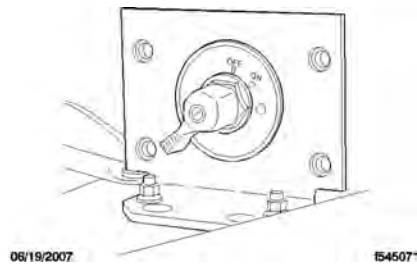


Fig 29, Cab Load Disconnect Switch, EPA07

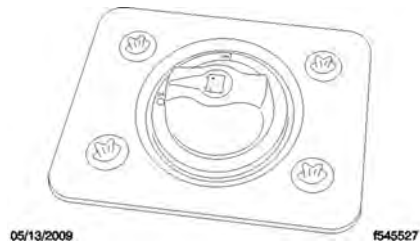


Fig 30, Cab Load Disconnect Switch, EPA10 and Newer

If the CLDS is turned to the off position while the vehicle is running, the emergency power system will activate. The powertrain PDM will receive power from the emergency power feed, but the batteries will not be charging. See the **Emergency Power Supply** heading below for details.

4.02 Emergency Power Supply

4.02.01 SAM Cab Fault

The Cascadia electrical system has an emergency power circuit that supplies battery power for exterior lighting. This assists vehicle visibility in the event a MEGA fuse is open circuit. The emergency power circuit is live even when the CLDS is turned off.

The emergency power supply feature allows for the vehicle to be driven off the highway and for the exterior lighting to remain on in the event of a SAM Cab or SAM Chassis failure. The emergency power supply will cause certain exterior lamps to flash (depending on if it is the SAM Cab or SAM Chassis that failed), indicating that the vehicle is disabled.

If the emergency power supply system activates, do not shut down the engine until the vehicle is in a safe position to do so. It will not be able to be restarted until the problem is corrected. If emergency power mode is due to a SAM Cab fault, the gauges will become unresponsive but the engine will remain running until it is turned off.

When the ignition is in the ON position, the emergency power supply will cause the following lamps to flash:

- dash panel lights
- clearance lights
- front marker lights
- side marker lights
- trailer taillights

- rear stop lights

4.02.02 SAM Chassis Fault

The engine may be able to be restarted when the SAM Chassis fails. When the ignition is in the ON position, the emergency power supply will cause the following lamps to flash:

- dash panel lights
- identification lights
- front marker lights
- turn-signal indicators in the ICU (alternately)
- side marker lights
- rear turn-signal lights
- trailer taillights

If the ignition switch is turned ON while the load disconnect switch is in the OFF position, the emergency power supply feature will activate the following lamps:

- clearance lights (flashing)
- side marker lamps (flashing)
- low beam headlights

4.03 Progressive Low Voltage Disconnect

Progressive low voltage disconnect (PLVD) shuts off electrical power to selected circuits based on the battery voltage, ignition switch position, and engine running status. There are three groups of circuits with increasing levels of priority for disconnect. PLVD stays at each level for a minimum amount of time to prevent rapid cycling between levels. When PLVD changes its level, the battery voltage may raise slightly due to the reduced load.

When battery voltage drops below a predetermined value, loads designated as comfort loads (priority level I) are shut down first. Then loads designated as house loads (priority level II) are shut down. If necessary, basic loads (priority level III) are shut down last.

PLVD allows the driver to continue using critical loads, while noncritical loads are temporarily unavailable. Calculations for disconnecting loads are based on battery voltage, ignition switch status, and engine rpm. Also, a time delay is implemented for the shutdown and reactivation of loads to avoid unnecessary cycling of loads when battery voltage is close to shutdown thresholds.

One minute before the comfort loads or house loads are shut down, the alarm in the instrument cluster beeps. No alarm sounds before basic loads are shut down.

If the interior lights have been shut down by PLVD, pressing one of the interior light switches (if equipped) brings the interior lights back on.

NOTE: It is possible to charge a cell phone in an emergency when the truck batteries are low. 12V power receptacles in the main dashboard remain powered in order for cell phone charging during a low voltage emergency.



1. 12V Power Receptacles

Fig 31, 12V Power Receptacle, Main Dashboard



CAUTION:

Do not use emergency cell phone charging regularly, This will damage the PLVD strategy for startability during low voltage.

See 2, [Type of Loads Shut Down Under Specific Conditions](#) for the type of loads shut down under specific conditions.

See 3, [Designated Loads](#) for the loads that are designated comfort, house, and basic load status.

Type of Loads Shut Down Under Specific Conditions			
Key Switch Position	Engine On, Voltage less than 12.5 Volts	Engine Off, Voltage less than 12.3 Volts	Engine Off, Voltage less than 12.1 Volts
Off	N/A	Priority level I, II loads	Priority level I, II, and III loads
Accessory	N/A	Priority Level I loads	Priority level I, II loads
On	Priority level I loads	Priority Level I loads	Priority level I, II loads
Start	N/A	N/A	N/A

Designated Loads	
Type of Load	Function
Priority Level I	12V power receptacle 6 (sleeper, refrigerator)
	Amplifier power, accessory
	General sleeper light
	Foot well light
	Reading light 1 (dimmer/theater)
	Reading light 2 (dimmer/theater)
	Rear baggage compartment light
	12V power receptacle 5 (sleeper, cigar), battery
	Auxiliary circulation fan-sleeper, battery
	12V power receptacle 4 (sleeper, cigar), battery
	Reading light 4 (switched locally), battery
Priority Level II	
	Heated seats, ignition*
	Sleeper HVAC controller, accessory*
	Cabin HVAC controller, accessory*
	Radio, accessory (clamp 15R)
	Power feed spare output I, battery
	Power feed spare output III, battery
	Mirror heating, passenger*
	Mirror heating, driver*
	Power feed spare output IV, battery
	Power feed spare output II, battery
	Fuel/water separator heater element, ignition*
	Air dryer (pneumatic, electrically heated), accessory*
	Auxiliary circulation fan-windshield, accessory*

Table 3, Designated Loads

	Accessory heater power
	Utility light
	Utility light
	Dome light rear
	Area lighting (lower bunk and sleeper work surface), battery
	Dome light cab, battery
	Overhead compartment lights, battery
	12V power receptacle 3 (sleeper, cigar), battery
	Stand-alone HVAC, battery
	Advertising light, accessory*
	Dome light passenger
	Dome light driver/forward overhead
Priority Level III	
	CB radio, battery†
	Fleet management system, battery†
	Trailer power, battery or ignition
	12V power receptacle 2 (dash, phone), battery
	12V power receptacle 1 (dash, cigar), battery

* When the vehicle has Optimized Idle, these functions will not operate with the ignition switch in the accessory position. Optimized Idle may also turn these functions off to reduce stress on the batteries. Refer to the Optimized Idle section in **Chapter 11** for more information.

† May or may not shut down depending on how an additional parameter is set at the factory or dealership.

4.04 Inverter/Charger

The optional Freedom HF Inverter/Charger powers small appliances and other electric equipment. It is located in the driver-side luggage compartment. See Fig. 32, [Inverter/Charger](#). The unit has one three-pin GFIC OUT connector, one three-pin GFIC IN connector, and two AC power outlets.

There are three models available for the Cascadia:

- **1000W** : 1000 watt, 20-amp
- **1500W** : 1500 watt, 40-amp
- **1800W** : 1800 watt, 40-amp




02/17/2017

f546066

Fig 32, Inverter/Charger**DANGER:**

Do not store gasoline, flammable material, or any component with a connection to the fuel system in the storage compartment with the inverter/charger. The unit contains equipment that may produce sparks. Storing flammable or electrical equipment in proximity to the unit could result in fire or explosion hazards, which could result in serious injury or death.

The display on the sleeper control panel provides information about the operation of the unit. See Fig. 33, [Inverter/Charger Display Panel \(1000W shown\)](#). Refer to 4, [Display Panel Functions](#) for details on the display panel.

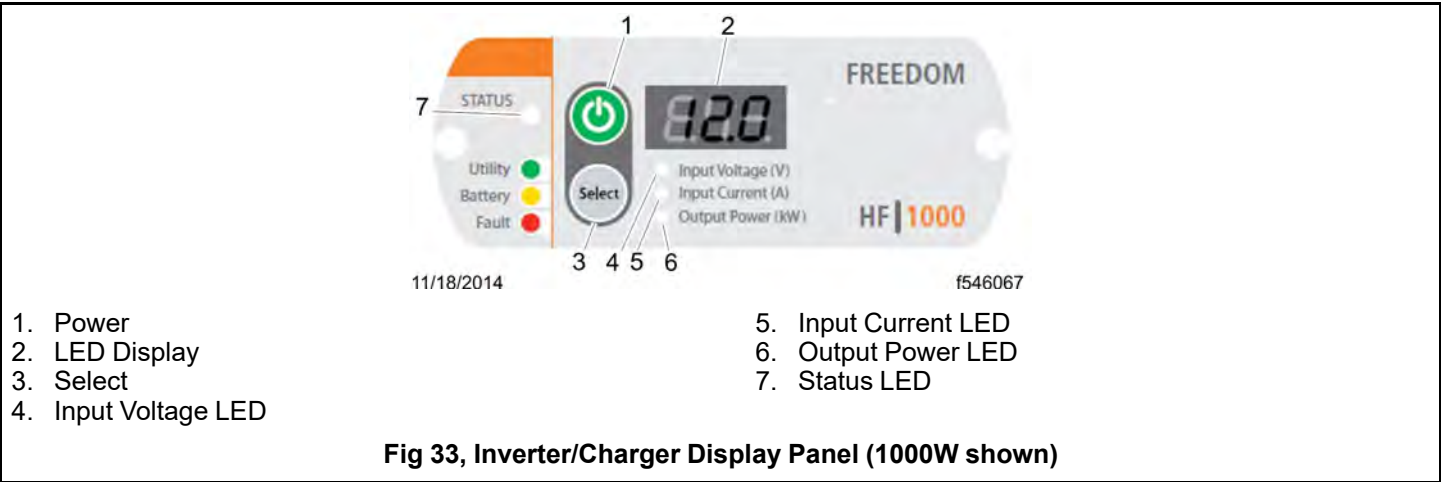

Display Panel Functions		
Number	Name	Function
1	Power	Press the power button for one second to turn on the unit. Press and hold the button for five seconds to enter the feature settings mode, then press the button to toggle between the following modes: Charging Current Setting Inverter Mode Setting Alarm Setting Shutdown Setting Factory Setting Refer to the owner's manual for more information.
2	LED Display	The LED display screen shows status information and fault codes.
3	Select	The Select button changes the display or settings. Press the Select button to cycle through the setting options. Press and hold the Select button for five seconds to save the setting. Refer to the owner's manual for more information. In "Inverter Mode Setting" press the button to turn the inverter mode ON or OFF. With the inverter mode ON, press the button to choose what appears on the LED display screen: Input Voltage, Input Current, or Output Power. Details are provided below.

Table 4, Display Panel Functions

		NOTE: The unit is in "Inverter Mode" when shore power is not present and the unit is using the battery to power the appliances connected to it. In an alarm condition, press and hold the button for two seconds to disable or enable the audible alarm. In "Charging Current Setting" mode, press the button to select the charger current.
4	Input Voltage LED	In inverter mode, when Input Voltage is selected, the corresponding LED will light up and the display will show the input voltage.
5	Input Current LED	In inverter mode, when Input Current is selected, the corresponding LED will light up and the display will show the input current.
6	Output Power LED	In inverter mode, when Output Power is selected, the corresponding LED will light up and the display will show the output power.
7	Status	The Status indicator displays one of three colored lights that indicates the unit's mode of operation: Green : Utility (Shore Power Mode) A solid green light indicates that the battery is fully charged. A flashing green light indicates that the unit is charging the battery. Yellow : Battery (Inverter Mode) A solid yellow light indicates that the unit is using the battery to supply AC power. A flashing yellow light indicates that the unit is in inverter mode, but that AC shore power is detected and is transferring to shore power mode within 20 seconds. Red : Fault Condition The fault status light indicates a fault condition with the unit. Refer to the owner's manual for fault code information and troubleshooting procedures.

For more information about troubleshooting, settings, and other features, refer to the owners manual included with the inverter/charger.

5.01 Instrumentation Control Units	42
5.01.01 General Information	42
5.01.02 Ignition Sequence	45
5.01.03 Audible Alerts	45
5.02 Warning and Indicator Lights	46
5.02.01 General Information	46
5.02.02 Engine Protection System	51
5.03 Instruments.....	52
5.03.01 Air Intake Restriction Gauge	52
5.03.02 Application Air Pressure Gauge	53
5.03.03 Coolant Temperature Gauge.....	54
5.03.04 Drive Axle Oil Temperature Gauges.....	54
5.03.05 Engine Oil Pressure Gauge	55
5.03.06 Engine Oil Temperature Gauge	55
5.03.07 Fuel Gauge, Pre-EPA10	55
5.03.08 Fuel/Diesel Exhaust Fluid (DEF) Gauge, EPA10 and Newer.....	56
5.03.09 Primary and Secondary Air Pressure Gauges	56
5.03.10 Speedometer.....	56
5.03.11 Tachometer	56
5.03.12 Tire Pressure Monitoring System (TPMS)	57
5.03.13 Transmission Fluid Temperature Gauge	57
5.03.14 Turbocharger Boost Pressure Gauge	57
5.03.15 Voltmeter.....	57
5.04 Driver Message Center	58
5.04.01 ICU3/ICU4.....	58
5.04.02 ICU4M	61
5.04.03 ICU4Me	69

5. Instruments

5.01 Instrumentation Control Units


5.01.01 General Information

The instrumentation control unit (ICU) provides the driver with engine and vehicle information. It is comprised of standard and optional gauges, an audible warning, a driver message center, and a lightbar containing warning and indicator lamps (also known as telltales). Warning and indicator lamps illuminate in red (danger), amber (caution), green (status advisory), or blue (high-beam headlights active).

Cascadia vehicles are equipped with an ICU3, ICU3S, ICU4, ICU4M, or ICU4Me. See Fig. 34, [ICU3 Instrument Cluster \(EPA10 shown\)](#), Fig.35, [ICU3S \(GHG14 and newer shown\)](#), Fig. 36, [ICU4M Instrument Cluster \(EPA10 shown\)](#) and Fig.37, [ICU4Me Instrument Cluster](#) for typical ICU layouts.


The following headings in this chapter provide additional information and operating instructions for ICU components:

- "Warning and Indicator Lights"
- "Instruments"

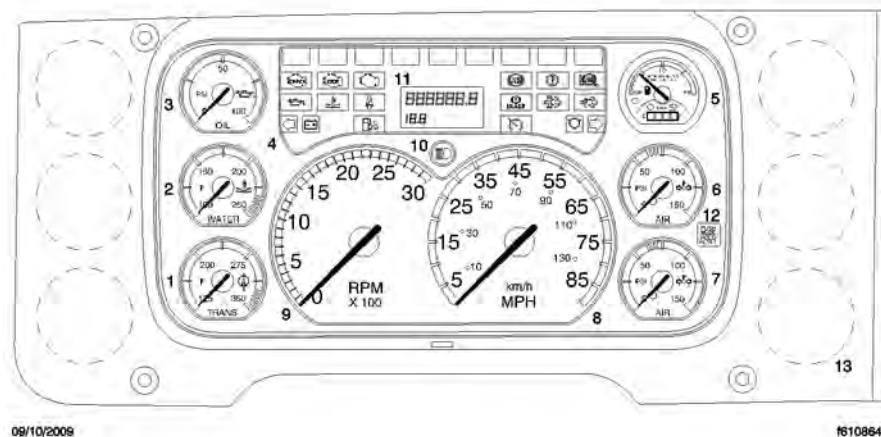

- | | |
|-----------------------------------|---------------------------|
| 1. Transmission Temperature Gauge | 8. Speedometer |
| 2. Coolant Temperature Gauge | 9. Tachometer |
| 3. Engine Oil Pressure Gauge | 10. High Beam Indicator |
| 4. Driver Message Center | 11. Driver Display Screen |
| 5. Fuel/DEF Level Gauge | 12. Mode/Reset Switch |
| 6. Primary Air Pressure Gauge | 13. Satellite Gauges |
| 7. Secondary Air Pressure Gauge | |

Fig 34, ICU3 Instrument Cluster (EPA10 shown)

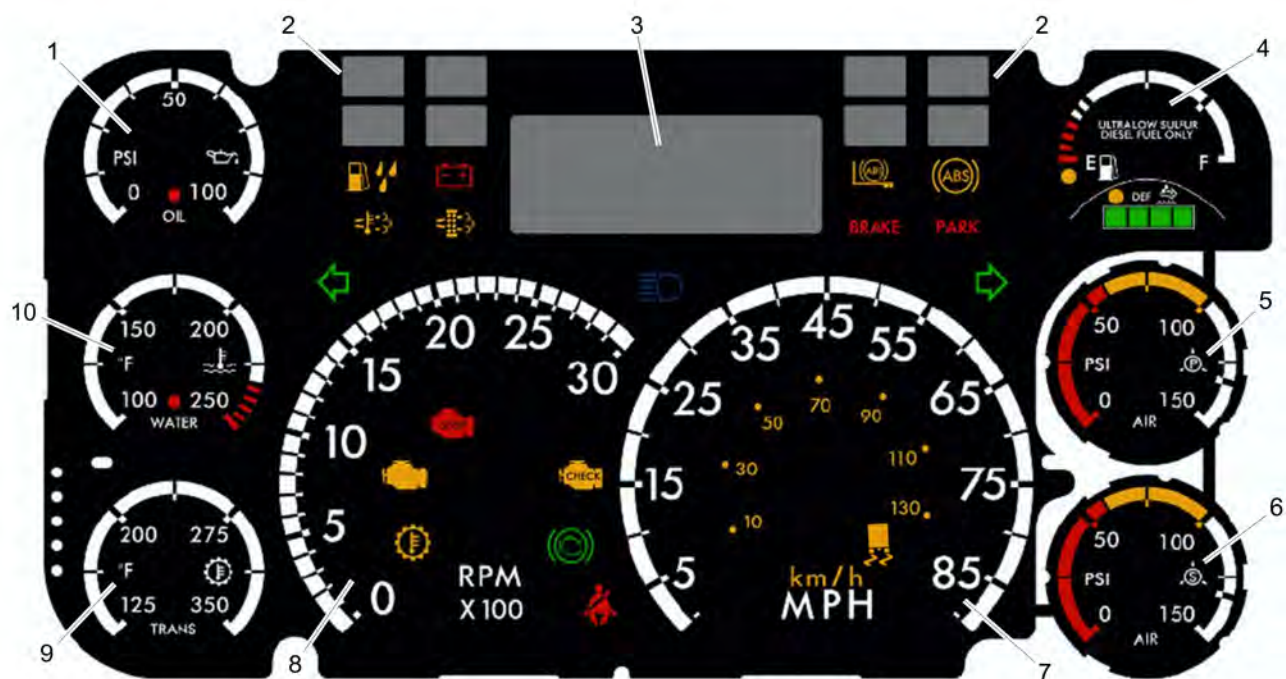


10/26/2018

f611292b

NOTE: This instrument cluster has 8 optional telltales. The gear, engine brake, and cruise control are indicated in the driver display, rather than with telltales.

- | | |
|-------------------------------|-----------------------------------|
| 1. Engine Oil Pressure Gauge | 6. Secondary Air Pressure Gauge |
| 2. Optional Telltales | 7. Speedometer (U.S. version) |
| 3. Driver Message Center | 8. Tachometer |
| 4. Fuel/DEF Level Gauge | 9. Transmission Temperature Gauge |
| 5. Primary Air Pressure Gauge | 10. Coolant Temperature Gauge |

Fig 35, ICU3S (GHG14 and newer shown)

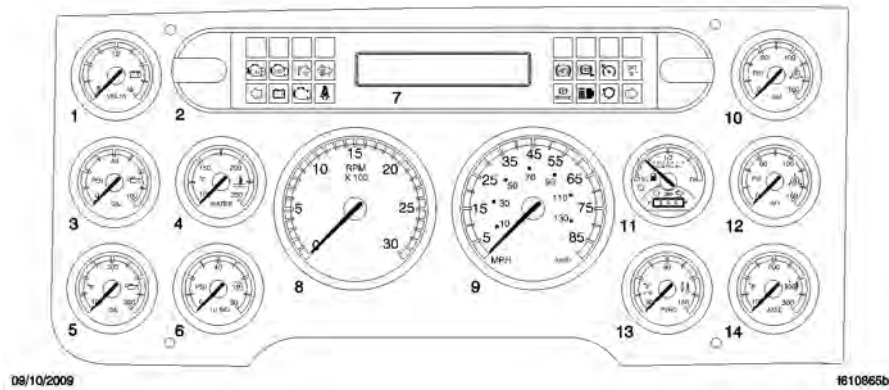

NOTE: The ICU4 and ICU4M are nearly identical, with the exception of the driver message center (Item 7).

- | | |
|-----------------------------------|----------------------------------|
| 1. Battery Voltage Gauge | 8. Tachometer |
| 2. Lightbar | 9. Speedometer |
| 3. Engine Oil Pressure Gauge | 10. Primary Air Pressure Gauge |
| 4. Coolant Temperature Gauge | 11. Fuel/DEF Level Gauge |
| 5. Engine Oil Temperature Gauge | 12. Secondary Air Pressure Gauge |
| 6. Turbo Boost Air Pressure Gauge | 13. Pyrometer |
| 7. Driver Message Center | 14. Rear Axle Temperature Gauge |

Fig 36, ICU4M Instrument Cluster (EPA10 shown)



- | | |
|--|---|
| 1. Engine Oil Temperature Gauge | 6. Tachometer and Engine Oil Pressure Gauge |
| 2. Front Axle Temperature Gauge | 7. Primary Air Pressure Gauge |
| 3. Rear Axle Temperature Gauge | 8. Secondary Air Pressure Gauge |
| 4. Speedometer and Coolant Temperature Gauge | 9. Transmission Oil Temperature Gauge |
| 5. Fuel/DEF Level Gauge | 10. Driver Message Center |

Fig 37, ICU4Me Instrument Cluster

"Driver Message Center"

5.01.02 Ignition Sequence

When the ignition is turned on, the ICU runs a self-check. See Fig.38, [ICU Ignition Sequence](#). Observing the ignition sequence is a good way to ensure the ICU is functioning properly.

IMPORTANT: Do not crank the engine until the ICU self-check is complete.

NOTE: Air gauges do not complete a sweep of their dials during the ignition sequence.

When the ignition is turned on, the following actions should occur:


- electronic gauges complete a full sweep of their dials
- warning and indicator lamps illuminate, then are extinguished
- audible alert sounds for approximately four seconds or until sufficient air pressure builds up in the primary and secondary air systems
- DEF level indicator illuminates all segments green, then turns them off one at a time before turning the leftmost segment amber and then red
- Freightliner logo displays on the ICU4Me driver message center for two seconds.
- software revision level of the ICU is displayed on the driver message center, followed by any active faults

IMPORTANT: If any red or amber warning and indicator lamps do not illuminate during the ICU self-check or do not go out after the self-check completes, take the action outlined in "Warning and Indicator Lights", or take the vehicle to an authorized Freightliner service facility as soon as possible.

NOTE: If active faults are present, take the vehicle to an authorized Freightliner service facility as soon as possible.

If the ICU receives active fault codes, it displays them one after the other until the parking brake is released or the ignition is turned off. Once the parking brake is completely released, the ICU displays the odometer. If there are no active faults, the ICU displays the odometer after the self-check completes.

When the self-check is complete on an ICU4M, the fasten seat belt screen displays if the engine is off. If the engine is running, the idle hours screen displays.

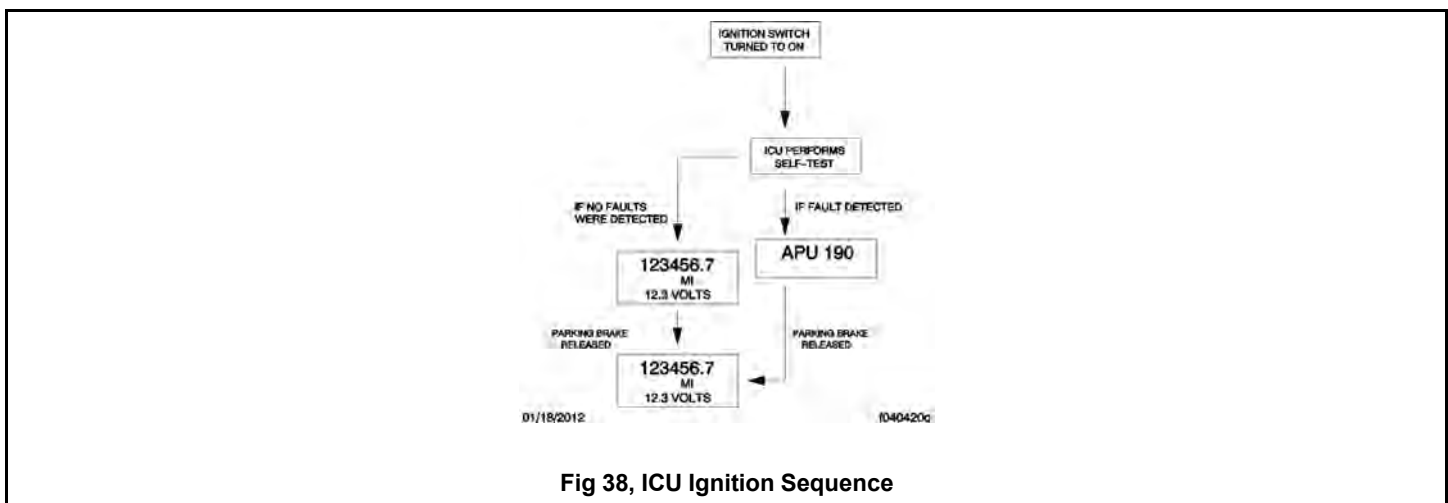

5.01.03 Audible Alerts

An audible alert sounds during the ignition sequence and whenever one of the following conditions exists:

- Engine oil pressure falls below the minimum preset value.
- Coolant temperature rises above the maximum preset value.

- Air pressure falls below approximately 70 psi (483 kPa).
- Parking brake is set with the vehicle moving faster than two miles per hour.
- System voltage falls below 11.9 volts.
- Door is open or the headlights are on, with the parking brake off.
- Driver seat belt is not fastened with the parking brake off (optional).
- Outside temperature falls below 35°F (1.7°C) (optional).

5.02 Warning and Indicator Lights

5.02.01 General Information

The ICU lightbar has three or four rows of warning and indicator lights with icon symbols, depending on the ICU. The positions of the lights may vary for the different ICU's, but the telltales are standard for all applications. See 5,[Common Warning and Indicator Lamps and ICU Messages](#) for a listing of standard and commonly used warning and indicator lamps.

Warning and indicator lamps illuminate in red (danger), amber (caution), green (status advisory), or blue (high-beam headlights active).

IMPORTANT: Depending upon local jurisdictional emissions guidelines, vehicles and/or engines that are domiciled outside of the U.S. and Canada may not be compliant with EPA07, EPA10, GHG14, or GHG17 regulations. Noncompliant vehicles may not be equipped with all of the lamps shown in 5,[Common Warning and Indicator Lamps and ICU Messages](#).

Common Warning and Indicator Lamps and ICU Messages			
Lamp Description			Color
	STOP Engine*	Indicates a serious fault that requires engine shutdown immediately. The engine protection system will reduce the maximum engine torque and speed, and, if the condition does not improve, will shut down the engine within 30 to 60 seconds. Safely bring the vehicle to a stop on the side of the road and shut down the engine as soon as the red light is seen. If the engine shuts down while the vehicle is in a hazardous location, turn the key to the OFF position for a few seconds, then restart the engine and move the vehicle to a safer location.	Red
	High Coolant Temperature	Indicates the coolant temperature is above the maximum allowable temperature.	Red
	Low Air Pressure (EPA07)	Indicates air pressure in the primary or secondary reservoir has dropped below approximately 70 psi (483 kPa).	Red

Table 5, Common Warning and Indicator Lamps and ICU Messages

 
	Low Air Pressure (EPA10 and Newer)	Indicates air pressure in the primary or secondary reservoir has dropped below approximately 70 psi (483 kPa).	Red
	Low Air Pressure (ICU4Me only)	Indicates air pressure in the primary or secondary reservoir has dropped below approximately 70 psi (483 kPa). NOTE: On EPA 2016 and newer vehicles, this text pop-up warning appears on the ICU4Me screen and an audible warning buzzer sounds. However, the low air pressure warning telltale under the ICU4Me screen does not illuminate.	–
	Low Engine Oil Pressure	Indicates the engine oil pressure is below the minimum allowable pressure.	Red
	Transmission Overheat	Indicates high transmission temperature.	Red
	Transmission Fluid Level	Indicates low transmission fluid level. Safely bring the vehicle to a stop as soon as possible.	Red
	Parking Brake (EPA07)	Indicates the parking brake is engaged, or hydraulic brake fluid pressure is low. An audible alert activates when the vehicle is moving over 2 mph (3 km/h) with the parking brake set.	Red
	Parking Brake (EPA10 and Newer)	Indicates the parking brake is engaged.	Red
	Low Battery Voltage	Indicates that battery voltage is 11.9 volts or less.	Red
	Unfastened Seat Belt	Activates with an audible alert when the system detects that the parking brake is off and the driver seat belt is not fastened on some vehicles. On other vehicles, this lamp illuminates for 15 seconds when the ignition is first turned on.	Red
	Check ECAS	Indicates Electronically Controlled Air Suspension (ECAS) active fault.	Red
	CHECK Engine*	Indicates an engine condition (low oil pressure, low coolant level, high coolant temperature, high DPF soot level, or uncontrolled DPF regeneration) that	Amber

Table 5, Common Warning and Indicator Lamps and ICU Messages

		requires correction. Correct the condition as soon as possible. If the condition worsens, the STOP engine lamp will illuminate.	
	High Exhaust System Temperature (HEST)*	Slow (10-second) flashing indicates a regeneration (regen) is in progress. IMPORTANT: When the HEST lamp is illuminated, do not park the vehicle near flammable material. Solid illumination indicates high exhaust temperatures at the outlet of the tail pipe when speed is below 5 mph (8 km/h).	Amber
	Diesel Particulate Filter (DPF) Status	Solid illumination indicates a regen is required. Change to a more challenging duty cycle (such as highway driving) to raise exhaust temperatures for at least twenty minutes, or perform a parked regen. Blinking indicates that a parked regen is required immediately. An engine derate and shutdown will occur.	Amber
	Malfunction Indicator Lamp (MIL)	Indicates an emissions-related fault. See the engine operation manual for details.	Amber
	Vehicle ABS	Momentary illumination indicates the vehicle ABS is engaged. Solid illumination indicates a problem with the vehicle ABS. Repair the ABS immediately to ensure full braking capability.	Amber
	Trailer ABS	Momentary illumination indicates the trailer ABS is engaged. Solid illumination indicates a problem with the trailer ABS. Repair the ABS immediately to ensure full braking capability.	Amber
	No Charge	Indicates the alternator is not properly powering the electrical system.	Amber
	Water in Fuel	Indicates the fuel may contain water. Drain any water collected in the fuel/water separators.	Amber

Table 5, Common Warning and Indicator Lamps and ICU Messages

	Fuel Filter Restriction	Indicates the fuel filter is clogged and requires service.	Amber
	Optimized Idle	Indicates optimized idle is enabled.	Amber
	Check Transmission	Indicates an undesirable transmission condition.	Amber
	Wait To Start (EPA07/EPA10)	Indicates that the system is preventing the starter from cranking. This can occur when the ignition switch is turned to START before the gauge sweep has completed, or if the starter has overheated. Turn the ignition switch back to ON, wait for the lamp to go out, then turn the ignition switch to START again.	Amber
	Start Blocked (GHG14 only)	Indicates that the system is preventing the starter from cranking. This can occur when the ignition switch is turned to START before the gauge sweep has completed, or if the starter has overheated. NOTE: Illumination of the Start Blocked lamp does not indicate a problem with the starter. Turn the ignition switch back to ON, wait for the lamp to go out, then turn the ignition switch to START again.	Amber
	Wheel Spin (pre-EPA16)	Flashing indicates the ATC system is active, or the ATC button has been pressed to allow wheel slip. Solid illumination indicates ATC is shut off or unavailable due to a system fault. In the event of a system fault, repair the ATC system immediately to ensure full braking capability.	Amber
	Stability Event (EPA16 and newer)	Flashing indicates a stability event has been detected, and the ESC system is active. Solid illumination indicates a problem with the stability system. Repair the ESC system immediately to ensure full stability capability.	Amber
	ATC Deactivated (EPA16 and newer)	Flashing indicates the ATC SPIN button has been pressed to allow wheel slip.	Amber

Table 5, Common Warning and Indicator Lamps and ICU Messages

		Solid illumination indicates ATC is shut off or unavailable due to a system fault. In the event of a system fault, repair the ATC system immediately to ensure full braking capability.	
	Roll Stability (pre-EPA16)	Momentary illumination indicates that a stability event has occurred. On vehicles that are also equipped with ATC, flashing indicates the ATC button has been pressed to allow wheel slip. Solid illumination indicates ATC is shut off or unavailable due to a system fault. In the event of a system fault, repair the ATC system immediately to ensure full braking capability.	Amber
	Hill Start Aid (HSA) Override	Indicates the HSA switch has been pressed to override the hill start assist feature.	Amber
	Outside Normal Ride Height	Indicates the current rear suspension height is not at the normal ride height. This light will turn off once the vehicle returns to normal ride height.	Amber
	Bulb Out (optional)	Indicates that a bulb is not functioning in the headlights, tail lights, parking lights, or marker lights.	Amber
	Engine Brake	Indicates the engine brake is enabled.	Green
	Left-Turn Signal	Flashing indicates the outside left-turn signal lights are activated.	Green
	Right-Turn Signal	Flashing indicates the outside right-turn signal lights are activated.	Green
	Cruise Control	Indicates the cruise control is enabled. NOTE: The ICU4Me does not have a green cruise control telltale.	Green
	Active Brake Assist (GHG14 and newer)	Indicates the Active Brake Assist system is not available.	Amber

Table 5, Common Warning and Indicator Lamps and ICU Messages

	Lane Departure Warning	Indicates that lane departure warning is disabled due to minimum speed, no lane markings, or system not available. NOTE: Only on vehicles equipped with Detroit Assurance radar.	Amber
	High-Beam Headlights	Indicates the high-beam headlights are on.	Blue

Table 1, Common Warning and Indicator Lamps and ICU Messages

* See 39,ATS Warning Lamps for an explanation of the aftertreatment system (ATS) warning indicators, and actions required to avoid further engine protection steps.

EXHAUST AFTERTREATMENT SYSTEM INFORMATION					
INDICATOR LAMP(S)	 (Solid) Level 1	 (Flashing) Level 2	 (Flashing) Level 3	 (Solid) Level 4	 WARNING
Indicator Lamp Message(s)	Filter Regeneration Recommended.	Filter Regeneration Necessary	Parked Regeneration Required - Engine Derate	Service Regeneration Required. Engine Derate To Idle Only.	HEST (High Exhaust System Temperature)
Diesel Particulate Filter Condition	Filter is reaching capacity.	Filter is now reaching maximum capacity.	Filter has reached maximum capacity.	Filter has exceeded maximum capacity.	Flashing A regeneration is in progress.
Required Action	Bring vehicle to highway speeds to allow for an Automatic Regeneration or perform a Parked Regeneration.	To avoid engine derate, bring vehicle to highway speeds to allow for an Automatic Regeneration, or perform a Parked Regeneration as soon as possible.	Vehicle must be parked, and a Parked Regeneration must be performed. Engine will begin derate.	Vehicle must be parked, and a Service Regeneration must be performed. Check engine operator's manual for details. Engine will shut down.	Solid Exhaust components and exhaust gas are at high temperature. When stationary, keep away from people and flammable materials or vapors.
For a driver performed Parked Regeneration, vehicle must be equipped with a dash mounted Regeneration Switch.					

02/20/2009

1090156

Fig 39, ATS Warning Lamps

5.02.02 Engine Protection System



WARNING:

When the red STOP engine lamp illuminates, most engines are programmed to shut down automatically within 30 seconds. The driver must immediately move the vehicle to a safe location at the side of the road to prevent causing a hazardous situation that could cause bodily injury, property damage, or severe damage to the engine.

See Fig.40,ATS Warning Lamps for an explanation of the aftertreatment system (ATS) warning indicators, and actions required to avoid further engine protection steps.

The STOP engine lamp illuminates when the engine protection system is activated in one of two ways. On some engines, the engine protection system will derate the engine, allowing it to run at lower rpm and slower vehicle speed. Drive the vehicle to a safe location or to a service facility.

EXHAUST AFTERTREATMENT SYSTEM INFORMATION					
INDICATOR LAMP(S)	 Level 1	 Level 2	 Level 3	 Level 4	
Indicator Lamp Message(s)	Filter Regeneration Recommended.	Filter Regeneration Necessary.	Parked Regeneration Required - Engine Derate.	Service Regeneration Required. Engine Derate To Idle Only.	HCST (High Exhaust System Temperature)
Diesel Particulate Filter Condition	Filter is reaching capacity.	Filter is now reaching maximum capacity.	Filter has reached maximum capacity.	Filter has exceeded maximum capacity.	Flashing A regeneration is in progress.
Required Action	Bring vehicle to highway speeds to allow for an Automatic Regeneration or perform a Parked Regeneration.	To avoid engine derate, bring vehicle to highway speeds to allow for an Automatic Regeneration, or perform a Parked Regeneration as soon as possible.	Vehicle must be parked, and a Parked Regeneration must be performed. Engine will begin derate.	Vehicle must be parked, and a Service Regeneration must be performed. Check engine operator's manual for details. Engine will shut down.	Solid Exhaust components and exhaust gas are at high temperature. When stationary, keep away from people and flammable materials or vapors.
For a driver performed Parked Regeneration, vehicle must be equipped with a dash mounted Regeneration Switch:					

02/20/2009

1060156

Fig 40, ATS Warning Lamps

IMPORTANT: Safely bring the vehicle to a stop on the side of the road and shut down the engine as soon as the red light is seen. If the engine shuts down while the vehicle is in a hazardous location, turn the key to the OFF position for a few seconds, then restart the engine and move the vehicle to a safer location.

On other engines, the engine protection system will shut down the engine. It will first derate the engine, then shut it down completely 30 to 60 seconds after the indicator illuminates (depending on the critical fault type) if the condition does not improve. Bring the vehicle to a stop on the side of the road before the engine shuts down.

Some vehicles may have a shutdown-override switch, which may be used to momentarily override the shutdown sequence. See **Chapter 11** for detailed information regarding the shutdown process.


IMPORTANT: Do not attempt to restart the engine while the vehicle is moving. Bring the vehicle to a safe stop, then restart the engine.

To restart the engine, turn the ignition to OFF, leave it there a few seconds, then turn the ignition to START. The engine will run for a short period and shut down again if the condition does not improve.

5.03 Instruments

5.03.01 Air Intake Restriction Gauge

The air intake restriction gauge indicates the vacuum on the engine side of the air cleaner. On standard installations, it is mounted on the air intake duct in the engine compartment. As an option for easier viewing, the air intake restriction indicator (see Fig.41, [Air Intake Restriction Indicator](#)) can be mounted on the dash, usually on the right-hand control panel.

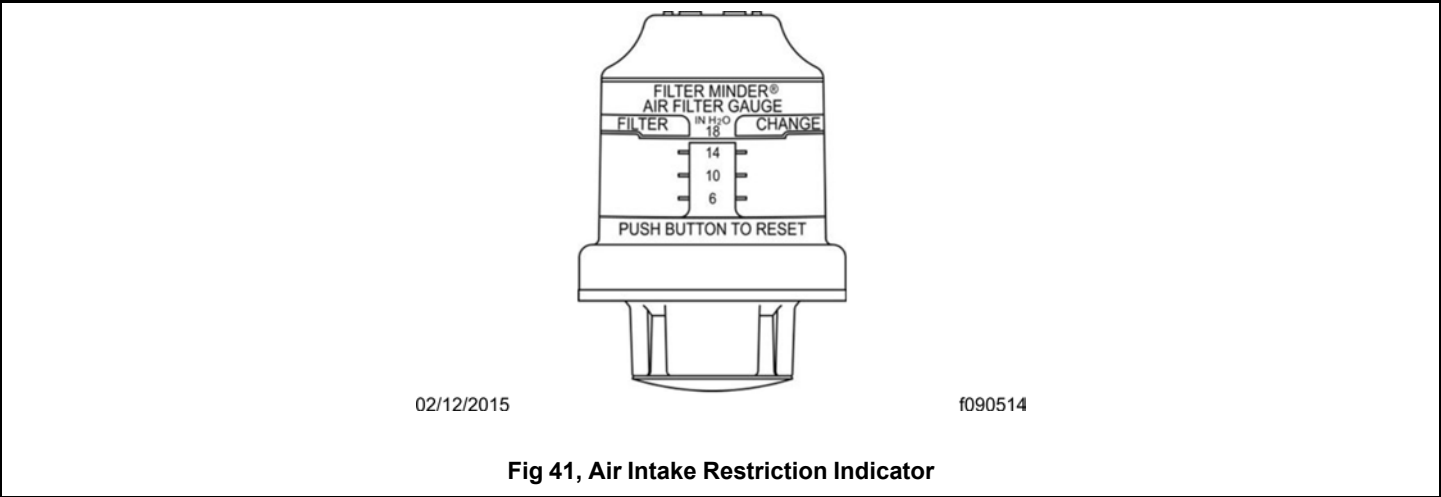

NOTE: Rain or snow can wet the filter and cause a temporary high reading.

Air intake restriction vacuum is measured in inches of water (inH₂O). For vehicles equipped with a graduated indicator or a restriction gauge on the dash, check the gauge with the engine off. If the yellow signal stays locked in the red zone once the engine is shut down, or is at or above the values shown in 6, [Air Intake Maximum Restriction Values \(inH₂O\)](#), the air cleaner element needs to be replaced.

Vehicles may be equipped with a go/no-go restriction indicator without graduations (see Fig. 42, [Manual-Reset Air Restriction Indicator, Go/No-Go](#)) instead of a graduated indicator.

Air Intake Maximum Restriction Values (inH2O)			
Engine Make	Pre-EPA07 Engines	EPA07 and EPA10 Engines	GHG14 and GHG17 Engines
Cummins	25	25	25
Detroit	20	22	18
Mercedes-Benz	22	22	—

Table 2, Air Intake Maximum Restriction Values (inH2O)



5.03.02 Application Air Pressure Gauge

An application air pressure gauge registers the air pressure being used to apply the brakes, and should be used for reference only. The gauge will not register air pressure until the foot brake pedal is depressed or the trailer hand brake is applied.

5.03.03 Coolant Temperature Gauge



NOTICE:
A sudden increase in coolant temperature may indicate engine or cooling system failure. Bring the vehicle to a safe stop and investigate the cause to prevent further damage. Do not operate the engine until the cause has been determined and corrected.

During normal engine operation, the coolant temperature gauge should read 175 to 195°F (79 to 91°C). If the temperature remains below 160°F (71°C), inspect the cooling system to determine the cause.

If coolant temperature rises above the maximum temperature listed in see 7, [Maximum Coolant Temperature](#), the CHECK engine lamp will illuminate. If the condition does not improve, the STOP engine lamp will also illuminate and an audible warning will sound. The engine will then derate or shut down, depending on the type of engine protection system installed.

Maximum Coolant Temperature	
Engine Make	Temperature: °F (°C)
Cummins	221 (105)
Detroit DD13/DD15/DD16	234 (112)
Mercedes-Benz	221 (105)

Table 3, Maximum Coolant Temperature

5.03.04 Drive Axle Oil Temperature Gauges



NOTICE:
A sudden increase in oil temperature that is not caused by a load increase may indicate mechanical failure. Bring the vehicle to a safe stop and investigate the cause to prevent further damage. Do not operate the vehicle until the cause has been determined and corrected.

During normal operation, the drive axle oil temperature gauges should read as follows:

- 160 to 220°F (71 to 104°C) for Detroit Classic Model 2, 4, and 6 axles.
- 160 to 329°F (71 to 165°C) for Detroit New Final Drive (NFD) axles.
- 160 to 275°F (71 to 135°C) for Meritor™ drive axles.
- 180 to 200°F (82 to 93°C) for Dana Spicer® drive axles.

Under heavy loads, such as when climbing steep grades, temperatures that exceed the normal oil temperature range for a short period are not unusual. If the temperature returns to normal when the load decreases, there is no problem.

5.03.05 Engine Oil Pressure Gauge



NOTICE:

A sudden decrease or absence of oil pressure may indicate mechanical failure. Bring the vehicle to a safe stop and investigate the cause to prevent further damage. Do not operate the engine until the cause has been determined and corrected.

The engine oil pressure gauge displays the current engine oil pressure. If engine oil pressure falls below the minimum levels shown in 8, [Minimum Oil Pressure*](#) , the CHECK engine lamp will illuminate. If the condition does not improve, the STOP engine lamp will also illuminate and an audible warning will sound. The engine will then derate or shut down, depending on the type of engine protection system installed.

Minimum Oil Pressure*		
Engine Model	At Idle Speed: psi (kPa)	At Rated RPM: psi (kPa)
Cummins	15 (103)	35 (241)
Detroit	14 (97)	55 (350)
Mercedes-Benz	7 (50)	36 (250)

Table 4, Minimum Oil Pressure*

* Oil pressures are given with the engine at operating temperature. With the engine cold, oil pressure may be higher. Individual engines may vary from the listed pressures; observe and record pressures when the engine is new to create a guide for checking engine condition.

Table 4.4, Minimum Engine Oil Pressure

5.03.06 Engine Oil Temperature Gauge



NOTICE:

A sudden increase in oil temperature that is not caused by a load increase may indicate mechanical failure. Bring the vehicle to a safe stop and investigate the cause to prevent further damage. Do not operate the engine until the cause has been determined and corrected.

During normal operation, the optional engine oil temperature gauge should read:

- 200 to 260°F (93 to 126°C) for Detroit and Cummins engines
- 177 to 203°F (81 to 95°C) for Mercedes-Benz engines


Under heavy loads, such as when climbing steep grades, temperatures that exceed the normal oil temperature range for a short period are not unusual. If the temperature returns to normal when the load decreases, there is no problem.

5.03.07 Fuel Gauge, Pre-EPA10

The fuel gauge indicates the level of fuel in the fuel tank(s). A single fuel gauge is standard. If equipped with an optional second fuel tank, each fuel tank level is indicated on a separate gauge.

5.03.08 Fuel/Diesel Exhaust Fluid (DEF) Gauge, EPA10 and Newer

For engines that are EPA10-compliant or newer, the fuel and DEF levels are measured in a dual purpose fuel/DEF level gauge. See Fig.43, [Fuel/DEF Gauge, EPA10 and Newer](#).

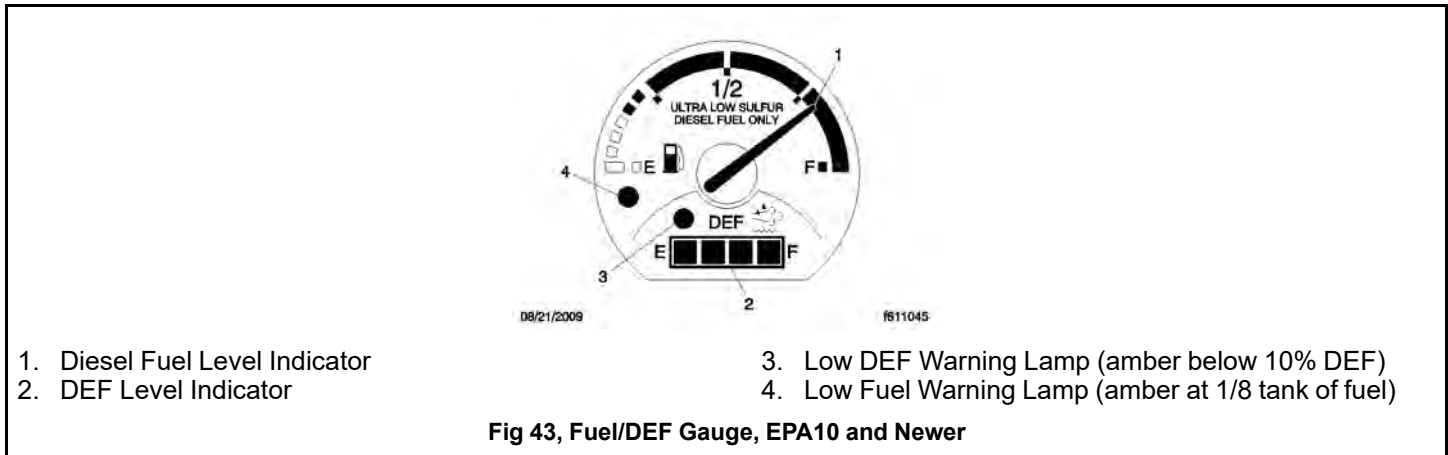

The diesel fuel level is indicated at the top of the gauge, with a low-fuel warning lamp that illuminates amber when the diesel fuel level registers 1/8th of capacity.

The DEF level is indicated in the lightbar on the lower portion of the gauge. There is a low DEF level warning lamp that illuminates amber when the DEF level reaches 10% of capacity. See **Chapter 12** for details of the DEF gauge functions.

5.03.09 Primary and Secondary Air Pressure Gauges

**WARNING:**

If air pressure falls below minimum pressure, the braking ability of the vehicle will be limited. Slow the vehicle down and bring it to a gradual stop. Do not attempt to move the vehicle until air pressure has risen above the minimum level. Moving a vehicle without adequate braking power could cause an accident resulting in property damage, personal injury, or death.

Air pressure gauges register the pressure in the primary and secondary air systems. Normal pressure, with the engine running, is 100 to 120 psi (689 to 827 kPa) in both systems.

A low-air-pressure warning light or ICU4Me text message, along with an audible alert connected to both the primary and secondary systems, activates when air pressure in either system drops below approximately 70 psi (483 kPa).

When the engine is started, the warning light and audible warning remain on until air pressure in both systems exceeds minimum pressure.

5.03.10 Speedometer

Two speedometer options are available. The U.S. version of the speedometer registers speed in both miles per hour (mph) and kilometers per hour (km/h), with mph in larger numbers. The metric version of the speedometer face reverses this arrangement, with km/h in larger numbers.

5.03.11 Tachometer


The tachometer indicates engine speed in revolutions per minute (rpm) and serves as a guide for shifting the transmission and keeping the engine in the appropriate rpm range. For low idle and rated rpm, see the engine identification plate.

5.03.12 Tire Pressure Monitoring System (TPMS)

IMPORTANT: The use of temporary resealing or reinflation products containing internal sealers or propellants in any tire/wheel assembly, may adversely affect the operation of the tire sensor(s) and void the warranty.

The TPMS constantly monitors the pressure and temperature of each tire on the vehicle, and provides tire status information to warn the driver about a tire-related problem before it becomes dangerous. Tire sensors mounted on each wheel measure tire pressure and temperature every 12 seconds and transmit data every 3 to 5 minutes. If a tire pressure change of 3 psi (21 kPa) or greater is detected, the sensor breaks its regular schedule and transmits tire data immediately. The SmarTire™ display see Fig.44, [SmarTire Display](#).

For further information on the TPMS, including operation, TPMS warnings, and proper tire removal/installation, see the SmarTire TPMS Owner's Manual.

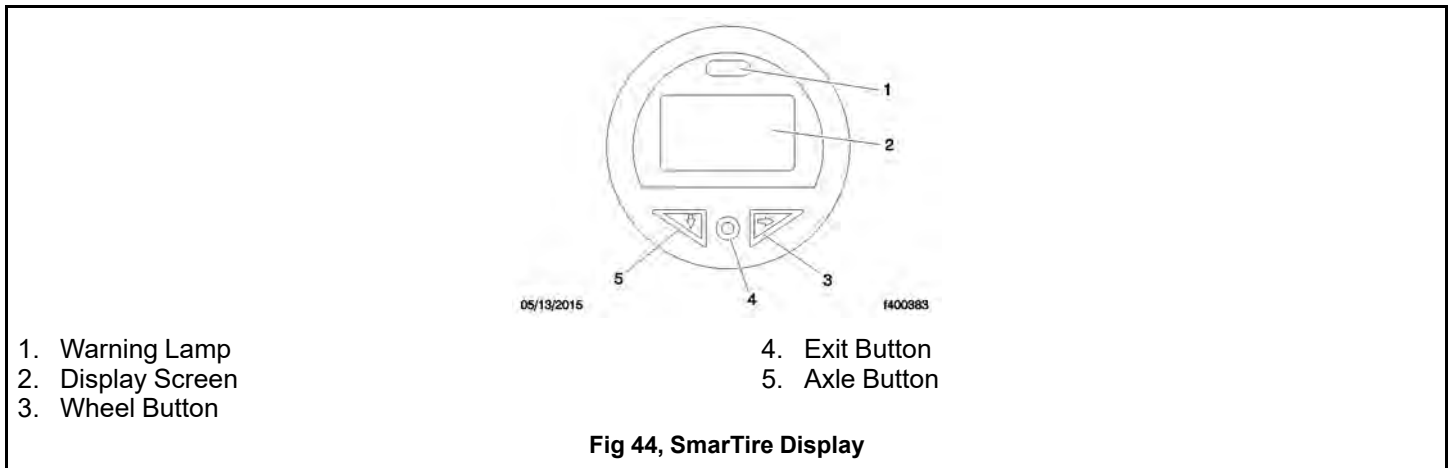

5.03.13 Transmission Fluid Temperature Gauge

The transmission fluid temperature gauge indicates the transmission lubricant operating temperature. Temperatures vary by application, but the transmission fluid temperature gauge reading should not exceed 250°F (121°C).



NOTICE:

A sudden increase in transmission fluid temperature that is not caused by a load increase may indicate mechanical failure. Bring the vehicle to a safe stop and investigate the cause to prevent further damage. Do not operate the vehicle until the cause has been determined and corrected.

Under heavy loads, such as when climbing steep grades, temperatures that exceed the normal oil temperature range for a short period are not unusual. If the temperature returns to normal when the load decreases, there is no problem.

5.03.14 Turbocharger Boost Pressure Gauge

A turbocharger boost pressure gauge indicates the pressure in the intake manifold, in excess of atmospheric pressure, being created by the turbocharger.

5.03.15 Voltmeter

The voltmeter indicates the vehicle charging system voltage when the engine is running and the battery voltage when the engine is off. By monitoring the voltmeter, the driver can stay aware of potential battery charging problems and have them fixed before the batteries discharge enough to create starting difficulties. Cascadia vehicles are equipped with either a voltmeter gauge, or a digital voltmeter readout located on the bottom line of the dash message center.

The voltmeter will normally show approximately 13.7 to 14.1 volts when the engine is running. The voltage of a fully charged battery is 12.7 to 12.8 volts when the engine is off. Battery voltage under 12.0 volts is considered a low battery, and a completely discharged battery will produce only about 11.0 volts.

If the voltmeter shows an undercharged or overcharged condition for an extended period, have the charging system and batteries checked at an authorized Freightliner service facility.

On a vehicle equipped with a battery isolator system, the voltmeter measures the average voltage of all the batteries when the engine is running. When the engine is off, the voltmeter shows only the isolated battery voltage and does not indicate the voltage of the engine-starting batteries.

5.04 Driver Message Center

5.04.01 ICU3/ICU4

The driver message center is controlled using the mode/reset switch, located on the right side of the ICU, and the + and – buttons mounted in the right-hand pod of the steering wheel (see Fig.45, [Steering Wheel-Mounted Switches](#)). See Fig. 45, [Steering Wheel-Mounted Switches](#). Tap the mode/reset switch or the + switch to advance one screen; press and hold either switch to select a menu choice or reset the display. When the display resets, an audible chirp sounds.

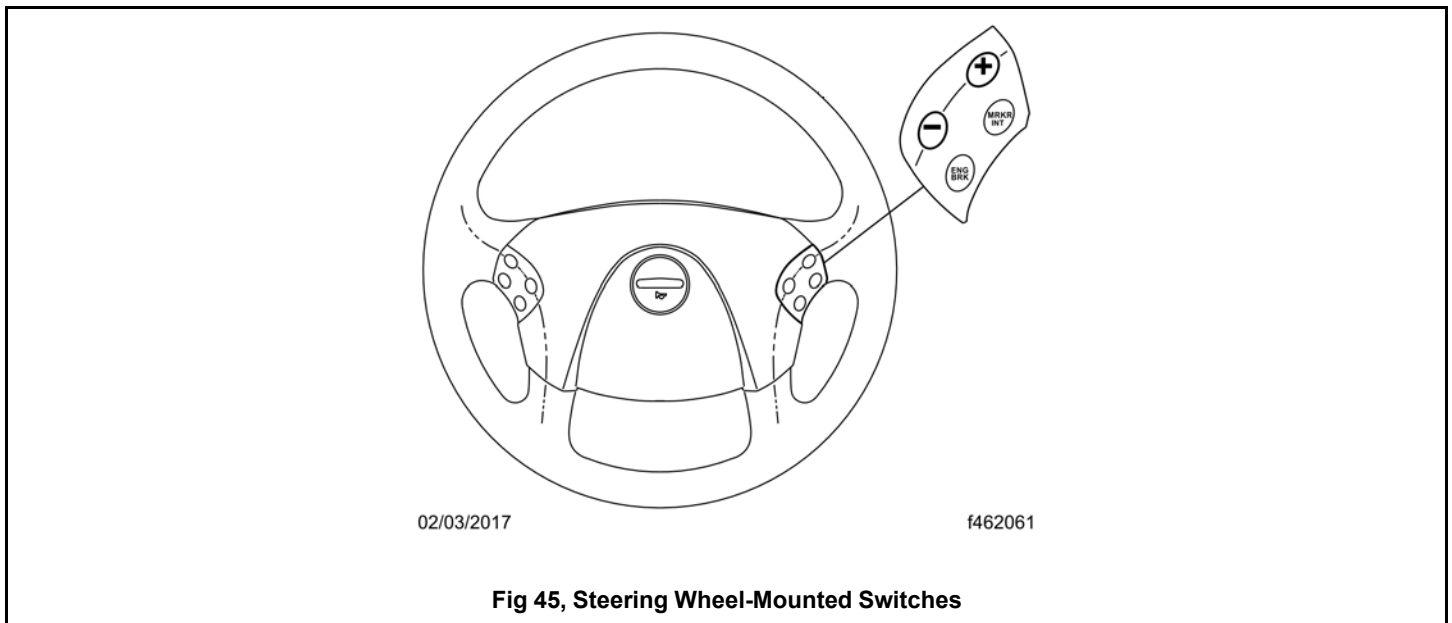


Fig 45, Steering Wheel-Mounted Switches

NOTE: To reset values in the ICU4M and ICU4Me driver message centers, press and hold the + switch.

Four driving screens are accessible when the parking brake is off. All screens and menus are accessible when the parking brake is on (parked screens).

Driving Screens

The following screens are available when the parking brake is off (when the vehicle is mobile) and no active fault codes are found. Use the + and – switches on the steering wheel, or the mode/reset switch, to scroll through the screens. To reset any values, press and hold the + switch or the mode/reset switch. The driving screens appear in the following order:

- Odometer
- Trip distance

- Trip hours
- Outside temperature

Parked Screens/Menus

The following screens and menus are available when the parking brake is on (when the vehicle is parked) and no active fault codes are found. Use the + and – switches on the steering wheel, or the mode/reset switch, to scroll through the driving screens. To reset any values, press and hold the + switch or the mode/reset switch. See Fig.46, [ICU3 Parked Screens](#). The parked screens appear in the following order:

- Odometer
- Trip distance
- Trip hours
- Outside temperature
- Temperature alert

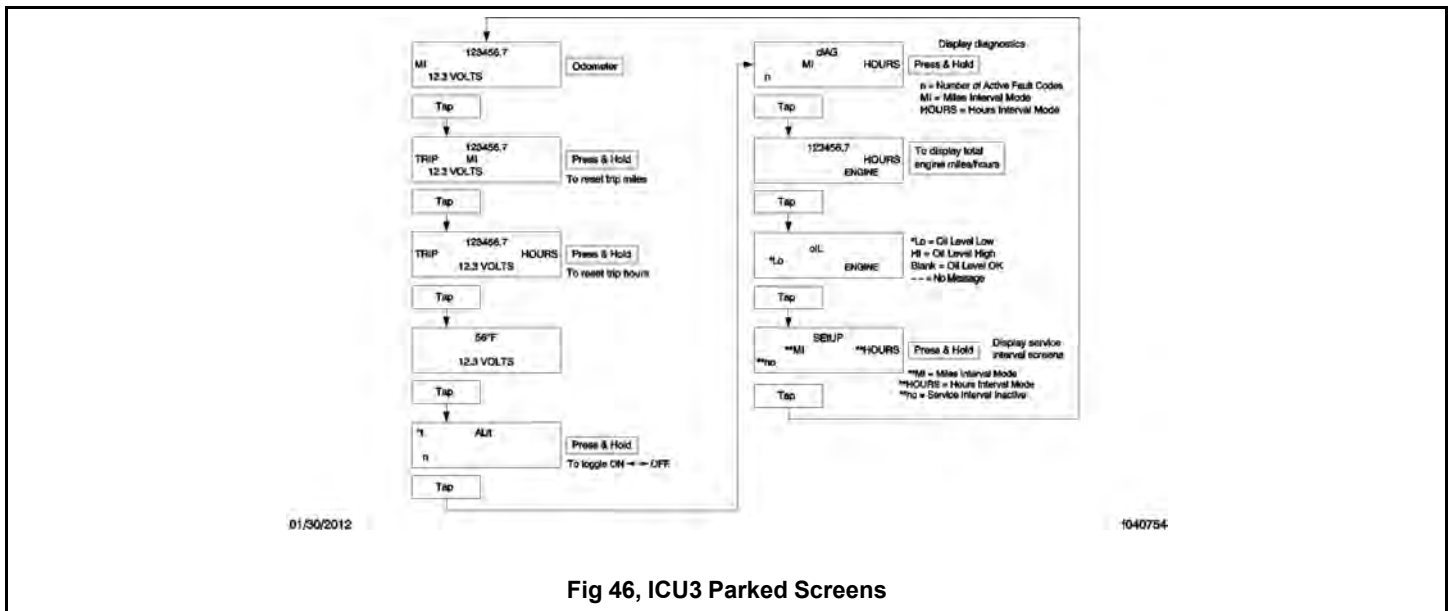


Fig 46, ICU3 Parked Screens

- Diagnostics
- Clear screen (on vehicles with less than 255 miles on the odometer)
- Engine miles/hours
- Setup

Temperature Alert

When the outside temperature drops to 35°F (1.7°C) or less, the ICU displays a caution text at one-second intervals for five seconds, and an audible alert sounds. Tap the + or – switch on the steering wheel, or the mode/reset switch, to acknowledge the message. The audible alert will not sound again unless the temperature cycles above 37°F (4°C) and back to 35°F (1.7°C) or less. This warning only occurs while the ignition is on and the parking brake is released.

The temperature alert message allows the driver to enable or disable the ambient temperature warning.

Press and hold the mode/reset switch to toggle between on and off. Release the mode/reset switch, then tap it to select the displayed choice.

Diagnostics

When the DIAG screen is displayed, press and hold the mode/reset switch to access the various diagnostic screens. See Fig.47, [ICU4 Diagnostic Screens](#) for a diagram of the diagnostic screens.

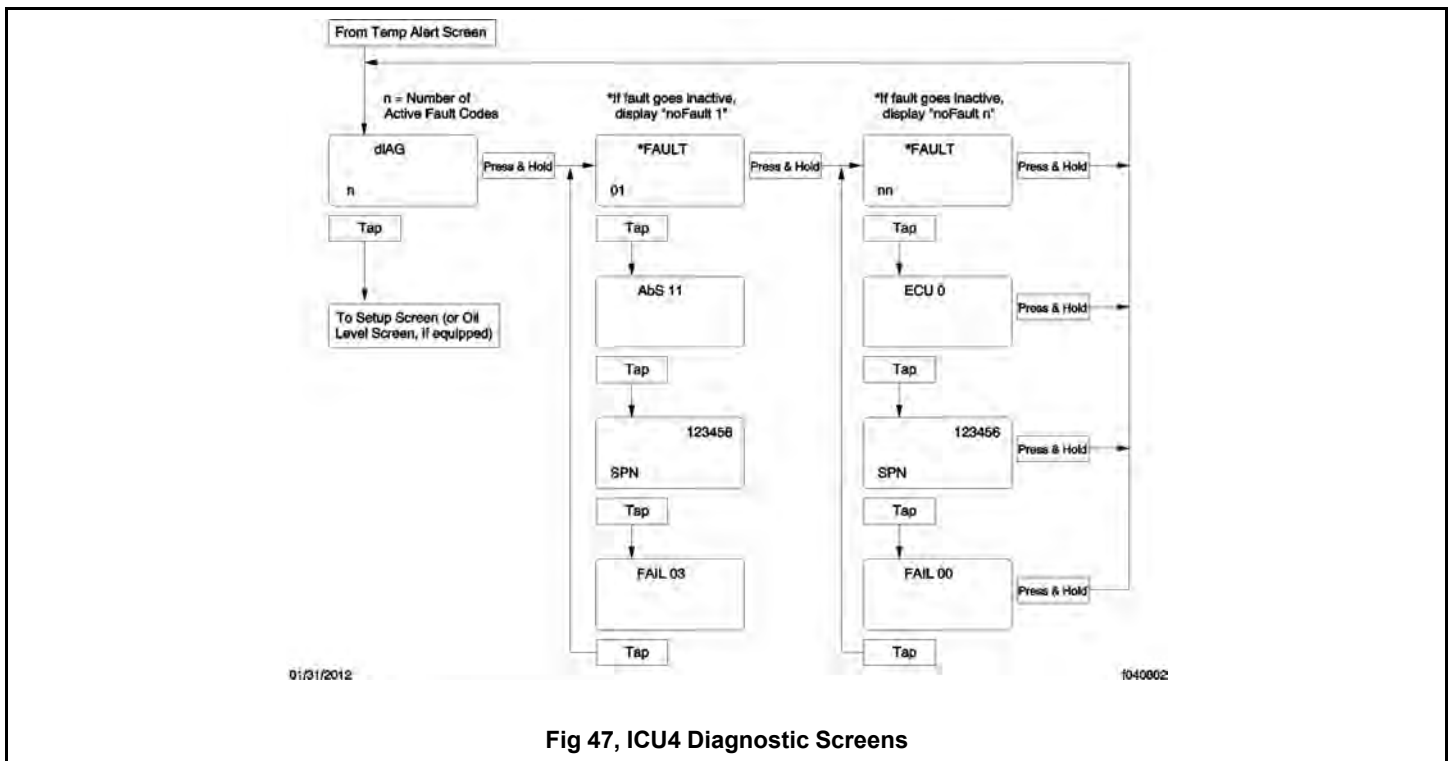


Fig 47, ICU4 Diagnostic Screens

The diagnostic screens are used by trained technicians to retrieve fault codes and other diagnostic information pertaining to the vehicle. If active fault codes display during start-up or at any other time, make a note of the fault code and take the vehicle to an authorized Freightliner service facility.

If fault codes are displayed, press and hold the mode/reset switch to view the next fault code until reaching the DIAG screen.

Engine Miles/Hours

When the engine miles/hours screen is displayed, press and hold the mode/reset switch to access the engines screen sub-menu. See Fig.48, [ICU4 Setup Screens](#) for a diagram of the engine screens.

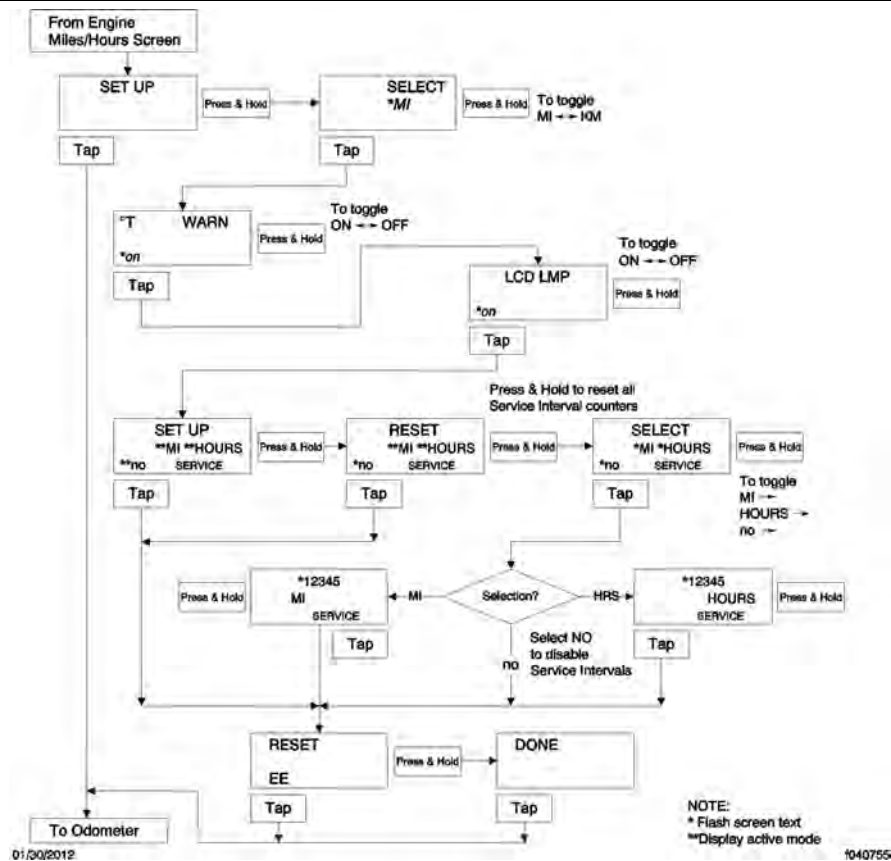


Fig 48, ICU4 Setup Screens

Setup

The setup menu allows the driver to manage ICU parameters. The setup screen submenu allows the driver to enable and change service intervals. See Fig.48, [ICU4 Setup Screens](#).

If service intervals are enabled and service distance or time has been exceeded, the text SERVICE HOUR/MI (KM) will display at start-up to indicate vehicle service is required.

For each parameter, press and hold the mode/reset switch to navigate to the parameter change screen. In each change screen, tap the mode/reset switch to toggle between options.


Use the last screen in the setup menu, **RESET EE**, to reset the parameters the ICU learns back to the default settings. Press and hold the mode/reset switch to reset the following learned parameters:

- automated transmission display
- seat belt switch learning
- engine oil level
- other electronic devices that have been removed from the vehicle (e.g. Qualcomm)

5.04.02 ICU4M

Functions

ICU4M settings and the driver message center are controlled with the + and – switches and the MY INFO switch, mounted on the dash. See Fig.49, [MY INFO Switch](#). Tap the MY INFO switch to drill down from each main screen to the submenus contained within it. Use the + and – switches to scroll through screens and select options. Tap the MY INFO switch again to exit each change screen.

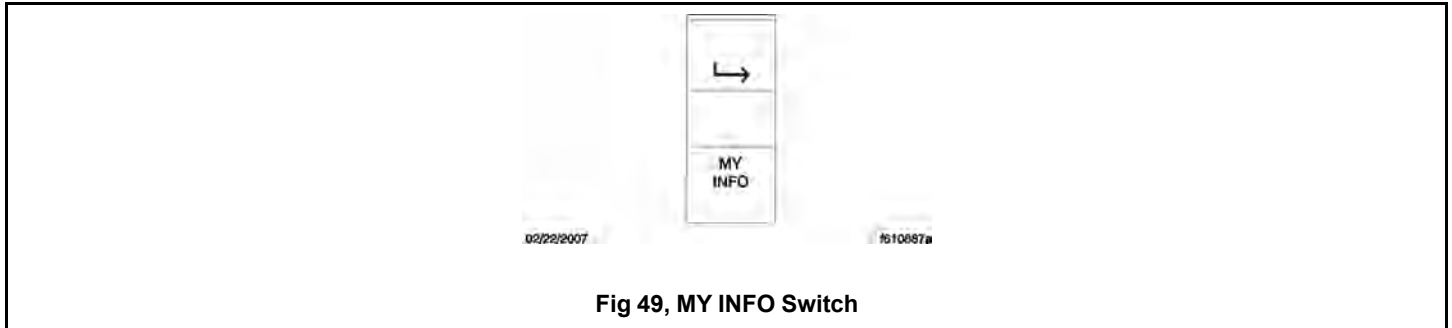

With the parking brake off, only the odometer and alert messages can be displayed. Park the vehicle and set the parking brake to access the parked screens and menus.

Alert Messages

The driver message center displays alert messages when certain conditions occur. They are warnings, cautions, or other messages that require the driver's attention, but not all of them are critical to the operation of the vehicle.

NOTE: If there is more than one alert message to display, tap the + switch or the MY INFO switch to access the next message, and so on, until all messages have been viewed.

More important messages take priority over less important messages. The order of priority is:

1. parking brake set (with the vehicle moving)
2. parking brake off (with the door open)
3. low oil pressure or high coolant temperature
4. hard brake warnings (if equipped with roll stability advisor)
5. low battery voltage
6. ambient temperature below 35°F (1.7°C)
7. turn signal on
8. incoming instant or Qualcomm messages
9. service warnings
10. no datalink activity

Incoming Message

On vehicles with a Qualcomm onboard communications system, a notification appears on the driver message center whenever a message is received.

NOTE: The incoming message screen also displays during the ignition sequence if a message is available.

This message displays for a preset time period, then returns after a preset interval until it is dismissed by the + and – switches or the MY INFO switch.

Parking Brake On

This warning message and an audible warning come on whenever the parking brake is applied and the vehicle is moving faster than 2 mph (3 km/h). See Fig. 50, [Parking Brake On Alert Message](#). The screen and audible warning go away only when the parking brake is released, or speed is reduced below 2 mph.



Low Oil Pressure

This warning message and an audible warning come on whenever the oil pressure falls below the minimum oil pressure, whether the vehicle is idling or in motion. Tap the + and – switches or the MY INFO switch to dismiss the message.

If low oil pressure is detected during the ignition sequence, it displays as an active fault instead of an alert message. After 30 seconds, the message displays again.

High Coolant Temp

This message and an audible warning come on whenever the engine coolant temperature exceeds the maximum allowable temperature.

If high coolant temperature is detected during the ignition sequence, it displays as an active fault instead of an alert message. After 30 seconds, the message displays again.

Low Air Pressure

NOTE: On vehicles with ICU4Me, EPA 2016 or newer, the low air pressure warning telltale under the ICU4Me screen does **not** illuminate during the self-check or under low air conditions. This behavior is intended and complies with government regulations.

A pop-up message stating "Brake Air Supply Pressure Low" displays on the ICU4Me screen and an audible warning buzzer sounds when the air pressure in the primary or secondary reservoir has dropped below approximately 70 psi (483 kPa).

Low Voltage

On some vehicles, this optional message and an audible warning come on whenever a low voltage condition is detected.

Turn Signal On

This warning message and audible warning come on whenever the turn signal remains on for four minutes or five miles of travel. To dismiss this message, either turn off the turn signal or tap the + and – switches or the MY INFO switch.

Air Temperature

When the outside air temperature drops below 35°F (1.7°C), a warning text is displayed at one-second intervals for five seconds, and an audible warning will sound. Tap the + and – switches or the MY INFO switch to acknowledge the warning. The alert message will not occur again unless the temperature cycles above 37°F (4°C) and back below 35°F (1.7°C). This warning only occurs while the ignition is on and the parking brake is off.

Service Warnings

Service warning alerts display during the ignition sequence and indicate if a service interval has been reached or exceeded and maintenance is required. The messages may indicate the number of miles (km) or hours until the next required service or, once passed, the number of miles (km) or hours since maintenance should have been performed.

Automated Transmission Display

The ICU4M can display current gear information for vehicles with an automated transmission. The last three digits at the far right on the lower line of the driver message center are reserved for this information.

When a shift request is made by the driver, an up or down arrow is also displayed, depending on the shift direction.

For more information about specific models of automated transmissions, see **Chapter 15**.

Driving Screens

The following screens are available when the parking brake is off (when the vehicle is mobile).

Tap the MY INFO switch to drill down from each main screen to the submenus contained within it. Use the + and – switches to scroll through screens and select options. Tap the MY INFO switch again to exit each change screen. See Fig. 51, [ICU4M Driving Screens](#).

- Fasten seat belt (rpm<100)
- Fuel economy (rpm>100)

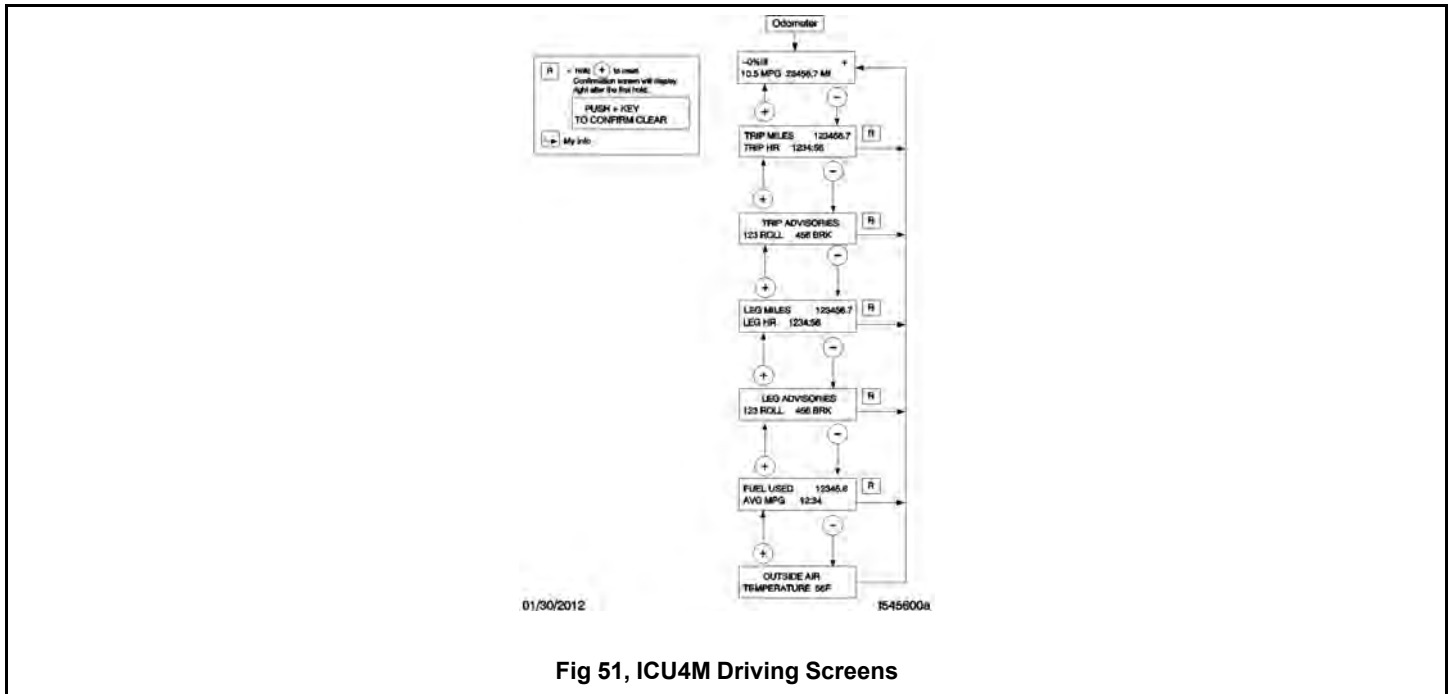


Fig 51, ICU4M Driving Screens

- Odometer
- Trip distance/hours
- Trip advisory
- Leg distance/hours
- Leg advisory
- Fuel used/average MPG (KM/L)
- Outside air temperature

Favorite Screen

The driver can set a favorite driving screen using the MY INFO switch. Press and hold the lower half of the MY INFO switch for just over one second to set the current screen as the favorite screen. A chirp will sound to verify the screen has been set.

Tap the lower half of the MY INFO switch to access the favorite screen. Tap the MY INFO switch again to leave the favorite screen.

NOTE: Only driving screens can be set as the favorite screen.

Parked Screens/Menus

Tap the MY INFO switch to drill down from each main screen to the submenus contained within it. Use the + and – switches to scroll through screens and select options. Tap the MY INFO switch again to exit each change screen. Press and hold the + switch or the upper half of the MY INFO switch to reset the counters for trip and fuel information.

The following screens are available when the parking brake is on (when the vehicle is parked). See Fig. 52, [ICU4M Idle Hours, Trip Information, Fuel Information, and Engine Information Screens](#).

- Odometer

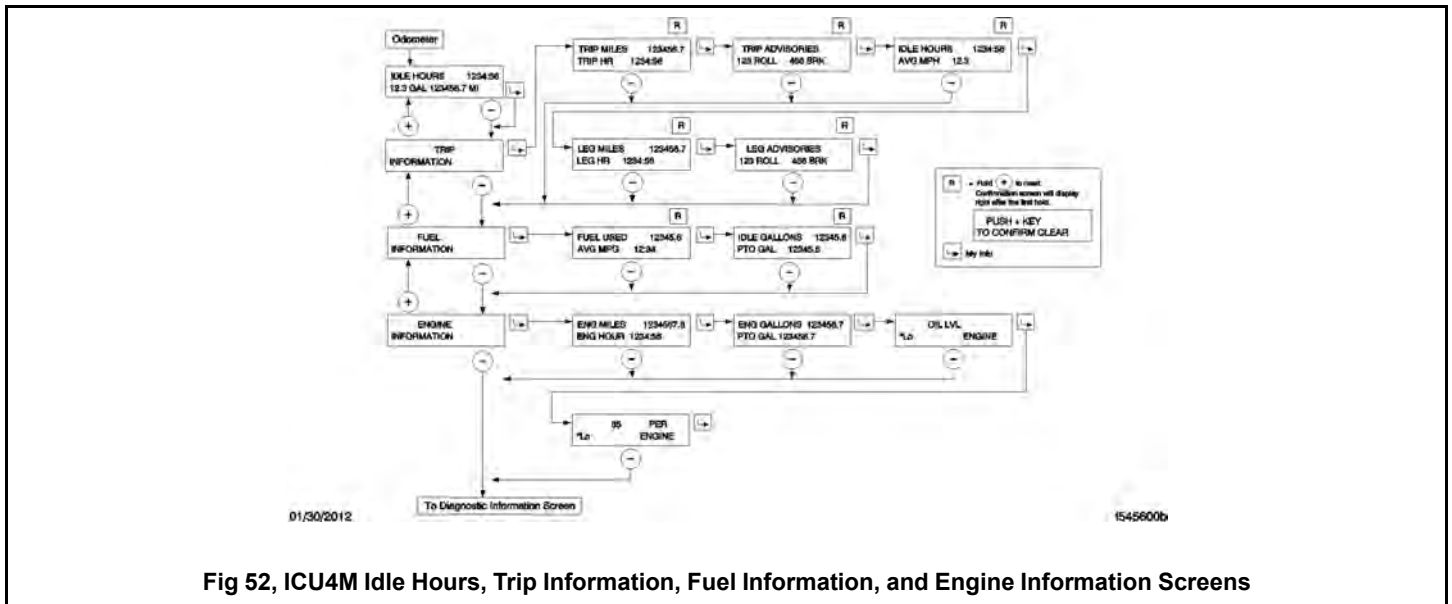


Fig 52, ICU4M Idle Hours, Trip Information, Fuel Information, and Engine Information Screens

- Trip information including trip miles/hours, idle hours, average speed, leg miles/hours
- Fuel information including fuel used, fuel economy, idle/PTO fuel usage
- Engine information including engine miles/hours, engine/PTO gallons, oil level
- Diagnostic information
- Service information including mileage or time to next service
- Setup information
- Vehicle information including Datalink status, ICU serial number, software version
- Outside air temperature
- Fasten seat belt warning

Trip Information

Trip Information displays the trip miles, trip advisories, idle hours, leg miles, and leg advisories, in that order.

Fuel Information

Fuel information displays total fuel usage since the last reset, fuel mileage, and fuel consumed while idling or running the PTO, in that order.


Engine Information

Engine information displays engine mileage and hours, and total fuel consumption, in that order.

Diagnostic Information

If active fault codes are displayed on the diagnostic information screens, make a note of the fault code and text message, then take the vehicle to an authorized Freightliner service facility. See Fig.

53, [ICU4M Diagnostic Information and Service Information Screens](#) for a diagram of the diagnostic information screens.

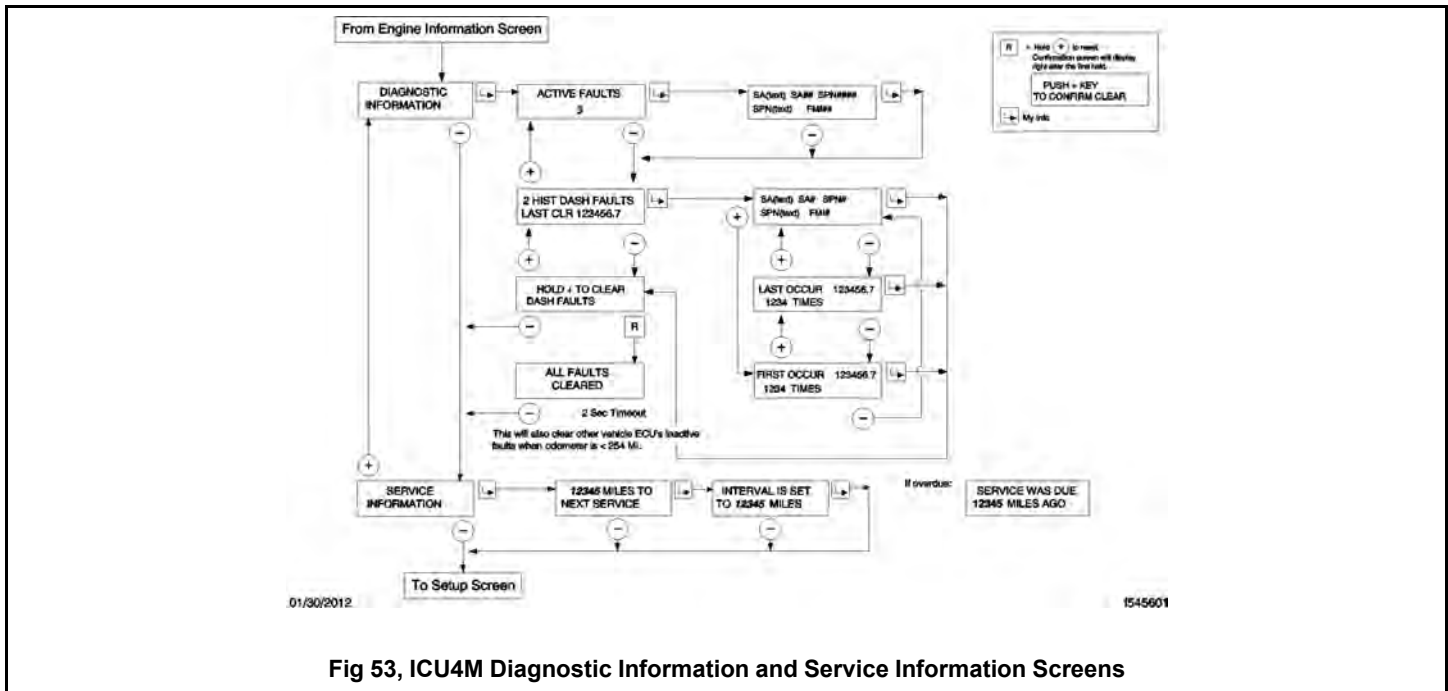

Service Information

The Service Information menu displays the next service interval, expressed in either miles or hours. See Fig. 53, [ICU4M Diagnostic Information and Service Information Screens](#). Service intervals can also be deactivated. For programming service intervals, see **Setup Information**, below.

NOTE: If the vehicle has exceeded the service interval, the **miles(km)/hours remaining** screen is replaced by the **service was due** screen, followed by the number of miles(km)/hours since the service was due.

Setup Information

The Setup Information menu allows the driver to program various features of the ICU4M. See Fig. 54, [ICU4M Setup Information Screens](#).


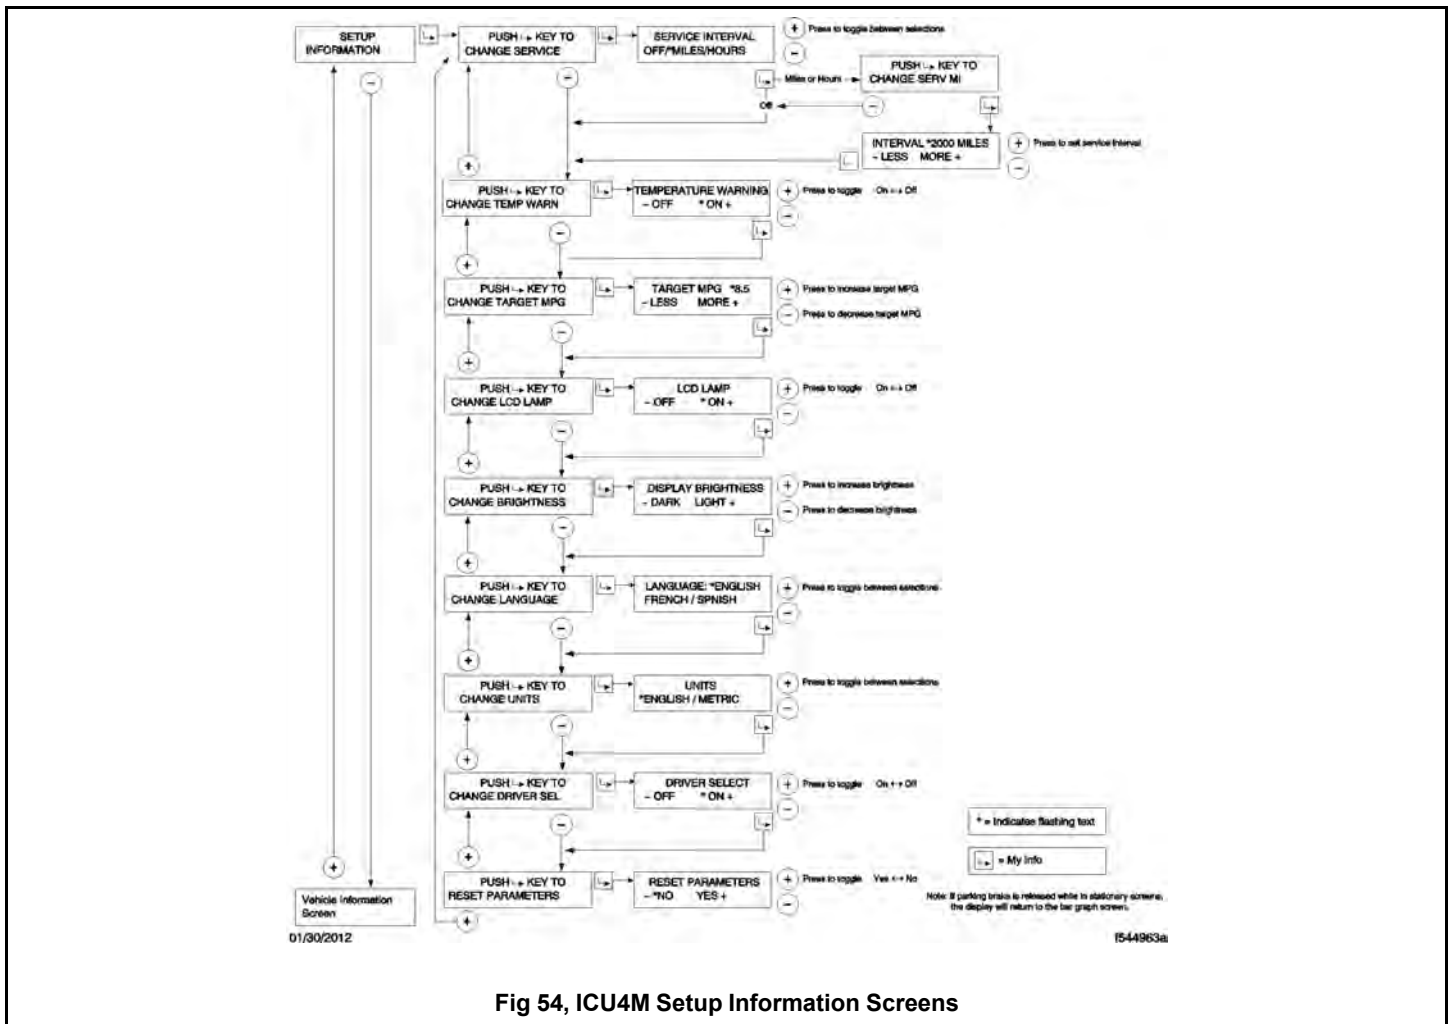


Fig 54, ICU4M Setup Information Screens

The setup features include:

- Service intervals (OFF/MILES/HOURS)
- Outside temperature warning (ON/OFF)
- Target MPG
- LCD lamp (ON/OFF)
- Driver message center brightness
- Language (English/French/Spanish)
- Units of measurement (English/Metric)
- Driver select (ON/OFF)
- Reset parameters to original settings
- Vehicle Information Screens



The vehicle information screens display hardware and software information, including the Freightliner part number and switch ID of the ICU. See Fig.55, [ICU4M Vehicle Information Screens](#).

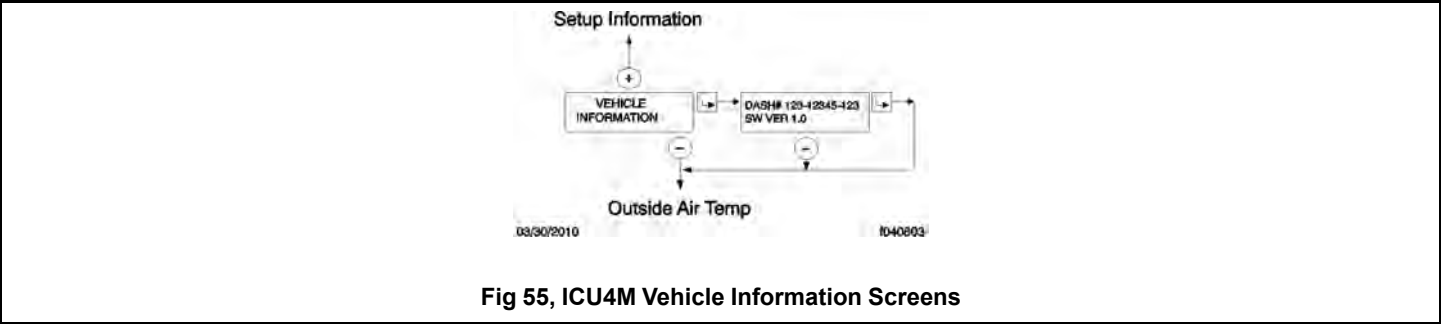

5.04.03 ICU4Me



Functions

ICU4Me settings and the driver message center are controlled using the ICU4Me control switch located on the dash, and the + and – switches mounted in the right-hand pod of the steering wheel. See 57, [ICU4Me Control Switch](#) and see 56, [Steering Wheel-Mounted Switches](#).

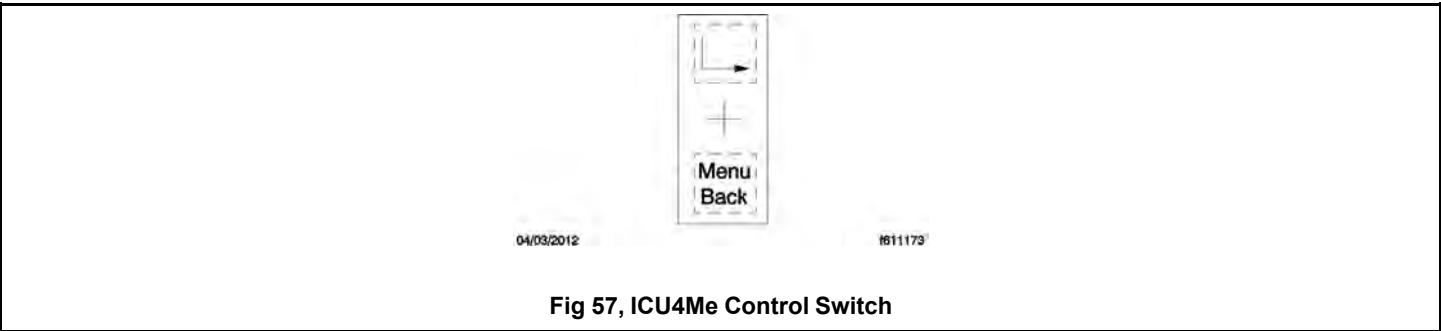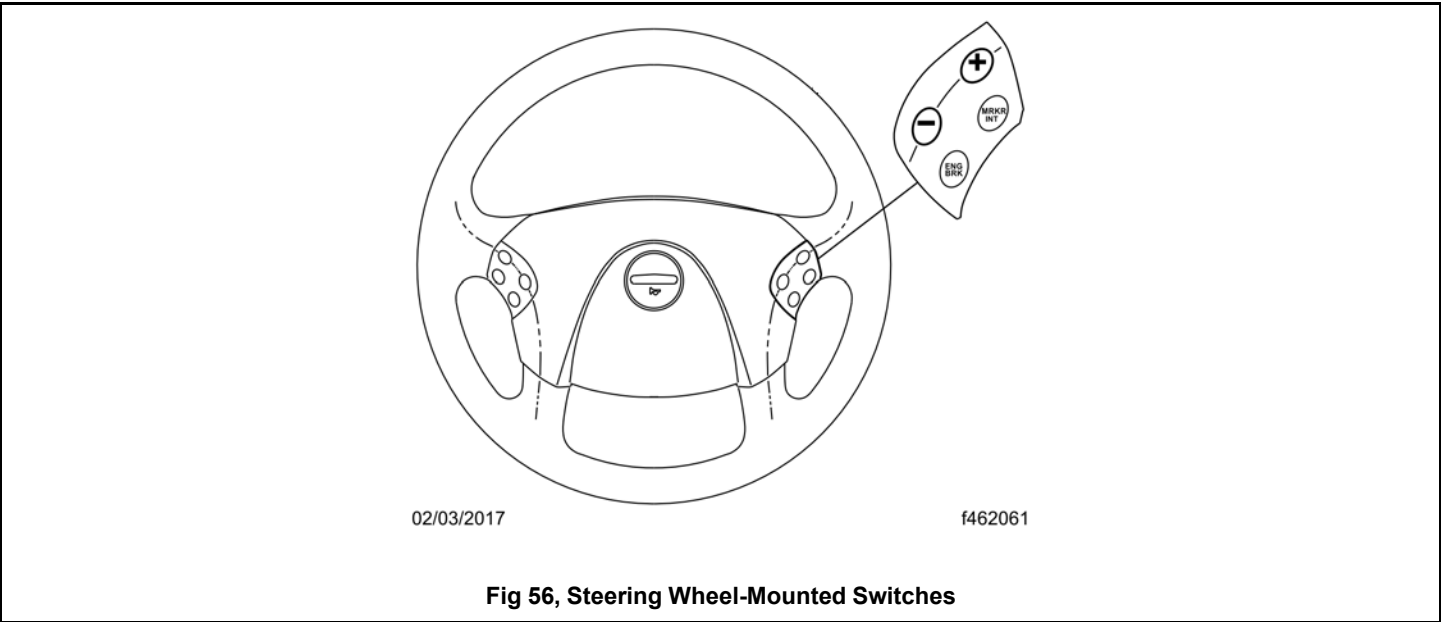

The driver message center is divided into four sections. The odometer and cruise control status field are displayed along the bottom of the message center. When cruise control is active, the cruise control status field displays relevant cruise control icons and the set speed. If the vehicle is equipped with a manual transmission, time and temperature are displayed in the top left corner of the driver message center. The message field displays the driving screens and alert messages. See Fig.58, [Driver Message Center Without Gear Display, ICU4Me](#).


If the vehicle is equipped with an automated transmission, the gear display is located in the top left corner of the driver message center. Time and temperature are displayed in the message field, unless an alert message is active or a driving screen has been selected. The odometer and cruise control status field are displayed along the bottom of the message center. See Fig.59, [Driver Message Center with Gear Display, ICU4Me](#). For information about transmission display options, see **Chapter 15**.

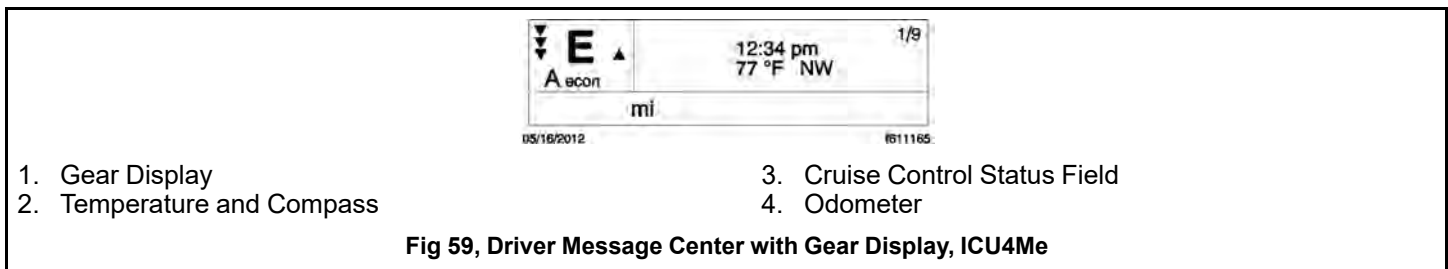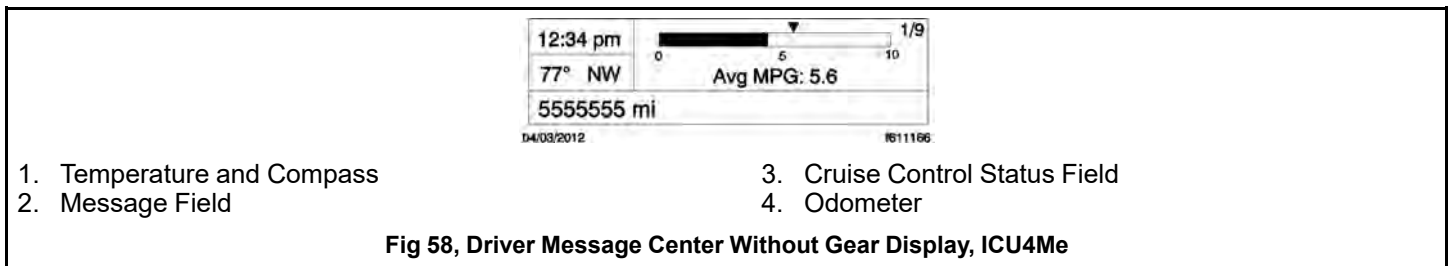

Alert Messages

Alert messages are displayed in the message field to notify the driver when certain conditions occur. They include warnings, cautions, and other messages that require the driver's attention. Not all alert messages are critical to the operation of the vehicle. More important messages take priority over less important messages.

NOTE: All alert messages follow the format shown in Fig.60, [Parking Brake Alert Message](#).

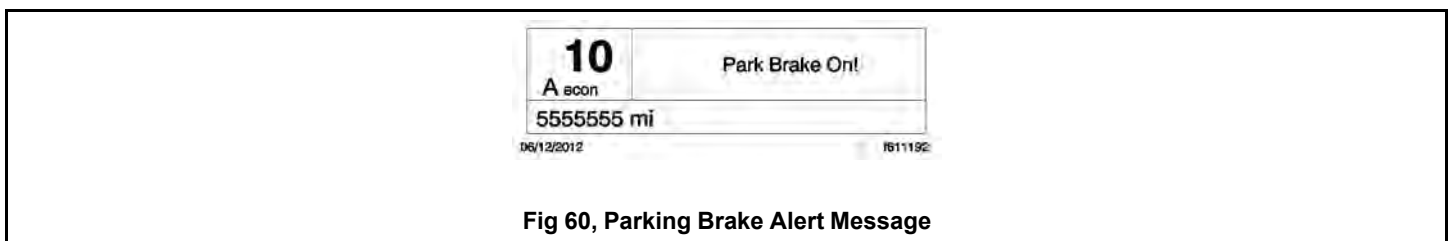


Press the + switch to acknowledge alert messages and revert to the previously displayed driving screen. The following alert messages will repeat intermittently until the condition is eliminated:

- turn signal on

- low voltage
- no datalink
- low transmission air pressure (Detroit transmissions only)

Driving Screens

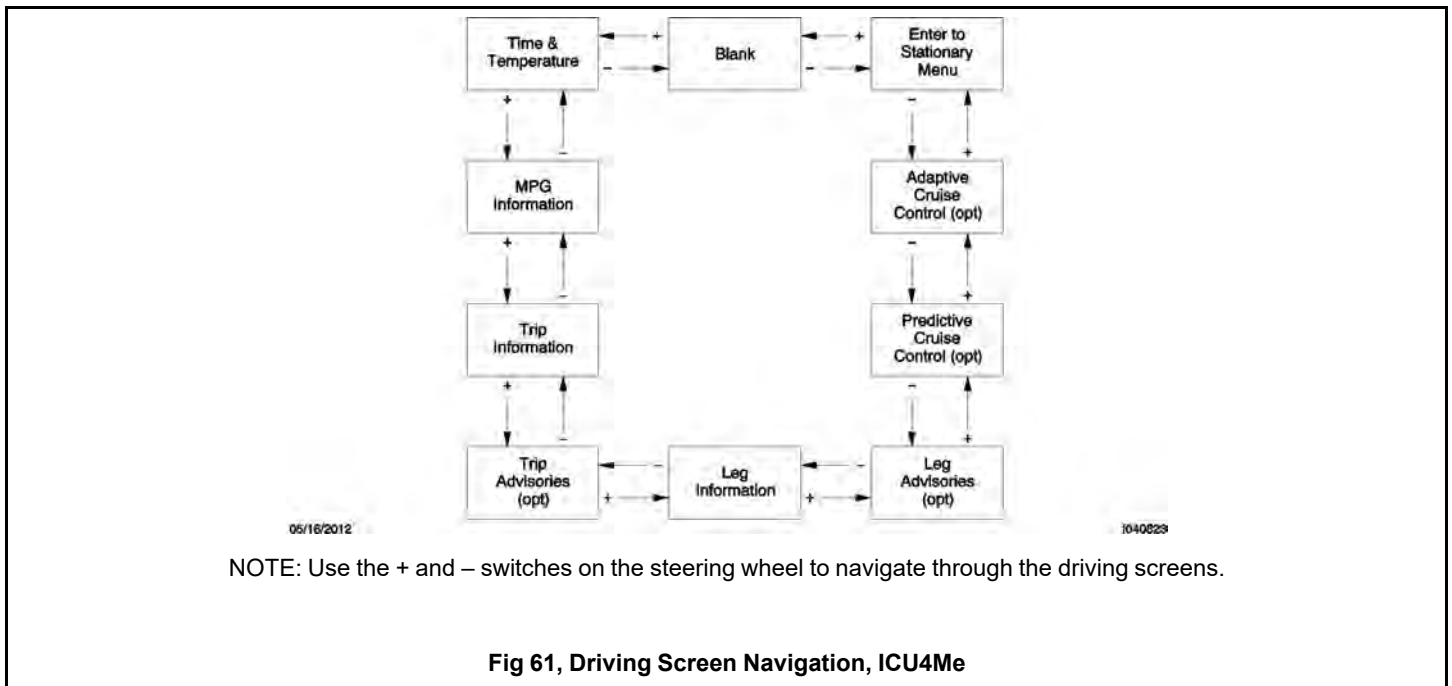

With the parking brake off, only the driving screens are available. Use the + and – switches on the steering wheel to scroll through the driving screens; see Fig.62, [Parked Menus, ICU4Me](#). To reset any values, press and hold the + switch.


- Temperature
- MPG information
- Trip information
- Leg information
- Gauge display (if selected)
- Predictive Cruise Control (optional)
- Enter parked menus

Parked Screens/Menus

Park the vehicle and set the parking brake to access the parked menus and submenus. See Fig. 62, [Parked Menus, ICU4Me](#). To reset values in any of the menus, press and hold the + switch.

- Trip information
- Fuel information

- Engine information
- Diagnostics
- Service information
- Settings

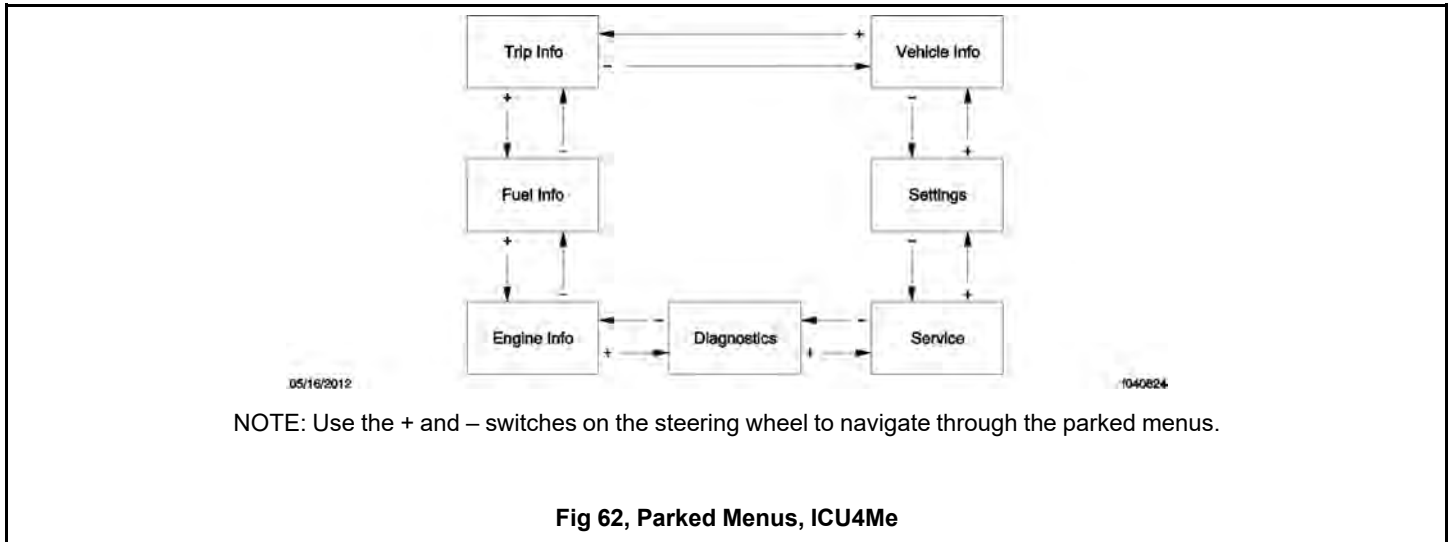

- ICU Information

A small numerical fraction is displayed in the upper right-hand corner of each screen to indicate the number of available screens or options to scroll through. See Fig.63, [Parked Menu Navigation, ICU4Me](#). Press the upper half of the ICU4Me control switch to select a menu choice. Press the lower half of the control switch to back out of a selected menu or submenu. Use the + switch to scroll up, and the – switch to scroll down.

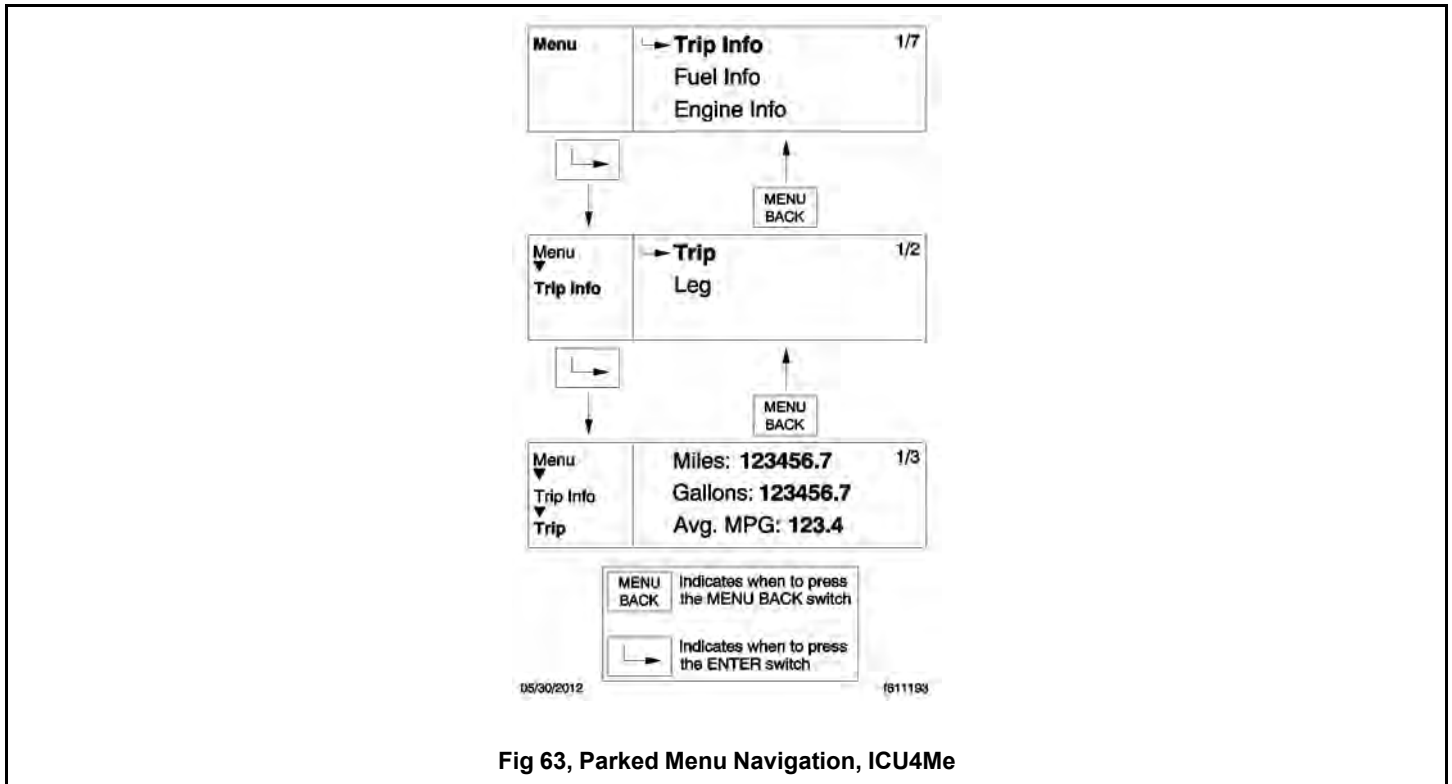


Fig 63, Parked Menu Navigation, ICU4Me

When navigating the parked menus, the left side of the driver message center displays a "breadcrumb menu" to show the order of menus and submenus that have been selected during the current navigation.

Trip Information

The ICU can record data for one trip segment and one leg segment. When trip information is reset, all the leg information is reset as well.

Fuel Information


Using this menu, the driver can view the total fuel used since the last reset, the total idle gallons used since the last reset, and the average MPG since the last reset.

Engine Information

Using this menu, the driver can view engine miles, engine hours, gallons used, PTO hours, and PTO gallons. Engine oil level is optional for Detroit engines. The information contained in the Engine Information screens cannot be reset.

Diagnostics

Active and historical faults are displayed in the diagnostics menu. See Fig.64, [Diagnostics Menu Navigation, ICU4Me](#). If there are any active faults, the total number of faults is displayed in parenthesis next to the affected controller. To view specific active faults, press the upper half of the ICU4Me control switch on the dash. Press the upper half of the ICU4Me control switch to toggle between the text description and the failure code for each selected fault.

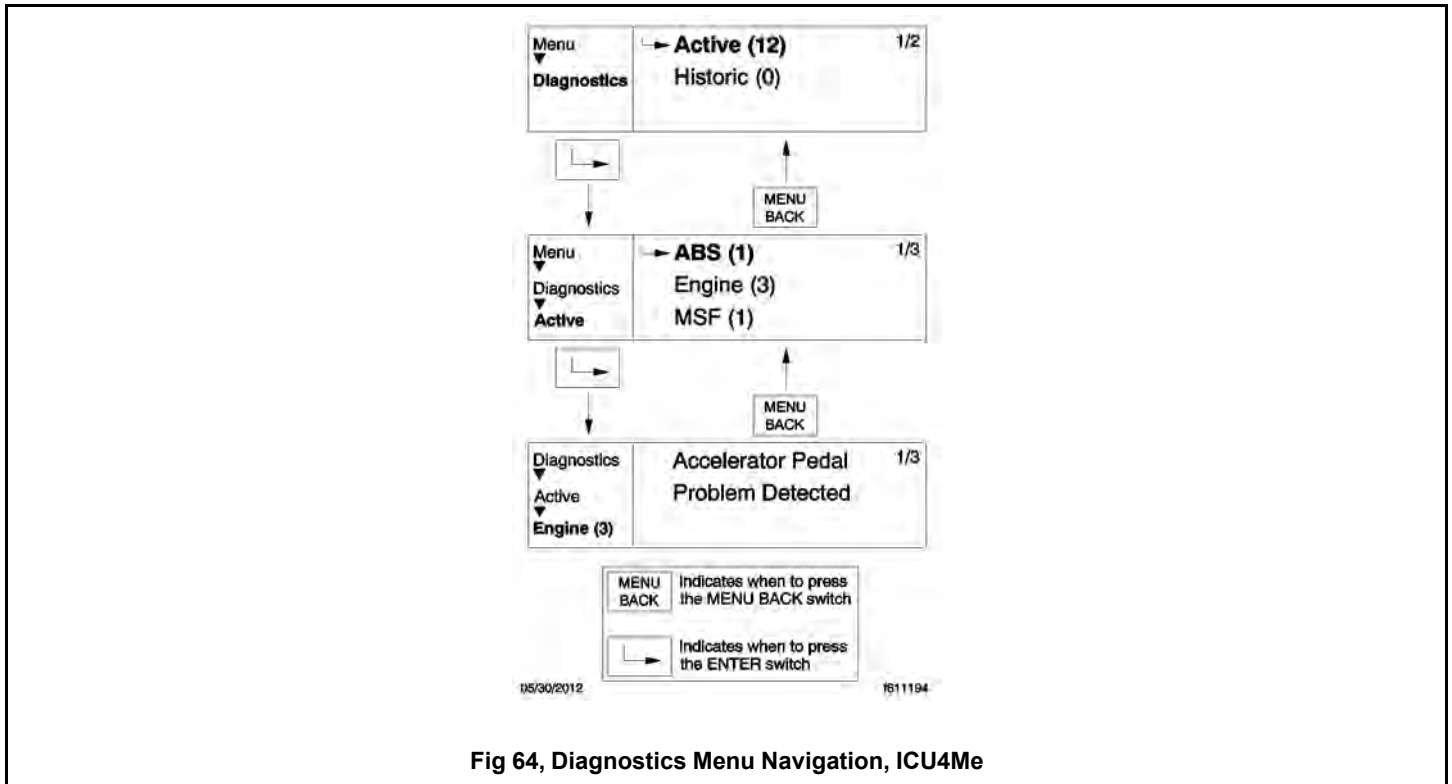

Service Information

Using this menu, the driver can enable, disable, and set service intervals for engine miles or engine hours. After enabling service intervals, select interval unit (miles or hours), and the interval duration.

Settings

The settings menu contains the controls for the following settings:

- Display (includes brightness, contrast, display light, and night mode settings)
- Gauge select
- Language
- Time zone
- Self-test
- Temperature warning enable/disable
- Units

The Gauge Select submenu allows the driver to select certain gauge values for display in the message field while driving. See Fig.65, [Selecting Gauges to Display, ICU4Me](#). Use the + and – switches on the steering wheel to scroll through the list of available gauges, then press the upper half of the ICU4Me control switch to select a desired gauge. The ICU4Me control switch can also be used to uncheck boxes if necessary.

Using the Time Zone submenu, the driver can select supported time zone. Use the + and – switches to increment between time zones, see Fig.66, [Time Settings](#) and see Fig.67, [Time Zone Selection](#). Press the upper half of the ICU4Me control

switch to select the desired time zone. Press the lower half of the control switch to back out of a selected menu or submenu. See 9,[Supported Time Zones](#) for supported time zone list.

Once the operator has selected the time zone, the operator will be able to enable or disable the Daylight Savings, see Fig. 68,[Enable or Disable Daylight Savings](#). When the Daylight Savings is 'ON', a pop-up confirmation screen shall confirm the time by displaying the time the operator selected and 1 hour shall be subtracted from the current time which would make the offset for PST -7:00 hours instead of -8:00 hours.

When the Daylight Savings is selected as 'OFF' then no offset shall be applied to the current time.

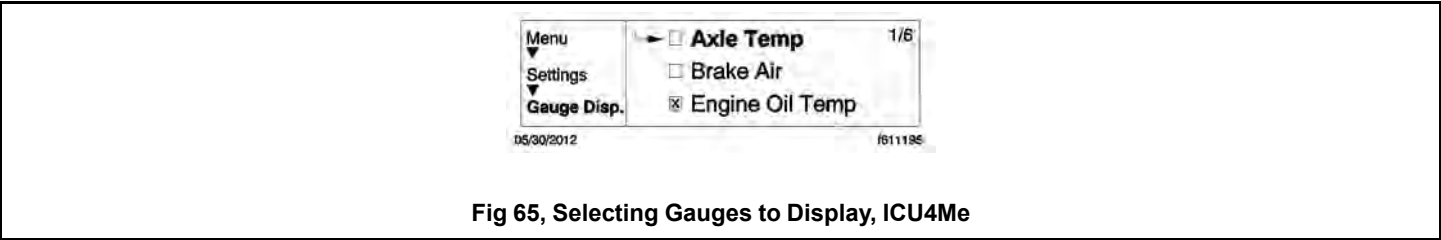


Fig 65, Selecting Gauges to Display, ICU4Me

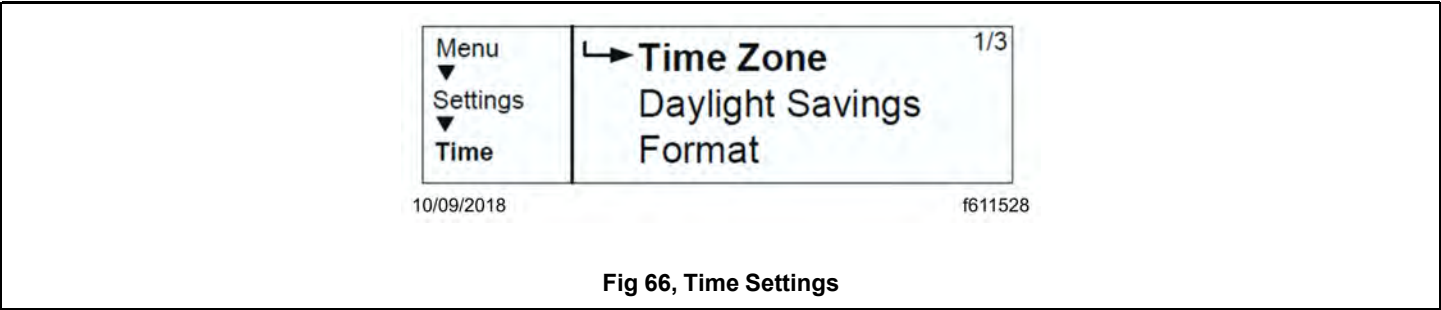


Fig 66, Time Settings

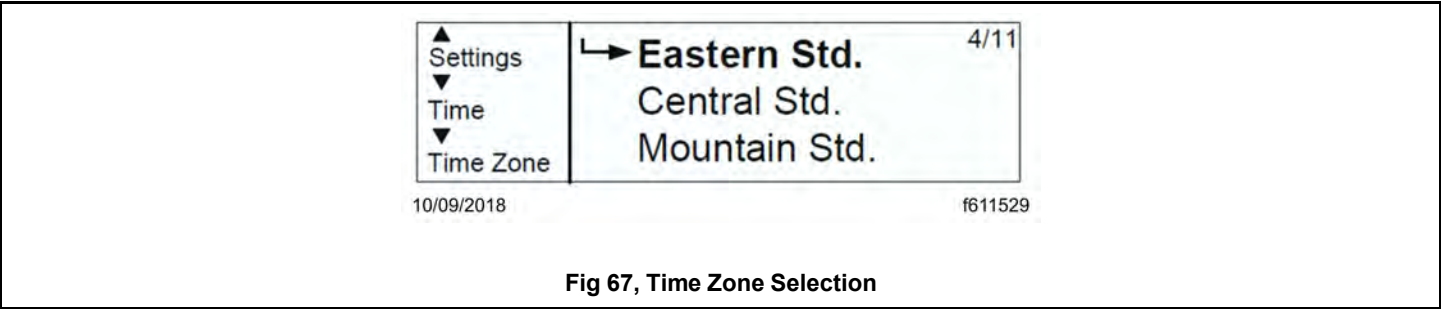


Fig 67, Time Zone Selection

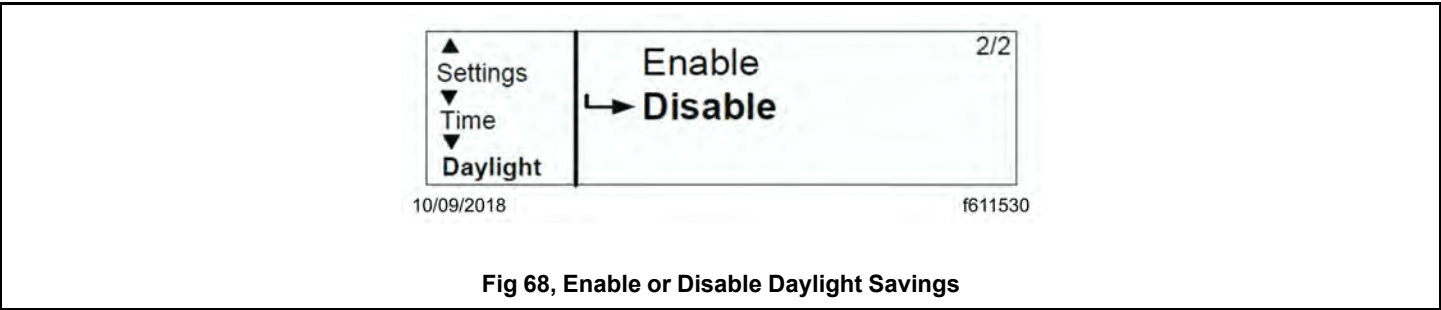


Fig 68, Enable or Disable Daylight Savings

Time Zone	Abbreviation	From UTC (DST Off)	DST On	ICU4Me Display
Eastern Brazilian Time	EBT	-3:00	-2:00	East. Brazilian
Newfoundland Time	NT	-3:30	-2:30	Newfoundland
Atlantic Standard Time	AST	-4:00	-3:00	Atlantic Std.
Eastern Standard Time	EST	-5:00	-4:00	Eastern Std.
Central Standard Time	CST	-6:00	-5:00	Central Std.
Mountain Standard Time	MST	-7:00	-6:00	Mountain Std.
Pacific Standard Time	PST	-8:00	-7:00	Pacific Std.
Yukon Standard Time	YST	-9:00	-8:00	Yukon Std.
Alaska-Hawaii Standard Time	AHST	-10:00	-9:00	Hawaii Std.
Nome Time	NT	-11:00	-10:00	Nome Time
International Date Line West	IDLW	-12:00	-11:00	Western Date Line

Table 5, Supported Time Zones

ICU Information

The ICU Information screen displays the part numbers for the instrument cluster and software.


6.01 Ignition Switch and Key	79
6.02 Lighting Controls	80
6.02.01 Exterior Lighting Controls	80
6.02.02 Interior Lighting Controls	86
6.03 Horn Controls	88
6.03.01 Air Horn	88
6.03.02 Electric Horn	88
6.04 Powertrain Controls	89
6.04.01 Aftertreatment System Regen Switches	89
6.04.02 Axle Switches	90
6.04.03 Engine Brake Switch	90
6.04.04 Engine Fan Switch	91
6.04.05 Hill Start Aid Override Switch	92
6.04.06 PTO Switch	92
6.04.07 Transmission Controls	92
6.05 Cruise Control	95
6.05.01 Run Smart Predictive Cruise™	95
6.05.02 Cruise Control ("CC") Limiter	95
6.05.03 Descent Control and Deceleration Modes, Detroit™ Automated Transmissions	96
6.06 Dash-Mounted Brake Controls	97
6.06.01 Parking Brake Control Valve	97
6.06.02 Trailer Air Supply Valve	98
6.06.03 Trailer Brake Lever	98
6.06.04 Antilock Braking System	99
6.07 Windshield Wiper/Washer Controls	100
6.08 Suspension/Trailer Connection Controls	100
6.08.01 Air Suspension Dump Control Switch	100
6.08.02 ECAS Dash Switches	101
6.08.03 ECAS Remote Control Unit	104
6.08.04 Fifth Wheel Slide Control Switch	105
6.08.05 Trailer Auxiliary Switch	105

6.09 Climate Controls	106
6.09.01 Cab Climate Control	106
6.09.02 Sleeper Climate Control	107
6.10 Seat Controls	108
6.11 Adjustable Steering Column Controls	109


6. Driver Controls

6.01 Ignition Switch and Key

The ignition switch is located on the left-hand dash, below the headlight switch. See Fig.70, [Ignition Switch](#).

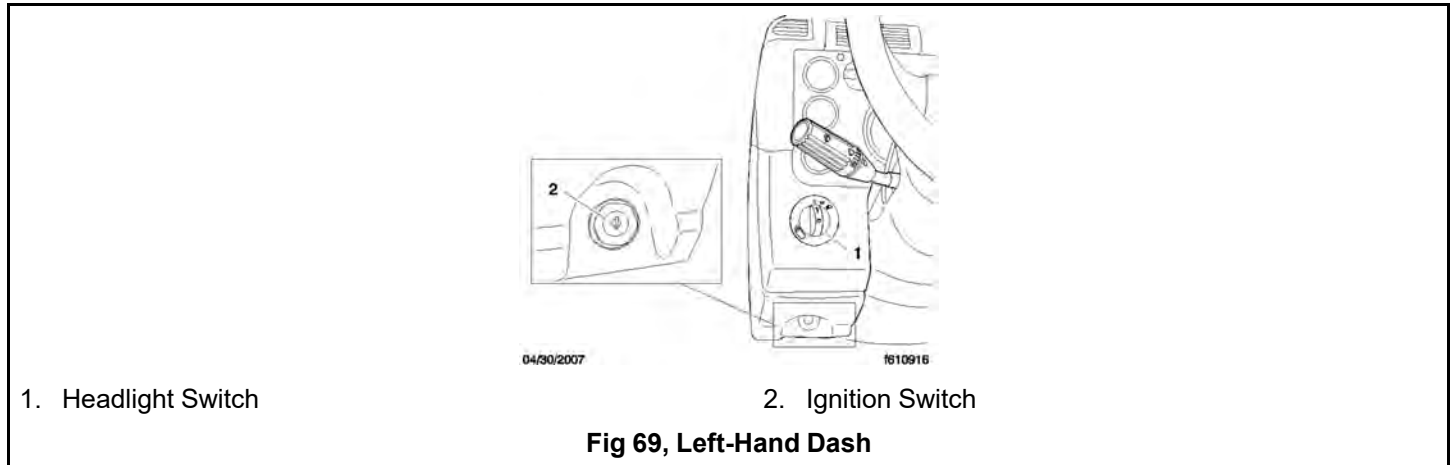

The ignition switch has four positions: OFF, ACC (accessory), ON, and START. See Fig.70, [Ignition Switch](#).

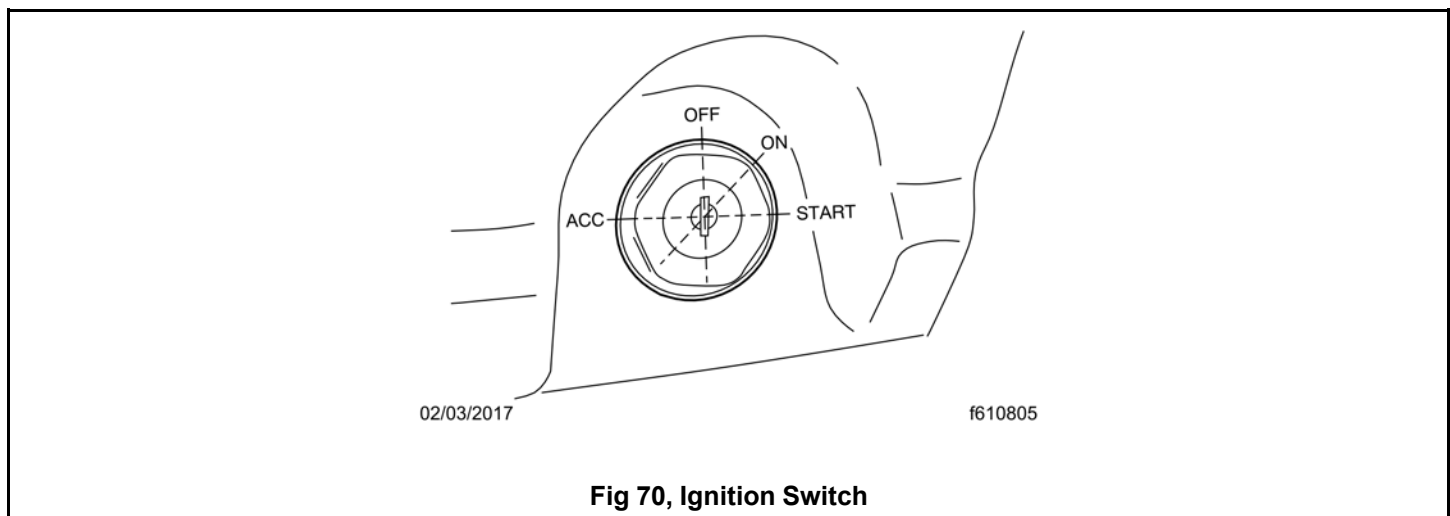

In the OFF position, the ignition switch is vertical. The key can be inserted and removed only in the OFF position.

The following functions are operable when the ignition switch is in the OFF position (regardless of whether the key is inserted):

- low-beam headlights
- taillights
- brake lights
- road lights
- dome lights
- clearance lights
- hazard warning lights

- utility lights
- baggage compartment lights
- spotlights
- electric horn
- clock
- refrigerator
- CB radio
- power mirrors
- power receptacle
- fuel heater
- electric oil pan heater
- electric or diesel-fired engine coolant pre-heater

Turn the key counterclockwise to reach the ACC position. In addition to all the functions that are operable in the OFF position, the following functions are operable when the switch is in the ACC position:

- radio/stereo system
- heater and A/C fan
- mirror defog
- windshield fan
- ether start system
- air dryer
- backup lights

Turn the key clockwise past the OFF position to reach the ON position. With the switch in the ON position, all electrical systems become operable and the warning and indicator lamps illuminate. Wait for three seconds before starting the engine.

The SAM Cab vehicle controller automatically cycles all exterior lights off and then on when the headlamps are on and the park brake is released, or set. This rapid flash of the exterior lights is a self-test to detect any bulb that is not operational. Drivers may notice all lights flash simultaneously during this process. This is the normal operating sequence. A fault code is set for any bulb that is out.

IMPORTANT: Do not crank the engine until the ICU self-check is complete.


Turn the key clockwise past the ON position to reach the START position to start the engine. Release the key the moment the engine starts. Do not operate the starter longer than thirty seconds, then allow the starter to cool between attempts. If the starter overheats, the starter protection system will prevent operation of the starter until it has cooled. Release the key the moment the engine starts.

The ignition key also locks and unlocks the cab doors, the baggage door(s) and if equipped, the bunk door(s).

6.02 Lighting Controls

6.02.01 Exterior Lighting Controls

Exterior light controls are listed here in alphabetical order. See Fig.71, [Exterior Lights](#) for exterior light locations.

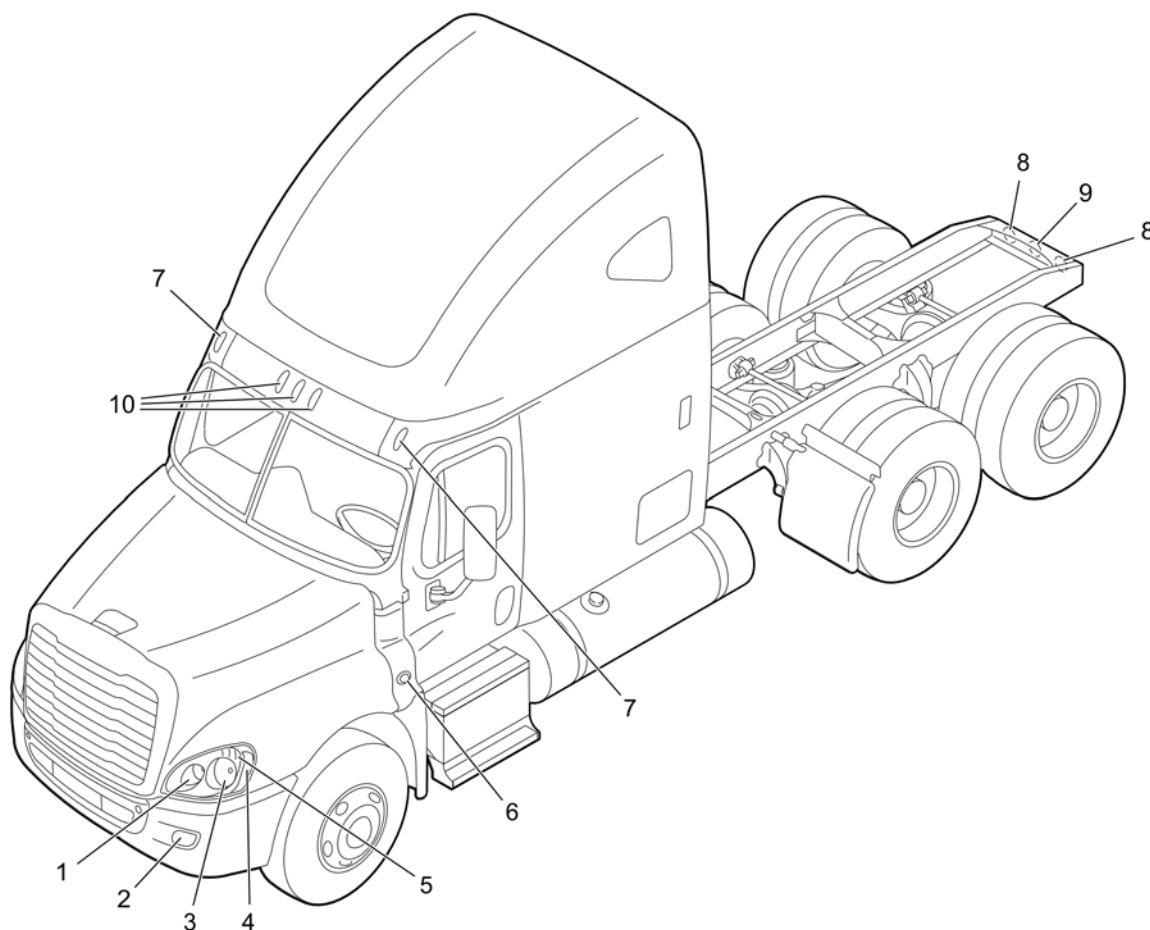

02/02/2017

f544971


1. High-Beam Headlight
2. Fog Light, or Auxiliary High-Beam Light
3. Low-Beam Headlight
4. Marker Light
5. Turn Signal

6. Side Turn Signal and Marker Light
7. Clearance Light
8. Stop Light, Taillight, and Turn Signal
9. Back-Up Light
10. Identification Light

Fig 71, Exterior Lights

Auxiliary High Beam Lights

Auxiliary high-beam lights may be located in the front bumper. To activate the auxiliary high beam lights, press the upper part of the dash switch. The auxiliary high beam lights will illuminate only when the high-beam headlights are on. They will switch off temporarily when the low-beam headlights are on, until the high beams are on again. Press the lower half of the switch to deactivate it. See Fig.72, [Dash-Mounted and Sleeper-Control Light Switches](#).

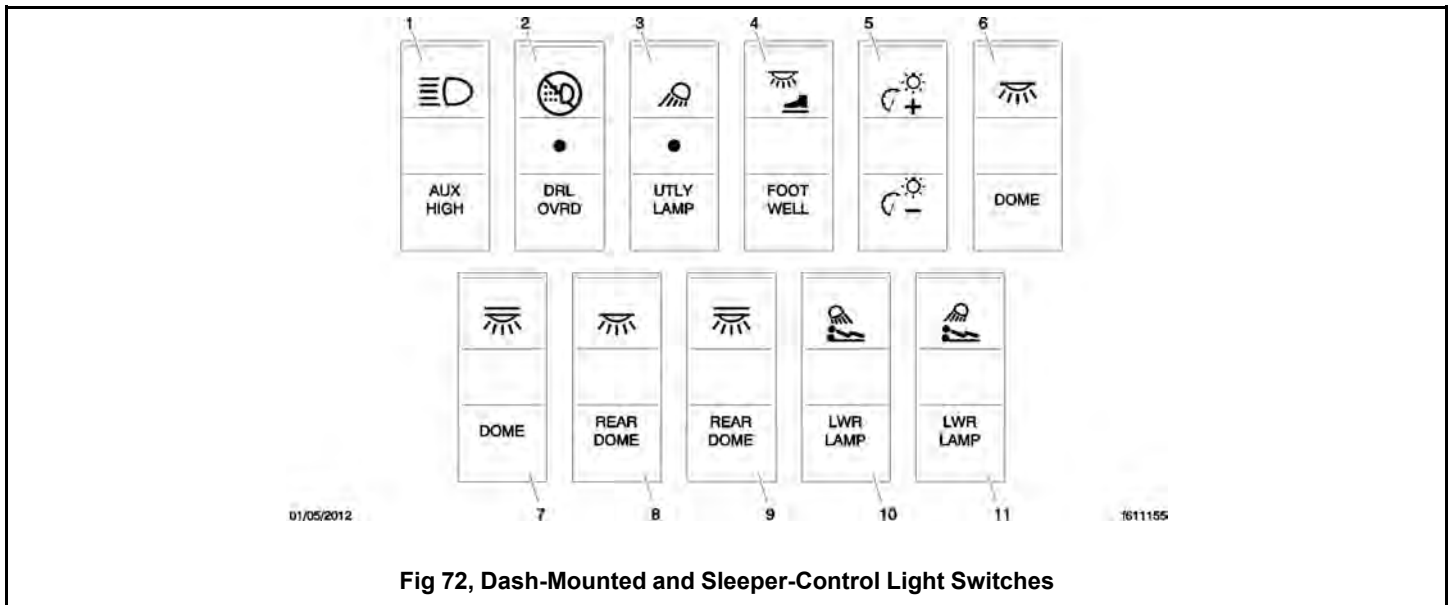

1. Auxiliary High Beam Light Switch
2. DRL Override Switch
3. Utility Light Switch
4. Cab Foot Well Light Switch
5. Panel Lights Switch
6. Rear Cab Dome Light Switch
7. Rear Cab Dome Light Switch (mounted in sleeper)
8. Sleeper Rear Dome Light Switch, Driver Side
9. Sleeper Rear Dome Light Switch, Passenger Side
10. Sleeper Reading Light Switch, Driver Side
11. Sleeper Reading Light Switch, Passenger Side

Backup Lights

Backup lights activate only when the vehicle is in reverse, and are designed to be used while backing up at night.

Daytime Running Lights

The daytime running lights (DRL), if equipped, are automatically activated when the ignition is switched on and the parking brake is released. The DRL turn off when the engine falls below 400 rpm, the parking brake is applied, or the headlights are turned on.

Daytime running lights are mandatory for vehicles domiciled in Canada. Vehicles domiciled in any other location may have an optional override switch (see Fig.72, [Dash-Mounted and Sleeper-Control Light Switches](#), ref. 2). This is a momentary switch that enables the driver to deactivate the DRL. Press the upper half of the switch briefly to activate or deactivate the DRL.


Fog Lights

Fog lights are designed to reduce glare in foggy conditions. The low-beam headlights must be on in order to turn the fog lights on. Pull the headlight switch outward to activate the fog lights.

Hazard Warning Lights


The hazard warning light switch is located on the dash in what is referred to as the main module. See Fig.73, [Main Module](#). The hazard lights can be activated regardless of the ignition switch position.

To activate the hazard lights, press the center of the switch once. The switch will blink at the same rate that the hazard lights flash. Press the switch again to turn them off. All the turn signals on the vehicle and trailer, as well as the turn signal indicators in the ICU, flash simultaneously when the hazard lights are activated.

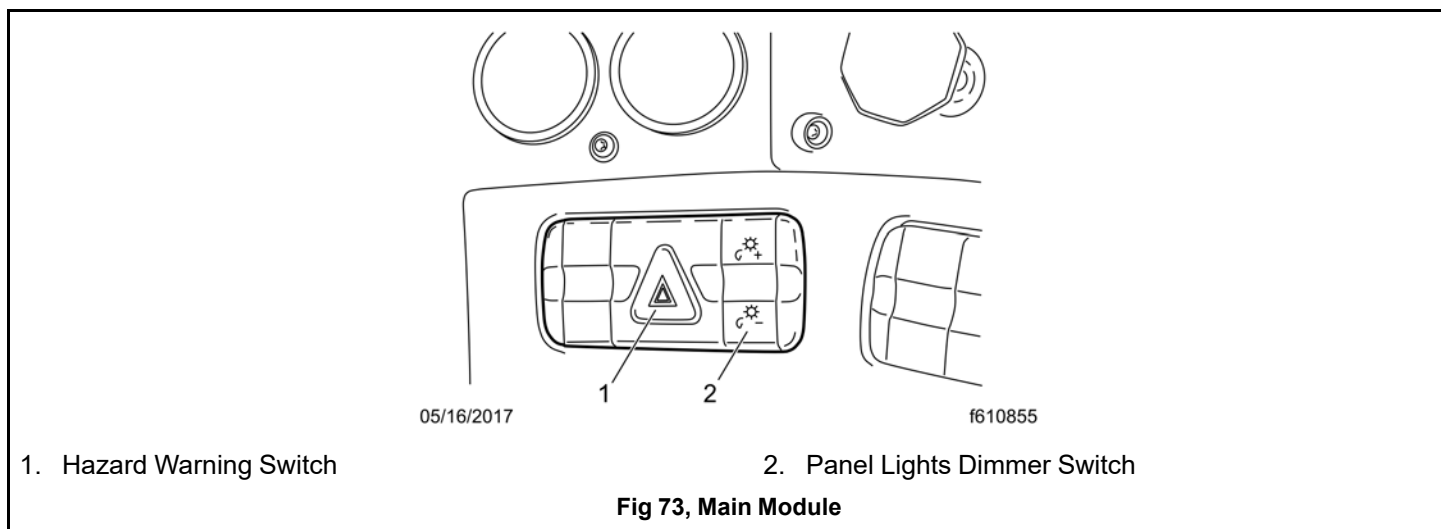

Headlights

The headlight switch is a rotary switch located to the left of the steering column, above the ignition switch. See Fig. 74, [Headlight Switch](#).

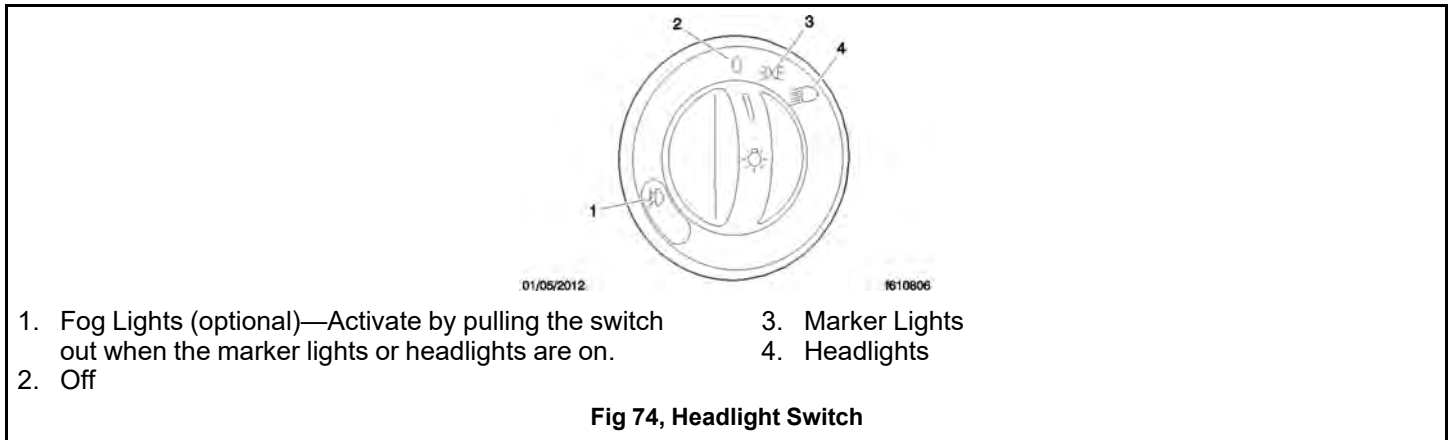

If the Follow Me Home feature is activated, the low-beam headlights will remain on for nine seconds after the vehicle is parked, if the headlights were on prior to engine shutdown. This feature provides temporary lighting in the path of the headlights while walking to a building or other destination. If a vehicle door is opened or closed while this feature is active, the timer will add an additional 10 seconds of lighting. This feature can be temporarily disabled by turning the ignition switch on, or by cycling the headlight switch from the off position to one of the other two positions.

High-Beam Headlights

To activate the high-beam headlights, press the turn signal lever forward towards the windshield while the low-beam headlights are on. Return the turn-signal lever back to its neutral position to deactivate the high beams, and return to low beam headlights.

When the high-beam headlights are on, a blue light illuminates on the instrument cluster. For vehicles with fog lights, switching on the high beams will switch off the fog lights. The headlight low beams remain on continuously during high-beam operation.

NOTE: The ignition switch must be on for the high beams to work.

Marker Lights

Turn the headlight switch clockwise to past the off position. See Fig.74,[Headlight Switch](#).

Marker Interrupt

The marker interrupt switch, located in the right-hand switch pod of the steering wheel, temporarily flashes the marker lights. See Fig.75,[Steering Wheel-Mounted Controls](#).

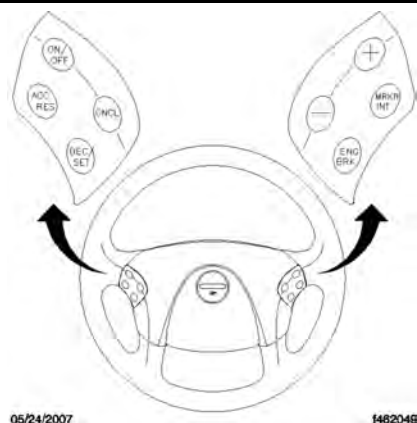



Fig 75, Steering Wheel-Mounted Controls

Spotlight

The spotlight switch is located on the pivoting handle of the spotlight. There may be a single spotlight assembly mounted above the driver's door, or one above each door.

Turn Signals

The turn-signal lever is on the left side of the steering column. See Fig.76, [Multifunction Turn Signal Lever](#).

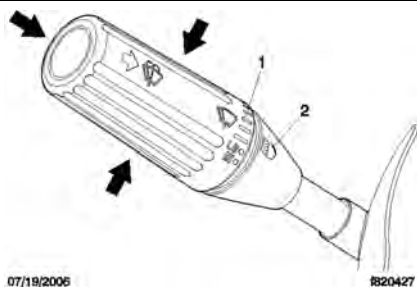

1. Wiper Control Dial

2. High-Beam Icon

Fig 76, Multifunction Turn Signal Lever

NOTE: The optional self-canceling turn signal lever will automatically return to the neutral position when the steering wheel returns to the straight-ahead position after a turn.

Move the turn signal lever downward to turn the left-turn signal on; move it upward to turn the right-turn signal on. To manually cancel the signal, move the lever to the neutral position.

When a turn signal is activated, a green indicator light flashes on the instrument cluster.

Turn-Tip Feature

The turn-tip feature is advantageous in lane change situations when the steering wheel does not travel far enough to cancel a conventional turn signal request. Pushing the turn-signal lever halfway to the normal turning position to activate the turn-tip feature. The signal will flash for a few seconds, then cancel. Activation of the turn-tip feature is immediately canceled when a request for the turn signal in the opposite direction is made.

Utility Lights

Utility lights can be swivel-mounted on upper half of the cab, mounted on the exhaust support, or flush-mounted on the back of the cab or sleeper. Press the upper half of the switch to activate it. Press the lower half of the switch to turn it off. When activated, a red indicator light in the switch is illuminated. See Fig.72, [Dash-Mounted and Sleeper-Control Light Switches](#).

6.02.02 Interior Lighting Controls

Interior light controls are listed here in alphabetical order.

The interior lights include panel lights, dome lights, red map lights, clear reading lights, and courtesy lights. Vehicles come pre-set from the factory with theater lighting, which ramps up lights from low power to full power when activated.

Sleepers have rear dome lights, bunk reading lights, sleeper floor lights, and baggage compartment lights.

Baggage Compartment Lights


Baggage compartment lights are located on the underside of the lower bunk, on both sides. Both lights turn on when either baggage compartment door is opened to illuminate the baggage compartment. The lights also come on when the lower bunk is raised.

Foot Well Lights

When the driver or passenger doors are opened, red lights illuminate both foot wells. These lights can also be activated with the foot well light switch. See Fig.. Press the upper half of the switch to turn the foot well lights on, press the lower half of the switch to turn them off.

Overhead Console Lights

The overhead console includes a clear reading light, a clear dome light, and a red map light. See Fig. 77, [Overhead Console Lights](#). The dome lights illuminate when a door opens, then stay on for a short time after both doors are closed. Press the lens of the reading light, dome light, or map light to activate each one independently of the others.

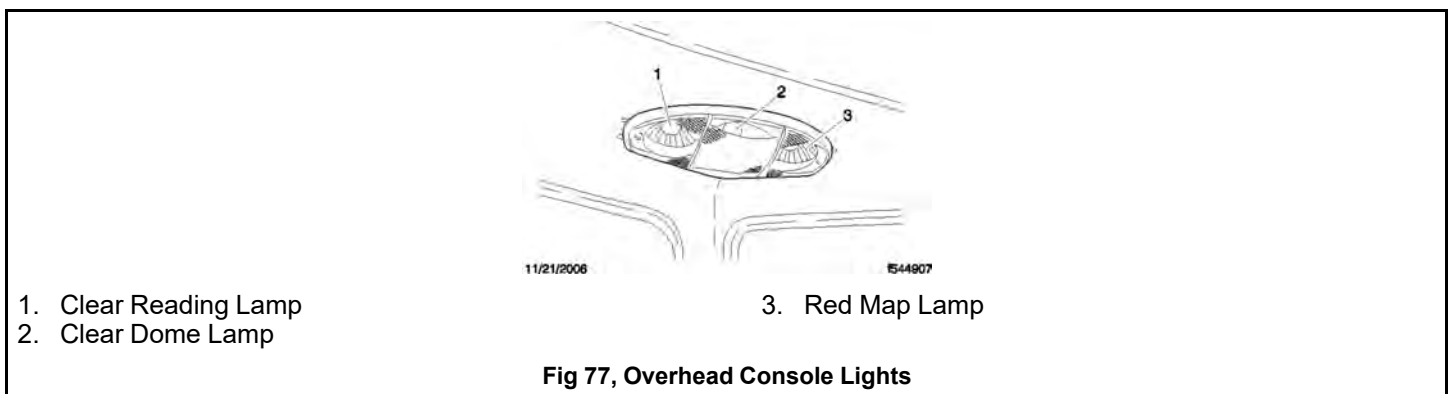

Panel Lights

The panel lights illuminate when the headlights are turned on. To adjust the brightness of the panel lights, use the panel lights switch, usually located in the main module next to the hazard flasher switch. See Fig.

79, [Dash-Mounted and Sleeper-Control Light Switches](#). The panel lights brighten and dim in 5% increments, depending on whether the upper half or the lower half of the switch is pressed. When the headlights are turned on, the panel lights setting will default to the intensity that was last set.


Rear Dome Light

A rear cab dome light is located on the roof, between the bunk and the cab on sleeper vehicles. See Fig.

78, [Multifunction Turn Signal Lever](#). The rear cab dome light will activate with the dome lights when a door is opened, then stay on for a short time after both doors are closed.

Use the dash-mounted switch or the switch in the sleeper panel to activate the rear cab dome light. See Fig.

79, [Dash-Mounted and Sleeper-Control Light Switches](#).

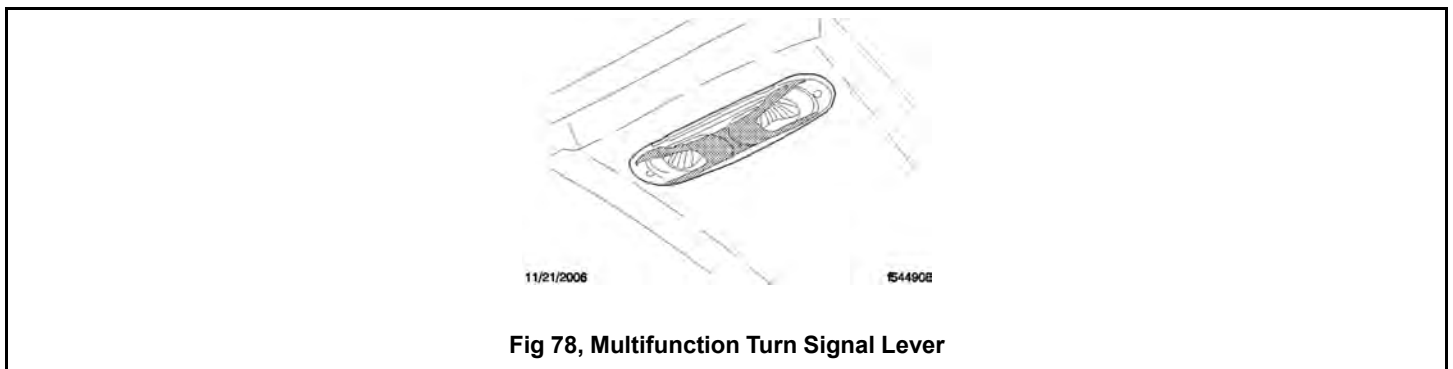

Sleeper Dome Light

Two dome lights are mounted on the sleeper roof, close to the outside walls.

There are two switches in the sleeper that control the sleeper dome lights. The passenger-side switch will activate both dome lights. The driver-side switch operates the driver-side light only. Press the upper half of the switch to turn the sleeper dome light on, press the lower half of the switch to turn it off.

Sleeper Foot Well Lights

The sleeper foot well switch is located in the lower switch module in the sleeper. It looks identical to the cab foot well switch. See Fig. 79, [Dash-Mounted and Sleeper-Control Light Switches](#). When the switch is activated, two lights illuminate the sleeper floor.

Sleeper Reading Lights

Clear reading lights are mounted above the lower bunk in the rear corners of the sleeper. There are two switches in the sleeper control panel for the reading lights. To turn a reading light on, press the upper half of the switch. Press the lower half of the switch to turn it off. See Fig.79, [Dash-Mounted and Sleeper-Control Light Switches](#).

The reading lights can also be activated by pressing the lens.

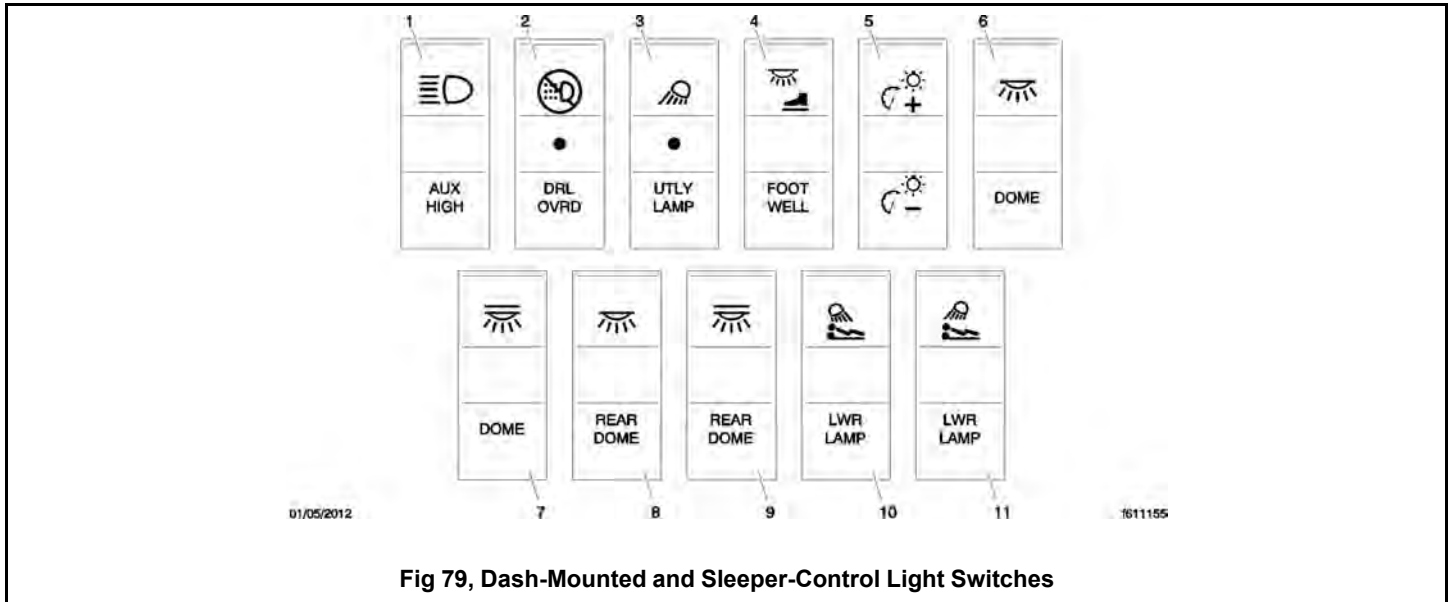


Fig 79, Dash-Mounted and Sleeper-Control Light Switches

6.03 Horn Controls

6.03.01 Air Horn

Air horn(s) may be mounted on the roof of day cabs, or under the driver-side floor for sleeper cabs. The air horn is controlled by a wire lanyard that hangs down inboard by the driver's door. See Fig.80, [Air Horn Control](#). Pull downward on the lanyard to sound the air horn.

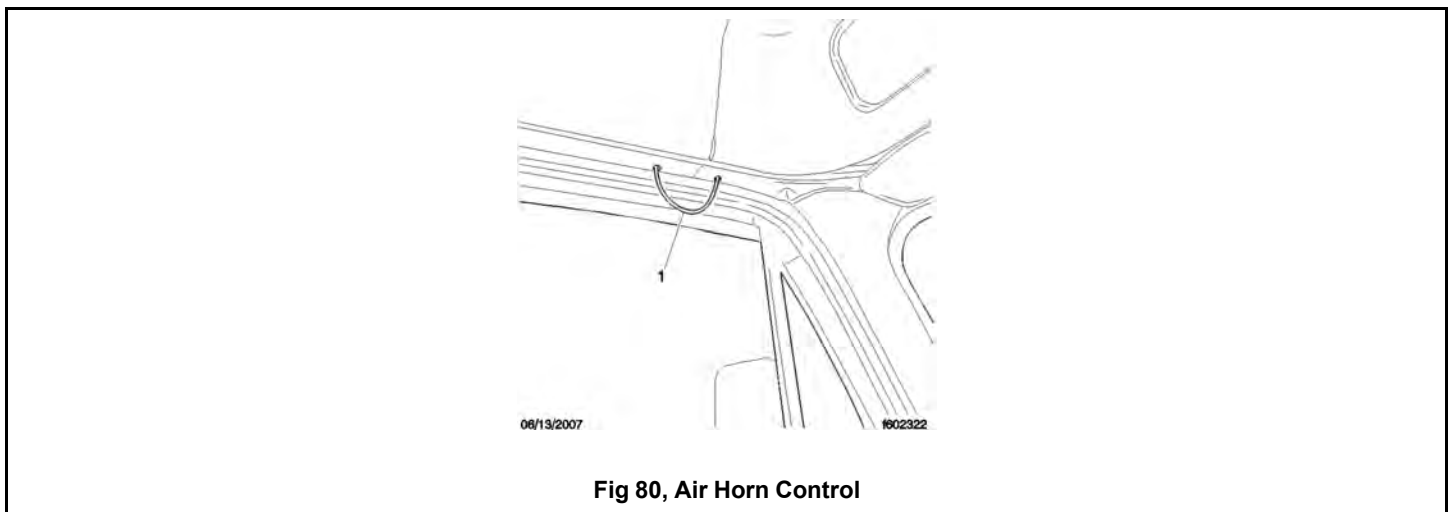



Fig 80, Air Horn Control

6.03.02 Electric Horn

The button for the electric horn on a vehicle without an airbag is located in the center of the steering wheel. See Fig. 82, [Steering Wheel With Airbag](#). To sound the horn, press down on the button.

The electric horn on a vehicle with an airbag is activated by pressing down on the top of the steering wheel center pad. See Fig.82, [Steering Wheel With Airbag](#).

The horn will sound for the duration that the button is pressed, up to 60 seconds. The electric horn will operate regardless of the position of the ignition key.

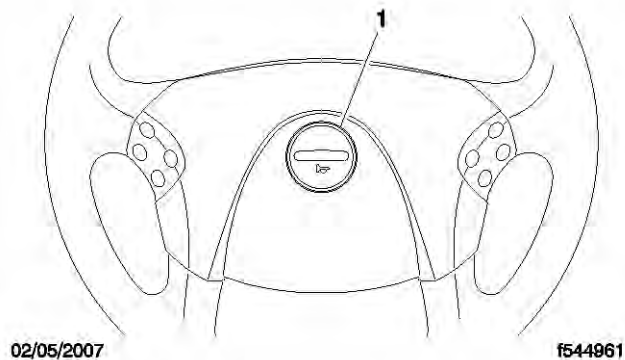

1. Horn Button

Fig 81, Steering Wheel, No Airbag



NOTE: Press down on the top of the steering wheel center pad to activate the horn.

Fig 82, Steering Wheel With Airbag

6.04 Powertrain Controls


6.04.01 Aftertreatment System Regen Switches

NOTE: See **Chapter 12** for detailed information about the operation of the regeneration (regen) switches and the aftertreatment system (ATS).

IMPORTANT: Depending upon local jurisdictional emissions guidelines, vehicles that are domiciled outside of the U.S. and Canada may not have engines and/or emissions aftertreatment systems that are compliant with EPA07, EPA10, GHG14, or GHG17 regulations.

The regen request switch, located on the dash, is used to initiate a parked regen. See Fig. 83, [Regen Request and Inhibit Switches](#). To access the regen request switch, lift the guard and press the yellow button.

Some vehicles may be equipped with a regen inhibit switch. See Fig.83, [Regen Request and Inhibit Switches](#). To stop a regen in progress or prevent the start of a regen, press the lower half of the switch. Regen will be delayed until the switch is no longer active.

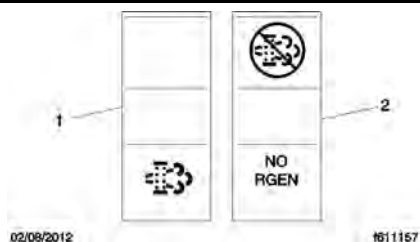


1. Regen Request Switch

2. Regen Inhibit Switch

Fig 83, Regen Request and Inhibit Switches

6.04.02 Axle Switches

Some vehicles are equipped with an interaxle differential lock switch and/or a switch for each driver-controlled differential lock (DCDL). See Fig.84, [Axle and Suspension Switches](#). For more information about differential locks and using them for traction control, see **Chapter 16**.

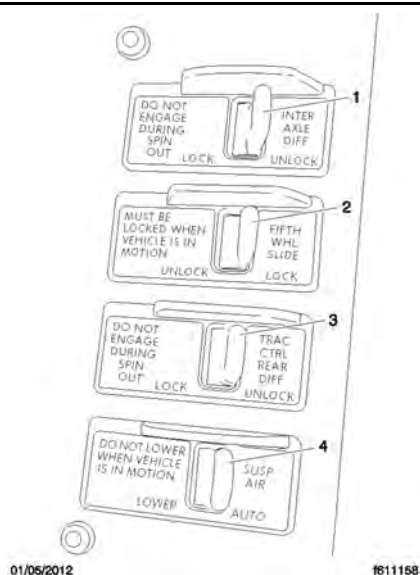

1. Interaxle Differential Lock Switch

2. Fifth Wheel Slide Switch


3. Driver-Controlled Differential Lock (DCDL) Switch

4. Air Suspension Dump Control Switch


Fig 84, Axle and Suspension Switches

6.04.03 Engine Brake Switch

The Hi/Med/Lo engine brake 3-position switch controls the amount of engine braking. See Fig.85, [Engine Brake Switch](#). Press the lower third of the switch for low, center for medium, and upper third for high.

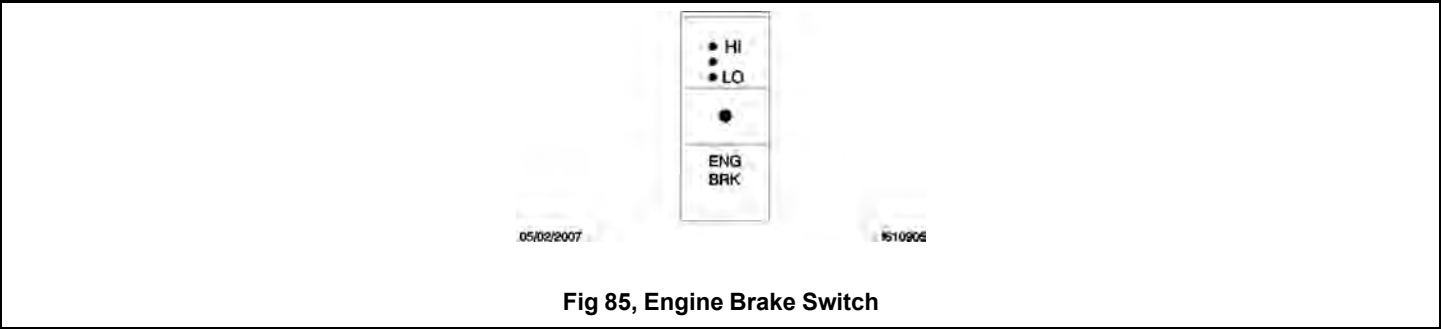


There is also an engine brake switch located in the right-hand switch pod on the steering wheel. See Fig. 86, [Steering Wheel-Mounted Controls](#). Press the ENG BRK switch once to engage or disengage the engine brake. Refer to **Chapter 13** for instructions on using the engine brake.

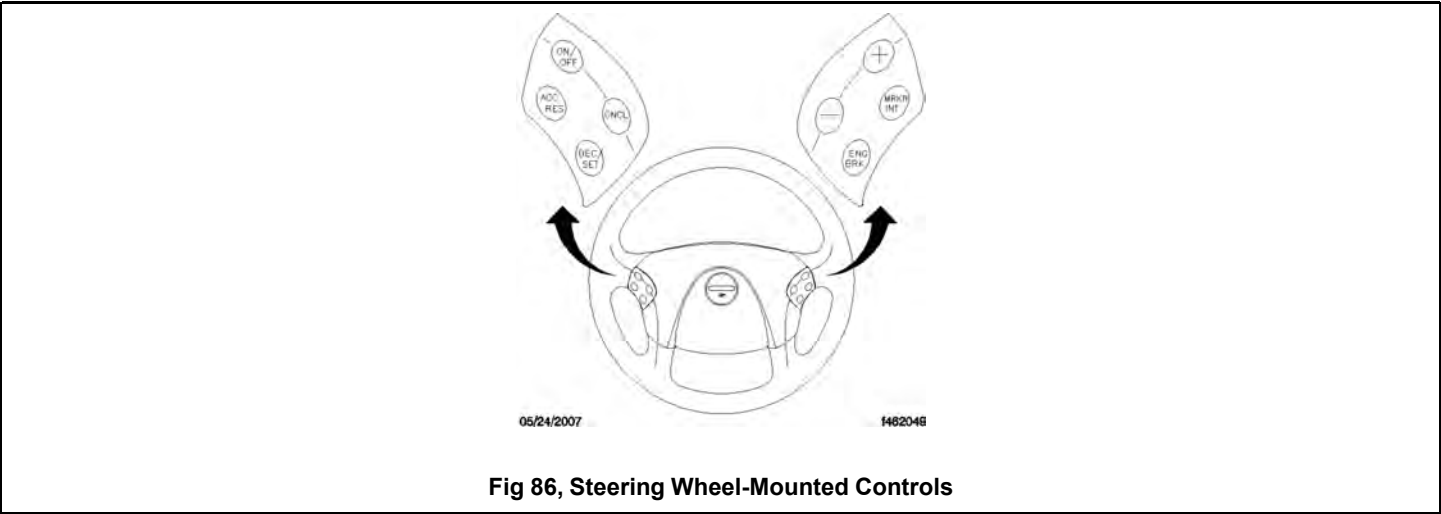

6.04.04 Engine Fan Switch

The engine cooling fan can be turned on by the engine fan switch. To turn the engine fan on, press the upper half of the switch. The fan will continue to operate for a set amount of time and then turn off unless the coolant temperature is high enough to continue fan operation. To turn the fan off before the set time period ends, press the lower half of the switch. See Fig. 87, [Engine Fan Switch](#).

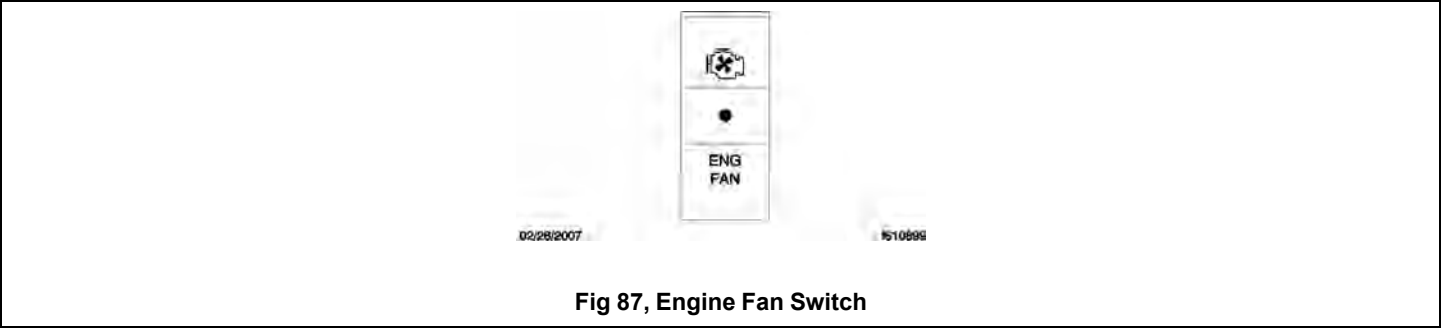

6.04.05 Hill Start Aid Override Switch

Some vehicles are equipped with a Hill Start Aid (HSA) feature to prevent the vehicle from rolling while on steep grades and to allow for a controlled launch. HSA is "on" by default. It can be turned off by pressing and releasing the HSA override switch on the dash (see Fig.88, [Hill Start Aid Override Switch](#)).




6.04.06 PTO Switch

To activate the PTO function, press the upper half of the switch. Press the lower half of the switch to deactivate the PTO function. See Fig.89, [PTO Switch](#).

**WARNING:**

To avoid injury, do not install a PTO that is not Detroit Diesel approved onto a Detroit™ Transmission. Use of a non-Detroit Diesel approved PTO with a Detroit Transmission could result in unintended operation which could lead to severe personal injury.

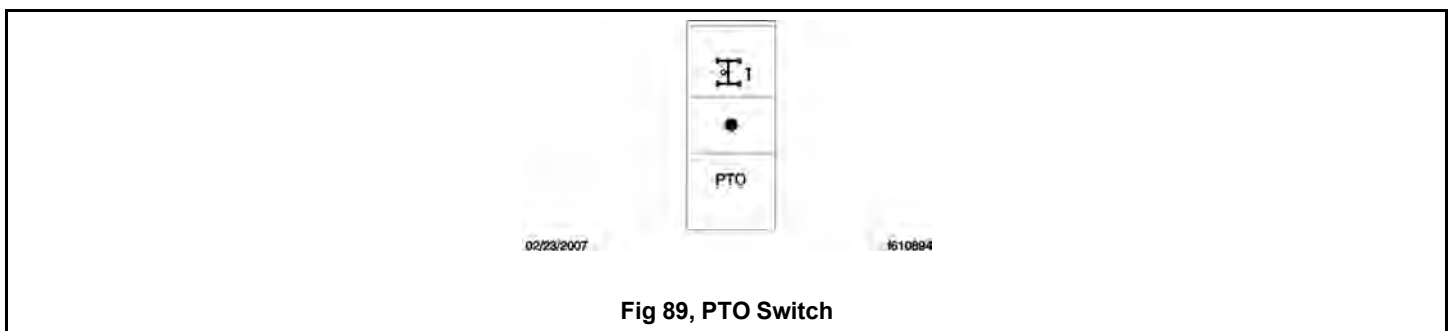


6.04.07 Transmission Controls

Detroit™ Automated Transmissions

See **Chapter 15** for complete Detroit automated transmission operating instructions.

Vehicles with Detroit transmissions use the multifunction control see Fig.90, [Detroit Multifunction Control](#). This control moves in two directions and has two switches. It is used to request manual shifts, change shift mode, set engine brake levels, and control specialty engine brake functions during cruise control operation.

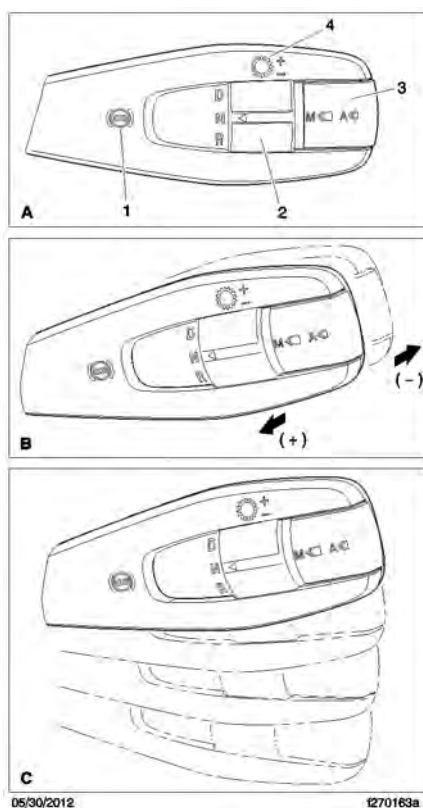

- A. Front View
 B. Shift Requests
 C. Four positions for engine brake settings
1. Engine Brake Symbol
 2. D/N/R Switch
 3. Mode Switch
 4. Gear Shift Symbol

Fig 90, Detroit Multifunction Control


Eaton Automated Transmissions

NOTE: See **Chapter 15** for complete automated transmission operating instructions.

The SmartShift electronic transmission control is installed with the Eaton® Fuller® UltraShift™ and Eaton Fuller AutoShift™ transmissions. The SmartShift control is operated by the fingers of the driver's right hand, allowing both hands to remain on the steering wheel.

A two-position driving mode slide switch is mounted on the body of the control lever just before the paddle widens out. The slide switch allows the driver to choose automatic (AUTO) or manual (MAN) mode. See Fig.

91, [SmartShift Control \(Eaton Fuller UltraShift and AutoShift transmissions\)](#).

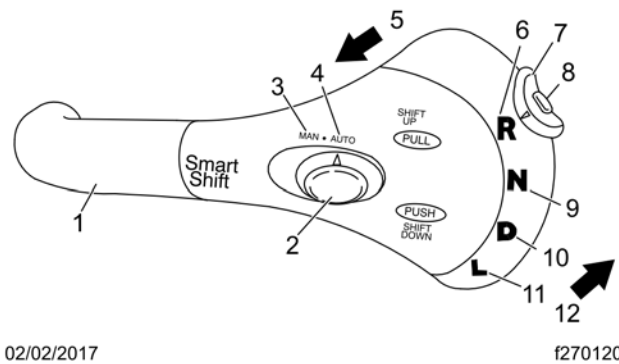

NOTE: To upshift manually, pull the lever back (towards the driver). To downshift manually, push the lever forward (away from the driver).

- | | |
|---|--|
| 1. SmartShift Control Lever | 7. Selector Switch |
| 2. Slide Switch (forward driving mode switch) | 8. Neutral Lock Button |
| 3. MAN Mode (of slide switch) | 9. Neutral Position (of selector switch) |
| 4. AUTO Mode (of slide switch) | 10. Drive Position (of selector switch) |
| 5. Upshift Direction | 11. Low Position (of selector switch) |
| 6. Reverse Position (of selector switch) | 12. Downshift Direction |

Fig 91, SmartShift Control (Eaton Fuller UltraShift and AutoShift transmissions)

Manual Transmissions

NOTE: See **Chapter 14** for complete manual transmission operating instructions.


If so equipped, the transmission range control and splitter valves are attached to the gear shift knob.

The range-preselection lever allows the selection of the low or high range for each transmission ratio. It is used once during an upshift sequence and once during a downshift sequence.

Dependent on the transmission model, some ratios can be split using the splitter-control button.

Allison Automatic Transmissions

Automatic transmissions have up to six forward speeds and one reverse speed. These transmissions have electronic shift controls that can be programmed to allow the use of different geared speeds. See Fig.92, [Allison Push-Button Shift Selector](#).

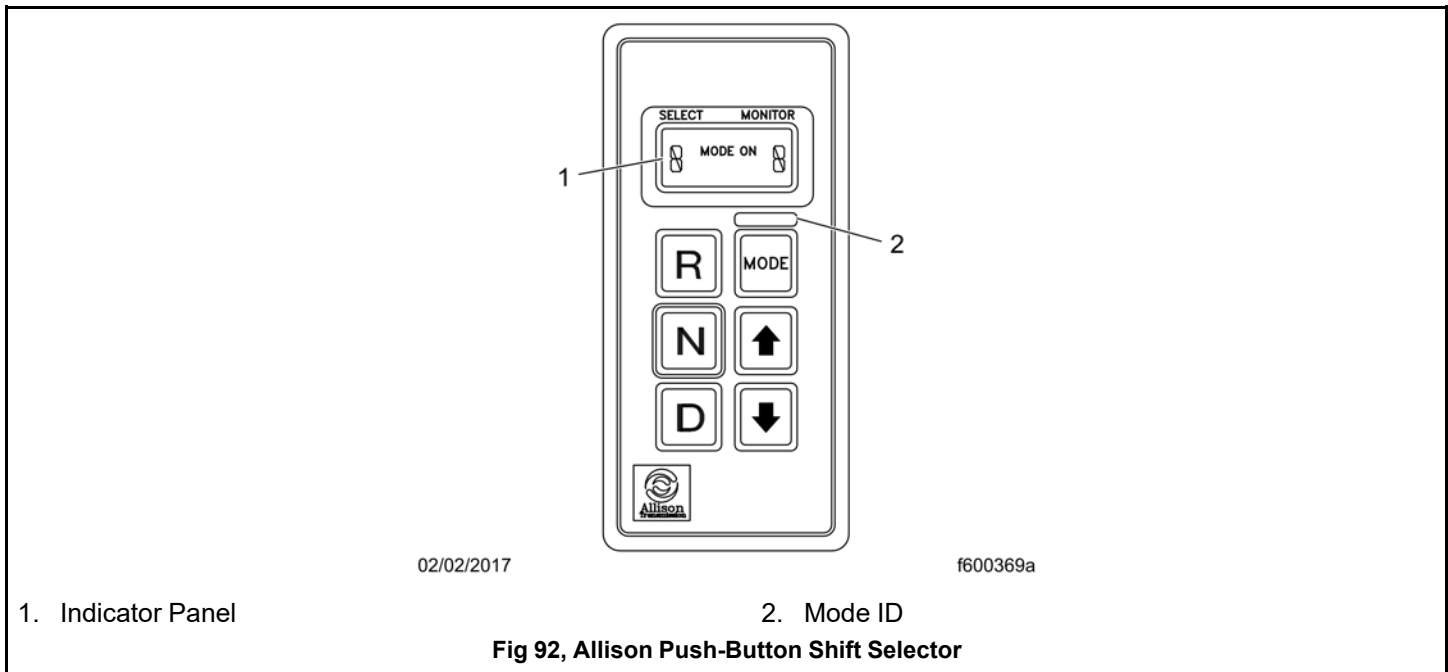

6.05 Cruise Control

6.05.01 Run Smart Predictive Cruise™

Predictive Cruise Control (PCC) is an optional fuel savings application that adjusts vehicle speed predictively, based on the approaching road. Using 3D digital map technology and GPS, PCC evaluates the upcoming road grade about a mile in advance to determine the most fuel-efficient vehicle speed. Vehicles equipped with PCC have a sticker on the dash. See **Fig. 5.23**.

Fig. 5.23, Run Smart Predictive Cruise Control Sticker

The 3D digital map database contains profile information for over 200,000 highway miles (322,000 km) in the 48 contiguous United States. PCC will vary the set cruise speed by up to 6% depending on the approaching road grade. If the engine brake is enabled, PCC will automatically engage the engine brake when actual vehicle speed exceeds the cruise set speed by 6%. This is different from conventional cruise control, which maintains the speed set by the driver.

WARNING



Apply the brakes and downshift as necessary when driving on downhill grades. PCC does not adequately control vehicle speed on steep downhill grades. Failure to use normal braking techniques when PCC is active could result in personal injury and vehicle damage.

IMPORTANT: PCC adjusts the vehicle set speed to achieve maximum fuel economy, but it does not account for traffic flows or surrounding vehicles.

Driver interaction with PCC is the same as conventional cruise control, using the standard cruise control buttons. In the event of a problem with PCC, or when driving on a road with no profile information available, the system reverts to conventional cruise control.

6.05.02 Cruise Control ("CC") Limiter

On vehicles equipped with a CC Limiter (or CC Band) switch (see Fig.93, [CC Limiter Switch](#) or see Fig.94, [CC Band Switch](#)), the cruise control limiter allows the vehicle to exceed the set cruise control speed before engine braking is applied. The CC limiter switch provides more flexibility to the existing cruise control limit function, allowing the driver to tune the cruise function to better suit driving preferences and conditions. To select a limit, use the three-position CC Limiter switch on the dash. See **Table 5.1** for switch settings.

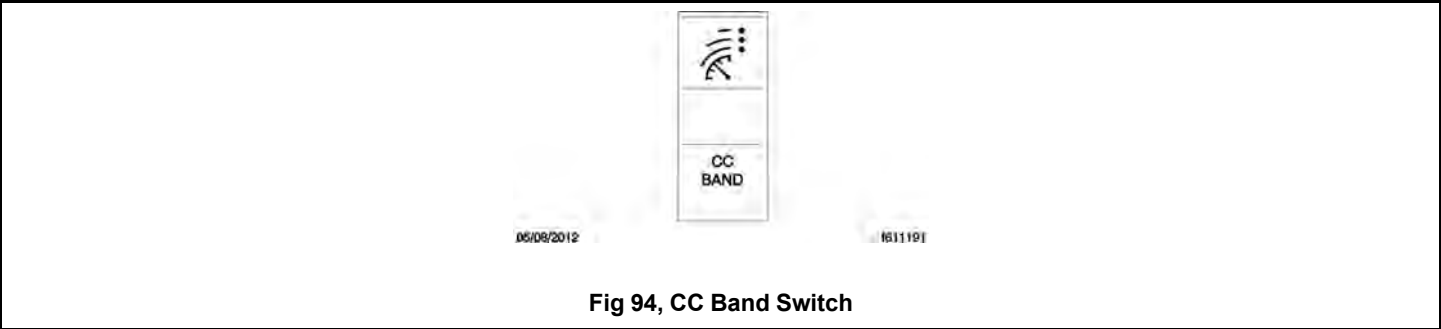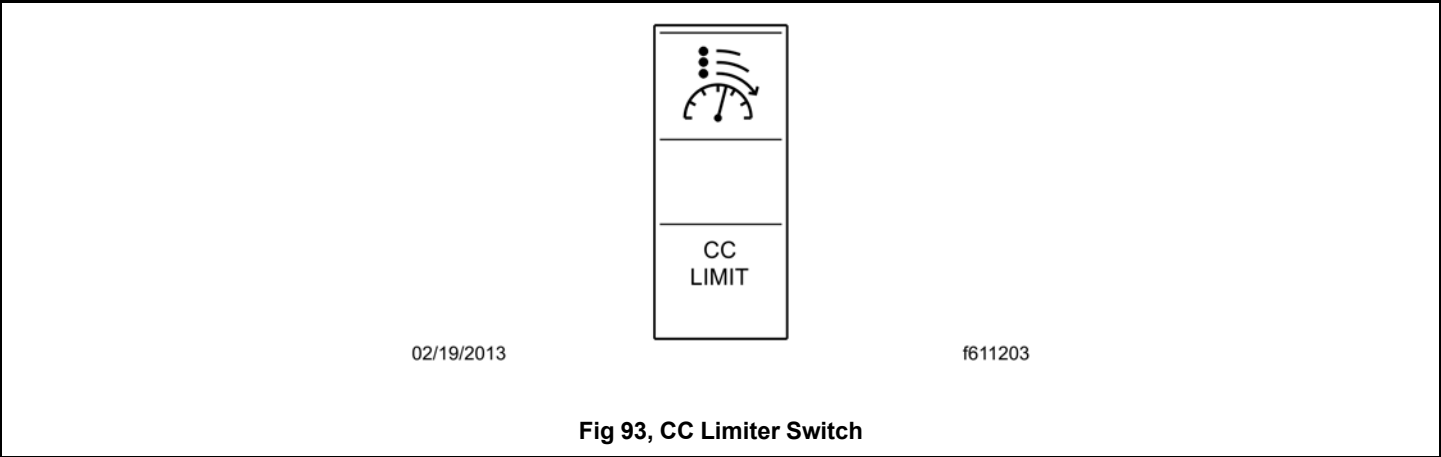

CC Limiter Switch Settings	
Position	Approximate Overrun Setting
Top in	3 mph (5 km/h)
Middle	6 mph (9 km/h)
Bottom in	Unlimited

Table 6, CC Limiter Switch Settings

6.05.03 Descent Control and Deceleration Modes, Detroit™ Automated Transmissions

On vehicles equipped with a Detroit multifunction control (see Fig. 95,[Deceleration Mode Positions, Detroit Multifunction Control](#)), the functions of the lever positions for engine brake control change when cruise control is set. Two distinct modes can be activated:

- Descent Control Mode—engine braking keeps the speed below cruise set speed; throttle is not automatically applied.
- Deceleration Mode—engine braking activates to reduce vehicle speed (with no lower limit) at a constant rate.

Descent Control Mode

Descent Control Mode keeps the vehicle speed below the set cruise speed on a downhill.

To activate Descent Control Mode, set the cruise control speed with the engine brake on (see Fig. 95,[Deceleration Mode Positions, Detroit Multifunction Control](#), positions 1, 2, or 3). In this mode, all three levels of engine braking will be employed to to keep the speed below the set cruise speed. This mode will not keep the speed above the

lower limit of the set speed, so it is possible to eventually coast to a stop, unless the lever is moved to "engine brake off" (position 0), or throttle is applied. After throttle application, the Descent Control Mode is resumed.


Moving the lever to "engine brake off" (position 0) cancels Descent Control Mode and resumes cruise speed. To reactivate Descent Control Mode, reset the cruise control speed with the lever in position 1, 2, or 3.

Deceleration Mode

Deceleration Mode reduces the vehicle speed at a constant rate.

With the cruise control speed set, activate Deceleration Mode by moving the lever to engine brake on (see Fig. 95, [Deceleration Mode Positions, Detroit Multifunction Control](#), position 1, 2, or 3). This mode engages one of the engine brake levels, depending on the lever position. The vehicle will decelerate at a constant rate until the vehicle comes to a stop, unless throttle applied to override the deceleration, or the lever is moved to "engine brake off" (position 0).

Moving the lever to position 0 resumes the previously set cruise control speed.

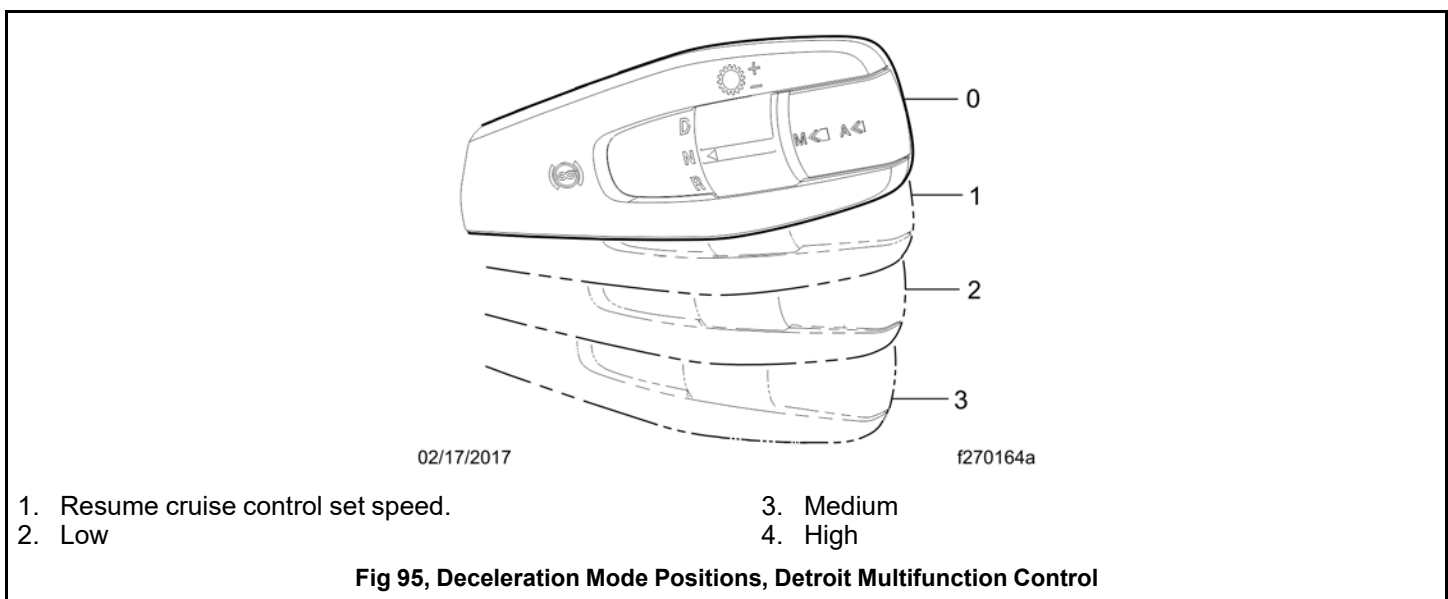

6.06 Dash-Mounted Brake Controls

6.06.01 Parking Brake Control Valve




NOTICE:

Do not step on the service brake pedal while the parking brakes are applied. To do so can cause damage to the brake mechanisms.

The yellow diamond-shaped knob operates the parking brake valve. See Fig.96, [Brake Valve Control Knobs](#). Pull the knob out to apply both the tractor and the trailer spring parking brakes. Push the knob in to release the tractor spring parking brakes. Before the spring parking brakes can be released, the air pressure in either air brake system must be at least 65 psi (447 kPa).


If the trailer is not equipped with spring parking brakes, pull the parking brake valve out to apply the tractor parking brakes and the trailer service brakes.

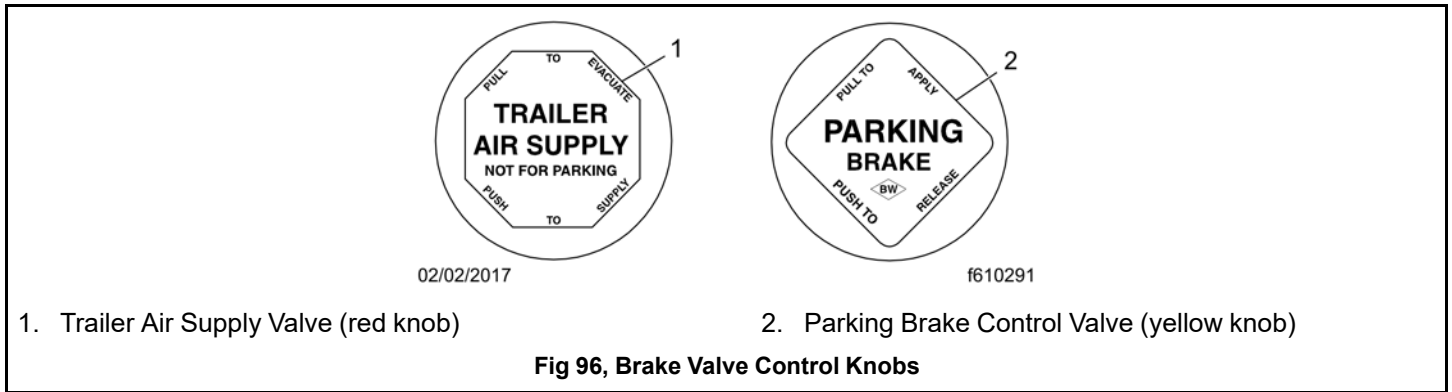

6.06.02 Trailer Air Supply Valve

The red octagonal-shaped knob operates the trailer air supply valve, which charges the trailer air supply system and releases the trailer spring parking brakes. See Fig.97, [Brake Valve Control Knobs](#).

After the vehicle and its air hoses are connected to a trailer and the pressure in the air system is at least 65 psi (447 kPa), push the trailer air supply valve knob in (and leave it in) to charge the trailer air supply system and release the trailer spring parking brakes. Pull the trailer air supply valve out before disconnecting a trailer or when operating a vehicle without a trailer.

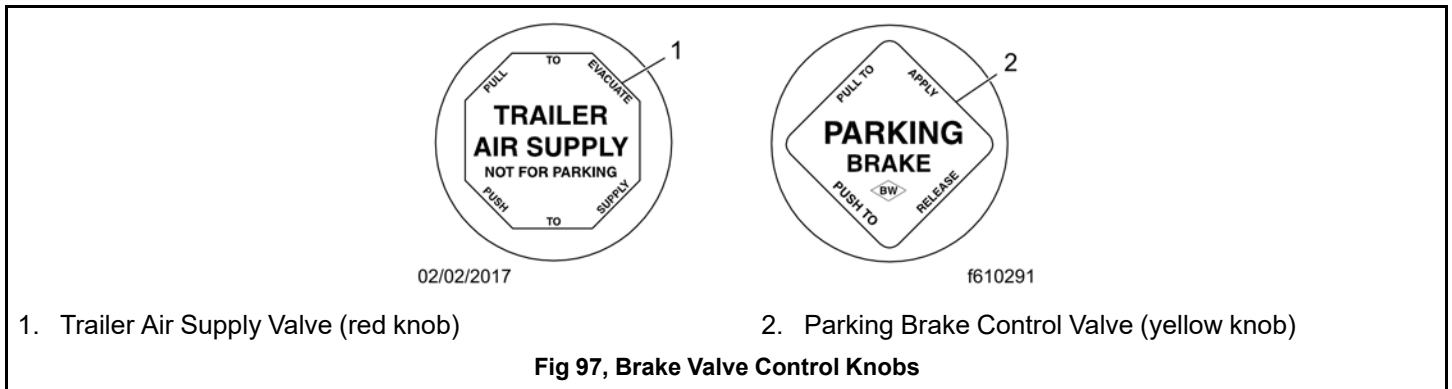

6.06.03 Trailer Brake Lever

The trailer brake lever is used to apply the trailer service brakes without applying the truck or tractor service brakes. It is usually mounted on the right-hand control panel. Move the lever down to apply the trailer brakes; move the lever up to release the trailer brakes. The lever will automatically return to the up position when it is released. See Fig.98, [Trailer Brake Lever](#). The lever can be partially or fully applied, but in any partially on position it will be overridden by a full application of the service brake pedal.

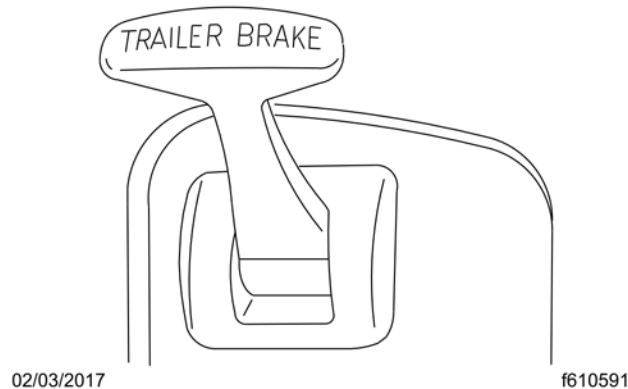


Fig 98, Trailer Brake Lever

6.06.04 Antilock Braking System

The Meritor™ WABCO® Antilock Braking System (ABS) passively monitors vehicle wheel speed at all times, and controls wheel speed during emergency stops or wheel lock situations.

During emergency or reduced-traction stops, fully depress the brake pedal until the vehicle comes to a safe stop. *Do not pump the brake pedal*. With the brake pedal fully depressed, the ABS will control all wheels to provide steering control and a reduced braking distance.

The ABS is designed to communicate with a trailer ABS, if they are compatible. Compatibility will result in the illumination of the trailer ABS lamp during vehicle start-up and fault detection. The trailer ABS lamp will not illuminate unless a compatible trailer is connected to the tractor.

Vehicles with ABS may have Automatic Traction Control (ATC). On these vehicles, the ATC system automatically limits wheel spin during reduced-traction situations. In normal braking applications, the standard air brake system is in effect.

ATC includes a deep snow and mud option to increase available traction on extra-soft surfaces like snow, mud, or gravel. A switch labeled ATC will be located on the dash. See Fig.99, [ATC Switch](#). Press the switch to temporarily allow more drive wheel spin. The activation of the deep snow and mud option is indicated by a flashing WHEEL SPIN lamp. Press the switch again to cycle the system back to normal operation.

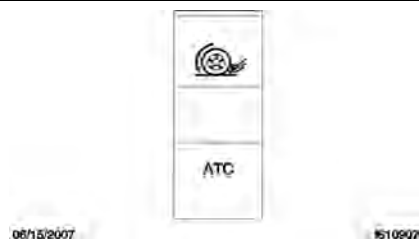


Fig 99, ATC Switch




NOTICE:

The deep snow and mud option is intended to be used under specific slippery conditions that require momentary increased wheel spin. Using this option for an extended period of time may damage the brake system.

6.07 Windshield Wiper/Washer Controls

The multifunction turn signal lever is attached to the left-hand side of the steering column, just below the steering wheel. See Fig.100, [Multifunction Turn Signal Lever](#).

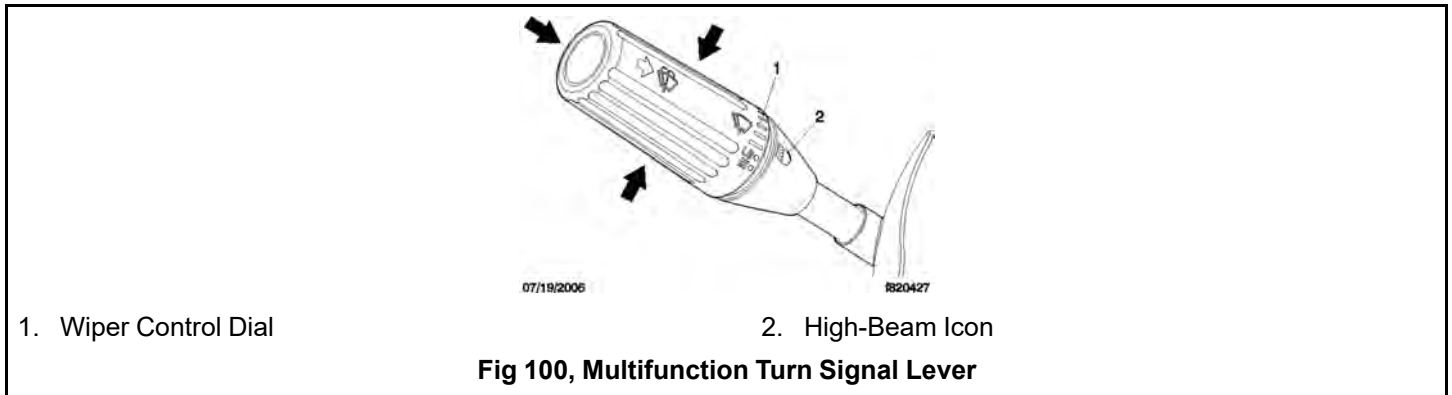

NOTICE:

Do not attempt to manually move the windshield wiper arms. Wiper motor damage will occur if the arms are forcibly moved.

The wipers are operated by a rotary switch in the wiper control dial, which is on the end of the turn signal lever. There are five intermittent settings, marked on the dial by lines of increasing length, and two steady speed settings: LO and HI.

Turn the wipers on by rotating the control dial counterclockwise. Rotate the control dial further to increase the speed of the wipers through the various intermittent settings, then to LO and HI.

Rotate the control dial clockwise to slow the wipers down. Rotate the control dial clockwise as far as it will go to turn the wipers off.

The windshield washer button is located at the end of the turn signal lever. Momentarily press the windshield washer button to initiate a single wipe without activating the washer pump. The wipers will swipe one full cycle and return to the inactive position.

To operate the windshield washers, press and hold the button in. After a short delay, the washer will pump windshield washer fluid onto the windshield for as long as the washer button is pressed. The windshield wipers will turn on at low speed while the washer button is pressed. After the button is released, the wipers will continue to operate for one to several wipe cycles, depending on how long the wash button was pressed initially.

6.08 Suspension/Trailer Connection Controls


6.08.01 Air Suspension Dump Control Switch



NOTICE:

Do not operate the vehicle over uneven ground such as ramps, speed bumps, curbs, etc. with the air springs deflated. Doing this may lead to air bag separation from the piston, preventing the suspension air springs from re-inflating.

The air suspension height control switch may be used to aid in connecting or disconnecting from a trailer. See Fig. 101, [Axle and Suspension Switches](#). When the switch is set to LOWER, the air-suspension dump valve deflates the air springs to lower the rear of the vehicle. In the AUTO position, the automatic ride-control valves operate for normal driving.

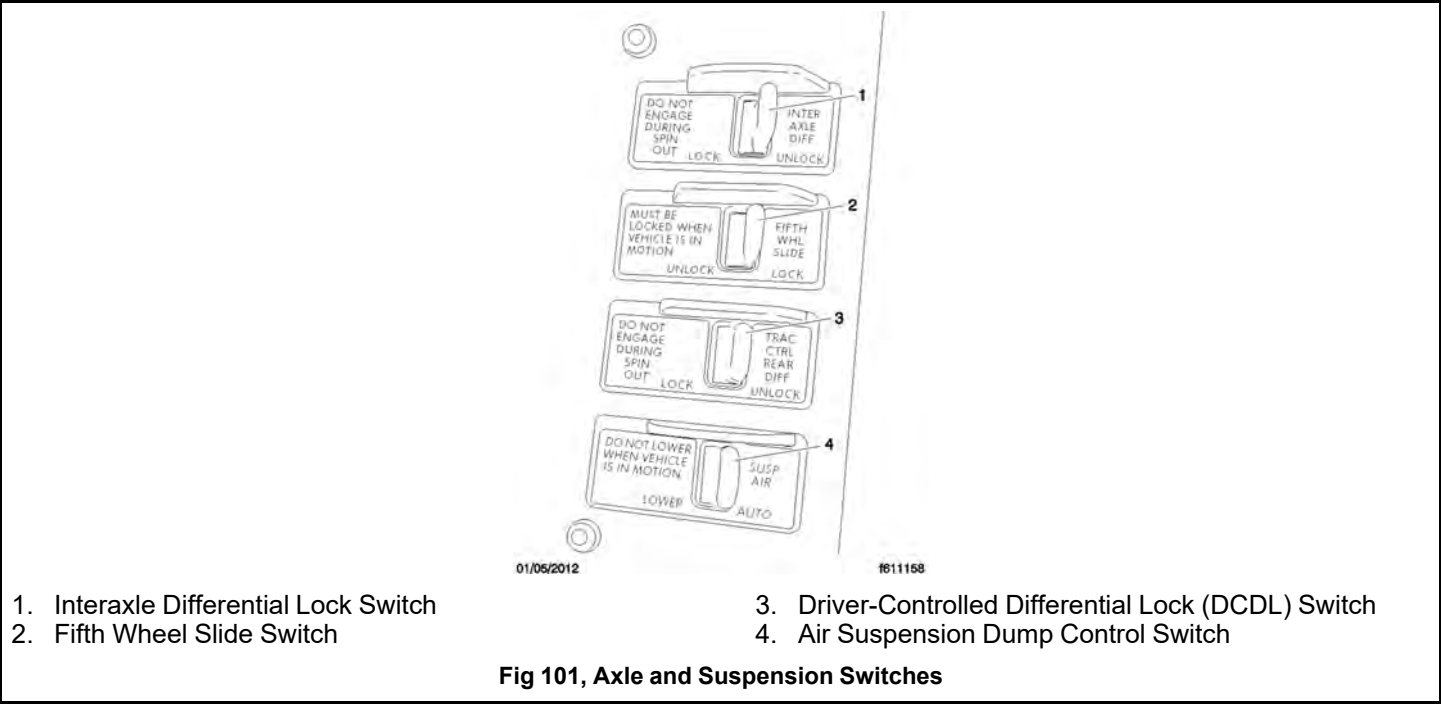


NOTICE:

Never exhaust air from the suspension while driving. When the air is exhausted, the suspension will not absorb road shocks, and components may be damaged.

A red LED in the switch is illuminated when the suspension is deflated.

6.08.02 ECAS Dash Switches

Vehicles with Electronically Controlled Air Suspension (ECAS) may be equipped with either dash switches or a remote control unit, not both. See Fig 102, [ECAS Dash Switches](#) and see Table 11, [ECAS Remote Control Keys and Functions](#).

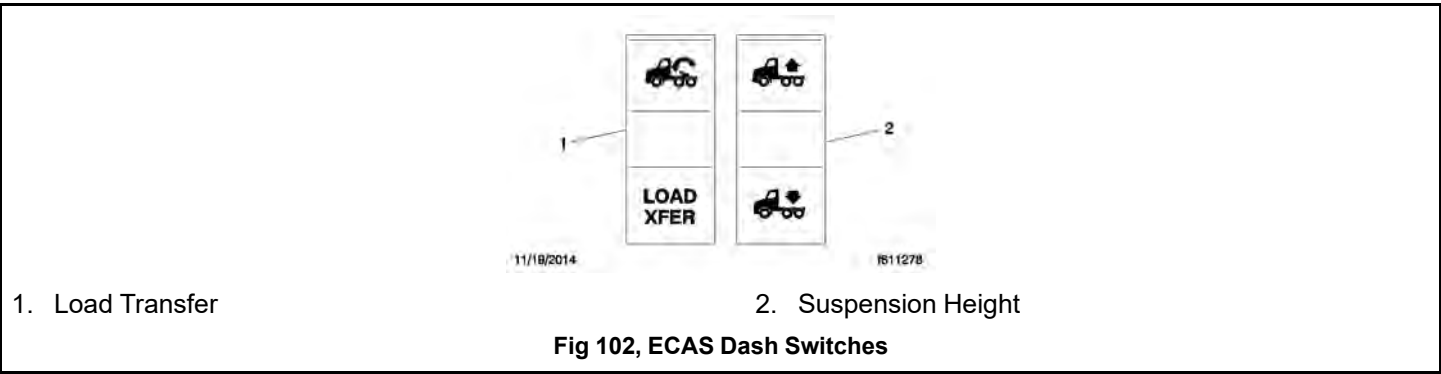

LOAD XFER (Load Transfer)

This switch controls the ECAS manual load transfer function by adjusting suspension air pressure. Use this function to minimize wheel slippage in road conditions where traction may be a concern.

The ECAS load transfer feature applies the maximum available vehicle load on the drive axle, up to the maximum allowable limit, determined by the gross axle weight rating (GAWR). In bobtail or with a loaded trailer less than the GAWR, the tag axle supports a negligible load while the drive axle supports nearly the full weight. Above the GAWR, the drive axle is loaded with approximately the maximum allowable load and the tag supports the remainder.

Load transfer mode can be deactivated by holding up on the dash switch for 4 seconds. Load transfer mode will automatically deactivate when the vehicle reaches 45 mph (72 km/h).

For vehicles equipped with the ICU, when load transfer mode is active, "Load Transfer" will display in the message field of the driver display. See Fig. 103, [Load Transfer Notification, ICU4Me Only](#).

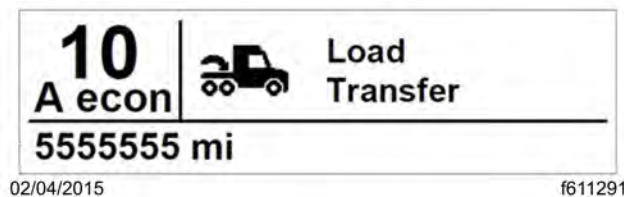


Fig 103, Load Transfer Notification, ICU4Me Only

Suspension Height

If the suspension is at normal height:

- each up press increases the suspension height an increment, unless the suspension is at maximum height
- a down press lowers the suspension to its lowest set-point (usually axle stops)

If the suspension is **below** normal height:

- an up press increases the suspension height to normal ride height
- a down press does nothing; the suspension is already at its lowest point

If the suspension is **above** normal height:

- each up press increases the suspension height an increment, unless the suspension is at maximum height
- a down press lowers the suspension to normal ride height

On vehicles equipped with the ICU, messages about the ride height status will display in the driver display. See Fig. 104, [Example of Ride Height Message, ICU4Me Only](#).

If the suspension is outside normal ride height (amber lamp on), the ECAS system will automatically return the suspension to normal ride height when vehicle speed reaches or exceeds a set speed (usually set to 5 mph).



Fig 104, Example of Ride Height Message, ICU4Me Only

ECAS Standby Mode, Dash Switch

Once the key is turned off, the ECAS will enter standby mode, remaining powered and adjusting to level and load changes for 1 hour. To cancel standby mode on vehicles with ECAS dash switches, turn the key from OFF to ON to OFF in less than 1.5 seconds. Confirm the deactivation of standby mode by pressing the suspension height switch, which should not adjust the suspension.

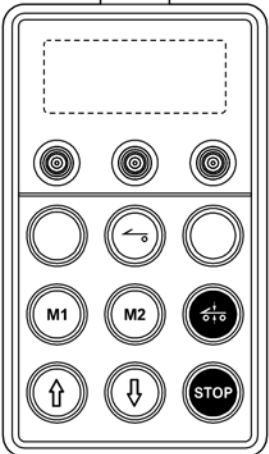
ECAS Remote Control Keys and Functions	
 02/03/2017 f611211	
Key	Function
	Remote Control On/Off. The middle light will remain lit while the remote is active.
	Memory keys. Pressing the STOP key and a memory key simultaneously will store the current height. Once stored, pressing the key will adjust the vehicle to the stored height.
	Normal height key. This key will return the vehicle to normal ride height.

Table 11, ECAS Remote Control Keys and Functions

ECAS Remote Control Keys and Functions	
	Lift and lower keys. These keys will raise or lower the rear suspension height.
	The STOP key. Pressing the STOP key will interrupt and stop all adjustments being made by the remote control. When the key is off, holding the Stop key for 2 seconds will cancel the 1 hour Standby mode.

Table 7, ECAS Remote Control Keys and Functions

6.08.03 ECAS Remote Control Unit

Some vehicles equipped with Electronically Controlled Air Suspension (ECAS) have a remote control unit to lower and raise the rear suspension. See Table 12, [ECAS Remote Control Keys and Functions](#) for keys and functions.

If the suspension is outside normal ride height (amber lamp on), the ECAS system will automatically return the suspension to normal ride height when vehicle speed reaches or exceeds a set speed (usually set to 5 mph).

Messages about the ride height status will display in the ICU driver display.

ECAS Standby Mode, Remote Control

Once the key is turned off, the ECAS will enter standby mode, remaining powered and adjusting to level and load changes for 1 hour. To cancel standby mode on vehicles with a remote control, turn on the remote control then hold the STOP key on the remote for 2 seconds. Confirm the deactivation of standby mode by attempting to turn the remote on and adjust the suspension, which should not be possible.

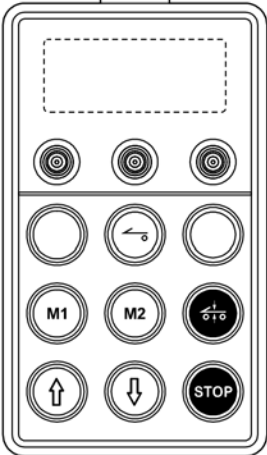
 02/03/2017f611211	
Key	Function
	Remote Control On/Off. The middle light will remain lit while the remote is active.

Table 12, ECAS Remote Control Keys and Functions


	Memory keys. Pressing the STOP key and a memory key simultaneously will store the current height. Once stored, pressing the key will adjust the vehicle to the stored height.
	Normal height key. This key will return the vehicle to normal ride height.
	Lift and lower keys. These keys will raise or lower the rear suspension height.
	The STOP key. Pressing the STOP key will interrupt and stop all adjustments being made by the remote control. When the key is off, holding the Stop key for 2 seconds will cancel the 1 hour Standby mode.

Table 8, ECAS Remote Control Keys and Functions

6.08.04 Fifth Wheel Slide Control Switch

NOTE: Do not activate the fifth wheel slide control valve while the vehicle is in motion. To do so could cause damage to the fifth wheel member, the kingpin, the cab or trailer, and ultimately to the drivetrain.

The fifth wheel air slide switch permits repositioning of the sliding fifth wheel from inside the cab. See Fig. 105, [Fifth Wheel Slide Control Switch](#). Moving the air slide control valve switch to the lock position deactivates the control valve and locks the fifth wheel to the baseplate. Moving the switch to the unlock position activates the control valve and unlocks the fifth wheel slide mechanism, allowing changes to the total length of the tractor-trailer and changes to axle loads to comply with varying jurisdictional laws. For detailed operating instructions for fifth wheel slide, coupling, and uncoupling procedures, refer to **Chapter 18**.

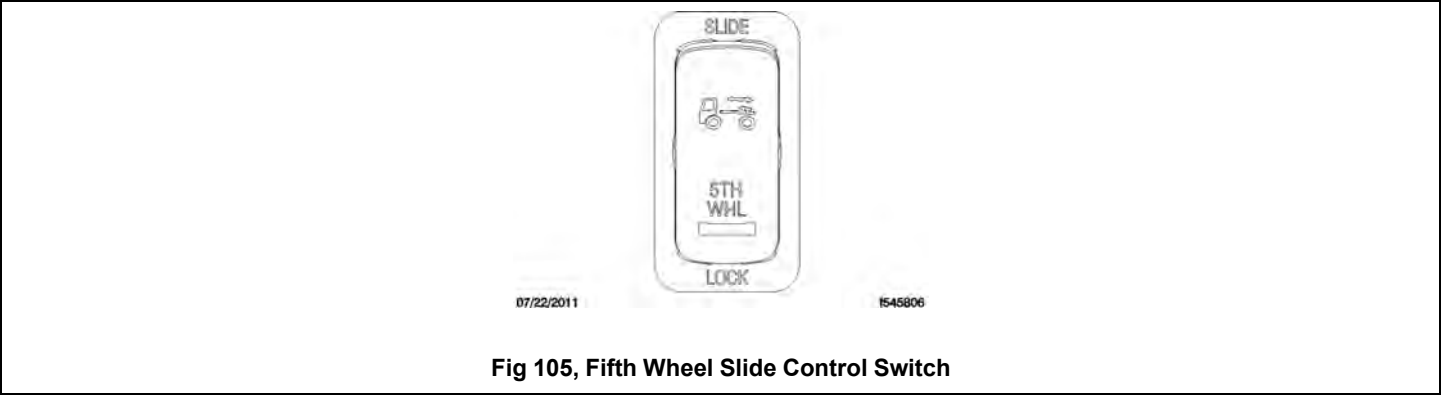

6.08.05 Trailer Auxiliary Switch

Trailers that are equipped with pneumatic brakes and used in North America or South America are generally equipped with power for the trailer lights. The connection is passed from the vehicle to the trailer via the primary receptacle, controlled by a dash switch.

Press the top of the switch to activate the trailer auxiliary function. Press the bottom of the switch to turn trailer auxiliary function off. See Fig.106, [Trailer Auxiliary Switch](#).

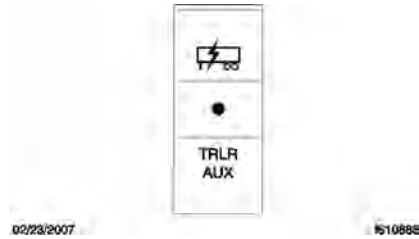


Fig 106, Trailer Auxiliary Switch


6.09 Climate Controls

6.09.01 Cab Climate Control

NOTE: See **Chapter 8** for detailed climate control panel operating instructions.

The climate control panel allows you to control the heating, ventilating, defrosting, and air conditioning (A/C) functions. The cab climate control panel has three switches to control the functions of the cab temperature system; see Fig. 108, [Air Selection Switch With Bunk-Override Button](#):

- fan switch with recirculation button
- temperature control switch with A/C button
- air selection switch (with bunk-override button on sleeper cab only)

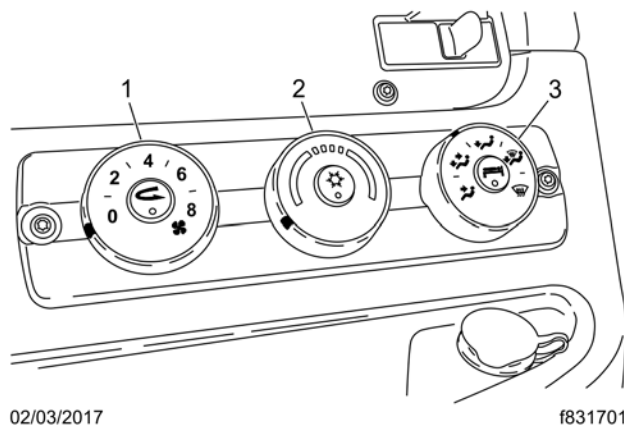

1. Fan Switch with Recirculation Button
2. Temperature Control Switch with Air Conditioning Button

3. Air Selection Switch with Bunk-Override Button

Fig 107, Cab Climate Control Panel

The fan switch controls the fan speed, and forces fresh or recirculated air through the air outlets. To increase airflow, turn the switch clockwise to a higher number. To decrease airflow, turn the switch counterclockwise to a lower number.


Recirculation mode limits the amount of outside air that enters the cab. Press the recirculation button to prevent dusty or smoky air from entering the cab.

NOTE: To prevent the buildup of odors and/or oxygen depletion inside the cab, the system switches from full recirculation mode to partial recirculation mode after 20 minutes.

The temperature control switch is used to select the desired temperature. Turn the switch clockwise to the red area for warm air. Turn the switch counterclockwise to the blue area for cool air.

The A/C cools and dehumidifies the air inside the cab. Press the A/C button, located in the center of the temperature control switch, to turn the A/C on and off.

The air selection switch allows the control of air flow through the face outlets, the floor outlets, the defrost (windshield) outlets, or a combination of these outlets. See Fig. 108, [Air Selection Switch With Bunk-Override Button](#).

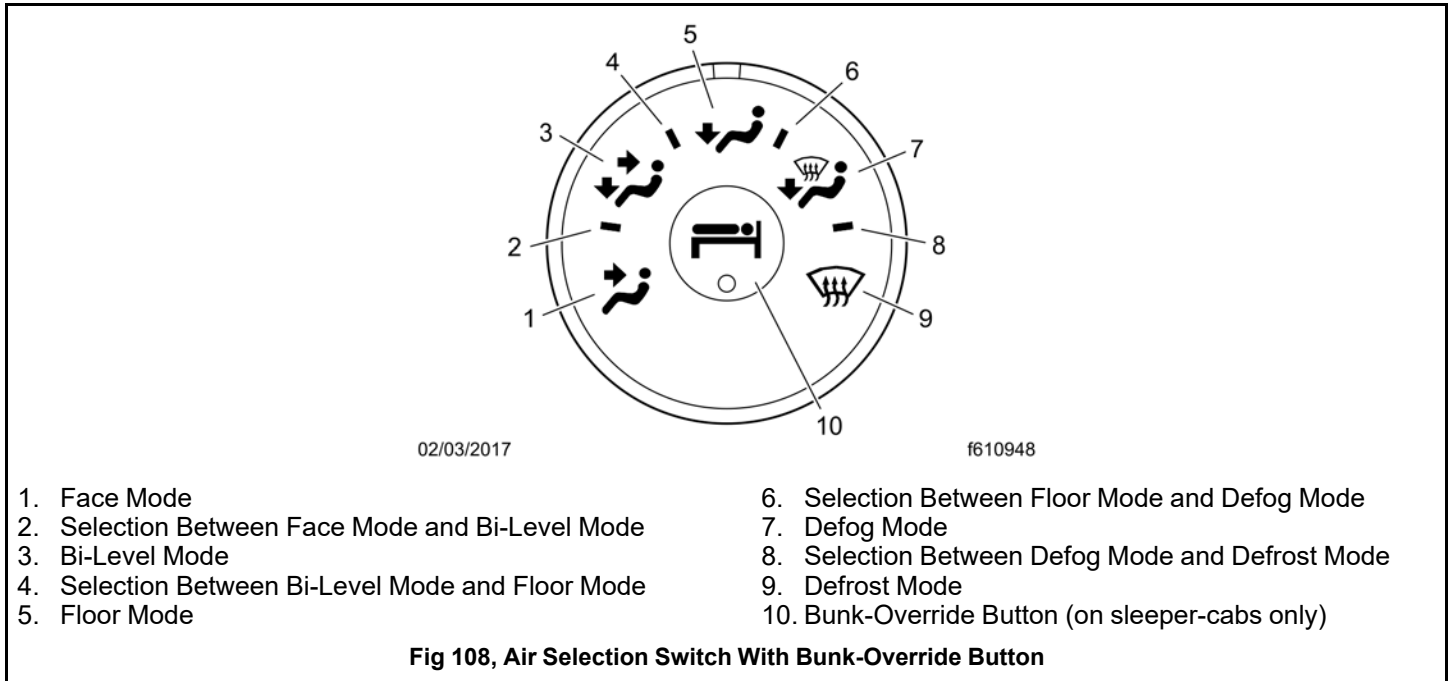

Bunk-Override Button


The bunk-override button is located in the center of the cab air-selection switch (sleeper-cabs only). See Fig. 108, [Air Selection Switch With Bunk-Override Button](#).

Press the bunk-override button to make the cab controls override the settings on the sleeper temperature control panel; the sleeper temperature will mimic the cab settings. An amber LED in the button is illuminated when the bunk-override mode is activated. When the override switch is not activated, the cab climate control panel can be adjusted without affecting the sleeper settings.

6.09.02 Sleeper Climate Control

The sleeper temperature can be controlled from the sleeper climate control panel or from the cab climate control panel if the bunk-override button is activated.

The fan switch controls the sleeper temperature fan speed. To increase airflow, turn the switch clockwise to a higher number. To decrease the airflow, turn the switch counterclockwise to a lower number. See Fig. 109, [Sleeper Climate Control Panel](#).

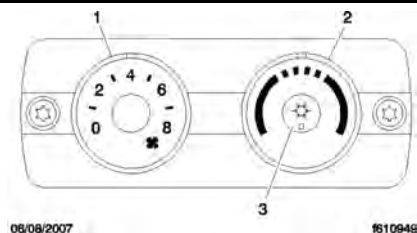

1. Fan Switch
2. Temperature Control

3. Air Conditioning Button

Fig 109, Sleeper Climate Control Panel


The temperature control switch is used to select the desired temperature in the sleeper. Turn the switch clockwise to the red area for warm air. Turn the switch counterclockwise to the blue area for cool air.

Press the button in the center of the temperature control switch to activate the A/C.

Cancel bunk-override mode, if activated, by changing the sleeper fan speed or temperature setting. The system will then operate from the sleeper controls.

6.10 Seat Controls

NOTE: See **Chapter 7** for detailed information about seat controls and adjustments.

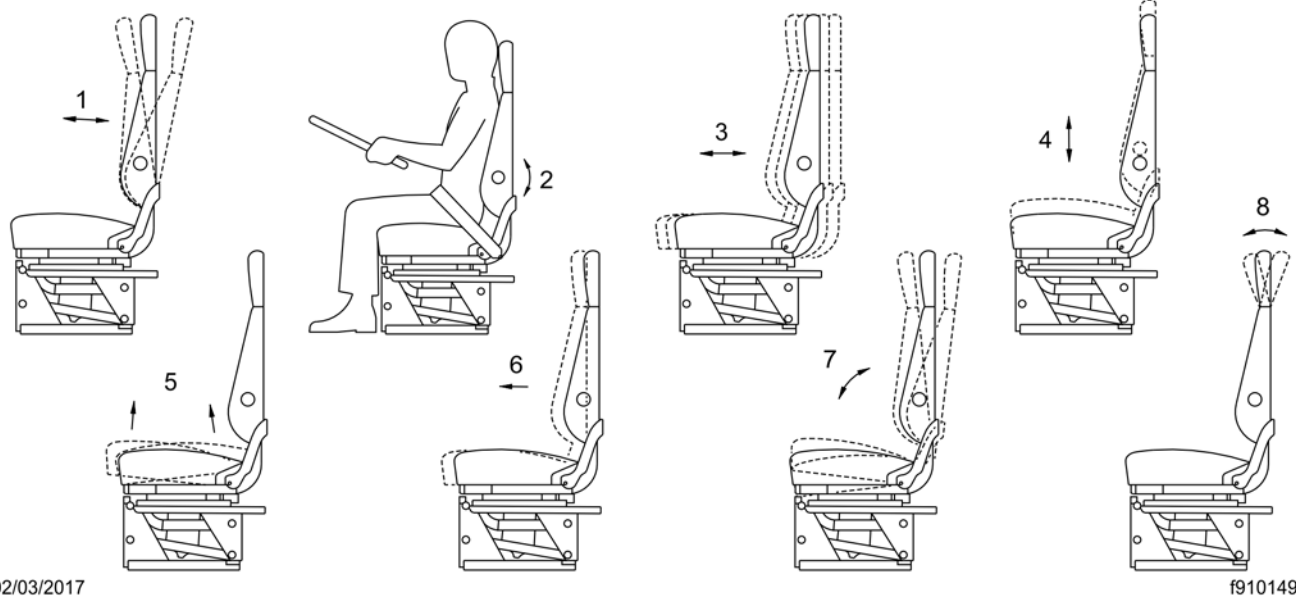

1. Backrest Tilt
2. Lumbar Support
3. Isolator Feature
4. Height Adjustment

5. Bottom Cushion Angle (fore-and-aft cushion height)
6. Fore-and-Aft Seat Slide (seat track adjustment)
7. Seat Tilt
8. Upper Backrest Adjustment

Fig 110, General Seat Adjustments

**NOTICE:**


Keep hands, tools, and other objects away from the scissor points under the seats. Failure to do so could cause personal injury.

The following is a description of adjustments that can be made to various seats. Not all seats have all of the adjustments listed below. See Fig.110, [General Seat Adjustments](#).

- Backrest tilt
- Lumbar support
- Isolator
- Height adjustment
- Bottom cushion angle (fore-and-aft bottom cushion height)
- Fore-and-aft seat slide (seat track adjustment)
- Seat tilt
- Headrest adjustment

6.11 Adjustable Steering Column Controls

To adjust the steering column, depress the foot pedal located below the steering column. See Fig. 111, [Steering Column and Left Panel Controls](#). Tilt the steering column to the desired angle. Telescope the steering column closer or further away by pushing or pulling it. Release the foot pedal to lock the steering column in place.

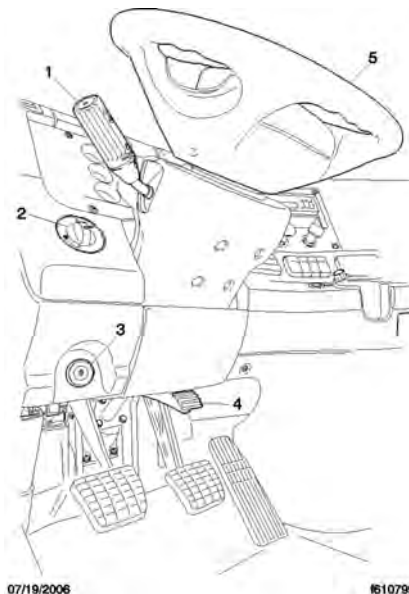

1. Multifunction Turn Signal Switch
2. Headlight Switch
3. Ignition Switch

4. Tilt Steering Column Lever
5. Steering Wheel

Fig 111, Steering Column and Left Panel Controls

7.01 VORAD VS-400 System	113
7.01.01 Driver Interface Unit	113
7.01.02 Collision Warning System	117
7.01.03 SmartCruise	119
7.01.04 Side Object Detection.....	119
7.01.05 Special Road Situations	120
7.01.06 Maintenance.....	120
7.01.07 Failure Display Mode/Fault Codes.....	121
7.02 OnGuard™ Collision Safety System	121
7.02.01 General Information	121
7.02.02 System Limitations.....	122
7.02.03 OnGuard Display Unit	122
7.02.04 Collision Warning System (CWS)	123
7.02.05 Adaptive Cruise Control (ACC).....	125
7.02.06 Error Screens	126
7.02.07 Additional Features	126
7.03 Detroit Assurance Radar.....	127
7.03.01 Driver Message Center.....	127
7.03.02 Adaptive Cruise Control (ACC).....	128
7.03.03 Active Brake Assist (ABA).....	132
7.03.04 Overriding ABA Events.....	135
7.04 Lane Departure Warning (LDW)	135
7.04.01 Safety Notes.....	135
7.04.02 Functions and Activation Conditions	135
7.04.03 Activating or Deactivating	135
7.04.04 Cleaning the Distance Sensor and the Camera	136
7.05 OnLane™ Lane Departure Warning.....	137
7.05.01 General Information	137
7.05.02 System Startup	137
7.05.03 Intentional Lane Changes.....	137
7.05.04 Unintentional Lane Departure	138

7.05.05 Driver Alertness Warning (DAW) 138

7.05.06 Temporarily Disabling the System 138

7.06 Roll Stability System..... 138

7.06.01 General Information 138

7.06.02 Roll Stability Advisor 139

7.06.03 Roll Stability Control..... 140

7.06.04 Hard-Braking Advisor 141

7.06.05 Trip/Leg Totals 141

7.07 Enhanced Stability Control..... 142

7.08 Detroit Connect Tablet 143

7. Driver Assistance Features

7.01 VORAD VS-400 System

7.01.01 Driver Interface Unit

**WARNING:**

The VORAD VS-400 System is intended solely as an aid for an alert and conscientious professional driver. It is not intended to be relied upon to operate a vehicle. Use the system in conjunction with rearview mirrors and other instruments to safely operate the vehicle. Operate a vehicle equipped with the VS-400 System in the same safe manner as if the CWS were not present.

The VS-400 System is not a substitute for safe, normal driving procedures, nor will it compensate for any driver impairment such as drugs, alcohol, or fatigue.

The VS-400 System may provide little or no warning of hazards such as pedestrians, animals, oncoming vehicles, or cross traffic.

Failure to drive safely and use the system properly could result in personal injury and/or death and severe property damage.

The VORAD VS-400 system is an on-board radar system that monitors traffic conditions, warning the driver of potentially hazardous driving situations.


The collision warning system (CWS) tracks objects ahead of the vehicle, warning the driver with visual and audible indicators whenever following distances become unsafe.

SmartCruise® adjusts the vehicle's cruise speed in order to match the speed of traffic ahead, allowing the driver to maintain a safe following distance while cruise control is engaged.

The optional side object detection system warns of unsafe lane changes by detecting vehicles that may be difficult to see in adjacent lanes.

The VORAD VS-400 system performs in fog, rain, snow, dust, smoke, and darkness. The VS-400 system becomes active whenever the ignition key is switched to ON.

The driver interface unit (DIU) provides visual and audible alerts, along with system status information. The DIU also provides an interface for changing system settings. Menu selections are made by pressing the up and down arrow buttons, and the OK button. See Fig. 112, [Driver Interface Unit \(DIU\)](#).

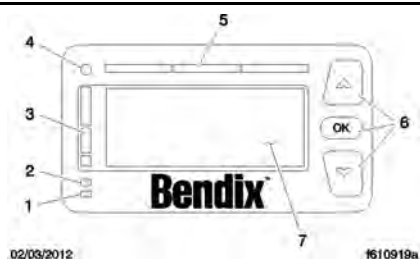

1. Fault Indicator
2. Info Indicator
3. Following Distance Lights
4. Ambient Light Sensor


5. Collision Alert Lights
6. User Interface Keypad
7. Graphic Display

Fig 112, Driver Interface Unit (DIU)

The following warning and indicator lights illuminate on the DIU:

- Red: illuminates with the collision alert
- Yellow: illuminates with 3-, 2-, and 1-second following distance alerts
- Orange: illuminates when a system failure occurs
- Blue: illuminates when information is available


Immediately after the ignition switch is turned to ON, the DIU initializes a self-test routine. During the initialization, the VORAD screen displays and all lamps illuminate for approximately three seconds, along with a power-up tone. When the initialization is complete, the DIU displays the VS-400 system configuration screen. See Fig.113, [System Configuration Screens](#).

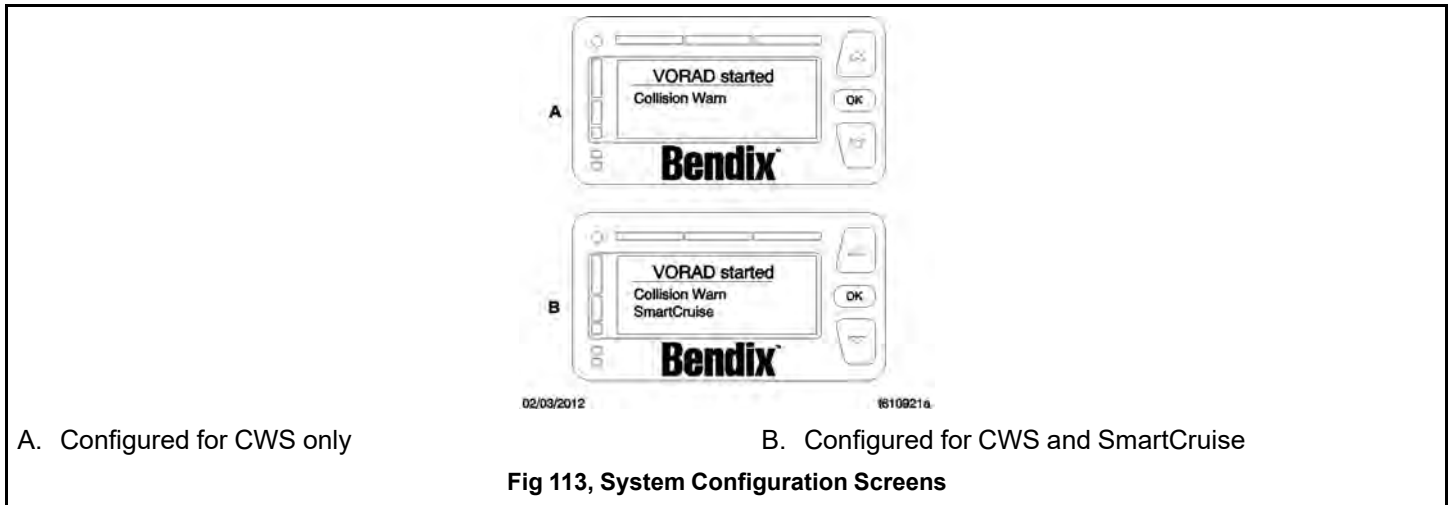

Menu Selections

IMPORTANT: The display of a menu item is overridden whenever conditions require an alert or collision warning to be displayed.

After initialization, the menu screen is displayed. Scroll to the desired menu item by pressing an arrow button, then press the OK button to select the item. See Fig.114, [Menu Screen](#). If the driver does not make a selection within 30 seconds, or the vehicle begins to move, the DIU reverts to the system status display.

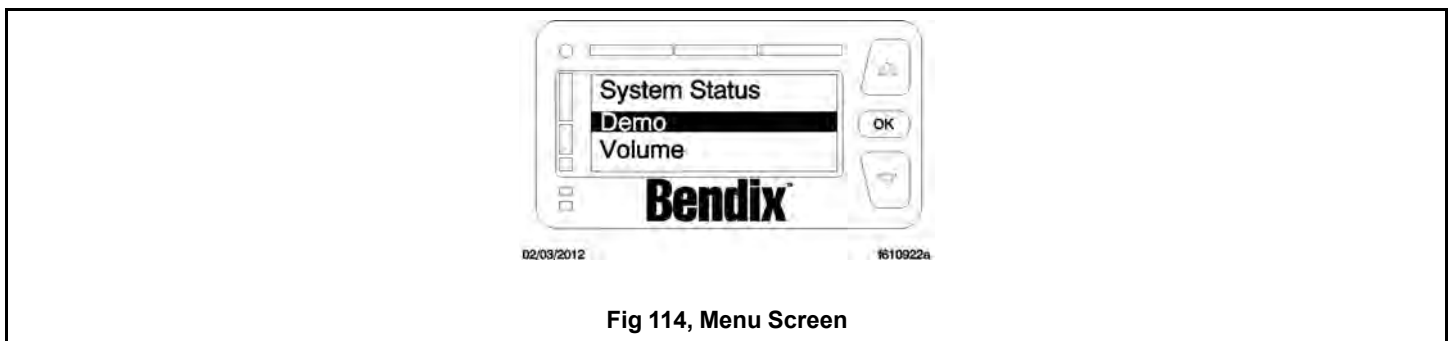

The display of any menu item is overridden whenever conditions require an alert or collision warning to be displayed.


Demo (vehicle must be stationary)

When the vehicle is stationary and Demo mode is selected, the DIU will demonstrate the meaning of all LED and screen displays, including alert messages and sound warnings. Scroll through the demo screens by pressing the down arrow. Pressing any other key exits Demo mode.

Volume

The minimum adjustable volume is 50% of the maximum volume. If the DIU volume is not adjustable, the display screen shows a grayed bar graph whenever volume adjustment is selected. See Fig.115, [Volume Screen](#). After each ignition switch cycle, the volume will default back to 100%.

NOTE: Headway and collision alert tones may be suppressed when the brake is applied if the system is configured to do so.

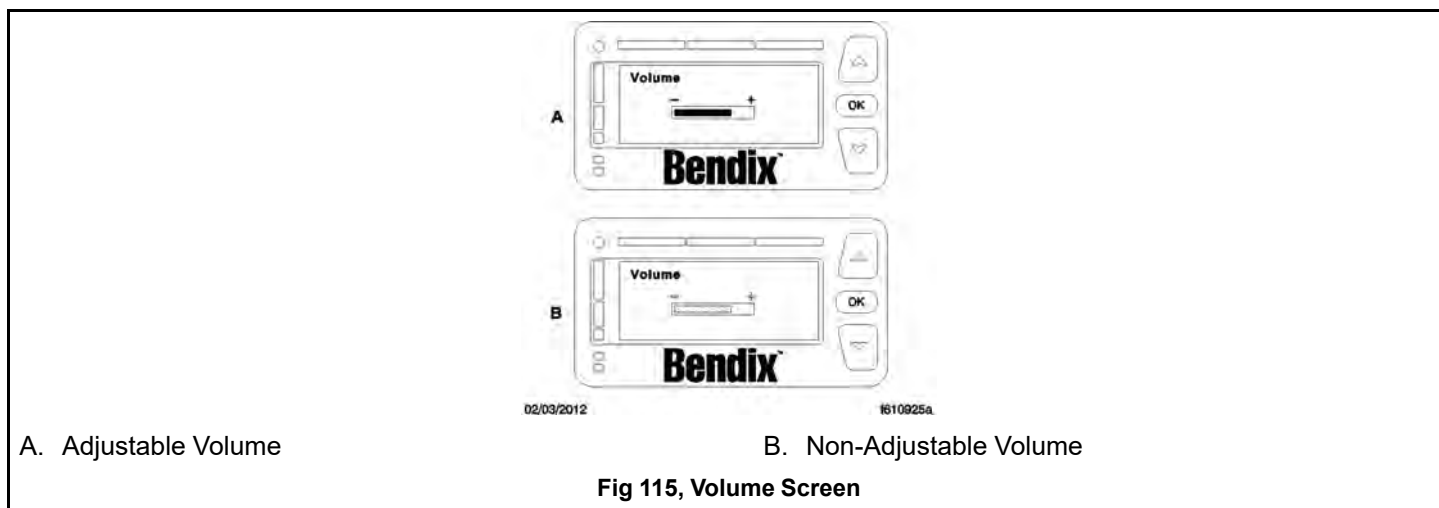


SmartCruise Headway Range

Headway range adjustment is only available with SmartCruise. Headway range is adjustable between 3.25 and 2.25 seconds. The headway range setting will default to 3.25 seconds after each ignition power cycle.

If headway range adjustment is disabled, only the **3.25 sec** screen is displayed. See Fig.116, [Headway Range Screen](#). for the various headway range screens. Press the OK button to exit the menu.

NOTE: If the headway range is adjusted to three seconds or below and SmartCruise is active, the 3-second collision warning headway alert will not display. All other alerts are not suppressed.

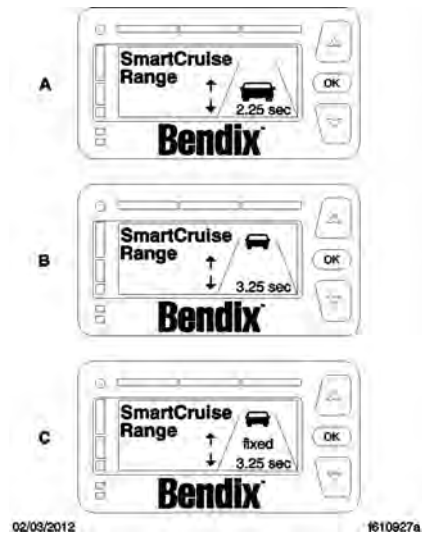

- A. Minimum headway adjustment
 B. Maximum headway adjustment

C. Headway range disabled

Fig 116, Headway Range Screen

Brightness

Use the up and down arrows to change the DIU backlight and warning LED brightness. Press the OK button to exit the brightness screen.

The ambient light sensor reading determines if the DIU is in daytime or nighttime mode. Menu-adjusted brightness is applied only to the mode the DIU is in at the time of adjustment. The previous brightness settings are repeated after each ignition cycle. However, the graphic display and the warning LED brightness range are constrained such that they are always visible regardless of how low the brightness is adjusted in all driving conditions. Press the OK button to exit the menu.


Unit Adjustment Screen

The unit adjustment screen allows the driver to select either km/h or mph units for display of SmartCruise set speed. Press OK to exit the mph selection screen.

System Status

System status shows the status of each system, indicating if the system is operating normally. If a system is not operating normally, the system displays **Failed** beside the system name. **Failed** indicates that a fault is preventing the system from operating and it cannot be used until the fault is corrected or acknowledged.

Depending on the VS-400 system installed, one of the screens shown in Fig.117, [System Status Screens](#), will appear unless a system fault is active. Press OK to exit the system status menu.

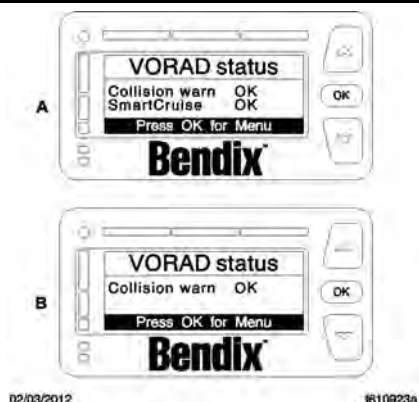

A. Status display for CWS and SmartCruise configuration B. Status display for CWS configuration

Fig 117, System Status Screens

Diagnostics


The DIU displays fault codes currently active when this screen is selected and the vehicle is stationary. See Fig. 118, [DIU Diagnostic Screen](#). Contact an authorized Freightliner service center if fault codes display.



Fig 118, DIU Diagnostic Screen

7.01.02 Collision Warning System

The CWS may require a warm-up period of up to one minute if the outside air temperature is below 32°F (0°C). The DIU will display a warm-up message until the system reaches operating temperature. See Fig. 119, [CWS Warm-Up Screens](#).

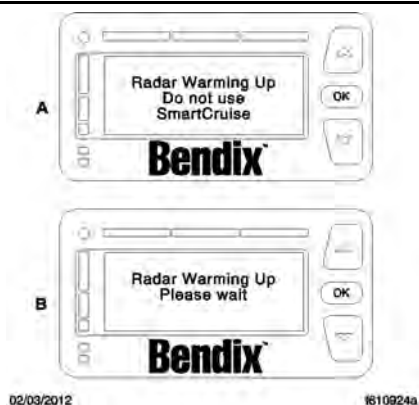

A. CWS with SmartCruise


B. CWS Only

Fig 119, CWS Warm-Up Screens

The alerts given by the VS-400 system are based on the distance to the object ahead, whenever vehicle speed is 10 mph (16 km/h) or faster. The VS-400 CWS identifies and tracks the nearest object in the lane of travel. This object is classified by the range, and assigned a message described under the following headings.


Object Detected

When a vehicle is detected in the same lane of travel within 350 ft (107 m) but farther than a 3-second following distance, the DIU will display **OBJECT DETECTED**. See Fig.120, [Object Detected Alert](#).

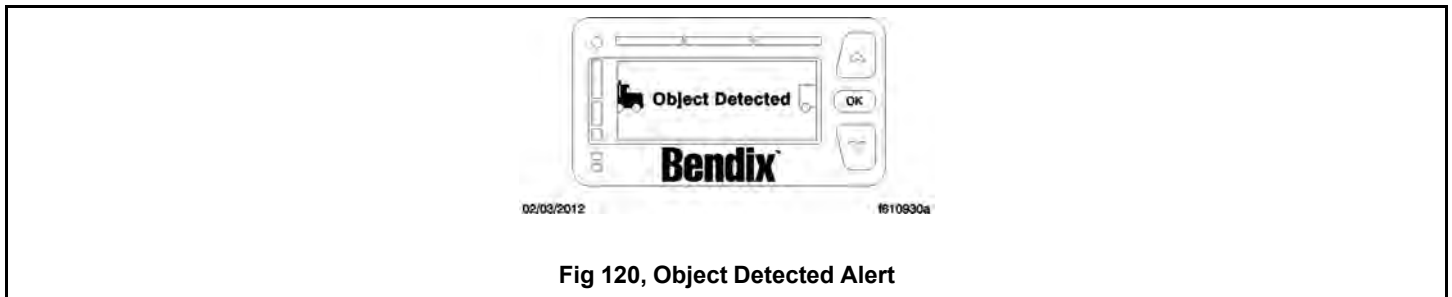


3-Second Headway Alert

When a vehicle is detected to be within a 3-second following distance, a single yellow indicator will illuminate and the DIU will display **3 seconds**. See Fig.121, [3-Second Alert](#).

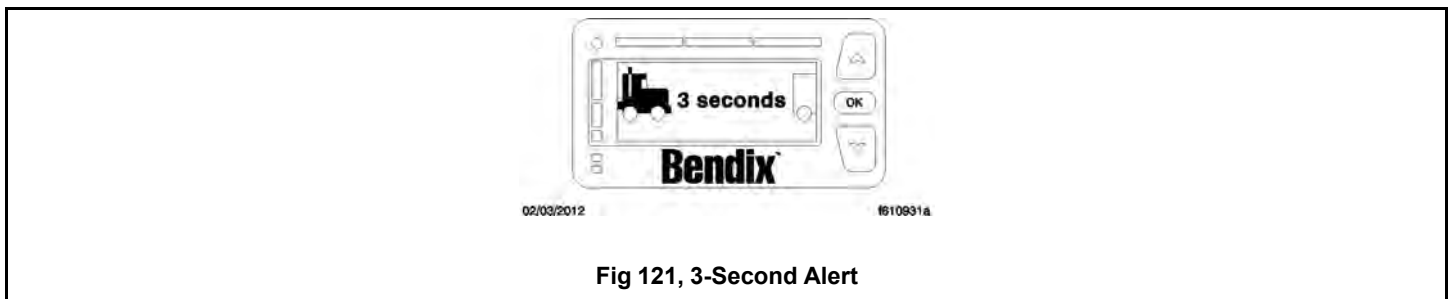

2-Second Headway Alert

When the following distance to the object ahead in the same lane of travel decreases to within two seconds, a second yellow indicator will illuminate, the DIU will display **2 seconds**, and a single tone will sound. See Fig.122, [2-Second Alert](#).

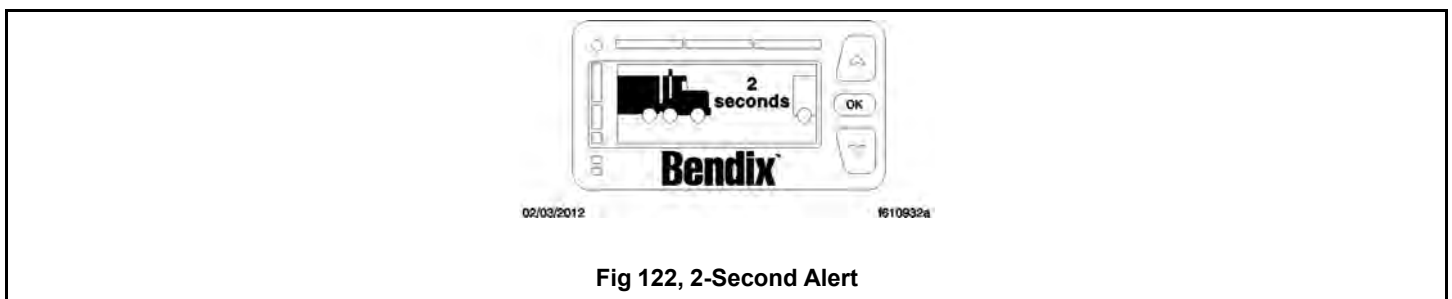

1-Second Headway Alert

When the following distance to the object ahead in the same lane of travel decreases to within one second, a third yellow indicator will illuminate, the DIU will display **1 sec**, and two tones will sound. See Fig.123, [1-Second Alert](#).

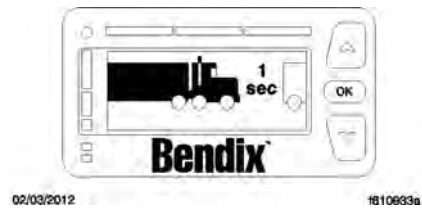


Fig 123, 1-Second Alert

Collision Alert: ½-Second Headway

When the following distance to the object ahead in the same lane of travel decreases to 0.5 second, the red indicators all illuminate across of the DIU, the DIU will display **COLLISION ALERT**, and a tone will sound repeatedly. See Fig. 124, [Collision Alert](#).



Fig 124, Collision Alert

7.01.03 SmartCruise

When approaching slower moving traffic with the vehicle's cruise control engaged, SmartCruise adapts the engine cruise speed to that of the closest vehicle ahead, allowing the vehicle to maintain a safe following distance without disengaging the cruise control. The DIU will display the SmartCruise status screen indicating the vehicle's current set cruise speed.

Once the speed of traffic ahead increases beyond the adapted engine cruise speed, the original cruise control set speed re-engages.


When SmartCruise is engaged, depressing the accelerator pedal will override the SmartCruise and will cause the vehicle to accelerate. Depressing the brake or clutch pedals will deactivate SmartCruise.

When approaching a slow moving or stopped vehicle ahead, SmartCruise will attempt to maintain the minimum following distance by reducing the engine cruise speed and engaging the engine brake, if necessary. If SmartCruise is unable to maintain the minimum following distance, the driver will be alerted by the CWS headway alerts until the driver takes control or conditions clear.

7.01.04 Side Object Detection

The optional side object detection system may be installed on one or both sides of the vehicle. The radar sensor(s) are located on the side of the vehicle, while the sensor display unit is mounted on the A-pillar. See Fig.

125, [Side Sensor Display Unit](#).

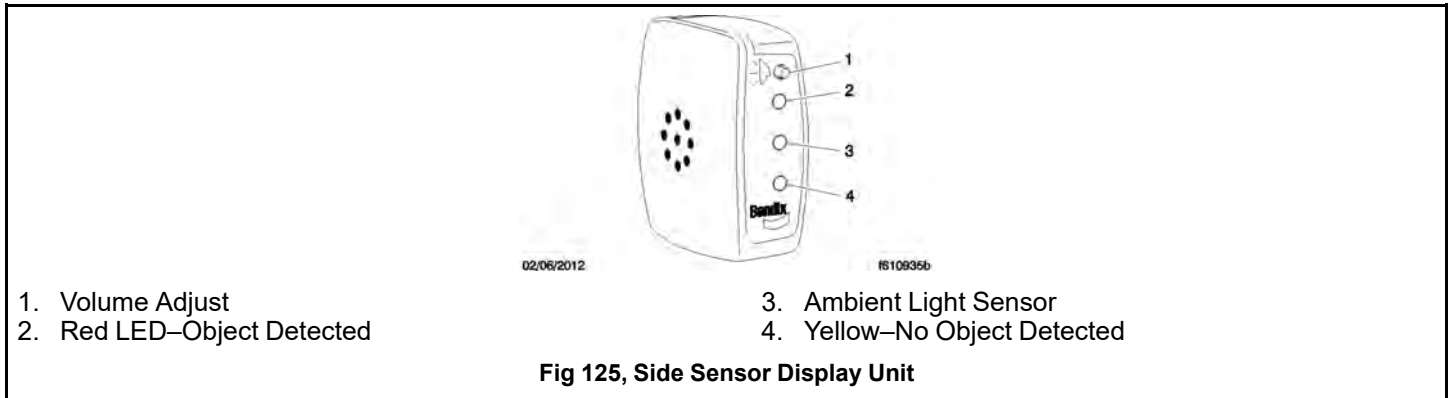

The side sensor display unit uses two lights to display the status of the side sensor(s). The yellow light indicates the system is active, but no objects are detected. The red light indicates that the side sensor detects an object. If the vehicle's turn signal is active and the sensor detects an object alongside the vehicle, an audible warning tone will sound.

7.01.05 Special Road Situations

Certain road situations may affect the system's ability to detect objects. These situations include the effects of curves, dips, and hills which can provide an unexpected result.

NOTE: A warning may sound when an object is detected in front of the vehicle even though the driver intends to turn away or stop before reaching the object.

When an object is detected in a very sharp right- or left-hand turn, the audible alarm will not sound.

When approaching a curve, alarms may sound and lights illuminate, because of an object off the road directly in line with your vehicle. This will not occur when the brakes are applied.

When approaching a roadway descending to a lower elevation, elevated obstacles such as overpasses and overhead signs may be detected.

Vehicles cannot be detected on the other side of a hill. An alarm will not sound until the object is within the antenna assembly's field of view.

On approaching a steep hill, objects above the beam cannot be detected. Generally, the beam hitting the road surface does not cause an alarm.

The side sensor only detects objects within its field of view, next to the tractor. A vehicle behind the field of view will not be detected.

The side sensor range is set to detect average-sized vehicles 2 to 10 feet (0.5 to 3 meters) away in the adjacent lane.

The radar beam will detect near range cut-ins of approximately 30 feet (9 meters) or less, depending on the angle of entrance into the lane in front of your vehicle.

A continuous fixed object on the right side of the vehicle such as a guard rail, wall, tunnel, or bridge may cause the side sensor alert light to stay on.

WARNING

Heavy rain or water spray at the side sensor may cause both the yellow and red lights on the side sensor display to illuminate at the same time. Under these conditions the system is temporarily unable to provide adequate warnings.

Failure to drive safely and use the system properly could result in personal injury and/or death and severe property damage.

7.01.06 Maintenance

Keep the antenna and side sensor free of buildup of mud, dirt, ice, or other debris that might reduce the system's range.

7.01.07 Failure Display Mode/Fault Codes

The VS-400 performs internal diagnostics at power-up, then continuously monitors system components thereafter.

If a failure is detected, depending on what features are affected, the DIU displays a screen similar to See Fig.

126, [VORAD Fault Display](#), blinks the orange fault light, and sounds a tone. Press the OK button to acknowledge the fault.

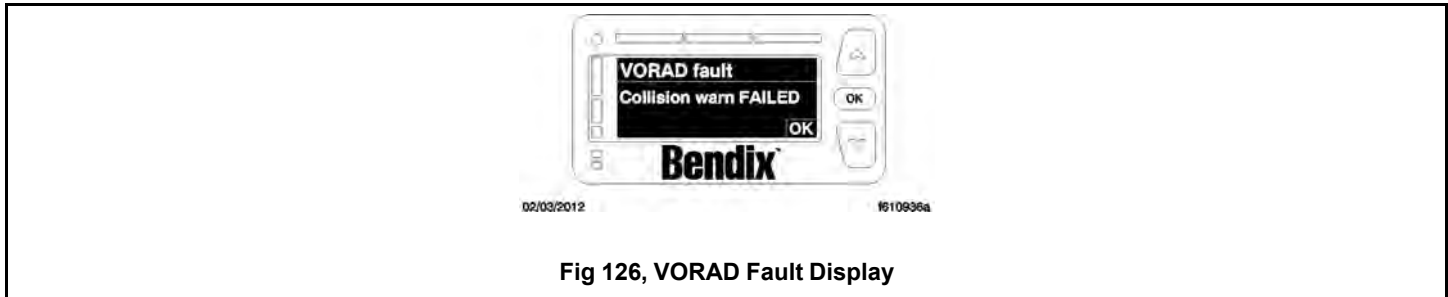


Fig 126, VORAD Fault Display

After the fault has been acknowledged, the DIU will attempt to return to normal operations. The orange LED is continuously illuminated while the fault persists. If the fault disappears, the VS-400 transmits a message to indicate that the fault status has changed to a previously active fault.

In the event the CWS antenna becomes blocked while the vehicle is moving (e.g., snow, mud, ice, tampering, etc.), the system sounds a tone and displays the fault screen shown in Fig. 127, [Antenna Blocked Display](#).

Contact an authorized Freightliner dealer to review and clear previously active fault codes.

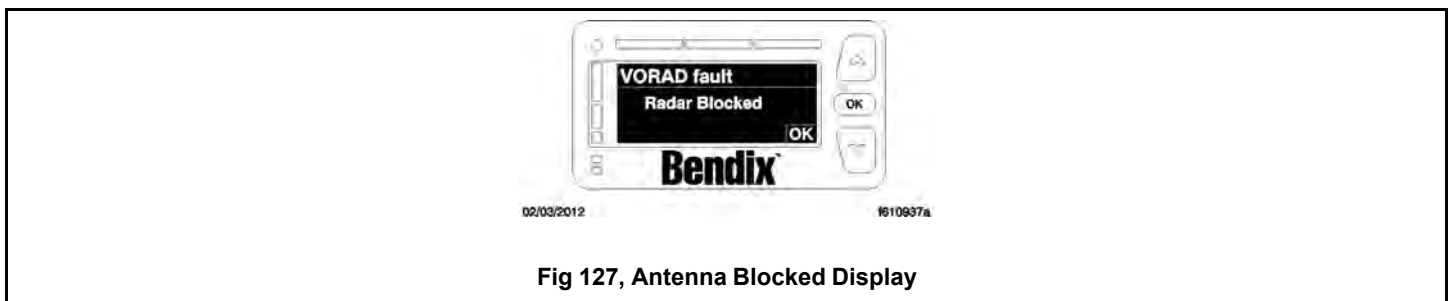


Fig 127, Antenna Blocked Display

7.02 OnGuard™ Collision Safety System

7.02.01 General Information

Meritor WABCO OnGuard is a forward-looking radar-based safety system. The system includes forward collision warning, adaptive cruise control (ACC), and collision mitigation.

OnGuard equipped vehicles have antilock brakes (ABS) and automatic traction control (ATC), and either roll stability control (RSC) or electronic stability control (ESC). These systems work together to enhance control of the vehicle. Depending on the situation, any of these features may apply throttle control, engine brakes, and/or service brakes, as needed.

The front-looking antenna assembly transmits radar signals to, and receives them back from, objects ahead of the vehicle. To be detected, vehicles must be within the radar field of view and provide a surface area that can reflect the radar. The distance, speed, and angle of the vehicle ahead is calculated, and the driver is warned of potentially dangerous situations. The system also warns of stationary objects to alert the driver of potential obstructions ahead in their lane.

WARNING

The Meritor WABCO OnGuard™ Collision Safety System is intended solely as an aid for an alert and conscientious professional driver. It is not intended to be relied upon to operate a vehicle. Use the system in conjunction with rearview mirrors and other instruments to safely operate the vehicle. Operate a vehicle equipped with the OnGuard in the same safe manner as if the CWS were not present.

The OnGuard Collision Safety System is not a substitute for safe, normal driving procedures, nor will it compensate for any driver impairment such as drugs, alcohol, or fatigue.

Failure to drive safely and use the system properly could result in personal injury and/or death and severe property damage.

7.02.02 System Limitations

The OnGuard Collision Safety System may provide little or no warning of hazards such as pedestrians, animals, oncoming vehicles, or cross traffic.

OnGuard CMS only brakes for lead vehicles located directly in front of your vehicle, and does not operate when vehicle speed is less than 15 mph (25 km/h).

Due to these limitations, the system:

- will not react and alert the operator to objects crossing in front of the vehicle or oncoming traffic;

- should not be relied on to track lead vehicles when traveling through a severe curve in the road. Because of this, ACC is not recommended for use on winding roads;


- will alert, but not actively brake, on stationary objects;

- should not be relied upon to track smaller objects like motorcycles, mopeds, bicycles, or pedestrians;

- should not be relied on to alert drivers to vehicles in an adjacent lane.

7.02.03 OnGuard Display Unit


The OnGuard system controls are located in the display unit. The display provides visual and audible warnings and messages, as well as verification of correct system operation and faults. Menu selections are made by pressing the up and down arrows, and the MODE button. See Fig. 128, [OnGuard Display Unit, First Generation](#). and See Fig. 129, [OnGuard Display Unit, Second Generation](#).

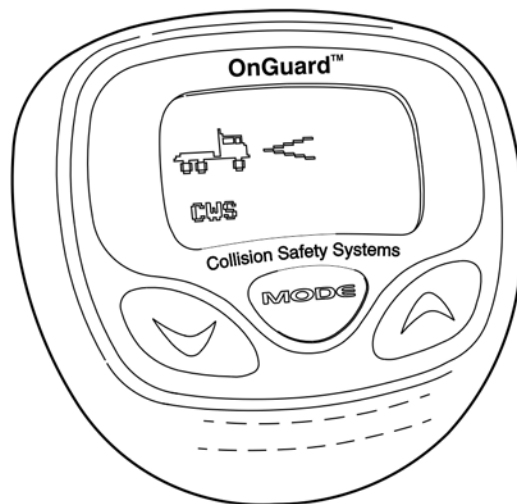

02/03/2017

f545826

Fig 128, OnGuard Display Unit, First Generation

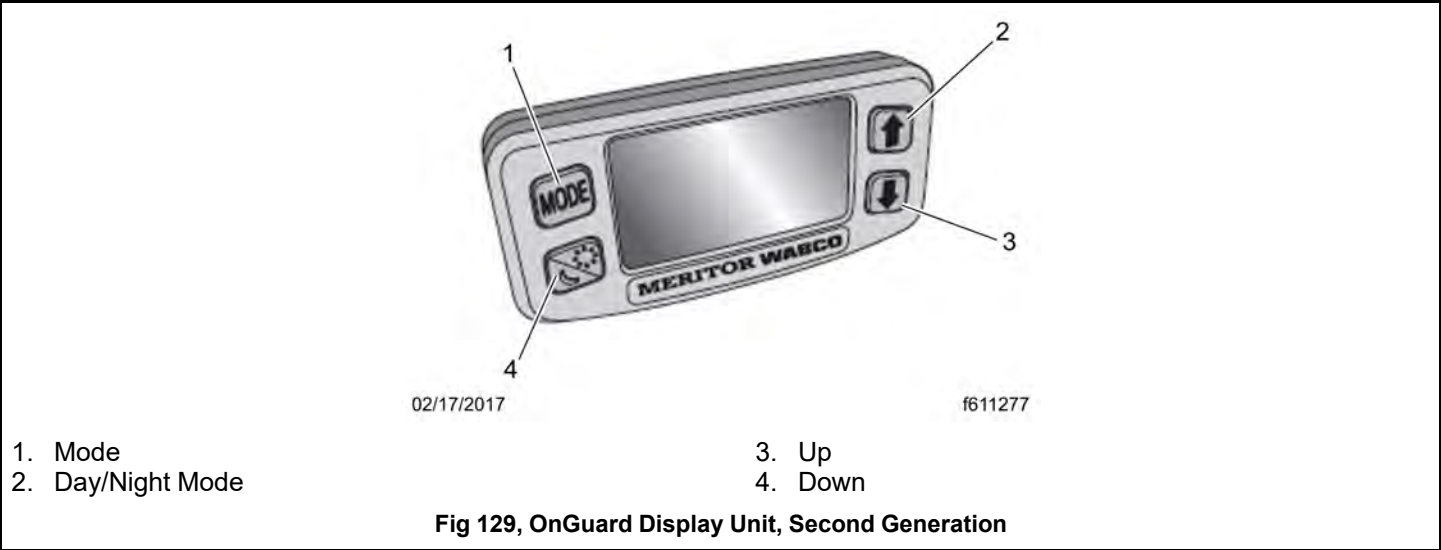

The display unit includes:

- an internal speaker
- a graphic display
- buttons to scroll and select options
- day/night display mode (second-generation only)

7.02.04 Collision Warning System (CWS)

The CWS generates audible and visual alerts when the following distance may result in a collision. The OnGuard display unit shows a graphic of the condition, enhanced by a screen color relevant to the intensity of the situation. See Table.13, [OnGuard Display Screen Background Colors](#). If a potential rear-end collision is imminent, OnGuard's active braking automatically applies the engine and service brakes to slow the vehicle. The active braking application is intended only to provide early braking; the driver is still required to recognize and react to all driving situations.

OnGuard Display Screen Background Colors	
Screen Color	Description
Blue	General operation; no lead vehicles detected.
Green	Lead vehicle detected.
Yellow	Following distance alert, accompanied by an audible alert.
Red	Collision warning, stationary object warning. Accompanied with audible alert.
Amber	Data Error


Table 9, OnGuard Display Screen Background Colors

IMPORTANT: CMS and active braking are not operational at vehicle speeds below 15 mph (25 km/h).

The CWS cannot be disengaged or turned off, and is always active at vehicle speeds above 15 mph (25 km/h).

Standby


When no lead vehicle is detected, the display shows that the CMS is on and the radar is searching. See Fig. 130, [CMS Standby \(blue\)](#).

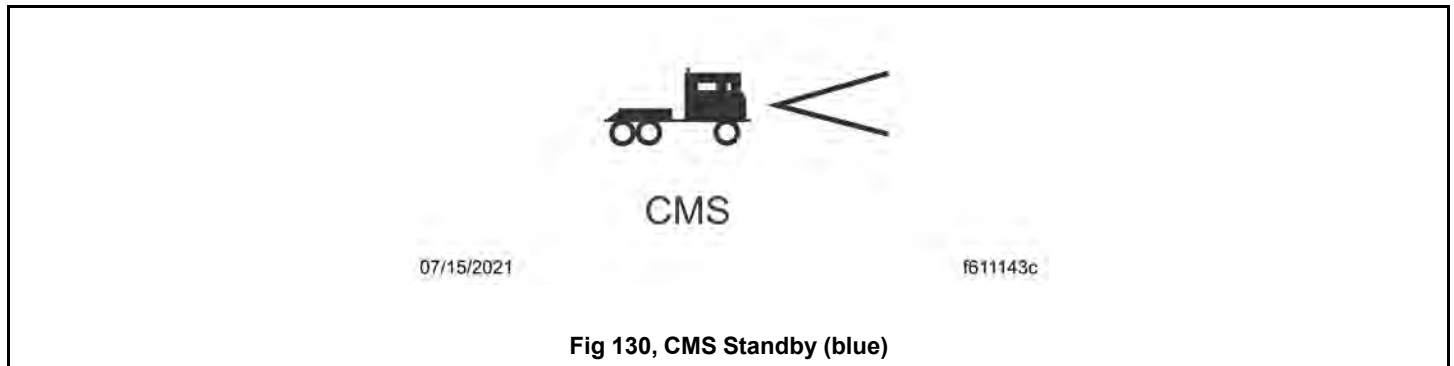

A Vehicle is Detected

When a lead vehicle is detected in the lane ahead, the display shows that the CMS is on and the radar is tracking a lead vehicle at the speed shown. See Fig. 131, [CMS Lead Vehicle Detected \(green\)](#).

If the following distance between the vehicle and the lead vehicle is too close, the CMS will emit an audible alert and the display background will turn yellow. The alert will end when the vehicle speed drops below the lead vehicle speed and the following distance is increased.

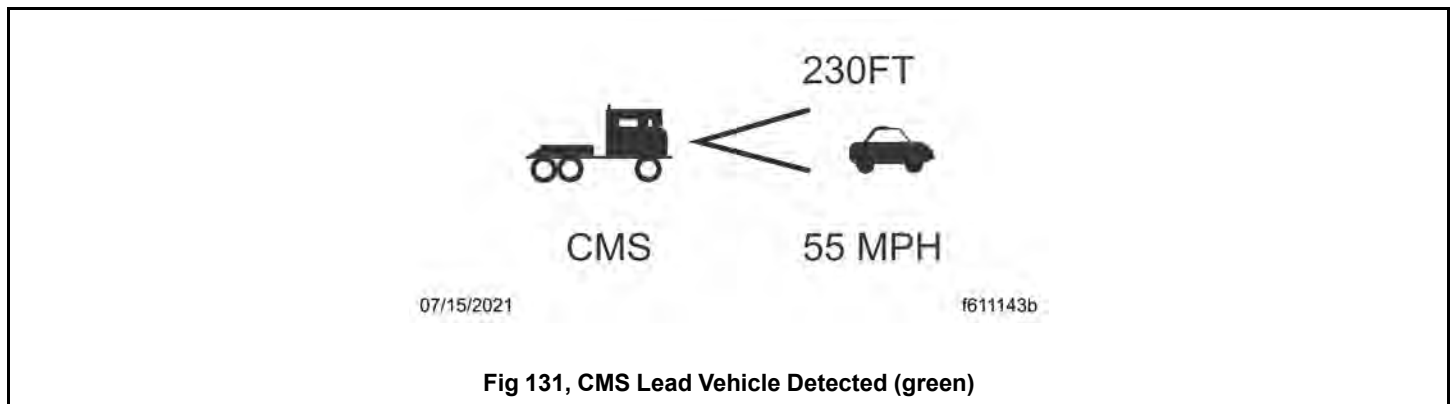

Collision Warning

When a lead vehicle is detected traveling slower than your vehicle, or the gap between them becomes too close, the CMS warns of an impending collision by emitting an urgent audible alert and displaying the collision warning symbol with a red background. See Fig. 132, [CMS Collision Warning \(red\)](#).

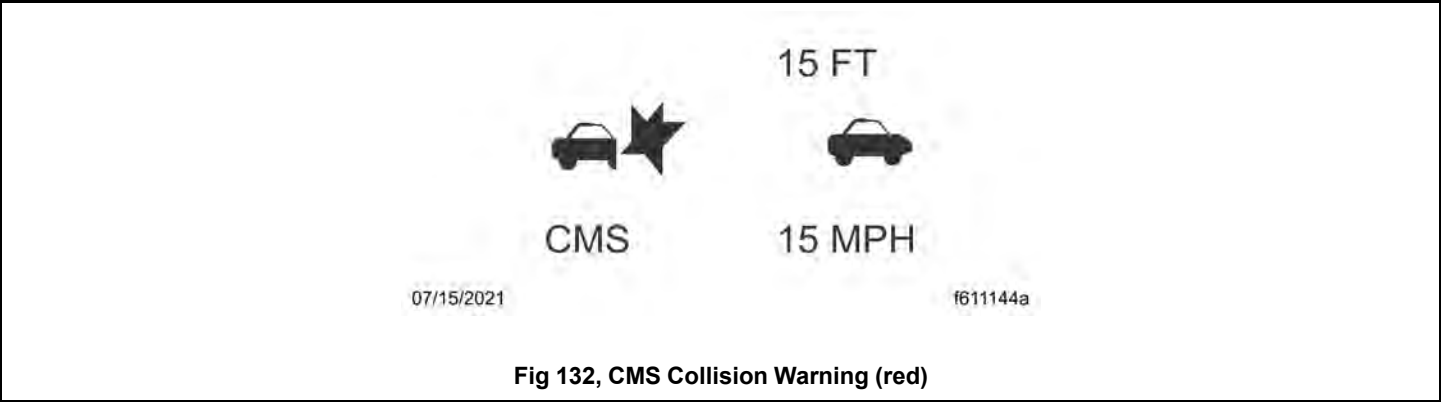


Fig 132, CMS Collision Warning (red)

7.02.05 Adaptive Cruise Control (ACC)

ACC works in conjunction with conventional cruise control to maintain a minimum following distance when a lead vehicle is being tracked. The minimum following distance is maintained by automatically decelerating the vehicle using throttle, engine, and service brakes without driver intervention. When the lead vehicle is no longer being tracked, the set cruise control speed resumes automatically.

Standby

When no lead vehicle is detected, OnGuard ACC operates similarly to conventional cruise control. The cruise control set speed is shown on the OnGuard display unit. See Fig.133,ACC Standby (blue).

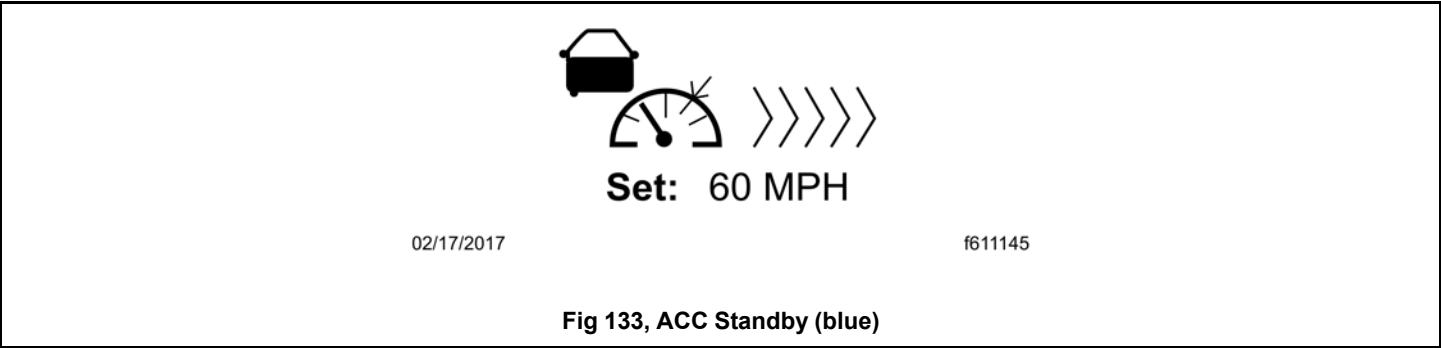


Fig 133, ACC Standby (blue)

Lead Vehicle Detected

When a lead vehicle is detected in the lane ahead, the display shows that ACC is on and the radar is tracking it. See Fig. 134,ACC Lead Vehicle Detected (green).

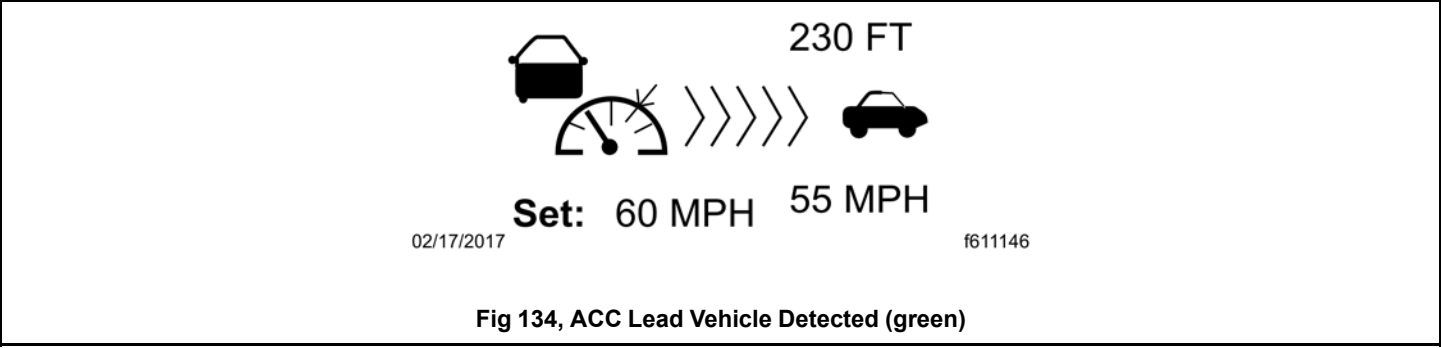


Fig 134, ACC Lead Vehicle Detected (green)

If the driver uses the accelerator pedal to override the cruise control and approach a vehicle too closely, the ACC will emit an audible alert and the display background will turn yellow. The alert will end when vehicle speed drops below the lead vehicle's speed and the following distance is increased.

NOTE: The following distance alert does not operate at speeds below 15 mph (25 km/h).

Collision Warning

If the lead vehicle is traveling slower than the driver's vehicle, the CMS warns of an impending collision by emitting an urgent audible alert and displaying the collision warning symbol with a red background. See Fig.135, [ACC Collision Warning \(red\)](#).

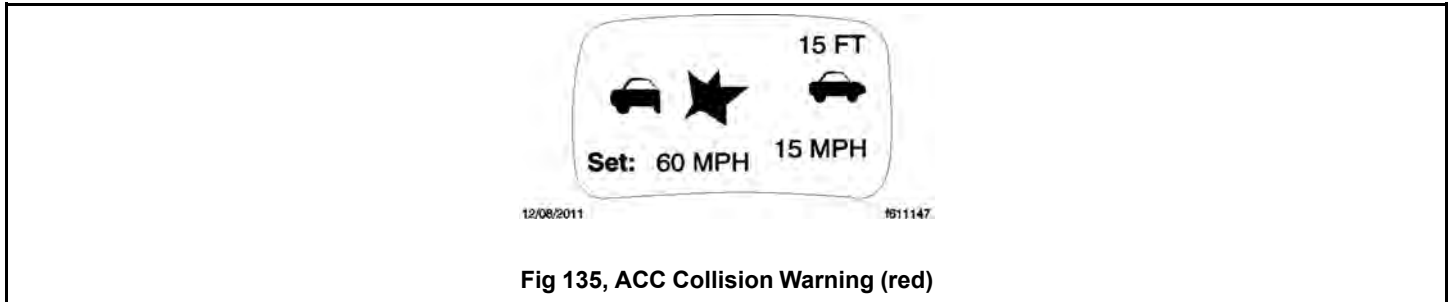


Fig 135, ACC Collision Warning (red)

The braking control will activate and slow the vehicle. The driver must also initiate braking.

7.02.06 Error Screens

IMPORTANT: The OnGuard collision safety system is not operational when an error screen is displayed. If a fault occurs or OnGuard fails to properly track a vehicle, take the vehicle in for service as soon as possible. Standard cruise control will not function with an active OnGuard system fault.

If a system fault is detected, the OnGuard display unit will immediately display an error screen as shown in Fig.

136, [OnGuard Error Screen \(amber\)](#). The first error code transmitted will be displayed first; additional faults (if any) can be viewed using the up or down buttons. The display does not show stored fault codes.



Fig 136, OnGuard Error Screen (amber)

Refer to the OnGuard Collision Safety System Maintenance Manual MM-0951 for a full list of faults (www.meritorwabco.com).

7.02.07 Additional Features

Press the MODE button to access the OnGuard display unit additional features from the CMS or ACC main operating screen. Press the up and down arrows to scroll through each menu, then press the MODE button to select the value to be changed. In edit mode, press the up or down arrows to change a value setting, then press the MODE button to save the setting. Pressing MODE in each feature screen advances the display to the next feature.

The Display Control menu allows adjustment of the alarm volume, LCD brightness, LCD contrast, and U.S./metric unit conversion. See Fig.137, [Display Control Menu](#).

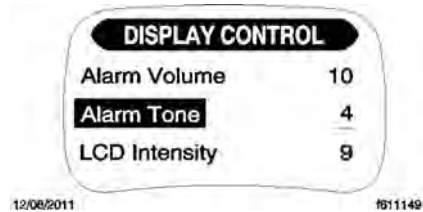


Fig 137, Display Control Menu

The component test menu provides verification of system component operation and acts as a valuable OnGuard system diagnostic tool. The header will display either COMPONENT TEST or ACC FUNCTION, depending on the software release version of the OnGuard system. The component test screen shown in Fig.138, [Component Test Menu](#), provides access to the following components (press the up or down arrows to scroll through the menu):

- brake pedal position

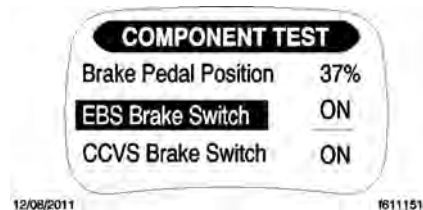


Fig 138, Component Test Menu

- EBS brake switch
- CCVS brake switch
- clutch switch
- park brake switch
- accelerator pedal position
- driveline engaged
- cruise control enable
- cruise control set speed switch
- cruise control coast switch
- cruise control resume switch
- cruise control accelerate switch
- cruise control pause switch

7.03 Detroit Assurance Radar

7.03.01 Driver Message Center

Detroit Assurance is a driver safety system on vehicles equipped with a Detroit engine and DT12 or a manual transmission. The system uses a bumper-mounted radar and an optional windshield-mounted camera to communicate information to the vehicles's brakes, engine, and transmission. The system can track forward-facing vehicles and objects up to 600 feet (200 meters), and will sound a warning and apply the brakes, if necessary.

The driver message center displays warnings and the status of Adaptive Cruise Control (ACC) and/or Lane Departure Warning. Refer to "Adaptive Cruise Control" and "Lane Departure Warning" for more information.

To show distance, speed, and lane markings, scroll to the ACC menu using the + and – switches mounted in the right-hand pod of the steering wheel. Refer to **Chapter 4** for more information on driver message center controls.

7.03.02 Adaptive Cruise Control (ACC)

**WARNING:**

The Detroit Assurance system is intended solely as an aid for an alert and conscientious professional driver. It is not intended to be relied upon to operate a vehicle. Use the system in conjunction with rearview mirrors and other instruments to safely operate the vehicle. Operate a vehicle equipped with the Detroit Assurance system as if the vehicle were not equipped with a collision warning system.

The Detroit Assurance system is not a substitute for safe, normal driving procedures, nor will it compensate for any driver impairment such as drugs, alcohol, or fatigue.

The Detroit Assurance system will not warn of hazards such as pedestrians, animals, oncoming vehicles, or cross traffic.

Failure to drive safely and use the system properly could result in personal injury and/or death and severe property damage.

Safety Information

Adaptive cruise control (ACC) may not detect narrow vehicles driving in front like motorcycles, or vehicles driving in a different lane.

In particular, be aware of the following situations:


- cornering, entering, and exiting bends;
- vehicles driving in a different lane;
- vehicles changing lanes;
- vehicles exiting the road;
- overtaking;
- winding stretches of road; and
- obstacles and stationary vehicles.

Adaptive cruise control does not compensate for inattentive driving, weather, or traffic conditions. The adaptive cruise control is only an aid. The driver is responsible for maintaining a safe distance from the vehicle in front, maintaining a safe vehicle speed, and braking, and remaining in a lane.

If adaptive cruise control does not detect a vehicle driving in front, the system will accelerate to the set speed.

Overview

See Fig.139, [Steering Wheel Cruise Control Switches](#), and See Table.14, [Steering Wheel Controls](#), for a description of cruise control steering wheel switches.

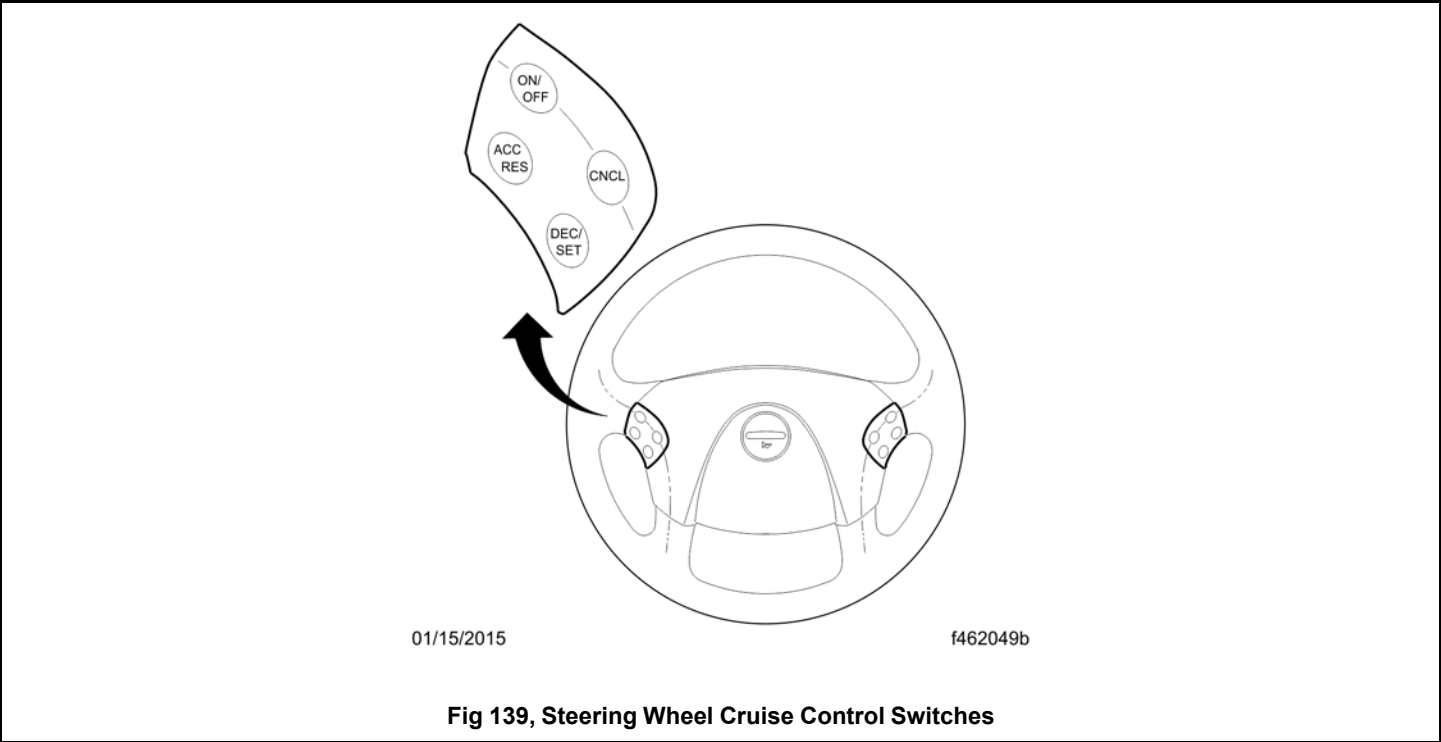

Steering Wheel Controls	
Description	Function
ON/OFF	Turns adaptive cruise control on or off.
DEC/SET	Sets the cruise speed while the vehicle is traveling at the desired speed. Pressing and and holding decreases the set cruise speed.
ACC/RES	Resumes the set speed. Pressing and holding accelerates the set cruise speed.
CNCL	Cancels the set speed.

Table 10, Steering Wheel Controls

When a vehicle in front is detected, the driver message center displays the speed of the detected vehicle and the distance to the detected vehicle. See Fig.140,Adaptive Cruise Control Screen.

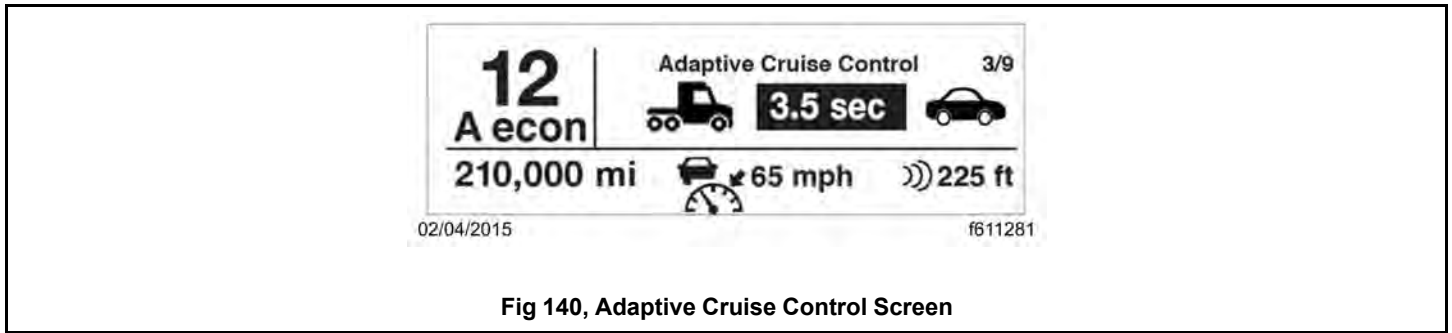


Fig 140, Adaptive Cruise Control Screen

Functions and Activation Conditions

ACC controls speed, and the distance from a vehicle detected in front.

If there is no vehicle in front, ACC operates in the same way as cruise control when the vehicle is traveling above 10 mph (15 km/h).

If ACC detects a vehicle in front driving at a slower speed, the brakes are applied, the engine is derrated, the engine brakes are used, and the vehicle is slowed to maintain the minimum following distance. If the vehicle in front is no longer detected, the vehicle will accelerate to the set speed. The ACC will also slow the vehicle if it exceeds the set speed (on a downhill grade, for example).

ACC cannot be activated, or is automatically deactivated, if:

- the vehicle is traveling slower than 10 mph (15 km/h);
- the transmission is in neutral for more than 5 seconds;
- reverse gear is selected;
- ABS is deactivated;
- there is a malfunction in the brake system or the electronic management system; or
- the distance sensor initialization is not yet complete.

Activating Adaptive Cruise Control

Press the ON/OFF switch on the steering wheel to activate cruise control.

If the brake pedal is pressed, ACC is deactivated automatically.

Setting the Speed

Drive at the desired speed, then press the DEC/SET switch. Cruise control will be activated and the set speed stored.

If cruise control is deactivated, the stored speed can be activated again by pressing the ACC/RES switch. The driver message center will show the cruise control symbol and display the set speed. Cruise control will automatically brake or accelerate the vehicle to maintain the set speed.


Increasing or Reducing Speed

The speed setting can only be set by when driving.

Press DEC/SET to set the cruise speed while the vehicle is traveling at the desired speed. Press and hold to decrease the set cruise speed.

Setting the Distance to the Vehicle in Front

The optional headway switch can be used to set the distance to the vehicle in front. See Fig.141, [Headway Switch](#). The minimum distance for ACC can be set to 5 levels.

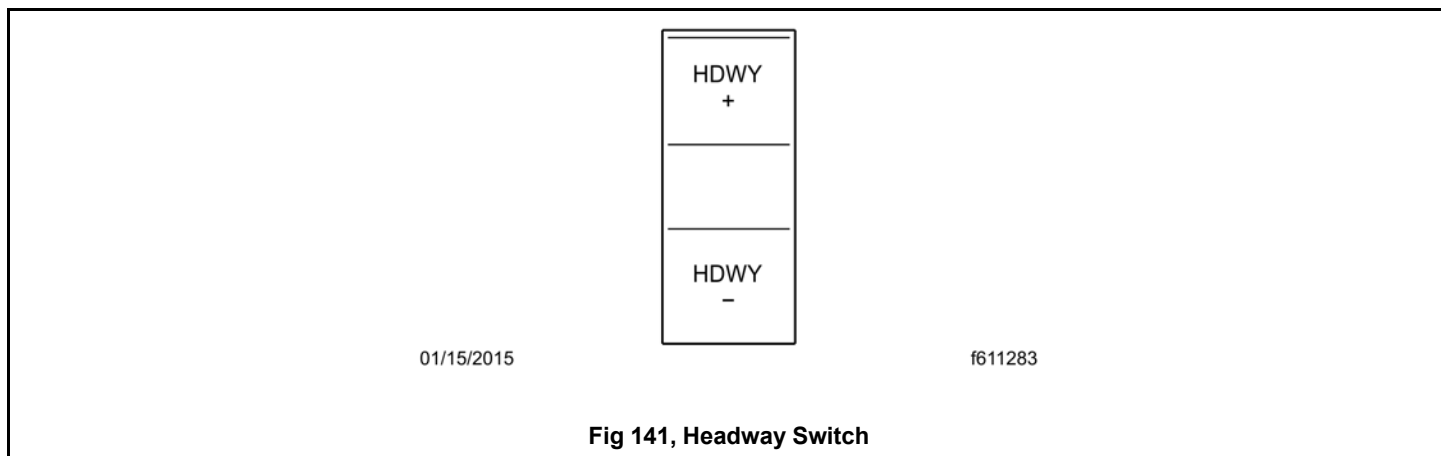


IMPORTANT: Make sure that the minimum distance is maintained to the vehicle in front required by law. Adjust the specified minimum distance to the vehicle in front if necessary.

Press + or – on the headway switch to increase or decrease the specified minimum distance. The driver message center will show the selected minimum distance. The setting will be stored automatically.

Collision Warnings

A warning appears in the driver message center and a double warning tone sounds in the event of a potential collision. See Fig. 142, [Collision Warning Event Screen](#). The event screen is displayed for as long as the hazardous situation persists.

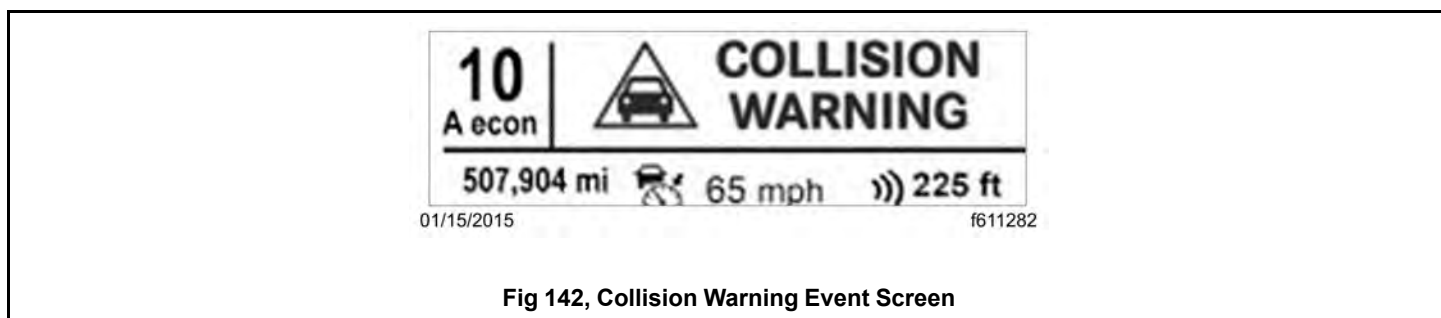

If a collision warning appears in the driver message center when the vehicle is in motion, pay attention to the traffic situation and reduce vehicle speed using the service brake. If the accelerator pedal is pressed, or a turn is indicated, the collision avoidance system is suppressed.

Overtaking

NOTE: It is possible to exceed the set speed when overtaking.

The set speed can be exceeded using the accelerator pedal. When the accelerator pedal is released, the set speed will be resumed.

Deactivating the System

Press the ON/OFF switch, or, press the brake pedal to deactivate cruise control.

NOTE: The speed remains stored when ACC is deactivated.

7.03.03 Active Brake Assist (ABA)

Safety Information

**WARNING:**

Active brake assist is intended only as an aid for a conscientious and alert driver. ABA does not take road and weather conditions into account, nor the prevailing traffic situation. The driver is responsible for keeping a safe distance to the vehicle in front, for the vehicle speed, braking in good time, and remaining in lane. The driver should always adapt driving style to suit prevailing road and weather conditions.

ABA is not a substitute for safe driving procedures.

Failure to drive safely and use the system properly could result in personal injury and/or death and severe property damage.

IMPORTANT: Do not mount any attachments in front of the distance sensor. Do not paint or affix items over the distance sensor cover. If attachments are mounted in front of the distance sensor, such as a crash guard, they can impair the operation of the distance sensor.

ABA can minimize the risk of a front-end collision with a moving vehicle, a stationary vehicle, or a stationary object. If ABA detects the risk of a front-end collision, it issues an audible and visual warning. If the risk persists, ABA automatically initiates partial braking of the vehicle. If the driver does not react to the warnings and partial brake application, ABA automatically initiates a full brake application.

ABA may not detect narrow vehicles driving in front like motorcycles, or vehicles driving on a different line.

ABA does not automatically adapt to road and traffic conditions. Brake the vehicle using the service brake if:

- an event window with the Warning symbol appears in the driver message center;
- an intermittent warning tone sounds; or
- an intermittent warning tone sounds and automatic partial braking was initiated.

If no visual and/or acoustic warning is issued in a critical situation:

- ABA has not recognized the danger of the situation;
- ABA is suppressed; or
- ABA has failed.

ABA-triggered emergency braking can be deactivated if the driver presses the accelerator pedal beyond the pressure point (kickdown).


IMPORTANT: Adaptive cruise control may warn the driver before active brake assist if there is a risk of collision.

Activating/Deactivating Active Brake Assist

The ABA system cannot be turned off. However, ABA is suppressed when the driver:

- uses the turn signal during an audible warning;
- presses the brake pedal; or
- rapidly depresses the accelerator.

If there is a system error, the indicator lamp will illuminate. See Fig.143, [ABA Indicator Lamp](#).

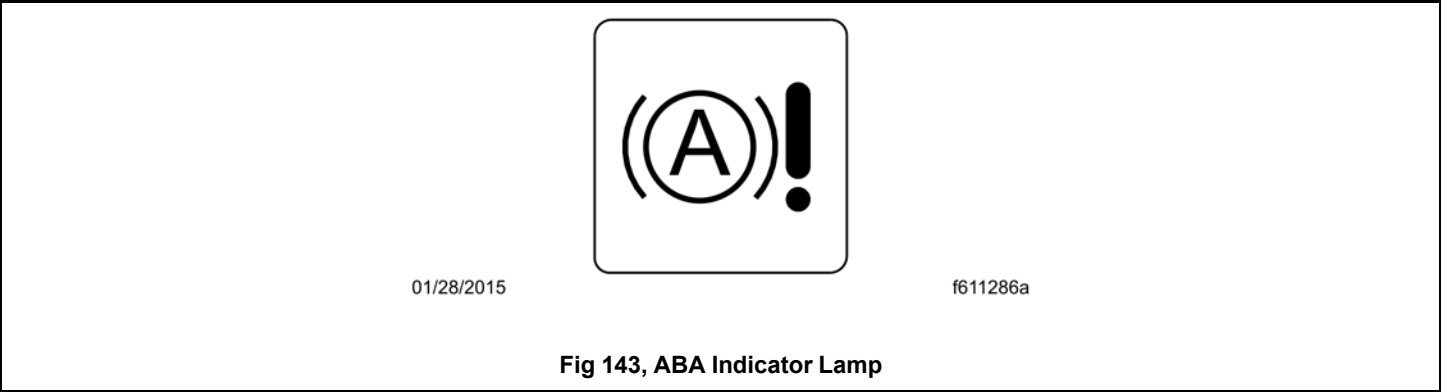

Collision Warning and Emergency Braking

If there is a risk of collision and ABA issues a warning, the radio and/or hands-free systems like Detroit Connect are automatically muted.

- **Preliminary (visual only) Warning** : An alert appears in the driver message center. This phase may be skipped, depending on the criticality of the situation.
- **Visual/Audio Warning (ABA)** : An alert appears in the driver message center, and an intermittent warning tone sounds from the ICU.
- **Partial Braking (ABA)** : An alert appears in the driver message center, and an intermittent warning tone sounds from the ICU. In addition, ABA slows the vehicle with automatic partial braking. ABA brakes the vehicle with around 50% of the vehicle's maximum braking power.
- **Emergency Braking (ABA)** : If the driver does not react to the collision warnings or partial brake application, ABA automatically initiates emergency braking (full brake application). The warning message appears in the driver message center, and a continuous warning tone sounds from the ICU. The Emergency braking phase will not occur if the object being tracked is stationary.



CAUTION:





After emergency braking, the "Emergency Braking Finished" message appears in the event window in the driver message center. The vehicle is held by the service brake for another 5 seconds to prevent it from rolling away. If an emergency braking maneuver has been performed, remove the vehicle from the area of danger as soon as possible while paying attention to the traffic situation. Stop the engine and apply the parking brake to prevent the vehicle from rolling away. Make sure that the vehicle is in proper operating order and that the load is secured properly.

The driver can interrupt emergency braking by pressing the accelerator pedal beyond the point of resistance (kickdown).

Driving Situations

See **Table 6.3** for a description of adaptive cruise control and active brake assist limitations in specific driving conditions.

Active Brake Assist Limitations		
Condition	Visual	Description
Cornering, entering and exiting bends	 12/18/2014 f040840a	The ability of ABA and ACC to detect vehicles on bends is limited. ABA and ACC may unexpectedly issue warnings or brake the vehicle. ACC may also accelerate the vehicle unexpectedly.

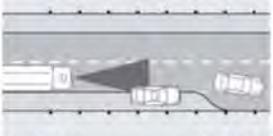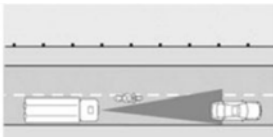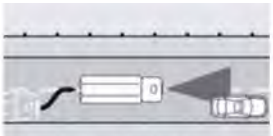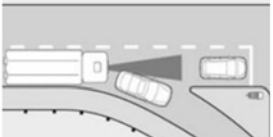Driving in a different lane, and stationary vehicles	 12/18/2014 f040835a	The ability of ABA and ACC to detect vehicles driving in a different lane, or stationary vehicles is limited. ABA and ACC may unexpectedly issue warnings or brake the vehicle. ACC may accelerate unexpectedly.
Other vehicles changing lane	 12/18/2014 f040836a	The ability of ABA and ACC to detect vehicles pulling into your lane is limited. The distance to the vehicle in front entering your lane may then be too short. ABA and ACC may unexpectedly issue warnings or brake the vehicle. ACC may also accelerate the vehicle unexpectedly.
	 12/18/2014 f040841a	The ability of ABA and ACC to detect vehicles pulling into your lane without maintaining a safe distance is limited. They do not detect vehicles until they are within the system's detection range. ACC may accelerate unexpectedly. Brake the vehicle. This will increase the distance to the vehicle in front.
Vehicles turning off	 12/18/2014 f040843a	The ability of ABA and ACC to detect vehicles turning off is limited. ABA and ACC may unexpectedly issue warnings or brake your vehicle.
Overtaking	 12/18/2014 f040838a	When passing, ABA and ACC may unexpectedly issue warnings or brake your vehicle if the vehicle is too close to the vehicle in front, and is in the same lane.
Winding stretches of road	 12/18/2014 f040844a	On winding stretches of road, ABA and ACC cannot detect which lane the vehicle in front is driving in. ABA and ACC may unexpectedly issue warnings or brake your vehicle. ACC may also accelerate the vehicle unexpectedly.
Obstacles and stationary vehicles	 12/18/2014 f040837a	ABA and ACC cannot detect obstacles or stationary vehicles in front of the detected vehicle. ABA and ACC may unexpectedly issue warnings or brake your vehicle. ACC may also accelerate the vehicle unexpectedly.
Stationary objects	 12/18/2014 f040842a	ABA can also unexpectedly issue warnings and brake the vehicle if it detects stationary objects like: vehicles which have broken down signs bridges

7.03.04 Overriding ABA Events

If ABA sets off an audio and/or haptic warning where the driver determines that no risk exists or the critical situation has resolved, an alert and conscientious driver may override the ABA braking event.

To override the ABA alert, fully depress the throttle to the floor. If you are already at full throttle, release the throttle and fully depress again to cancel the warning cascade.

7.04 Lane Departure Warning (LDW)

7.04.01 Safety Notes

The system may be impaired or may not operate in the following situations:

- when there is low visibility due to insufficient road illumination, or due to snow, rain, fog or heavy spray
- when there is glare due to oncoming traffic, direct sunlight, or reflections from wet road surfaces
- when the windshield in the area of the camera is dirty, misted up, damaged or covered by a sticker
- when no lane markings or several varied lane markings are present, such as in a construction zone
- when the lane markings are worn, dark or covered, for example by dirt or snow
- when the distance from the vehicle in front is too small and this prevents the lane markings from being detected
- when the lane markings change rapidly, when lanes branch off, or when they cross or merge
- when lanes are very narrow or winding
- when shade conditions on the road surface change greatly

The driver must adapt their driving style to current conditions. Lane departure warning cannot take the road and weather conditions into account, nor the prevailing traffic situation. The driver is responsible for the distance to the vehicle in front, for vehicle speed, braking in good time and remaining in lane.

7.04.02 Functions and Activation Conditions

Lane departure warning monitors the area in front of the vehicle with a camera that is on the top of the windshield. When lane departure warning is activated and it detects lane markings on the road surface, it warns the driver that they may be leaving the lane unintentionally.

Lane departure warning issues warnings if the speed is above approximately 37 mph (60 km/h).

When driving over lane markings unintentionally, the volume of audio equipment like the radio and/or hands-free systems is reduced, and a direction-related "rumble-strip noise" sounds from the left or right overhead speaker.

NOTE: The Detroit Assurance LDW system is designed to warn the driver as the vehicle crosses the outer boundary of the lane marking. This may differ from other LDW systems which issue a warning as the driver approaches the inside of the lane marking. If the system warns at, or just beyond the outer edge of the lane marking, the system is performing as designed. If the warning does not occur, or occurs after an excessive lane departure, the system may not be operating properly.


Lane departure warning does not issue a warning if:

- the turn signals are switched on;
- there is braking or acceleration; or
- a driving safety system such as ABA, Stability Control, or ACC intervenes.

Lane departure warning will issue a warning if a turn signal has been switched on for more than 1 minute.

7.04.03 Activating or Deactivating


When the engine is turned on, LDW is automatically activated. Pressing the lane alert switch will deactivate LDW for a minimum of 15 minutes. See Fig.144, [Lane Alert Switch](#).

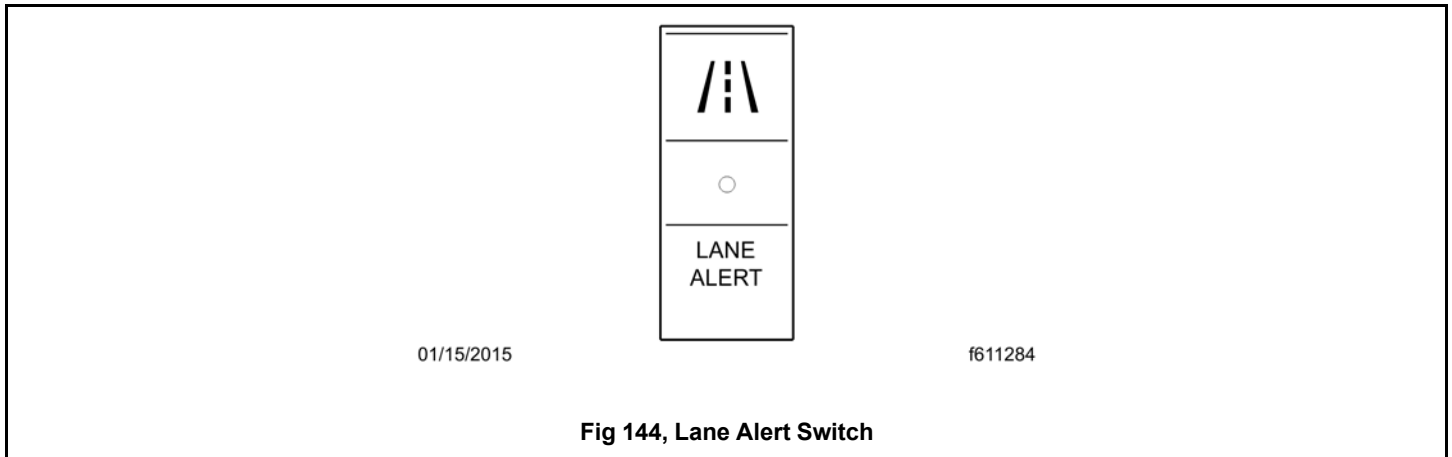

LDW is not active if:

- the driver presses the lane alert switch; or
- the system is searching for a lane.

If there is a system error, the LDW indicator lamp will illuminate. See Fig.145, [LDW Indicator Lamp](#).

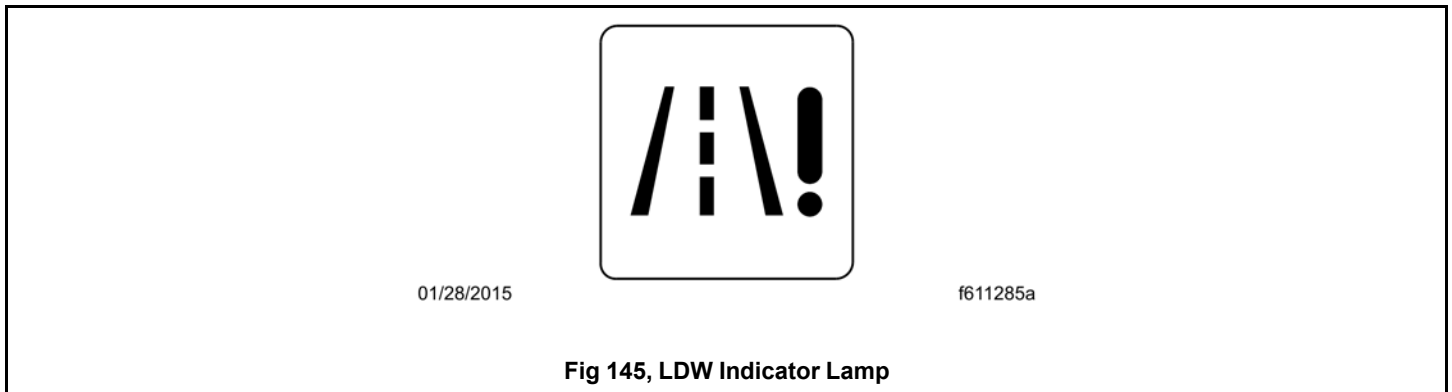

7.04.04 Cleaning the Distance Sensor and the Camera

To avoid malfunctions, clean the cover of the distance sensor regularly.

Regularly clean the area of the windshield used by the camera to avoid incorrect lane detection.

If the area of the windshield is damaged, the function of the lane departure warning could be restricted. If this happens, the windshield must be replaced.

Make sure that the windshield is always kept clean and unobstructed in the area of the camera. The driver can switch on the windshield wiper to clean the windshield, for example, or remove snow and ice from the windshield.

7.05 OnLane™ Lane Departure Warning

7.05.01 General Information

**WARNING:**

OnLane Lane Departure Warning is intended only as an aid for a conscientious and alert driver. The system may not indicate lane departures under certain conditions. Read the information in this manual to understand the circumstances under which this system may not provide adequate lane departure warnings. Do not rely solely on the system to safely operate the vehicle. The system does not warn of all possible hazards. For example, the system cannot prevent an accident if the driver is impaired or not driving safely.

The lane departure warning system is not a substitute for safe driving procedures.

Failure to drive safely and use the system properly could result in personal injury and/or death and severe property damage.

OnLane is a camera-based warning system that helps the driver avoid unintentional lane drifting. The system uses a camera mounted near the top center of the vehicle windshield, which calculates vehicle position within the lane. When the vehicle crosses lane markings without the turn signal being activated, OnLane sounds an audible warning (rumble strip noise).

OnLane is not active when the system is searching for a lane. If the system is searching for a lane, the Lane Alert telltale will illuminate. See Fig. 146, [Lane Alert Telltale](#).



Fig 146, Lane Alert Telltale

The Driver Alertness Warning (DAW) system provides a warning when weaving or erratic driving is detected within the driving lane.

7.05.02 System Startup

OnLane is activated when the vehicle ignition is turned on. Lane departure warnings are active only when the vehicle is traveling at 42 mph (68 kph) or above.

7.05.03 Intentional Lane Changes

The system identifies intentional lane changes by monitoring the turn signal, the brake switch, and vehicle speed. When a lane change is intentional, the assistance warnings are disabled. The following conditions will disable/enable the warnings:

- If brake lights are ON, all warnings are disabled
- If the Left Turn Signal is ON, left departure warnings are disabled
- If the Right Turn Signal is ON, right departure warnings are disabled
- If the vehicle's speed is under 42 mph (68 kph), all warnings are disabled
- If the hazard lights are ON, all warnings are enabled

7.05.04 Unintentional Lane Departure

The system constantly monitors and calculates vehicle position within the lane. In the event of an unintentional lane change, the system provides an audible warning (rumble strip noise). The audible warning will terminate once the vehicle is guided back into a lane.

7.05.05 Driver Alertness Warning (DAW)

The system detects erratic driving based on weaving behavior within the driving lane. OnLane computes a "Driver Alertness Index" based on driving performance, and alerts the driver when it falls below a certain threshold. DAW warns the driver by providing an intermittent warning tone when it detects erratic driving or weaving within the driving lane. The alert terminates when driving performance improves, or when the key is cycled.

7.05.06 Temporarily Disabling the System

When the ignition is turned on, OnLane is automatically activated. Pressing the OnLane dash switch will deactivate the system for 15 minutes. See Fig.147, [OnLane Dash Switch](#). Pressing the OnLane switch before the 15 minute deactivation interval is complete will enable the system.



Fig 147, OnLane Dash Switch

7.06 Roll Stability System

7.06.01 General Information

The roll stability system may include the roll stability advisor (RSA) only, or it may also include the roll stability control (RSC).

A decal (see Fig.148, [Roll Stability Decal](#)) on the auxiliary dash panel, and an amber-colored dash indicator light (see Fig. 149, [Roll Stability Indicator Lamp](#)), indicate that the vehicle is equipped with roll stability system components.

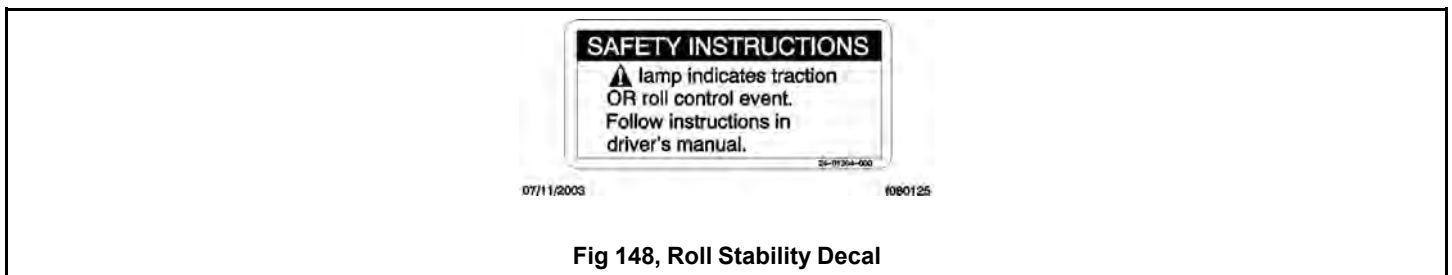


Fig 148, Roll Stability Decal



7.06.02 Roll Stability Advisor

IMPORTANT: This is not an advance warning system. The roll stability advisor displays a message only after the driving maneuver is completed.

The roll stability system uses a lateral-acceleration sensor that monitors rollover risk. Shortly after a curve, lane change, or other driving maneuver that results in a rollover-risk detection, a dash warning light illuminates, an audible tone sounds, and a driver advisory message is displayed in the driver message center. The purpose is to advise the driver that the previous maneuver produced a rollover risk.

The roll stability advisor displays different text messages depending on the severity of the risk of each occurrence of risky driving. From the highest risk level to the lowest risk level, the system will sound an audible alert, and display a message, as shown in Fig.150, [Roll Stability and Hard-Braking Warnings](#).

MSG No.	Message	Message to Display	Display Time: Seconds	Buzzer Time: Seconds
1	System Fault	WARNING RAC SYSTEM FAIL	4	1
2	RSC	ACTIVE SLOWING ROLLOVER RISK	4	None
3	RSA Level 3	VERY HIGH RISK OF ROLLOVER DETECTED REDUCE SPEED AT LEAST 7 MPH or in metric: REDUCE SPEED AT LEAST 11 KPH	19.6	10
4	RSA Level 2	HIGH RISK OF ROLLOVER DETECTED REDUCE SPEED AT LEAST 7 MPH or in metric: REDUCE SPEED AT LEAST 11 KPH	14	5
5	RSA Level 1	ROLLOVER RISK DETECTED REDUCE SPEED AT LEAST 7 MPH or in metric: REDUCE SPEED AT LEAST 11 KPH	9.4	2
6	HBED Level 3	HARD BRAKING WITH ABS ACTIVATED LOOK AHEAD BRAKE SOONER	14	0.5
7	HBED Level 2	HARD BRAKING DETECTED LOOK AHEAD BRAKE SOONER	14	0.5
8	HBED Level 1	LOSS OF TRACTION ABS ACTIVATED ROAD SURFACE MAY BE POOR	14	0.5

07/25/2008 1040769

Fig 150, Roll Stability and Hard-Braking Warnings

NOTE: The system will calculate and recommend a speed reduction value. It may be different than the values shown here.

Bring the vehicle to an authorized service facility if a system failure message is displayed.

7.06.03 Roll Stability Control



WARNING:
The Roll Stability Control system is intended only as an aid for a conscientious and alert driver. Carefully read the information in this manual to understand this system and its limitations. The Roll Stability Control system is not a substitute for safe driving procedures. Failure to drive safely, and use the system properly, could result in personal injury and/or death and property damage.

The roll stability control system automatically reduces engine power, applies the engine brake, and/or applies the tractor and trailer brakes when the acceleration sensor detects that the vehicle is at risk of rolling over. The control can intervene even before an advisory message is displayed.

The dash indicator light illuminates whenever the roll stability control system intervenes.

7.06.04 Hard-Braking Advisor

The hard-braking advisor uses the information from the ABS wheel speed sensors to determine when braking is severe enough to produce lockup at one or more wheels on the tractor, and/or very rapid vehicle deceleration. Shortly after a hard-braking event occurs, an advisory message is displayed in the driver message center, indicating that the braking behavior was too aggressive for the current road surface conditions. This system is not a replacement for a driver's good judgment. Sometimes it is necessary to brake hard.

From the highest risk level to the lowest risk level, the system will sound an audible alert, and display a message, as shown in Fig.151, [Roll Stability and Hard-Braking Warnings](#).

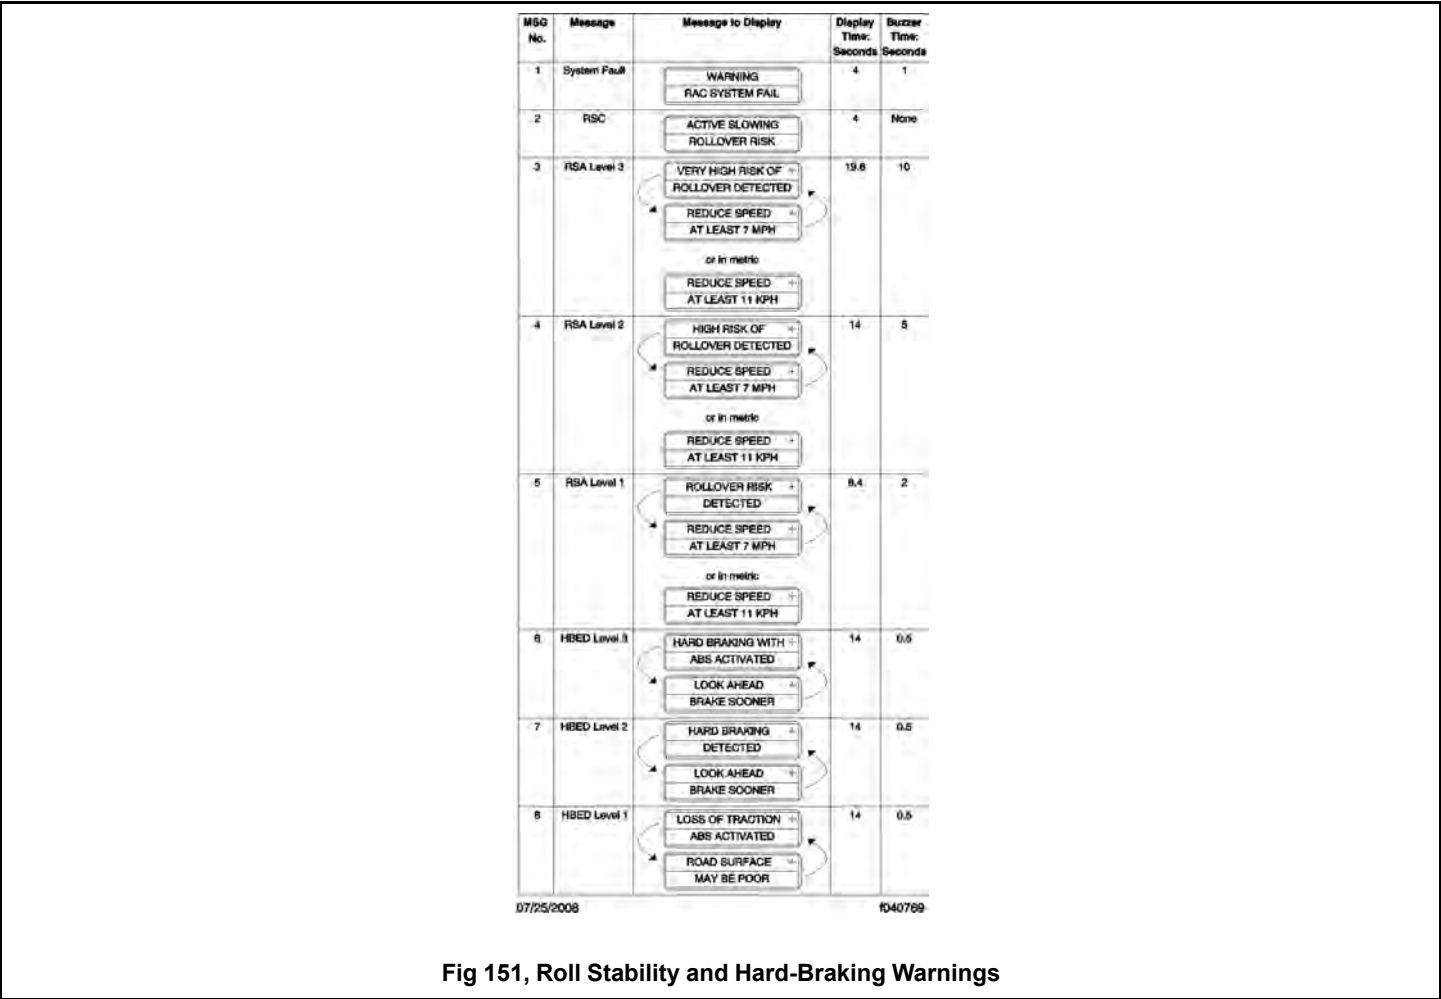



Fig 151, Roll Stability and Hard-Braking Warnings

7.06.05 Trip/Leg Totals

The driver message center records the number of messages received, and displays the number of messages as counts. Roll stability advisor (RSA) and hard-braking event data (HBED) counts can be viewed in the trip advisory screen, and the leg advisory screen.

Counts can be reset using the + key on the steering wheel. Clearing RSA and HBED leg counts will also reset the leg miles and leg hours. Clearing RSA and HBED trip counts will also reset trip miles, trip hours, leg miles, leg hours, and leg advisory counts. In addition, resetting leg miles will clear leg counts. Clearing trip miles will reset miles, hours, and counts in both the leg and trip screens.


The TRIP and LEG advisor screens count both the roll stability advisories (ROLL) and hard-braking events (BRK). For example, if during a TRIP, the driver message center recorded the events in see 15, [RSA/HBED Count](#) , the message center would display as shown in Fig.152, [Trip Advisor Message Screen](#).

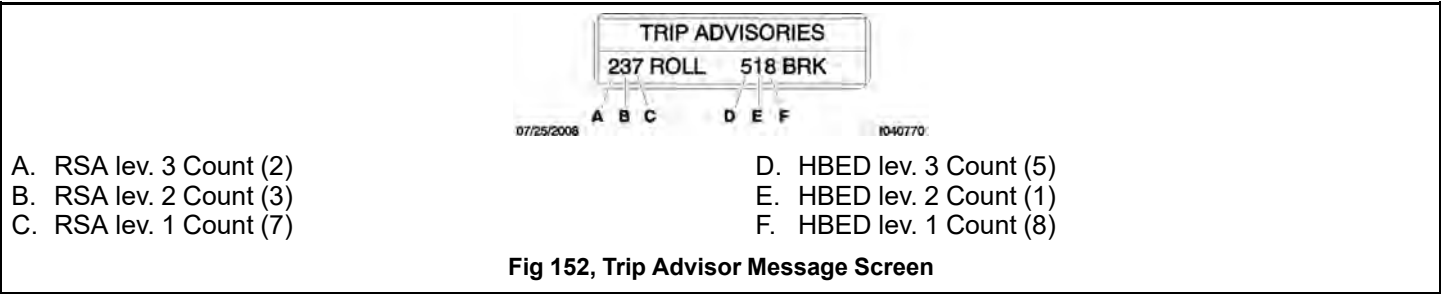

RSA/HBED Count	
Message Received	Message Counts
RSA Level 3	2
RSA Level 2	3
RSA Level 1	7
HBED Level 3	5
HBED Level 2	1
HBED Level 1	8

Table 11, RSA/HBED Count

If the count reaches more than 9 occurrences an up-arrow symbol will appear, to indicate to the driver that the count has exceeded 9 counts. See Fig.153, [Trip Advisor Message Screen \(more than 9 counts\)](#).

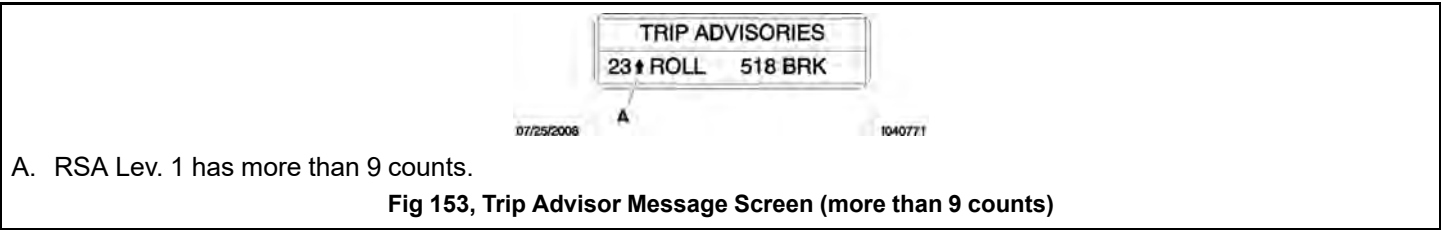

7.07 Enhanced Stability Control

WARNING:

Enhance Stability Control (ESC) is intended only as an aid for a conscientious and alert driver. Carefully read the information in this manual to understand this system and its limitations. ESC is not a substitute for safe driving procedures. Failure to drive safely, and use the system properly, could result in personal injury and/or death and property damage.

ESC offers the full capability of RSC (shown above) with the added capability of complete directional stability (yaw control) in oversteer and understeer conditions to reduce the likelihood of drift-out or jackknife. The system determines where the driver is attempting to steer the vehicle and how much brake demand is required in order to more precisely control the vehicle in an emergency situation.

ESC works by constantly comparing the driver's intention with the vehicle's actual behavior. The system does this by monitoring systems such as wheel speed, steering angle, yaw rate, lateral acceleration, throttle position, and brake application. A central microcomputer analyzes the collected data and triggers a response to keep the vehicle on course when an unstable condition is detected.

When the system detects that the vehicle is at risk of oversteering or understeering, it applies individual tractor wheel end brakes and trailer brakes, activates the engine retarder (if equipped), and/or cuts engine power, depending on the severity. As a result, the driver has full control over the vehicle until the system detects a potential risk and intervenes accordingly. ESC operates automatically; the driver does not monitor or activate the system.

7.08 Detroit Connect Tablet

The Detroit Connect on-board tablet is an optional feature that tracks hours of service, posts driver alerts, documents pre- and post-trip vehicle inspections, and provides advanced navigation. See **Fig. 6.42**.



Fig. 6.42, Detroit Connect Tablet

The tablet operates in conjunction with Virtual Technician to provide communication between drivers and fleet managers. Refer to Zonar® user documentation for more information.

8.01 Seats, General Information	147
8.02 Cascadia 2.0 High-Back Seat.....	148
8.02.01 General Information	148
8.02.02 Recline.....	148
8.02.03 Seat Heating/Ventilation	148
8.02.04 Lumbar Support.....	149
8.02.05 Height Adjustment	149
8.02.06 Shock Absorber Adjustment	149
8.02.07 Fore/Aft Isolator	149
8.02.08 Bottom Cushion Extension.....	149
8.02.09 Seat Fore/Aft Slide	149
8.02.10 Seat Tilt.....	149
8.02.11 Armrest Angle	150
8.03 Cascadia High-Back Seat	150
8.03.01 Backrest Tilt	150
8.03.02 Lumbar Support.....	150
8.03.03 Adjustment of the Height	150
8.03.04 Bottom Cushion Extension.....	150
8.03.05 Fore/Aft Seat Slide	150
8.03.06 Fore/Aft Isolator	151
8.03.07 Shock Absorber	151
8.03.08 Front Cushion Height	151
8.03.09 Rear Cushion Height.....	151
8.03.10 Heater.....	151
8.04 Sears Atlas Seat	151
8.04.01 Genral Information	151
8.04.02 Backrest Tilt	152
8.04.03 Lumbar Support.....	152
8.04.04 Fore/Aft Seat Slide.....	152
8.04.05 Bottom Cushion Tilt.....	152
8.04.06 Armrest Angle.....	153

8.04.07 Isolator 153

8.04.08 Suspension Inflation/Deflation..... 153

8.04.09 Seat Extension 153

8.05 Seat Belts and Tether Belts 153

8.05.01 General Information 153

8.05.02 Inspection of the Seat Belt 153

8.05.03 Operation of the Seat Belt..... 154

8.06 Steering the Wheel Air Bag 158

8.06.01 Operation 158

8.06.02 Inspection and Service 158

8.07 RollTek Rollover Protection System 158

8.07.01 Identification 158

8.07.02 Operation 159

8.07.03 Inspection and Service 161

8. Seats and Restraints

8.01 Seats, General Information

Unless otherwise noted, all seat adjustments should be made while seated and before the engine is started.

Due to the high degree of adjustability of mid- and high-back air suspension seats, it is possible to combine the seat back recline adjustment and the seat slide adjustment so that the seat back contacts the back wall. Use care when adjusting the seat to prevent damage to the seat and the cab interior.




WARNING:

Keep hands, tools, and other objects away from the scissor points under the seats. Failure to do so could cause personal injury.

The following is a description of adjustments that can be made to various Freightliner-installed seats. Not all seats have all of the adjustments listed below. See Fig.155, [General Seat Adjustments](#).

- *Backrest Tilt* enables the backrest to pivot forward or backward.

•

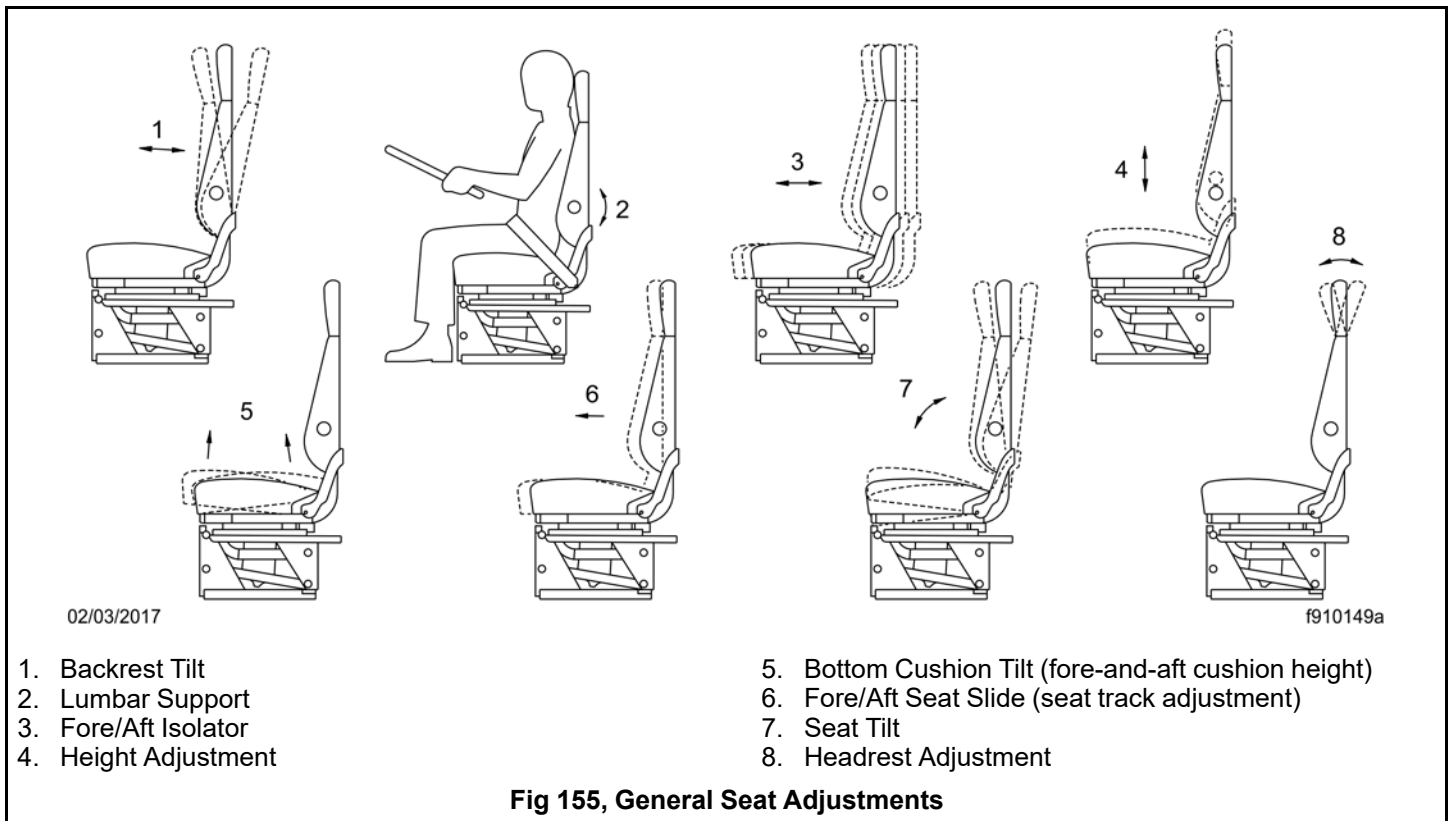


- *Lumbar Support* changes the shape of the backrest to give more or less support to the occupant's lumbar (lower back) area. This adjustment is either mechanical or air controlled, depending on the seat model.
- *Fore/Aft Isolator* feature reduces the amount of road shock by isolating the occupant from the motion of the vehicle, and allowing the upper seat to move in a simple pendulum motion. A lockout feature is used whenever the isolator is not desired.

- *Height Adjustment* moves the entire seat up or down. The adjustment is either manually- or air-controlled, depending on the seat model.
- *Bottom Cushion Angle (fore-and-aft bottom cushion height)* enables the occupant to raise or lower the front or back of the bottom cushion. This adjustment is easier to perform when all weight is removed from the seat.
- *Fore/Aft Seat Slide (seat track adjustment)* moves the entire seat forward or backward on its track.
- *Seat Tilt* allows the seat assembly (back and bottom cushions) to tilt forward or backward.
- *Headrest Adjustment* changes the angle of the upper part of the backrest to provide head and upper back support.

8.02 Cascadia 2.0 High-Back Seat

8.02.01 General Information

See Fig.156, [Cascadia 2.0 Hi-Back Seat](#) for seat adjustment controls. Not all models of the Cascadia 2.0 Hi-Back seat have all the adjustments listed below.

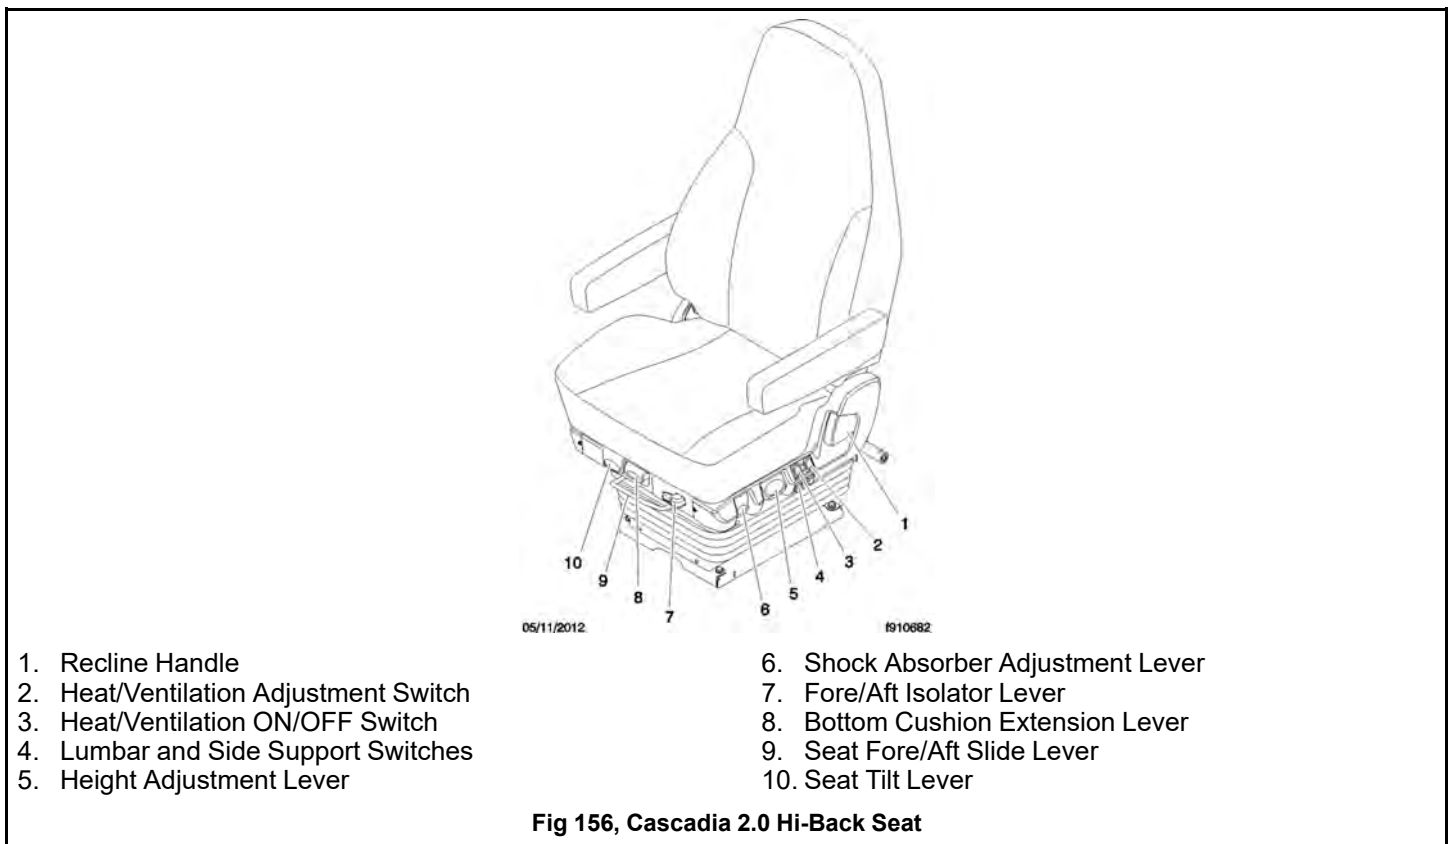

8.02.02 Recline

Pull the recline handle to adjust the backrest tilt.


8.02.03 Seat Heating/Ventilation

Use the forward switch to turn the seat heater and ventilation ON or OFF. To turn on the heat, push the top of the switch. To turn on the ventilation, push the bottom of the switch. To turn off the heat or ventilation, move the switch to the middle position. To adjust the heat or ventilation, Use the rear button to adjust seat heating or ventilation. Three settings are available: low, medium, and high. See Fig.157, [Cascadia 2.0 Hi-Back Seat Heat/Ventilation Controls](#).

**NOTICE:**

Do not install seat covers on seats with heating and ventilation. Do not cover the seat with blankets, clothing, or pillows. Blocking the air flow through the cushions can overheat and damage the seat.

IMPORTANT: Turn off seat heating/ventilation when the seat is unoccupied.

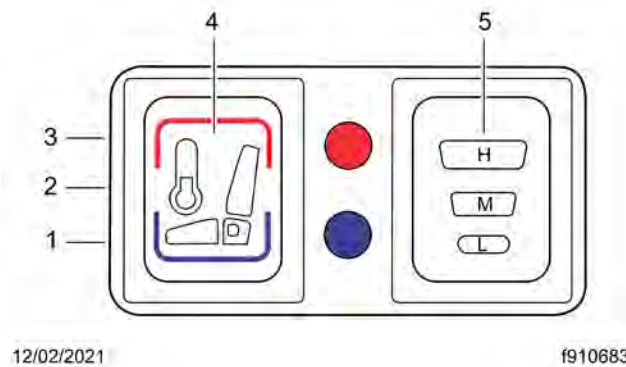

1. Ventilation ON
2. Heat/Ventilation OFF
3. Heat ON

4. Heat/Ventilation ON/OFF Switch
5. Heat/Ventilation Adjustment Switch

Fig 157, Cascadia 2.0 Hi-Back Seat Heat/Ventilation Controls

8.02.04 Lumbar Support

Press the forward button to adjust lower lumbar support, the middle button to adjust upper lumbar support, and the rear button to adjust side support.

8.02.05 Height Adjustment

Pull or push the lever to adjust seat height.

8.02.06 Shock Absorber Adjustment

Move the lever down to increase damping on rough roads, or up to decrease damping on flat roads.

8.02.07 Fore/Aft Isolator

Rotate the isolator knob to the left to lock the isolator, or to the right to allow movement.

8.02.08 Bottom Cushion Extension

Pull the lever to move the seat cushion forwards or backwards. The cushion moves 2-3/8 inches (60 mm) in 3/8-inch (10-mm) increments.

8.02.09 Seat Fore/Aft Slide

Lift the lever to slide the seat forward or backward. Release the lever to lock the seat in position.

8.02.10 Seat Tilt

Pull the lever and lean back to tilt the seat backwards. Three positions are available.

8.02.11 Armrest Angle

To adjust the armrest angle, tilt the armrest to the highest position, then down to the lowest position, then to the desired position.

8.03 Cascadia High-Back Seat


8.03.01 Backrest Tilt

To tilt the backrest, lean forward slightly to remove pressure from the cushion, then turn the knob forward or rearward to achieve the desired position.

8.03.02 Lumbar Support

See Fig.158, [Cascadia Hi Back Seat](#) for seat adjustment controls.

To adjust the lumbar support, use the lumbar support switches on the side of the seat.

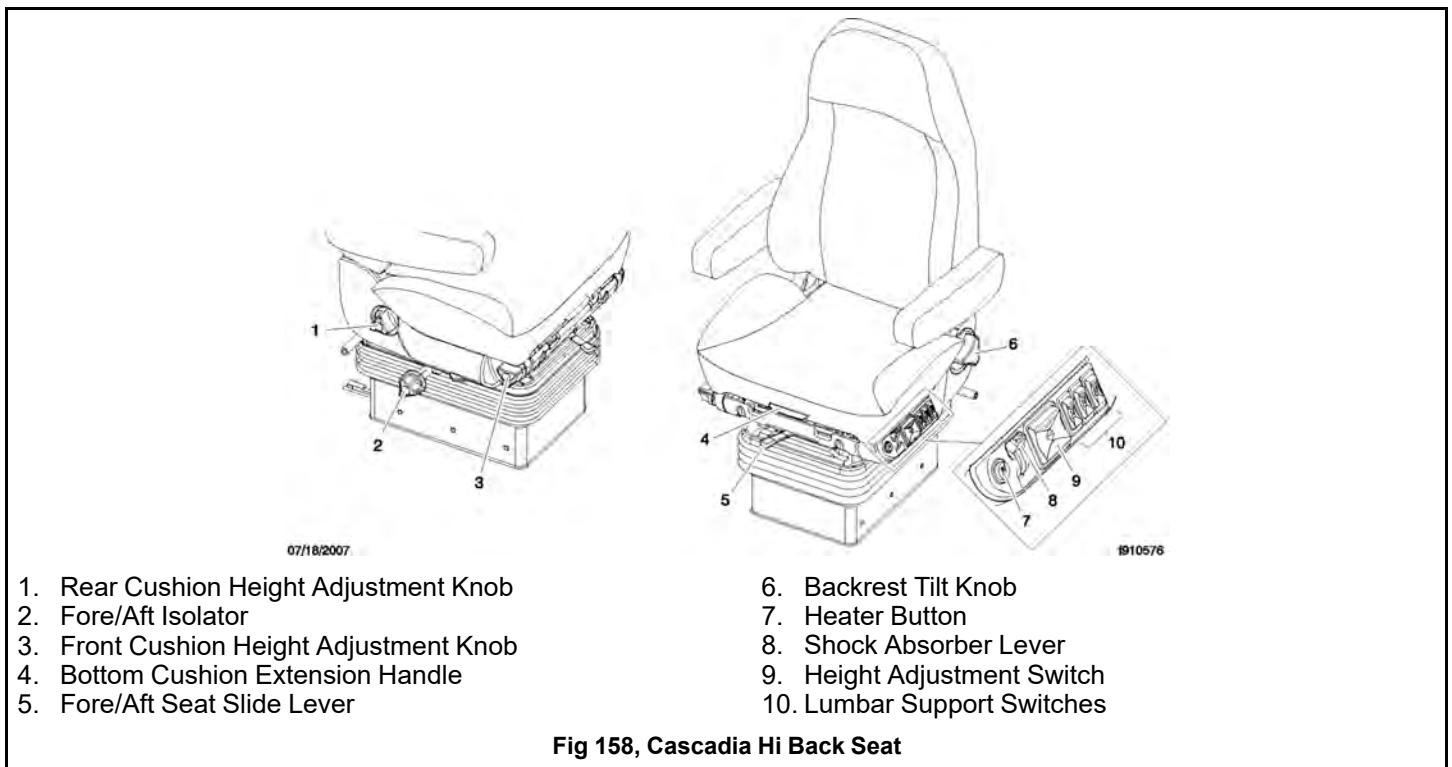

8.03.03 Adjustment of the Height

To raise or lower the height of the seat, use the height adjustment switch on the side of the seat.

8.03.04 Bottom Cushion Extension

To adjust the fore-and-aft position of the seat cushion, remove your weight from the seat, then lift up and pull forward on the cushion adjustment handle. To return the cushion to the aft position, lift up and push rearward.

8.03.05 Fore/Aft Seat Slide

To adjust the fore-and-aft position of the entire seat, move the fore-and-aft seat adjustment lever to the left and slide the seat forward or backward to the desired position. Move the lever back to its original position to lock the seat in place.

8.03.06 Fore/Aft Isolator

To engage the isolator, turn the isolator knob rearward to the unlocked position. Turn the isolator knob forward to the locked position when the isolator feature is not desired.

8.03.07 Shock Absorber

To adjust the amount of damping the shock absorber provides, move the lever up to increase damping; move the lever down to decrease damping.

8.03.08 Front Cushion Height

To adjust the height of the front of the cushion, remove your weight from the seat, then turn the adjustment knob toward the front of the seat (clockwise) to increase cushion height. To lower the cushion height, turn the adjustment knob toward the rear of the seat (counterclockwise).

8.03.09 Rear Cushion Height

To adjust the height of the rear of the seat cushion, remove your weight from the seat and turn the rear cushion adjustment knob to one of three positions.


8.03.10 Heater

To turn on the heat option, press the button. To turn off the heat option, press the button again. If the vehicle has Optimized Idle, seat heating will not operate with the key in accessory mode. Optimized Idle may also turn seat heating off to reduce stress on the batteries. Refer to [12.01 Engine Protection—Warning and Shutdown](#) for more information.

8.04 Sears Atlas Seat

8.04.01 Genral Information

See Fig. 159, [Sears Atlas Seat](#) for seat adjustment controls.

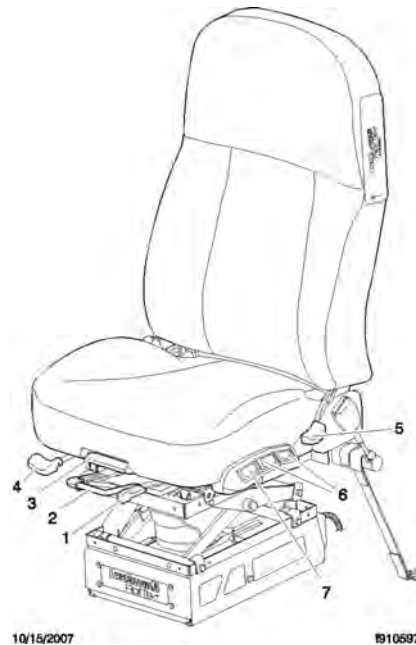

- | | |
|-------------------------------|--|
| 1. Isolator Lever | 5. Backrest Tilt Lever |
| 2. Fore/Aft Seat Slide Lever | 6. Lumbar Support Switches |
| 3. Bottom Cushion Tilt Handle | 7. Suspension Inflation/Deflation Switch |
| 4. Seat Extension Lever | |

Fig 159, Sears Atlas Seat

8.04.02 Backrest Tilt


Pull upward on the recliner handle, move the backrest to the desired position and release the handle.

8.04.03 Lumbar Support

Rear rocker switch: Push forward to inflate the lower lumbar bag; push rearward to deflate the bag. Center rocker switch: Push forward to inflate the upper lumbar bag; push rearward to deflate the bag.

8.04.04 Fore/Aft Seat Slide

To adjust the fore-and-aft position of the entire seat, squeeze the fore/aft slide lock against the adjustment bail, and lift the bail up. See Fig. 160, [Fore/Aft Slide Adjustment, Sears Atlas Seat](#). Slide the seat forward or backward to the desired position. Release the bail and fore/aft slide lock, to its original position, to lock the seat in place.

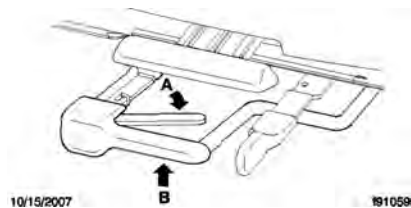

- | | |
|---|---------------------------------|
| A. Squeeze the fore-and-aft slide lock against the adjustment bail. | B. Lift up the adjustment bail. |
|---|---------------------------------|

Fig 160, Fore/Aft Slide Adjustment, Sears Atlas Seat

8.04.05 Bottom Cushion Tilt

Lift the handle upward and move the seat cushion to the desired position. Three positions are available.

8.04.06 Armrest Angle

Rotate the control knob, located on the underside of the armrest, to set the desired angle of the armrest.

8.04.07 Isolator

Position the handle to the left to allow isolation movement. Position the handle to the right to lock-out isolation movement.

8.04.08 Suspension Inflation/Deflation

Push forward on the gray rocker switch to inflate and raise the suspension; push rearward to deflate and lower the suspension.

8.04.09 Seat Extension

Rotate the handle upward to disengage, then move the seat cushion to the desired position and release the lever. Three positions are available.

8.05 Seat Belts and Tether Belts

8.05.01 General Information

Seat belt assemblies are designed to secure persons in the vehicle to help reduce the chance of injury, or the amount of injury, resulting from accidents or sudden stops. For this reason, Daimler Truck North America LLC (DTNA) urges that the driver and *all* passengers, regardless of age or physical condition, use seat belts when riding in the vehicle.

**WARNING:**

Always use the vehicle's seat belt system when operating the vehicle. Failure to do so can result in severe personal injury or death.

Seat belt assemblies in DTNA vehicles meet Federal Motor Vehicle Safety Standard 209, "Type 1" and "Type 2" requirements.

When transporting a child, always use a child restraint system or the vehicle seat belts as appropriate. To determine whether a child restraint system is required, review and comply with applicable state and local laws. Any child restraint used must comply with Federal Motor Vehicle Safety Standard 213, "Child Restraint Systems." When providing a child restraint system, always carefully read and follow all instructions pertaining to installation and usage for the child. Make certain the child remains in the restraint system at all times when the vehicle is in motion.

In addition to seat belt assemblies, tether belts are installed on suspension-type seats. Tether belts help secure the seat to the floor and are intended to restrain the seat and seat belt in case of an accident or sudden stop.

IMPORTANT: Seat belts have a finite life which may be much shorter than the life of the vehicle. Regular inspections and replacement as needed are the only assurance of adequate seat belt security over the life of the vehicle.

8.05.02 Inspection of the Seat Belt

**WARNING:**

Inspect and maintain seat belts. When any part of a seat belt system needs replacement, the entire seat belt must be replaced, both retractor and buckle side. Any time a vehicle is involved in an accident, and the seat belt system was in use, the entire vehicle seat belt system must be replaced before operating the vehicle. Do not attempt to modify the seat belt system; doing so could change the effectiveness of the system. Failure to replace worn or damaged seat belts, or making any modifications to the system, may result in personal injury or death.

Inspect the seat belts and tether belts (if so equipped).

1. Check the web for fraying, cuts, extreme dirt and dust, or for severe fading from exposure to sunlight, especially near the buckle latch plate and in the D-loop guide area.
2. Check operation of the buckle, latch, Komfort Latch or Sliding Komfort Latch (if equipped), web retractor, and upper seat belt mount on the door pillar. Check all visible components for wear or damage.
3. Check the seat belt and tether belt connection points and tighten any that are loose.

8.05.03 Operation of the Seat Belt



WARNING:

Wear three-point seat belts only as described below. Three-point seat belts are designed to be worn by one person at a time. In case of an accident or sudden stop, personal injury or death could result from misuse.

Fasten the seat belts before driving. Fastening a three-point seat belt while driving creates a hazard.

When engaged and used properly, the Komfort Latch (see Fig.161,[Komfort Latch](#)) and the Sliding Komfort Latch (see Fig. 162,[Sliding Komfort Latch](#)) introduce a small amount of slack into the seat belt, resulting in a more comfortable ride.

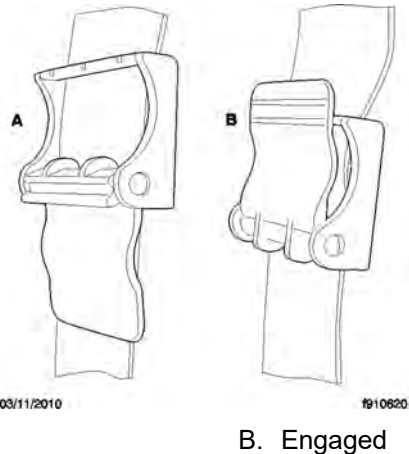


Fig 161, Komfort Latch



Fig 162, Sliding Komfort Latch

1. Slowly pull the link end of the seat belt out of the retractor and pull it across your lap (from outboard to inboard) far enough to engage the buckle. If the retractor locks too soon, allow the belt to retract slightly, then slowly pull it out again. See Fig. 163, [Three-Point Seat Belt Operation](#).

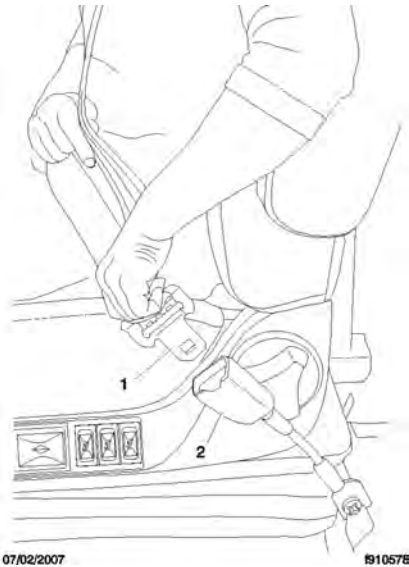


Fig 163, Three-Point Seat Belt Operation

2. Fasten the seat belt by pushing the latch into the buckle. Listen for an audible click.
3. Tug on the seat belt to make sure it is securely fastened. If the buckle unlatches, repeat this step. If the problem continues, replace the seat belt.
4. Snug the seat belt to your waist.

**WARNING:**


Before activating a Komfort Latch, make sure the amount of slack in the shoulder strap is set as described below. Excess slack in the shoulder strap reduces the effectiveness of the seat belt, and increases the risk of injury or death in an accident.

5. Position the shoulder strap diagonally across your chest with the adjustable D-loop bracket (if equipped). The shoulder strap must be centered on your shoulder and chest, away from your face and neck. See Fig. 164, [Proper Shoulder Strap Fit](#). If desired, engage the Komfort Latch or Sliding Komfort Latch as follows.

If equipped with a Sliding Komfort Latch, make sure that the shoulder strap is snug against your chest. Without loosening the shoulder strap, push the Sliding Komfort Latch switch to the "ON" position. See Fig. 162, [Sliding Komfort Latch](#). To activate the latch lean forward until you hear a click. This will allow for approximately 1 inch (2.5 cm) of slack between your chest and the shoulder harness. Once engaged, the latch will allow you to lean forward about 5 inches (13 cm) without having to reset the latch. Leaning forward more than 5 inches (13 cm) will disengage the Sliding Komfort Latch, requiring it to be reset.

If equipped with a Komfort Latch, pull on the shoulder strap to lessen the pressure of the strap on your shoulder and chest. Allow no more than 1 inch (2.5 cm) of slack between your chest and the shoulder harness. More slack can significantly reduce the seat belt effectiveness in an accident or a sudden stop. While holding the belt slack, press the Komfort Latch lever up, clamping the seat belt webbing (see Fig. 165, [Adjusting Shoulder Harness Clearance, Komfort Latch](#) and see Fig. 166, [Locking the Komfort Latch](#)).

165, [Adjusting Shoulder Harness Clearance, Komfort Latch](#) and see Fig. 166, [Locking the Komfort Latch](#)).

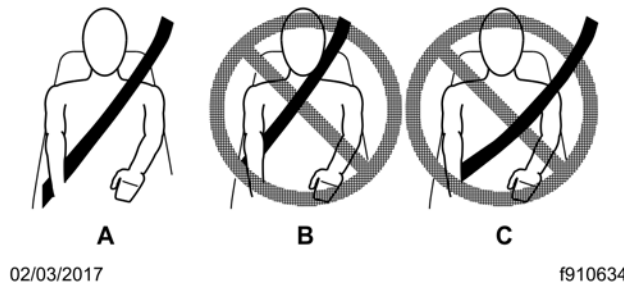


A. Correct—Belt is centered on your shoulder and chest, away from your face and neck.

B. Wrong—Belt must not rub against face or neck.

C. Wrong—Belt must not hang off shoulder.

Fig 164, Proper Shoulder Strap Fit

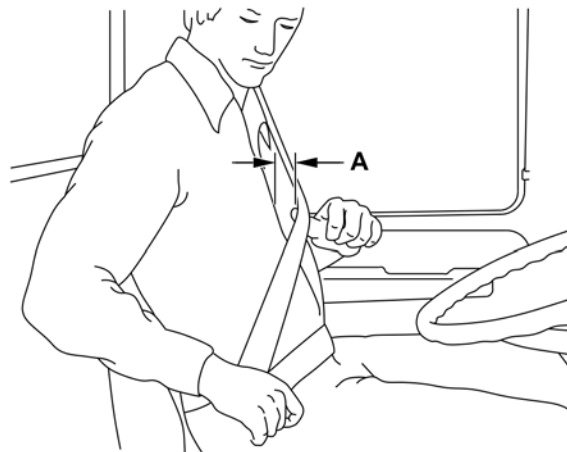


02/03/2017

f910048a

A. 1 Inch (2.5 cm) Maximum

Fig 165, Adjusting Shoulder Harness Clearance, Komfort Latch

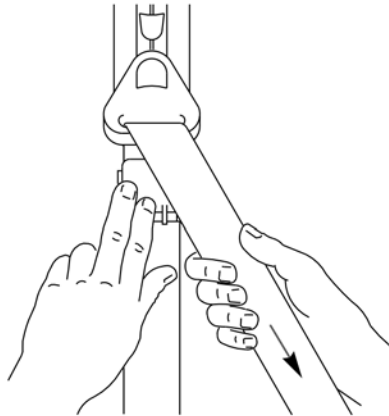

02/03/2017

f910144

Fig 166, Locking the Komfort Latch

NOTE: Neither the Komfort Latch nor the Sliding Komfort Latch need to be manually released in an emergency situation. Each will release by itself under rough road or other abnormal conditions. Make sure the seat belt is completely retracted when it is not in use.

6. Unbuckle the seat belt and release the Komfort Latch or the Sliding Komfort Latch as follows.

If equipped with a Sliding Komfort Latch, unbuckle the seat belt, then tug on the shoulder belt to release the Sliding Komfort Latch, or press the Sliding Komfort latch to the "OFF" position, then unbuckle the seat belt.

If equipped with a Komfort Latch, unbuckle the seat belt, then release the Komfort Latch by giving the shoulder belt a quick tug. If you lean forward against the shoulder belt, the Komfort Latch will automatically release, and will need to be reset.

8.06 Steering the Wheel Air Bag

8.06.01 Operation

NOTE: Only vehicles with the letters "SRS" molded into the steering wheel center pad are equipped with a steering wheel air bag.

The air bag, when used with seat belts, provides additional protection to the driver in severe frontal collisions. Steering wheel air bags are designed to inflate only in severe frontal collisions. The driver and the passenger should always wear seat belts. The steering wheel air bag will activate during a collision even if the seat belts are not fastened, but the system is designed to provide protection to the occupant only when the seat belts are fastened.

**WARNING:**

Keep all heavy objects in the cab secured. Do not place objects on the steering wheel or between you and the steering wheel. Any such objects may cause harm during an accident. Keep your hands on the sides and lower portion of the steering wheel. Failure to follow these instructions may result in death or personal injury.

For maximum protection in a collision, always be in a normal seated position with your back against the seat back and your head upright. Fasten your seat belt and ensure that it is properly positioned on your body as described under the "Seat Belt Operation" heading. Since the air bag inflates with considerable speed and force, a proper seat position will help keep you a safe distance from the inflating air bag.

8.06.02 Inspection and Service

**WARNING:**

Do not attempt to service or modify the air bag system. Unintentional or improper air bag deployment could cause severe bodily injury or death. Contact an authorized Freightliner service facility for all service and maintenance.

The air bag system contains components that use combustible chemicals. Do not cut, drill, braze, solder, weld, strike, or probe the air bag components. Keep all liquids and chemicals away from air bag components.

The surface of the deployed air bag may contain small amounts of sodium hydroxide (which is a by-product of the gas generant combustion) and metallic sodium. Sodium hydroxide may be irritating to the skin and eyes. Immediately wash your hands and exposed skin areas with a mild soap and water. Flush your eyes immediately if exposed to sodium hydroxide.

The operational readiness of the air bag system is indicated by the supplemental restraint system (SRS) indicator on the dash. The SRS indicator illuminates for several seconds when the ignition is turned on, and then it goes off. The indicator will remain on if there is a problem with the air bag system. The vehicle should be serviced if the SRS indicator does not illuminate when the ignition is turned on, or if the SRS indicator remains on.

The air bag module may contain perchlorate material; for information, see [\[Missing cross reference text\]](#). Special handling may apply; follow appropriate rules and regulations when disposing of materials.

For all service and maintenance, contact an authorized Freightliner service facility.

8.07 RollTek Rollover Protection System

8.07.01 Identification

Only seats with the RollTek module under the seat and the molded side-roll air bag cover on the upper side of the seat back are equipped with the RollTek rollover protection system; see Fig.167, [RollTek Protection System Components](#). RollTek may be installed in one of the following configurations:


- driver seat only or driver and passenger seats
- driver seat only, with an optional steering wheel frontal air bag
- driver and passenger seats, with an optional steering wheel frontal air bag



8.07.02 Operation

The RollTek system, when used with seat belts, provides additional protection to the driver and passenger (if equipped with a passenger-side system) in rollover accidents. The RollTek system provides a significant increase in seat stability during a rollover. Vehicles equipped with RollTek rollover protection have a sensor mounted in the seat base that activates the side-roll air bag and seat pull-down device during a rollover.

When the RollTek module senses a rollover, the module triggers gas cylinders mounted in the base of the seat. The gas cylinders activate the power cinches that then tighten the lap and shoulder belts against the occupant of the seat and lower the seat suspension, moving the occupant down and away from the steering wheel and ceiling. The side-roll air bag deploys from the outboard side of the seat as the seat is pulled down to its lowest position. See Fig.168, [Side-Roll Air Bag](#).

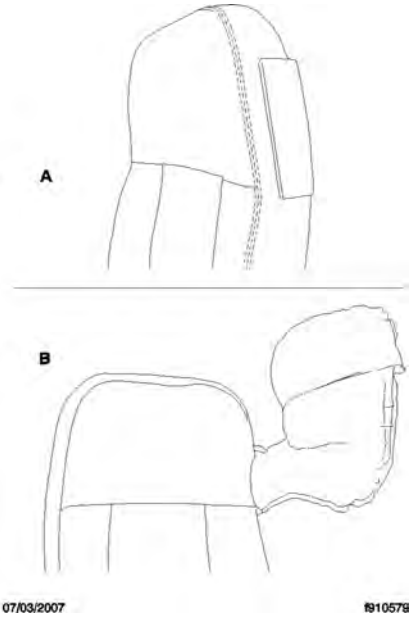

A. Side-roll air bag contained in seat.

B. Side-roll air bag deployed.

Fig 168, Side-Roll Air Bag**WARNING:**

Always use the seat belts when operating the vehicle. Failure to do so can result in severe personal injury or death. Do not place infants and children in seats equipped with the RollTek system. The RollTek system is designed for adults only. Doing so could result in severe bodily injury or death. Keep all heavy objects in the cab secured. Do not place objects on the seat back or block the side-roll air bag. Objects that block the side-roll air bag may prevent proper inflation and could result in serious injury or death.

The RollTek system will activate during a rollover even if the seat belts are not fastened, but the RollTek system is only designed to provide protection to the occupant when the seat belts are fastened.

For vehicles with the RollTek system(s) only, device(s) deploy as follows:

- Rollover Crash—occupant seat belt pretensioning, seat pretensioning, and side-roll air bag at the proper time
- Frontal Crash—no devices deployed

For vehicles with the RollTek system(s) and frontal steering wheel air bag, device(s) deploy as follows:

- Rollover Crash—occupant seat belt pretensioning, seat pretensioning, and side-roll air bag at the proper time
- Frontal Crash—steering wheel air bag, occupant seat belt pretensioning, seat pretensioning, and the side-roll air bag at the proper time

8.07.03 Inspection and Service

**WARNING:**

Keep hands and tools away from the scissor points under the seats.

The RollTek system contains components that use combustible chemicals. Do not cut, drill, braze, solder, weld, strike, or probe any part of the RollTek system. Keep all liquids and chemicals away from the RollTek components.

Do not attempt to service or modify the RollTek system. Unintentional or improper deployment of the RollTek system could cause severe bodily injury or death. Contact an authorized Freightliner service facility for all service and maintenance.

IMPORTANT: The RollTek system must be replaced after being activated. Damaged seat belts and tethers, or seat belts and tethers that were worn in an accident, must be replaced, and their anchoring points must be checked.

The operational readiness of the RollTek system is indicated by the supplemental restraint system (SRS) indicator on the dash. The SRS indicator illuminates for several seconds when the ignition is turned on, and then it goes off. The indicator will remain on if there is a problem with the air bag or RollTek system. The vehicle must be serviced if the SRS indicator does not illuminate when the ignition is turned on, or if the SRS indicator remains on.

The air bag module may contain perchlorate material; for information, see . Special handling may apply; follow appropriate rules and regulations when disposing of materials.

For all service and maintenance, contact an authorized Freightliner service facility.


9.01 Cab Climate Control Panel	164
9.01.01 Fan Switch	164
9.01.02 Temperature Control Switch.....	165
9.01.03 Mode Control Switch	165
9.01.04 Sleeper Climate Control Panel	166
9.01.05 ParkSmart™ HVAC System.....	167
9.01.06 Accessory Heaters.....	171

9. Climate Control


9.01 Cab Climate Control Panel

9.01.01 Fan Switch

The standard cab climate control panel has a fan switch with a recirculation button, temperature control switch with an air conditioning (A/C) button, and a mode control switch. See Fig.170, [Fan Switch](#). If equipped, sleeper cabs have a bunk override button.

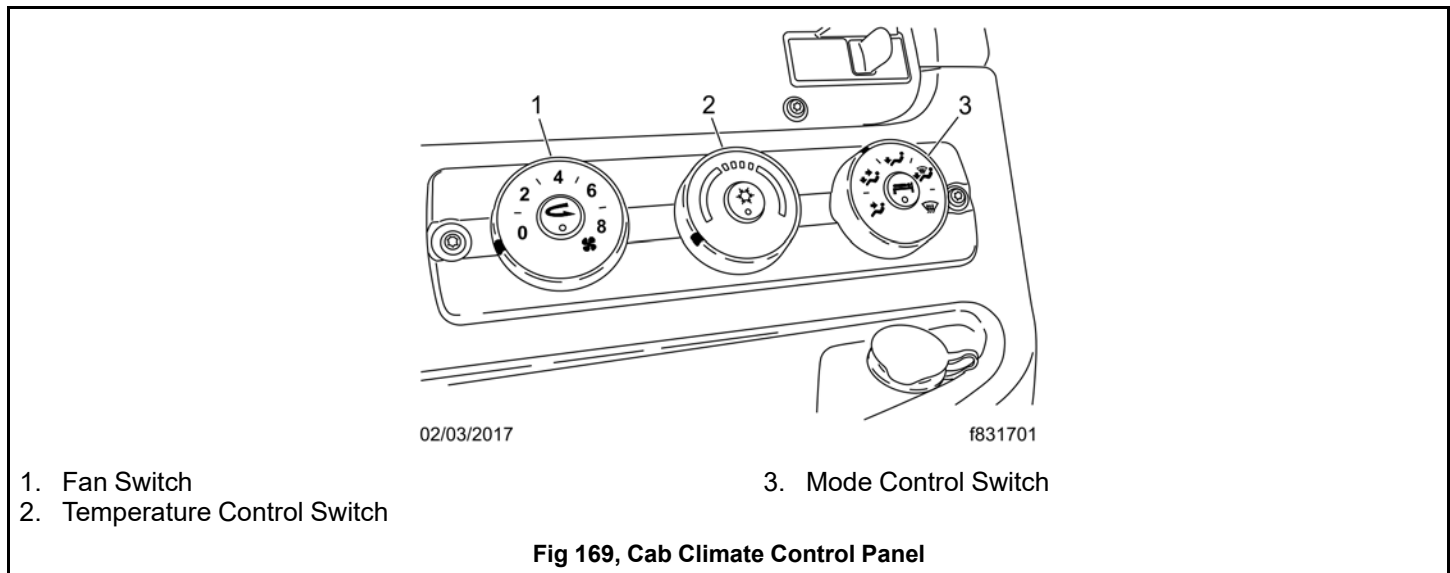

The fan switch activates the fan, which forces fresh air or recirculated air through the air outlets. The fan switch has eight fan speed settings and an OFF position. See Fig.170, [Fan Switch](#).

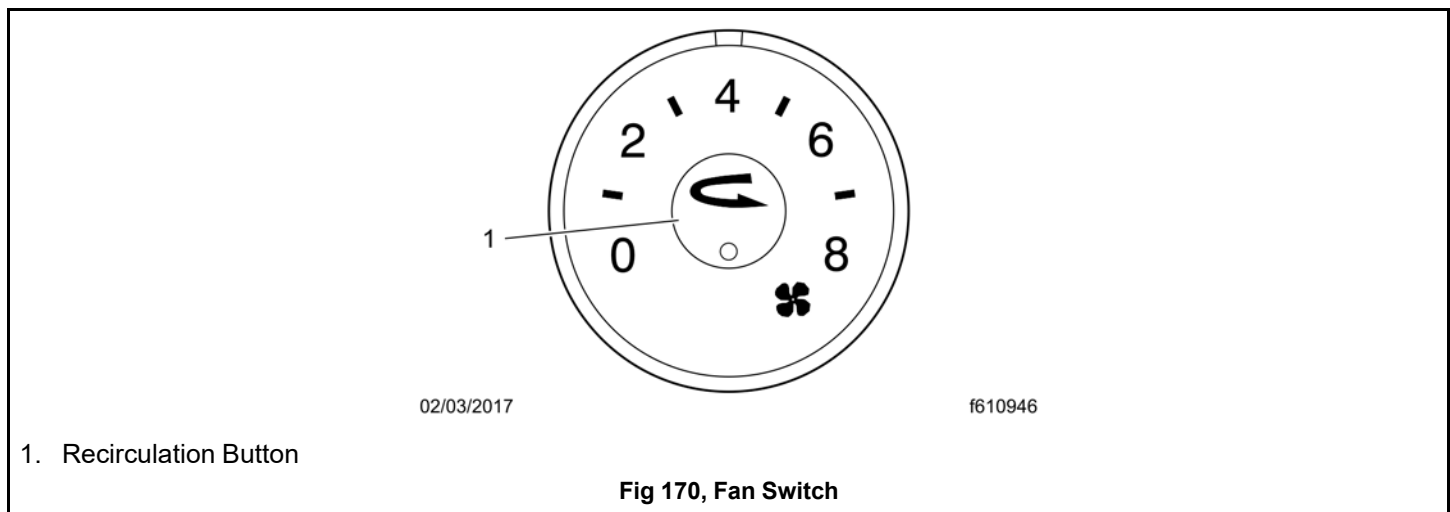

To operate the fan switch, turn the fan switch clockwise to increase airflow; turn the fan switch counterclockwise to decrease airflow.

After the engine is started, there is a two-second time delay before the blower is operational. For the blower to reach high speed, it can take an additional four seconds. If the vehicle has Optimized Idle, the fan will not operate with the key in

accessory mode. Optimized Idle may also turn the fan off to reduce stress on the batteries. Refer to [12.01 Engine Protection—Warning and Shutdown](#) for more information.

Recirculation


Recirculation mode limits the amount of outside air entering the cab. Press the recirculation button to prevent dusty or smoky air from entering the cab. See Fig. 170, [Fan Switch](#). Recirculation mode can also decrease the time required to cool or heat the cab interior during extreme outside temperature conditions. When the recirculation mode is turned on, the amber indicator on the recirculation button will illuminate.

The recirculation button will not work when the mode control switch is in either defog or defrost modes.

NOTE: To prevent the buildup of odors or oxygen depletion inside the cab, the system switches from full recirculation mode to partial recirculation mode after 20 minutes. In extremely dusty or smoky conditions, the partial recirculation mode can be overridden by pressing the recirculation button twice to obtain full recirculation mode. This resets the 20-minute timer.

9.01.02 Temperature Control Switch

The temperature control switch is used to select the desired temperature in the cab. Turn the switch counterclockwise for cool air, or clockwise for hot air. See Fig. 171, [Temperature Control Switch](#).

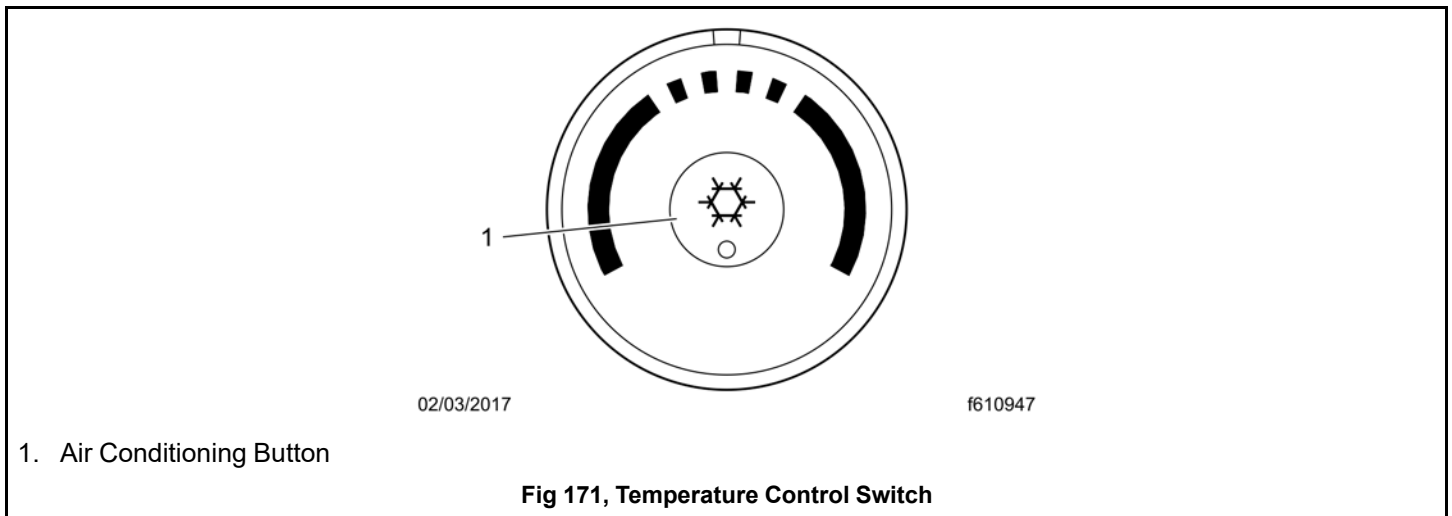

Air Conditioning Button

The air conditioner (A/C) cools and dehumidifies the air inside the cab. Press the A/C button, located in the center of the temperature control switch, to turn the air conditioner on and off. See **Fig. 8.3**.

A/C will be automatically disabled when:


- outside air temperature is low enough to make the A/C ineffective;
- engine is running at extremely low rpm;
- conditions exist that result in the climate control system going into protection mode.

NOTE: The illuminated LED light on the air conditioning button will go out in the cab (and, if equipped, the sleeper) if a defrost mode is selected. However, anytime one of the defrost modes is selected, air conditioning is active to assist with dehumidifying the air.

9.01.03 Mode Control Switch

The mode control switch allows the driver to control the flow of air through the face outlets, the floor outlets, the defrost (windshield) outlets, or a combination of these outlets. See Fig. 172, [Mode Control Switch With Bunk Override Button](#).

Face Mode: Directs all airflow through the face or instrument panel outlets.

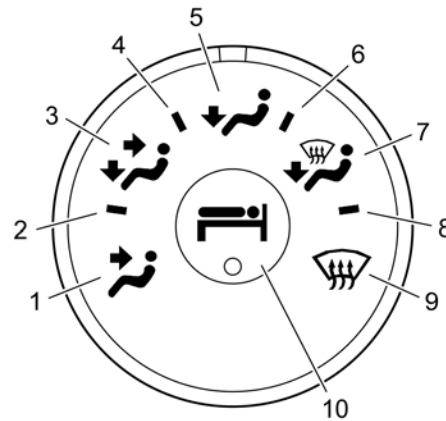

02/03/2017

f610948

- | | |
|---|--|
| 1. Face Mode | 6. Selection Between Floor Mode and Defog Mode |
| 2. Selection Between Face Mode and Bi-Level Mode | 7. Defog Mode |
| 3. Bi-Level Mode | 8. Selection Between Defog Mode and Defrost Mode |
| 4. Selection Between Bi-Level Mode and Floor Mode | 9. Defrost Mode |
| 5. Floor Mode | 10. Bunk-Override Button (on sleeper-cabs only) |

Fig 172, Mode Control Switch With Bunk Override Button

Bi-Level Mode: Directs the airflow equally to the face outlets and the floor outlets.

Floor Mode: Directs all airflow through the floor outlets.

Floor/Defrost Mode: Directs the airflow equally to the floor outlets and the defrost outlets.

Defrost Mode: Directs all airflow through the defrost outlets and activates the air conditioning to assist with dehumidifying the air. The A/C button's LED is not illuminated.

NOTE: When the defrost is turned off, the A/C is turned off also. Press the A/C button to turn it back on and the LED will illuminate. If the air conditioning is on before a defrost mode is selected, the LED on the A/C button in the cab (and, if equipped, the sleeper) will go out.

Bunk Override Button

The bunk override button, equipped on sleeper cabs only, allows the driver to control the sleeper heat and A/C settings from the cab. See Fig.172, [Mode Control Switch With Bunk Override Button](#).

Press the bunk override button to turn the sleeper heat or A/C on. An amber indicator will illuminate when bunk override mode is activated.

Press the bunk override button again to turn bunk override mode off. Adjusting the sleeper climate controls at any time will also cause the bunk override mode to cancel.

9.01.04 Sleeper Climate Control Panel


Fan Switch

The standard sleeper climate control panel has a fan switch and a temperature control switch with an A/C button.

If the bunk override button has been activated, the override mode can be canceled by changing the sleeper fan speed or temperature setting. The climate control system will then operate from the sleeper controls.

The fan switch activates the fan, which forces air through the air outlets. The fan switch has eight fan speeds and an OFF position. See Fig.173, [Sleeper Climate Control Panel](#).

To operate the fan switch, turn the switch clockwise to increase airflow; turn the fan switch counterclockwise to decrease airflow. If the vehicle has Optimized Idle, the fan will not operate with the key in accessory mode. Optimized Idle may also turn the fan off to reduce stress on the batteries. Refer to [12.01 Engine Protection—Warning and Shutdown](#) for more information.

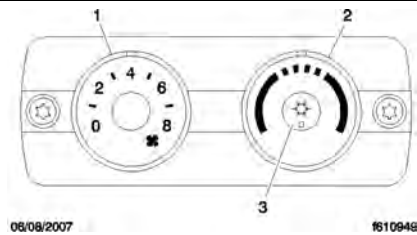

A. Fan Switch

B. Temperature Control Switch

C. Air Conditioning Button

Fig 173, Sleeper Climate Control Panel

When the cab air conditioner (A/C) is on, the sleeper fan will operate at low speed even if the sleeper fan switch is in the off position. This is necessary to protect the evaporator in the sleeper heater and air conditioner system from freezing. At lower fan speed settings, a slight increase in airflow levels may appear at times, as the control acts to regulate the evaporator temperature.

When the park brake is set, any temperature or blower speed setting changes on the bunk HVAC unit control panel will be mimicked by the front HVAC unit. For example, if you set bunk blower speed to HI and the temperature to COLD, the front unit will also operate on HI/COLD.

When the park brake is not set, the front and rear HVAC settings function independently, unless the bunk override button is pressed, or "minimum AC support" is required.

Minimum AC support is when the front unit is off and the bunk unit is set such that AC is requested (needs the AC compressor to run). In this case, the front unit will go into minimum AC support mode by operating the front blower at minimum speed to prevent the front unit evaporator from freezing up. This is also true, if the rear unit is off and the front unit is set such that AC is requested, in order to prevent the bunk evaporator from freezing up.

Temperature Control Switch

The temperature control switch is used to select the desired temperature in the sleeper. Turn the switch counterclockwise for cool air, or clockwise for hot air.

Air Conditioning Button

The A/C cools and dehumidifies the air inside the sleeper. Press the air conditioning button, located in the center of the temperature control switch, to turn the A/C on and off.

Smartway Certified Parked Heater Operation

All vehicles equipped with diesel operated coolant heaters are "Smartway Certified". The coolant heater will keep the engine coolant between approximately 150 and 180°F (65 and 82°C). Heated coolant is routed through the auxiliary HVAC heater core to allow heater-only function of the auxiliary HVAC system.

1. Turn the block heater on.
2. Set the temperature dial to the desired heat setting.
3. Turn the HVAC blower on.

9.01.05 ParkSmart™ HVAC System


Standard Vehicle Configuration

There are two variations of the ParkSmart vehicle configuration. The standard configuration is the most common, and includes all vehicles without Detroit Diesel Optimized Idle (O/I). The second variation includes vehicles equipped with Detroit Diesel Optimized Idle (O/I). Both configurations are operated in the same way, the differences are in how the batteries and charging system are configured. Refer to "Standard Vehicle Configuration" or "Vehicles with Detroit Diesel Optimized Idle" below for more information on your vehicle.

The ParkSmart™ climate control panel replaces the standard sleeper control panel in ParkSmart-equipped sleeper cabs. The ParkSmart HVAC system is designed to maintain a comfortable temperature inside the sleeper, and can operate in

combination with the cab climate control system when the vehicle is running, or independently when the vehicle is parked. It uses a set of four dedicated batteries mounted aft of the starting batteries, either between the frame rails behind the cab or outside the frame rail.

The ParkSmart climate controls operate similarly to the standard sleeper climate controls. The temperature settings range from 60°F (15°C) to 85°F (29°C), with 74°F (23°C) at the very center of the range. The fan switch activates the fan. The fan switch has eight fan speeds. Zero (0) is the OFF position. See Fig. 174, [ParkSmart Climate Control Panel](#). To operate the fan switch, turn the switch clockwise to increase airflow; turn the fan switch counterclockwise to decrease airflow.

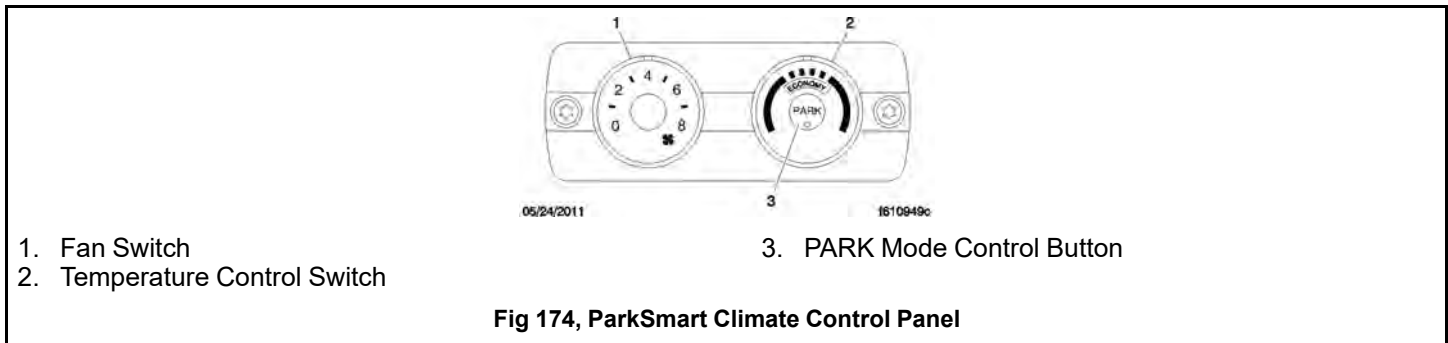

The ParkSmart HVAC system operates both when the engine is running and when the engine is off. When the engine is running, the air conditioning (A/C) is powered by the vehicle electrical system, while the auxiliary heater core is supplied with engine coolant. While the engine is running, the ParkSmart batteries are also being recharged by the vehicle electrical system.

When the engine is off with the key in the ACC or ON positions, A/C mode is powered by the ParkSmart batteries. The cab fan will also circulate air in the cab using power from the main vehicle batteries. The available power for other vehicle-supplied accessories (house loads) will be affected when running in this mode. If there is no Low Voltage Disconnect (LVD) control on the main electrical system, the ability to start the vehicle could also be compromised if this mode is activated for an extended time period.

When the engine is off with the ignition switch in the OFF position, the ParkSmart system runs the battery-operated A/C or diesel-operated coolant heater, depending on the temperature requested, and power is drawn from the batteries. The main batteries and the ParkSmart batteries will both be used until the system voltage drops to 12.5 volts, then the system will switch to the ParkSmart batteries only. The ParkSmart system will run until the dedicated batteries reach 11.3 volts.

Before operating the ParkSmart system, bring the sleeper interior temperature to the desired temperature with the engine running and the bunk curtain open. The ParkSmart system is designed to maintain an established comfortable bunk temperature, in parked mode, for up to 12 hours with the bunk curtain closed. See Table. 16, [Parked HVAC Comfort Guide](#) for recommended settings for comfort while the vehicle is parked. See Table. 17, [Temperature Control Knob Position to Requested Output Temperature](#) shows the temperature knob setting for desired temperatures.

To use the ParkSmart control panel, select a fan speed (other than off) and push the **PARK** button. Adjust the temperature control knob to the desired temperature. Refer to Table. 16, [Parked HVAC Comfort Guide](#) or Table. 17, [Temperature Control Knob Position to Requested Output Temperature](#), depending what mode is being used.

Start the fuel-operated heater once per month and allow it to run for 15 minutes. Periodically running the heater will keep fresh fuel in the lines and ensure the heater is ready to perform when needed.

IMPORTANT: Wait three minutes after shutting down the ParkSmart system before turning the cab load disconnect switch (CLDS) to OFF.

NOTE: The Espar Hydronic 5 water heater can use biodiesel blends up to 10% (B-10). Consult the engine manufacturer's manual to confirm the lowest allowable blend (engine or heater) is not being exceeded.

IMPORTANT: The condition and charge of the auxiliary batteries will directly affect run time of the ParkSmart system. If the vehicle run-time between discharges is less than eight hours, or if additional loads are added to the auxiliary batteries, the ParkSmart run-time will be less than expected.

Parked HVAC Comfort Guide				
Rest Hours Desired	Weather		Setting Guide	
	Outdoor Temperature Less Than or Equal to: °F (°C)	Sunshine Less Than or Equal to:	Maximum Blower Speed	Minimum Temperature Knob Setting
4	105 (40)	Light Sun	8	Full Cold
6	95 (35)	Full Sun	8	Mid
	90 (32)	Light Sun	8	Full Cold
	100 (38)	Night Time	8	Full Cold
	110 (43)	Full Sun	6	3 O'clock
8	75 (24)	Night Time	6-8	Full Cold
	95 (35)	Light Sun	6	10 O'clock
10	85 (30)	Light Sun	6	10 O'clock
	100 (38)	Light Sun	6	Mid
	95 (35)	Night Time	6	10 O'clock
	105 (40)	Night Time	6	Mid
12	90 (32)	Night Time	6	10 O'clock
	100 (38)	Night Time	6	Mid

Table 12, Parked HVAC Comfort Guide

Temperature Control Knob Position to Requested Output Temperature	
Temperature Control Knob Position (Clicks)	Requested Sleeper Temperature: °F (°C)
1	60 (16)
2	60 (16)
3	62 (17)
4	64 (18)
5	66 (19)
6	68 (20)

Table 17, Temperature Control Knob Position to Requested Output Temperature


7	70 (21)
8	71 (22)
9	72 (22)
10	73 (23)
11	74 (23)
12	75 (24)
13	76 (24)
14	77 (25)
15	78 (25)
16	79 (26)
17	80 (27)
18	82 (38)
19	84 (29)
20	85 (29)
21	Full Hot

Table 13, Temperature Control Knob Position to Requested Output Temperature

Vehicles with Detroit Diesel Optimized Idle

If a Cascadia vehicle is equipped with Detroit Diesel optimized idle (O/I), it will affect the way the ParkSmart operates. When the driver initiates the O/I, the ParkSmart will operate in O/I mode as follows.

- The ParkSmart runs unless the ParkSmart fan speed control knob is turned to the "OFF" position. See Fig. 175, [ParkSmart Climate Control Panel](#). The fan speed control knob must be set at "1" or higher.
- The engine will periodically start and run for at least two hours to maintain battery voltage then shut off. The ParkSmart will continue to operate during this time.
- If the O/I shuts down due to a fault in the O/I system, the ParkSmart will continue to operate until it is shut off by the driver or one of the automated failsafes.
- The ParkSmart ON/OFF button and LED indicator on the parked HVAC control module do not function when the vehicle is in O/I mode. When the vehicle is not in O/I mode, the ParkSmart ON/OFF button and LED indicator operate normally.

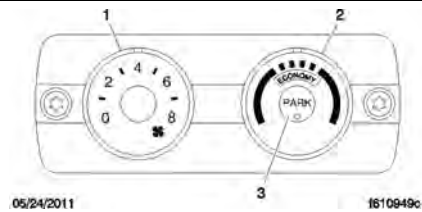

1. Fan Switch
2. Temperature Control Switch
3. PARK Mode Control Button

Fig 175, ParkSmart Climate Control Panel

All other functions are the same as the standard system.

9.01.06 Accessory Heaters

Espar Heater

Optional accessory heaters are available from the factory in several configurations. Familiarize yourself with the equipment on your specific vehicle, and follow the manufacturer's operating and maintenance instructions.



WARNING:

Do not operate fuel-operated heaters in an area where flammable vapors, including gasoline or diesel fumes, are present, such as at filling stations and tank farms. Turn off a fuel-operated heater and allow it shut down completely before entering an area where flammable gases or liquids are present. Heaters continue to operate for up to three minutes after being turned off.

Failure to observe these precautions could cause an explosion or fire, resulting in serious property damage, and personal injury or death.

NOTE: Always ensure that air inlet and outlet grilles are not restricted. Restriction of any air inlet or outlet ports could result in damage to the auxiliary heater.

IMPORTANT: To maintain reliable performance, run the accessory heater for at least 15 minutes every month to prevent fuel from degrading.

Accessory heaters function when the ignition switch is in the off position and the cab load disconnect switch is on, if equipped.

IMPORTANT: Wait three minutes after shutting down an accessory heater before turning the cab load disconnect switch (CLDS) to OFF.


NOTE: The low voltage disconnect (LVD) control prevents a heater from draining the batteries below starting voltage.

Espar Heater

Refer to the Espar website, www.espar.com, for additional information.

Espar Mini-Controller

To turn the heat on, press the heat button. See Fig.176, [Espar Mini-Controller](#). The red indicator will illuminate when heat mode is activated. Adjust the desired temperature with the control knob; rotate the temperature control knob clockwise for warmer air, or counterclockwise for cooler air. To turn the heat off, press the off button.

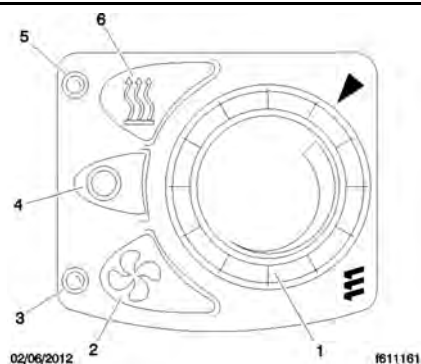

- | | |
|-----------------------------|-------------------------|
| 1. Temperature Control Knob | 4. Off Button |
| 2. Fan Button | 5. Heat Indicator (red) |
| 3. Fan Indicator (blue) | 6. Heat Button |


Fig 176, Espar Mini-Controller

To turn the fan on, press the fan button. The blue indicator will illuminate when ventilation mode is activated. To turn the fan off, press the off button.

Espar Digi-Controller

Vehicles built after December 8, 2011 with the Digi-Controller and D2 air heaters are equipped with an internal LVD in the Digi-Controller that prevents the heater from draining battery voltage below 12.0 volts.

To turn heat mode on, press the heat button and the heater will begin its start-up cycle. See Fig.177, [Espar Digi-Controller](#). ON will display briefly followed by the ambient temperature, and the green indicator will illuminate. Ambient display temperature range is 41°F to 90°F.

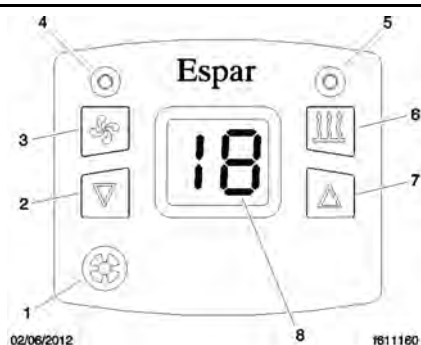

- | | |
|-------------------------------|--------------------------------|
| 1. Ambient Temperature Sensor | 5. Heat Indicator (green) |
| 2. Down Arrow Button | 6. Heat On/Off Button |
| 3. Fan Button | 7. Up Arrow Button |
| 4. Fan Indicator (blue) | 8. Ambient Temperature Display |

Fig 177, Espar Digi-Controller

To adjust the desired temperature, press the up or down arrow buttons. The desired temperature will display briefly, followed by the ambient temperature. The desired temperature will remain in the modulator memory when the heater is not in operation. Temperature adjustment range is from 41°F to 90°F.


To turn heat mode off, press the heat button again. The heater will initiate a 3-minute cooling cycle.

To turn the fan on, press and hold the fan button until the blue indicator illuminates and the display shows active rotating digits. To turn the fan off, press the fan button again.

NOTE: The Digi-Controller also has a programmable run timer that will automatically shut the heater off after the set time limit. The default time limit setting is 10 hours.

Webasto Heater

To turn the heater on, rotate the heater control knob clockwise until the indicator light illuminates. See Fig. 178, [Webasto Heater Control Knob](#). The Webasto heater requires one to two minutes to warm up before warm air is delivered.

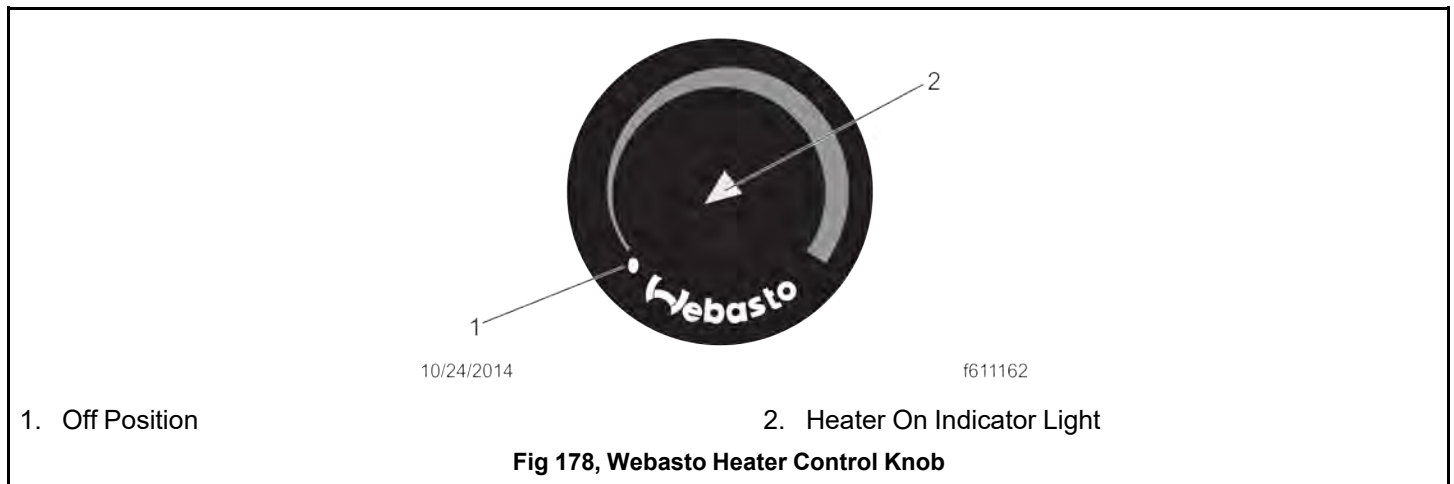

To set the desired temperature, rotate the heater control knob clockwise for warmer air, or counterclockwise for cooler air.

To turn the heater off, rotate the heater control counterclockwise until it clicks and the indicator light is extinguished. The heater will initiate a two-minute cooling cycle.

Refer to the Webasto website, techwebasto.com , for additional information.

10.01 Windows..... 176

10.02 Mirrors..... 176

10.03 Cab Amenities 177

 10.03.01 Cup Holders 177

 10.03.02 Lighting 177

 10.03.03 Power Outlets 177

 10.03.04 Radio and CB 178

 10.03.05 Storage 178

10.04 Sleeper Amenities 178

 10.04.01 Sleeper Bunks 178

 10.04.02 Baggage Compartment Doors..... 180

 10.04.03 Lighting 180

 10.04.04 Power Outlets 180


 10.04.05 Sleeper Access Door..... 180

 10.04.06 Sliding Side Window..... 181

10. Cab Features

10.01 Windows

Power windows are standard on Cascadia™ vehicles. The driver's door has two switches mounted in the top of the door, that control the driver and passenger windows separately. See Fig.179, [Door Switches \(driver-side shown\)](#). The passenger door has a switch mounted in the top of the door that controls the passenger-side power window.

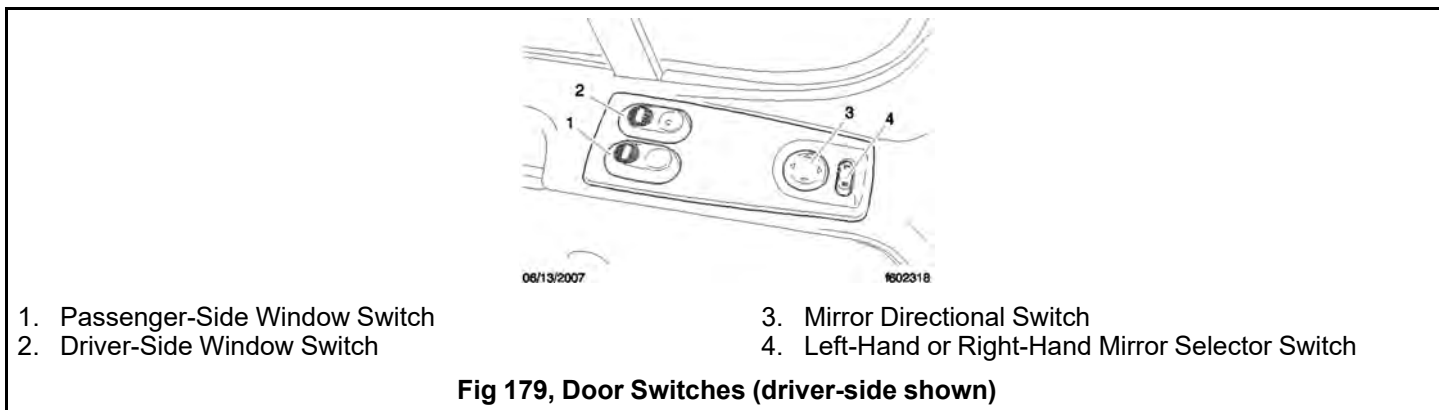
WARNING:


There is no anti-pinch protection when the window is almost closed. Be sure to clear all objects from the window before closing.

The window switches have three positions: lower window, neutral, and raise window. Press forward on the switch to lower the window. Hold the switch down in the forward position for approximately one second to activate the express function; the window will continue to roll down after the switch is released. Press the switch in the rearward position (bump) to raise the window.

10.02 Mirrors

The standard outside mirrors are mounted on the door frame. The power mirrors are controlled with a left-hand or right-hand mirror selector switch, and a directional switch. Select the left (driver) mirror, or the right (passenger) mirror using the selector switch. The mirror can then be adjusted by pressing the directional switch arrow for the direction the mirror should be adjusted.

The outside door mirrors can be heated to keep them clear of fog, frost, and ice. To heat the mirrors, press the upper part of the mirror heat switch on the dash. See Fig.180, [Mirror Heat Switch](#). When the mirror heat switch is on, an amber indicator light illuminates inside the switch. If the vehicle has Optimized Idle, mirror heating will not operate with the key in accessory mode, or if the Optimized Idle feature turns mirror heating off to reduce stress on the batteries. Refer to [12.01 Engine Protection—Warning and Shutdown](#) for more information.

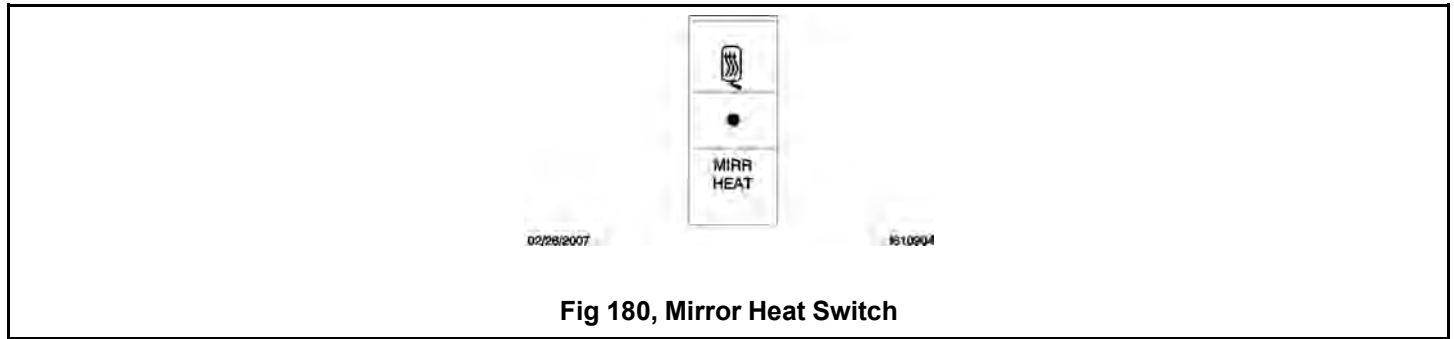


10.03 Cab Amenities

10.03.01 Cup Holders

Cascadia vehicles are available with many optional features. The following are some of those options.

Two cup holders and a storage tray are molded into the center dash. See Fig.181,[Center Dash](#).

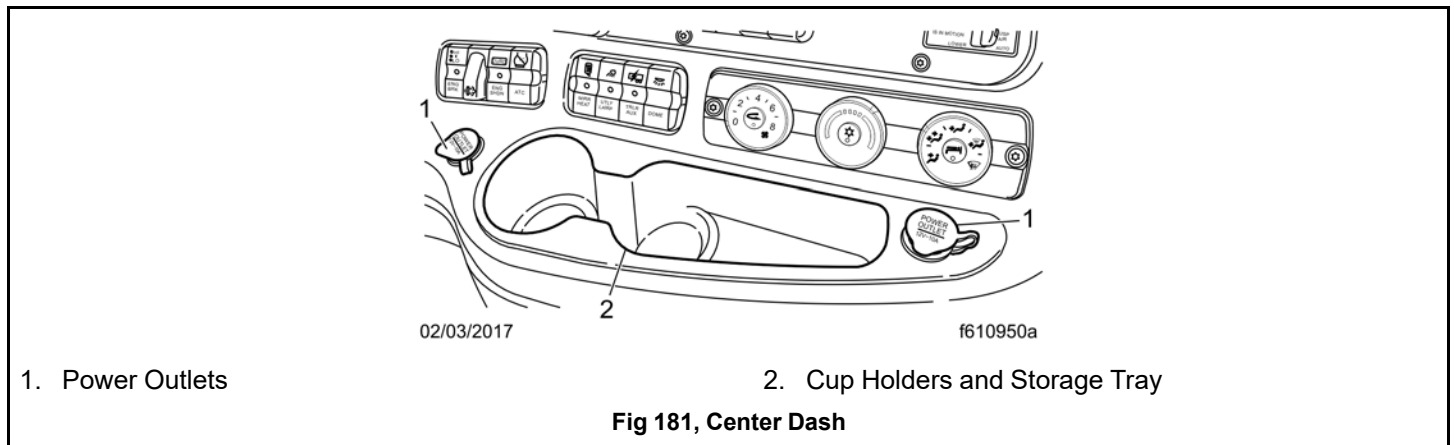


10.03.02 Lighting

See [6.01 Ignition Switch and Key](#) for detailed information regarding lighting controls.

10.03.03 Power Outlets

Power outlets that supply 12V power for accessories are located on either side of the cup holders. An optional ashtray/coin holder may be located in the center dash. See Fig.182,[Center Dash](#).

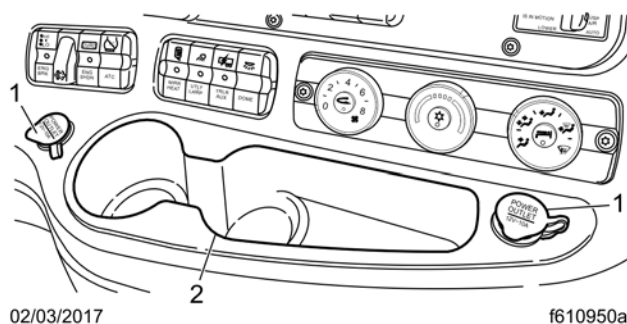

1. Power Outlets

2. Cup Holders and Storage Tray

Fig 182, Center Dash

10.03.04 Radio and CB


The radio and CB are typically installed in the overhead console. An optional hot mount may be installed on the dash for fleet CB radios.

10.03.05 Storage

Storage compartments/grab handles are molded into the lower portion of the driver and passenger doors.

The glove box is located in front of the passenger seat. To lock the latch, insert the key in the lock, and turn it 1/2-turn clockwise. Remove the key. To unlock the latch, insert the key in the lock, and turn it 1/2-turn counterclockwise. The glove box door is hinged at the bottom. To open the unlocked door, push the button in with your thumb and pull gently on the tang-style latch. The door will swing downwards, then stop in the open position. To close the door, swing it upwards, and put gentle pressure on the latch. The door will be secured, but not locked.

Storage pockets are located in the overhead console, above the driver and passenger seats. A glove box is located in the center of the overhead console. See Fig.183, [Overhead Storage](#).

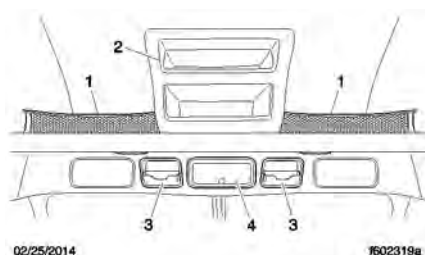

1. Cargo Storage with Netting

2. Overhead Storage Compartment

3. Storage Pocket

4. Glove Box

Fig 183, Overhead Storage

10.04 Sleeper Amenities

10.04.01 Sleeper Bunks

Lower Bunks

Cascadia sleepers are available with many optional features.

NOTE: See for detailed information regarding sleeper climate controls.

NOTE: Make sure bunks are locked in place before sleeping or driving the vehicle.

Sleeper cabs can come with a lower bunk, an upper bunk, or both.


Lower bunk configurations include a bed with storage underneath or a pull-down bed with a lounge.

To access the storage compartment under a lower bunk, push the release lever centered under the bunk to the right then pull up on the bunk. Pushing the bunk back into a horizontal position will cause the bed latches to lock.

Setting up the pull-down bed with lounge (see Fig.184, Pull-Down Bend with Lounge) consists of the following steps:

NOTE: To avoid damaging the upholstery, unlock and move the seatbelts to the side before folding the chairs closed.

1. To fold down each chair, pull forward on the seat latch while pulling the back of chair toward the seat.
2. Pull the table t-pull handle forward and then push down on the top of the table until it is at the same level as the folded seats.
3. Pull the pull-down bed release latch until you feel a release of tension.
4. Reach up and grasp the edge of the pull-down bed and pull it down until the lower latch pins engage in the lower bunk locks.

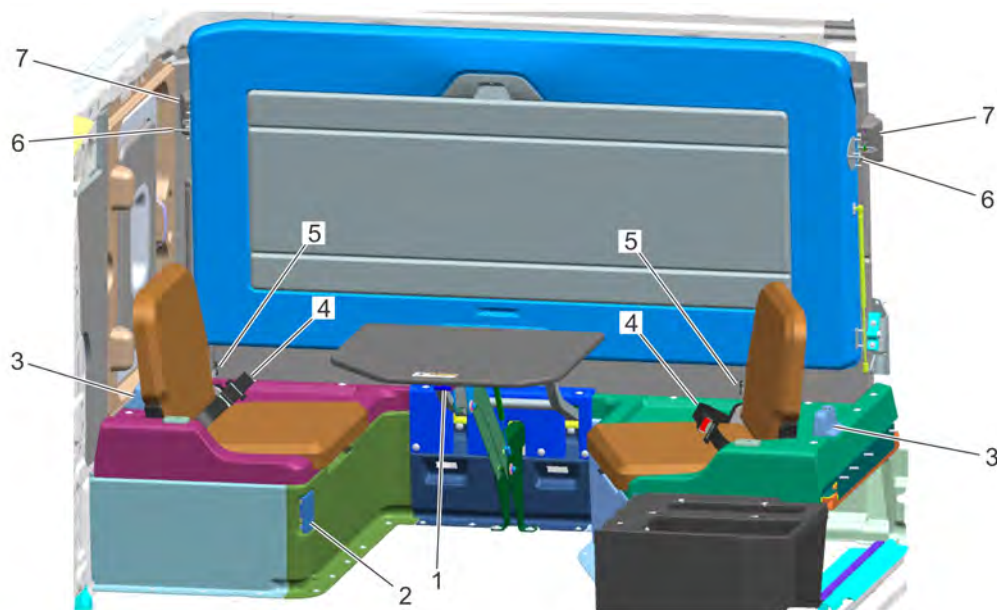

10/31/2019

f602720

- | | |
|--------------------------------|---|
| 1. Table T-Pull Handle | 5. Seat Latches |
| 2. Pull-Down Bed Release Latch | 6. Lower Bunk Latch Pins |
| 3. Lower Bunk Locks | 7. Upper Bunk Latch Pins Engaged in Upper Locks |
| 4. Seatbelts | |

Fig 184, Pull-Down Bend with Lounge

Setting up the lounge area consists of the following steps:

5. Pull out on the pull-down bed release latch until you feel a release.
6. Holding the front edge, push the pull-down bed up toward the back wall until you hear or feel the upper latch pins lock into place.
7. Pull the table t-handle and lift up on the table. As the table nears the correct height, the t-pull handle will be pulled back and lock into position. If this doesn't happen, reach under the raised table and push the t-pull handle in. Then gently push down to make sure the table is locked in the upright position.

8. To unfold each chair, push down on the seat latch while pulling up on the top of the chair, then push the top of the chair backwards.

Upper Bunks

NOTE: The maximum occupancy weight for the upper bunk is 250 pounds.

Upper bunks fold up against and lock onto the cab back wall.

To unlock and fold down an upper bunk, grasp the bunk release handle (see Fig. 185, [Upper Bunk Release Handle](#)) and turn it to either the left or right and pull down.



Fig 185, Upper Bunk Release Handle

To fold up and lock an upper bunk, turn the bunk release handle to the left or right and push up and back until the bunk locks into position against the cab back wall.

10.04.02 Baggage Compartment Doors

The baggage compartment doors are intended as a convenient means to stow or remove items under the bunk. The baggage compartment doors can be opened using the pull cable located near the aft edge of the cab door opening on the sidewall behind the seat. Pull the cable handle labeled **BAGGAGE** forward to open the door.

IMPORTANT: The baggage compartment doors are two-stage latching. When closing the doors, ensure that they are completely latched to prevent wind noise and water intrusion.

10.04.03 Lighting

See [6.01 Ignition Switch and Key](#) for detailed information regarding lighting controls.

10.04.04 Power Outlets

Power outlets are located underneath the lower bunk.

10.04.05 Sleeper Access Door

The sleeper access door is not intended for entry or exit. The door is intended only as a convenient means to stow or remove personal belongings in the sleeper area. The sleeper access door can be opened using two different methods. The primary method is the pull cable located near the lower rear edge of the cab door opening on the sidewall behind the seat. Pull the cable handle labeled **ACCESS** forward to open the sleeper door. The secondary method is the black knob located at the upper rear edge of the sleeper door opening. Pull the knob down to open the sleeper door.

IMPORTANT: The sleeper access doors are two-stage latching. When closing the doors, ensure that they are completely latched to prevent wind noise and water intrusion.

10.04.06 Sliding Side Window

The lower section of the sliding side window moves vertically and may be locked in multiple positions to suit. Two spring-loaded tabs are located at the top of the sliding section. To adjust the window, pull both tabs toward the center of the glass and move the sliding section to the desired height. Release the tabs to lock the sliding section.

11.01 Engine Starting.....	184
11.01.01 General Description.....	184
11.01.02 Cold-Weather Starting	186
11.01.03 Starting After Extended Shutdown	186
11.02 Engine Operation	186
11.02.01 Safety and Environmental Consideration.....	186
11.02.02 Engine Break-In	187
11.02.03 Normal Operation.....	187
11.02.04 Cold-Weather Operation	187
11.02.05 High-Altitude Operation	188
11.03 Engine Shutdown	188

11. Engine Starting, Operation, and Shutdown

11.01 Engine Starting

11.01.01 General Description

This engine chapter is to serve as a guide for best practices only. Each engine model may have operating characteristics that are unique to that particular engine, and will be documented in the engine manufacturer's literature. Always refer to specific instructions and recommendations from the engine manufacturer.

NOTE: Before starting the engine, see , **Instruments**, and see , **Driver Controls**. Read the engine manufacturer's operating instructions before starting the engine.

**WARNING:**

Never pour fuel or other flammable liquid into the air inlet opening in the air intake in an attempt to start the vehicle. This could result in a flash fire causing serious personal injury or property damage.

IMPORTANT: Cascadia vehicle is equipped with starter interlocks to enhance reliability and safety. Anti-grinding, starter pinion, and thermal protection logic limit the amount of time and conditions for starter engagement. Cranking may be limited from 5 to 15 seconds, with a 30-second cool-down period, as determined by the protection logic. If the engine is turning, the starter will not engage. Depending on the transmission option, the starter will not engage if the clutch is not fully depressed, or if the transmission is not in neutral.


IMPORTANT: The starter **can not** be used for priming the fuel system. If the fuel/water separator filter is replaced, and the fuel system needs to be primed, see the engine manufacturer's operating instructions.

1. Before engine start-up, complete the pre- and post-trip inspections and maintenance procedures, see [22.01 Safety Precautions](#).
2. Set the parking brake.
3. Place the transmission in neutral. On vehicles with manual transmissions, fully depress the clutch pedal.

NOTE: Depending on local jurisdictional emissions regulations, vehicles and/or engines that are domiciled outside of the U.S. and Canada may not be equipped with the WAIT TO START or START BLOCKED lamp.

4. Turn the ignition switch to the ON position and allow the self-check to complete. See Fig.186, [Ignition Switch](#).

During cold conditions, the WAIT TO START lamp may illuminate. Wait until the lamp goes out before turning the ignition key to START.

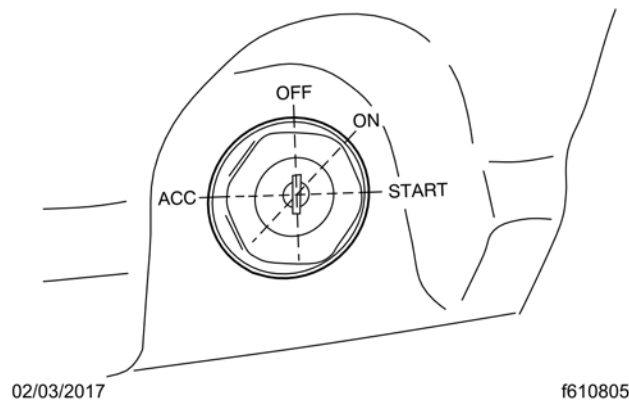**Fig 186, Ignition Switch**

NOTE: The length of time the WAIT TO START lamp remains illuminated depends on the ambient temperature. The lower the ambient temperature, the longer the lamp will be illuminated.

NOTE: If the ignition switch is turned to START before the gauge sweep has completed or if the starter has overheated, the START BLOCKED lamp may illuminate. Turn the ignition switch back to ON, wait for the lamp to go out, then turn the ignition switch to START again.

- Once the gauge sweep has completed, turn the ignition key to the START position. Release the key the moment the engine starts.

**NOTICE:**

Do not rev the engine if the oil pressure gauge indicates no oil pressure. Shut down the engine if oil pressure does not build within approximately ten seconds. Check to determine the cause of the problem. Operating the engine with no oil pressure will damage the engine.

- It is not necessary to idle the engine before engaging or starting the operation, but load should be applied gradually during the warm-up period until the oil temperature reaches 140°F (60°C).
- Apply load gradually during the warm-up period.

**NOTICE:**

If the oil pressure gauge indicates no oil pressure, shut down the engine within approximately ten seconds to avoid engine damage.

- Check the oil pressure gauge for any drop in lubricating oil pressure or mechanical malfunction in the lubricating oil system. Minimum oil pressure at idle is 7 psi (50 kPa).

11.01.02 Cold-Weather Starting

See the engine manufacturer's operation manual for starting aids that are approved for specific engines.

11.01.03 Starting After Extended Shutdown

Before engine start-up, complete the engine pre-trip inspections, see [22.01 Safety Precautions](#).

**NOTICE:**

Failure to eliminate water-diluted lubricating oil may lead to serious engine damage at startup.

An engine in storage for an extended period of time (over winter, for example) may accumulate water in the oil pan through normal condensation of moisture on the internal surfaces of the engine. Oil diluted by water cannot provide adequate bearing protection at start-up. For this reason, change the engine oil and filters after extended storage.

11.02 Engine Operation

11.02.01 Safety and Environmental Consideration

**WARNING:**

Do not operate the engine in an area where flammable vapors such as gasoline or diesel fumes are present. Shut off the engine when in an area where flammable liquids or gases are being handled. Failure to observe these precautions could result in serious injury or death.

All engines on Freightliner vehicles comply with the requirements of the Federal (U.S.) Clean Air Act. Once an engine is placed in service, the responsibility for meeting both state and local regulations is with the owner/operator.

IMPORTANT: Depending upon local jurisdictional emissions guidelines, vehicles that are domiciled outside of the U.S. and Canada may not have engines and/or emissions aftertreatment systems that are compliant with current emissions regulations.

**NOTICE:**

It is extremely important that the following guidelines be followed for engines that comply with EPA07 or newer regulations, or damage may occur to the aftertreatment device, and the warranty may be compromised.

- Use ultralow-sulfur diesel with 15 ppm sulfur content or less.
- Do not use fuel blended with used engine lube oil or kerosene.
- Use only approved engine lube oil. For lists of engine oils approved for Detroit Diesel engines, refer to the Engine Operator Manual, accessible on Lubricants, Fuels & Coolants on the DTNA Portal. For third party engines, please refer to the engine manual.

A Top Tier compliant fuel is recommended. Look for the symbol that denotes a Top Tier compliant fuel; see Fig. 187, [Top Tier Fuel Symbol](#).



Fig 187, Top Tier Fuel Symbol

Adequate maintenance of the engine and the diesel particulate filter (DPF) are the responsibility of the owner/operator, and are essential to keep the emission levels low. Good operating practices, regular maintenance, and correct adjustments are factors that will help keep emissions within the regulations.

The driver should be familiar with the vehicle warning system in order to bring the vehicle to a safe stop if the engine malfunctions. If the driver doesn't understand how the warning system works, an engine shutdown could occur, causing a safety hazard. See for more information.

11.02.02 Engine Break-In

Each engine must pass a full-load operating test on a dynamometer before shipment, thereby eliminating the need for a break-in. Before running the engine for the first time, follow the instructions in the manufacturer's engine operation manual.

11.02.03 Normal Operation



WARNING:

Do not operate the engine in an area where flammable vapors such as gasoline or diesel fumes are present. Shut off the engine when in an area where flammable liquids or gases are being handled. Failure to observe these precautions could result in serious injury or death.

Every engine has an operating range in which it performs most efficiently. The operating range extends from maximum torque rpm at the low end, to engine rated speed at the high end. Most engines deliver best fuel economy when operated in the low- and mid-speed segments of the efficiency range and produce maximum horsepower at rated speed, which is also the recommended maximum speed of the engine. For further engine-specific information, refer to the engine manufacturer's operation manual.

Prolonged idling of engines is not recommended, and is illegal in some states. Idling produces sulfuric acid that is absorbed by the lubricating oil, and eats into bearings, rings, valve stems, and engine surfaces. If you must idle the engine for cab heating or cooling, use the high idle function of the cruise control switches. An idle speed of 900 rpm should be enough to provide cab heat in ambient temperatures that are above freezing.

If the engine is programmed with an idle shutdown timer, 90 seconds before the preset shutdown time, the CHECK engine light will begin to flash at a rapid rate. If the position of the clutch pedal or service brake changes during this final 90 seconds the idle shutdown timer will be disabled until reset.

11.02.04 Cold-Weather Operation

Satisfactory performance of a diesel engine operating in low ambient temperatures requires modification of the engine, surrounding equipment, operating practices, and maintenance procedures. The lower the temperature, the greater the amount of modification required. For service products approved for use in cold weather for your engine, see the engine manufacturer's engine operation manual.

If satisfactory engine temperature is not maintained, maintenance costs will increase due to greater engine wear. If the engine coolant gets too cold, raw fuel will wash the lubricating oil off the cylinder walls and dilute the crankcase oil, causing all moving parts of the engine to suffer from poor lubrication.

If the engine is in good mechanical condition and the precautions necessary for cold-weather operation are taken, ordinary cold weather will not cause difficulty in starting or loss of efficiency.

The following points are important to observe when operating in cold weather.

- Check for cracks in the battery cases, for corrosion of the terminals, and for tightness of the cable clamps at the terminals.
- Charge the batteries to full capacity. Replace damaged batteries.
- If equipped, turn off the load disconnect switch after the engine is shut down to prevent battery discharge.
- Have the alternator output checked at an authorized Freightliner service provider.
- Check the condition and tension of the drive belts.
- Refer to the engine manufacturer's operation manual for recommended heaters, low-viscosity lubricating oils, winter-grade fuels, and approved coolants.
- Periodically check the coolant mixing ratio (concentration of antifreeze in the coolant). Add more if necessary.
- At outside temperatures below -4°F (-20°C), a coolant preheater is recommended.

**NOTICE:**

For Detroit engines (EPA07 and newer), use of a winterfront is not recommended, as it can cause false fault codes with the engine and aftertreatment system, and possible emission component failures.

If using a winterfront, leave at least 25% of the grille opening exposed in sectioned stripes that run perpendicular to the charge-air-cooler tube-flow direction. This assures even cooling across each tube, and reduces header-to-tube stress, and possible chance of component failure. For engine-specific guidelines, see below:

Cummins and Mercedes-Benz engines: A winterfront may be used to improve cab heating while idling, and only when the ambient temperature remains below 10°F (-12°C).

Detroit engines (EPA07 and newer): Use of a winterfront is not recommended. Using a winterfront can cause excessive fan run time, increased fuel consumption, and failure of the DEF system heaters to operate correctly, resulting in fault codes, poor performance, and power reduction. A winterfront should only be used temporarily in the following situations:

- To improve cab heating while idling in an extremely cold ambient temperature;
- When the ambient temperature remains below -22°F (-30°C) and the engine is unable to maintain a running coolant temperature of 175°F (80°C) during normal over-the-road operation.

11.02.05 High-Altitude Operation

Engines lose horsepower when operated at high altitude because the air is too thin to burn as much fuel as at sea level. This loss equals about three percent for each 1000 ft (300 m) altitude above sea level for a naturally aspirated engine.

All engines used on Freightliner vehicles are altitude-compensated by the use of a turbocharger. This reduces smoky exhaust at high altitudes, requires less downshifting, and allows the engine to make better use of its fuel. Nevertheless, shift gears as needed to avoid excessive exhaust smoke.

11.03 Engine Shutdown

1. With the vehicle stopped, set the parking brake and place the transmission in neutral.

**NOTICE:**

Idle the engine one to two minutes before shutting it down. After hard operation, shutting down the engine without idling may cause damage to the turbocharger.

2. Allow the engine to idle one to two minutes before shutting it down. This allows the lubricating oil and the coolant to carry heat away from the combustion chambers, bearings, shafts, and seals.

**NOTICE:**

Except in an emergency, do not shut down the engine when the coolant temperature is above 194°F (90°C). To do so could damage the engine.

3. Turn off the ignition switch and shut down the engine.

12.01 Engine Protection—Warning and Shutdown	192
12.02 Engine Idle Limiting	193
12.02.01 Idle Shutdown Timer	193
12.03 Power Takeoff (PTO) Governor	193
12.04 Optimized Idle®	194

12. Optional Engine Systems

12.01 Engine Protection—Warning and Shutdown

NOTE: The engine warning and shutdown system is present on EPA07-compliant and newer vehicles.

The driver should be familiar with the vehicle warning system in order to bring the vehicle to a safe stop if necessary. If the driver doesn't understand how the warning system works, the driver may not be able to utilize the advantage of the advance warning system to pull over appropriately.

The engine will begin a warning and derate and/or shutdown process if the engine coolant temperature, coolant level, engine oil pressure, or exhaust aftertreatment system (ATS) reach preset levels. On some engines, the warning process will begin when the engine oil temperature, engine coolant temperature, or the intake air temperature reach preset levels. Detroit™ engines may also begin the warning and shutdown process if water is detected in the fuel.

See the engine manufacturer's operation manual for specific details for your vehicle. See [13.01 Greenhouse Gas Emissions and Fuel Consumption Standards](#) for the warning and shutdown modes associated with the ATS.


Electronic engine protection can be specified as either SHUTDOWN or WARNING and DERATE.



WARNING:

When the STOP engine or CHECK engine lamp illuminates, most engines are programmed to shut down automatically within 30 seconds. The driver must immediately move the vehicle to a safe location at the side of the road to prevent causing a hazardous situation that could cause bodily injury, property damage, or severe damage to the engine.

In SHUTDOWN mode, the red STOP engine lamp will illuminate when the problem is serious enough to reduce power or speed. See Fig.188, [Engine Warning Lamps](#). Engine power will ramp down, then the engine will shut down if the problem continues while in derate mode. The driver has 30 or 60 seconds (depending on the critical fault type) after the STOP engine lamp illuminates to move the vehicle safely off the road. If the vehicle cannot be moved to a safe location within that time, turn the ignition switch to OFF for at least five seconds, then restart the engine. Repeat this action until the vehicle is safely off the road.

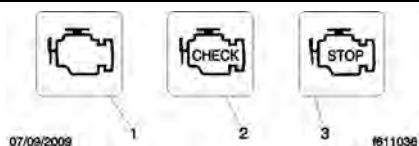


1. Malfunction Indicator Lamp (MIL)
2. CHECK Engine Lamp

3. STOP Engine Lamp

Fig 188, Engine Warning Lamps

Do not operate the vehicle further until the problem causing the shutdown has been corrected.

Some vehicles may have a shutdown override switch, which can be used to momentarily override the shutdown sequence. This switch resets the shutdown timer, restoring power to the level before the derate. The switch must be pressed again after five seconds to obtain a subsequent override. See Fig.189, [Shutdown Override Switch](#).

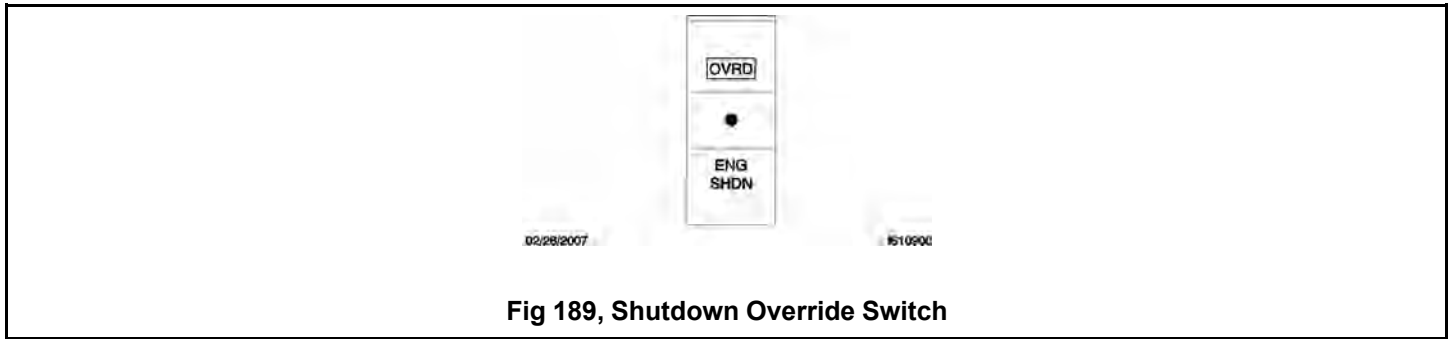**NOTICE:**

When the derate process begins, immediately get the vehicle serviced in order to prevent severe damage to the engine.

Detroit engines may begin a warning and derate process if water is detected in the fuel, or for high engine coolant temperature. In WARNING and DERATE mode, the CHECK engine, STOP engine, or MIL lamp will illuminate to indicate an engine problem that requires service and the engine controls will begin a derate of engine output. Continuing to run the engine while it is in derate mode could cause severe damage to the engine.

12.02 Engine Idle Limiting

12.02.01 Idle Shutdown Timer

This feature is an optional 1- to 100-minute idle shutdown system. Its purpose is to conserve fuel by eliminating excessive idling, and allowing a turbocharger cool-down period. Idle shutdown timing and parameters are programmable. See the engine manufacturer's operation manual for specific details for your vehicle.

The idle shutdown system requires that the transmission be in neutral with the parking brake set.

12.03 Power Takeoff (PTO) Governor

**WARNING:**

To avoid injury, do not install a PTO that is not Detroit Diesel approved onto a Detroit™ Transmission. Use of a non-Detroit Diesel approved PTO with a Detroit Transmission could result in unintended operation which could lead to severe personal injury.

Engine power takeoffs (PTO) tap into engine power to run auxiliary devices, such as hydraulic pumps that power additional equipment. The following are general guidelines for operating a PTO.

1. Set the parking brake and put the transmission in neutral.
2. Press the dash PTO switch. Release the switch when the light begins to blink.

When the light illuminates steadily, the PTO is engaged and ready to operate. In stationary mode, the vehicle must remain in neutral with the parking brake set.

3. To activate mobile mode, shift from neutral to reverse, 1st, or 2nd gear. The clutch will open and the PTO will disengage for a moment.

4. Touch the accelerator pedal to close the clutch and engage the PTO in mobile mode. The PTO may be operated with the transmission in neutral or reverse, and 1st and 2nd gears only.

NOTE: Do not attempt to change gears while the vehicle is moving. The transmission will ignore the request.

5. To deactivate mobile mode, bring the vehicle to a stop. The clutch will open and shut down power to the PTO.
6. To resume stationary mode, shift to neutral. The PTO will engage.
7. To deactivate PTO, press the PTO switch again. When the light in the switch goes out, power to the PTO is shut off.

12.04 Optimized Idle®

Optimized Idle reduces engine idle time by running the engine only when required. Optimized Idle automatically shuts down and restarts the engine as needed to ensure engine oil temperature remains within factory preset limits, the batteries stay charged, and cab/sleeper temperature remains at the thermostat setting. The benefits of the system include reduced engine idle time, fuel savings, reduction of exhaust emissions and noise, increased starter and engine life, and reduced chance of dead batteries.

Vehicles equipped with Optimized Idle have a label on the dash, and a telltale (OPT IDLE) in the ICU. See Fig. 190, [Optimized Idle Dash Label](#) for the dash label detail. If equipped, a thermostat is located above the sleeper bunk. See Fig. 191, [Optimized Idle Thermostat](#).


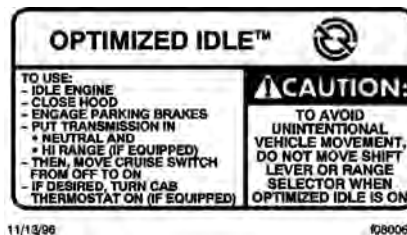


Fig 190, Optimized Idle Dash Label

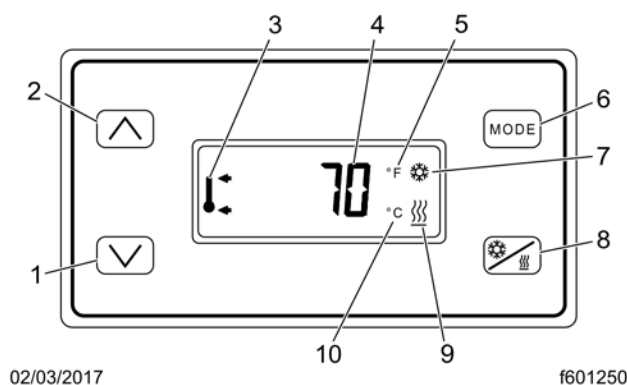

- | | |
|---------------------------------|-------------------------------|
| 1. Down Arrow Button | 6. MODE Button |
| 2. Up Arrow Button | 7. Cooling Icon |
| 3. Upper/Lower Temperature Icon | 8. Cool/Heat Selection Button |
| 4. Temperature Display | 9. Heating Icon |
| 5. Degrees Fahrenheit Indicator | 10. Degrees Celsius Indicator |

Fig 191, Optimized Idle Thermostat

Optimized Idle operates in two modes:

- Engine mode: Keeps the battery charged and engine oil temperature between 60 and 104°F (16 to 40°C).
- Thermostat mode (activated when the optional thermostat is turned on): Keeps the cab and sleeper at a constant preset temperature, in addition to all functions available in engine mode.

Thermostat mode controls the set point, which is the desired temperature of the cab and sleeper, and the comfort zone, which is the allowed temperature deviation from the set point before the engine starts.

The thermostat display defaults to show the temperature of the sleeper, but changes accordingly as the buttons are pressed.

The button functions are as follows:

- Up arrow: Increases the set point and comfort zone (allowed temperature variation).
- Down arrow: Decreases the set point and comfort zone.
- Cool/Heat: Sets either cooling or heating operation.
- MODE: Scrolls through the various functions. It can also be used to set desired temperature values.

If a vehicle has Optimized Idle, the following functions will not operate with the key in accessory mode. Optimized Idle may also turn these functions off to reduce stress on the batteries.

- Cab climate control fan
- Sleeper climate control fan
- Mirror heat
- Fuel/water separator heat
- Seat heat
- Advertising light
- Auxiliary circulation fan (windshield)
- Air dryer

1. To activate Optimized Idle (engine mode):
 - 1.a Set the parking brake.
 - 1.b If it is open, close and secure the hood.
 - 1.c Start the engine and let it idle.
 - 1.d Put the transmission in neutral.
 - 1.e Turn on the cruise control.

The OPT IDLE lamp will blink, indicating that Optimized Idle is active. The system is now in engine mode and after an initial phase, in which the idle speeds up to 1000 rpm, the engine will stop and start automatically to keep the battery charged and the engine oil warm.

IMPORTANT: The cruise control must be turned on once the engine is idling. If it was previously turned on, turn the cruise control off, then turn it on again.

2. Activate thermostat mode, if equipped.

NOTE: When the system is in thermostat mode, it is also in engine mode. It will continue to operate in engine mode even if thermostat mode is turned off.

- 2.a With the system in engine mode, set the cab and sleeper heater or air conditioner controls to the highest setting.
- 2.b Turn on the thermostat by touching any of the four buttons. See Fig.191, [Optimized Idle Thermostat](#).
The display will flash the current sleeper temperature and the previous mode (cooling or heating) selected. If the cab needs to be cooled or heated, the cool/heat icon will flash.
- 2.c Choose either cool or heat by pressing the Cool/Heat button. Make sure the selection matches that of the cab controls.

IMPORTANT: If the heat or cool selection of the thermostat does not match that of the cab controls, the system will idle and cycle excessively.

- 2.d Select Fahrenheit or Celsius by pressing and holding the MODE button until either the "F" or "C" is displayed.
 - 2.e Select the temperature set point by pressing the up or down arrows, as applicable. Holding the button will cause the display to scroll up or down rapidly. When the desired set point is displayed, release the button. The set point is stored in memory.
 - 2.f Select the temperature comfort zone by pressing the MODE button until the upper and lower temperature limit icon is displayed. Then use the up or down arrow to select one of the three comfort zones: 4°F (2°C), 7°F (4°C), or 10°F (6°C).
- 3. To deactivate thermostat mode and return to just engine mode, press and hold the MODE button for three seconds.
 - 4. To shut down Optimized Idle completely, either turn off the ignition or use the drive away feature.

The drive away feature allows the use of all the engine features. Use the drive away feature as follows:

- 4.a If the engine is running: Release the parking brakes or put the transmission in gear.
If the engine is not running: Start the engine. Release the parking brakes or put the transmission into gear.
- 4.b Let the engine return to base idle. The active light will turn off. Optimized Idle is now disabled.

13.01 Greenhouse Gas Emissions and Fuel Consumption Standards.....	198
13.02 EPA-Regulated Emissions Aftertreatment Systems.....	198
13.02.01 EPA07 Engines.....	198
13.02.02 EPA10 and Newer Engines.....	198
13.02.03 Regeneration.....	199
13.02.04 ATS Warning Lamps.....	200
13.02.05 Maintenance.....	202
13.03 Diesel Exhaust Fluid and Tank, EPA10 and Newer Engines.....	202
13.03.01 Diesel Exhaust Fluid.....	202
13.03.02 DEF Tank.....	203
13.03.03 Fuel/DEF Gauge.....	203
13.03.04 DEF Warnings and Engine Limits.....	204

13. Emissions and Fuel Efficient Components

13.01 Greenhouse Gas Emissions and Fuel Consumption Standards

Vehicles and/or engines manufactured after December 31, 2006 and domiciled in the U.S. or Canada are required to meet all EPA and NHTSA regulations effective as of the vehicle build date. Engines manufactured between January 1, 2007 and December 31, 2009 meet EPA07 requirements. Engines manufactured between January 1, 2010 and December 31, 2012 meet EPA10 requirements. Engines manufactured from January 1, 2013 meet NHTSA and EPA 2014 fuel efficiency and greenhouse gas emission standards (GHG14) requirements. Engines manufactured from January 1, 2016 meet NHTSA and EPA 2017 fuel efficiency and greenhouse gas emission standards (GHG17) requirements.

Model year 2013 and later vehicles meet additional requirements as specified by GHG14 requirements. Model year 2017 and later vehicles meet similar requirements as specified by GHG17 requirements. These vehicles are equipped with components that increase fuel efficiency and reduce GHG emissions. Components may include, but are not limited to, low-rolling resistance tires; aerodynamic devices such as hood, cab/sleeper extenders, and fuel tank fairings; vehicle speed limiter; and idle shutdown timer. If replacement of any drag-reducing component is required, the replacement component must meet or exceed the drag reduction performance of the originally installed component in order to maintain compliance with GHG14 and GHG17 requirements.

13.02 EPA-Regulated Emissions Aftertreatment Systems

13.02.01 EPA07 Engines

IMPORTANT: Depending on local jurisdictional guidelines, vehicles that are domiciled outside of the U.S. and Canada may not have emissions aftertreatment systems (ATS) that are compliant with EPA regulations.

**NOTICE:**

Follow these guidelines for engines that comply with EPA07 or newer regulations, or damage may occur to the aftertreatment device (ATD) and the warranty may be compromised.

- Use ultralow-sulfur diesel with 15 ppm sulfur content or less.
- Do not use fuel blended with used engine lube oil or kerosene.
- Use only approved engine lube oil. For lists of engine oils approved for Detroit Diesel engines, refer to the Engine Operator Manual, accessible on Lubricants, Fuels & Coolants on the DTNA Portal. For third party engines, please refer to the engine manual.

IMPORTANT: Using non-specification fuels or oils can lead to shortened diesel particulate filter (DPF) cleaning or replacement intervals.

IMPORTANT: See the engine manufacturer's operation manual for complete details and operation of the ATS.

Engines built between January 1, 2007 and December 31, 2009 are required to meet EPA07 guidelines for reduced exhaust emissions of particulate matter and nitrogen oxides (NOx). NOx is limited to just over 1 gram per brake horsepower hour (g/bhp-hr), and particulate matter cannot exceed 0.01 g/bhp-hr.

The EPA07 ATS varies according to engine manufacturer and vehicle configuration, but the exhaust muffler is replaced by an aftertreatment device (ATD). Inside the ATD, the exhaust first passes over the diesel oxidation catalyst (DOC), then passes through the diesel particulate filter (DPF), which traps soot particles. The soot is burned to ash during a process called regeneration (regen).

13.02.02 EPA10 and Newer Engines

The EPA mandates that all engines built after December 31, 2009 must reduce the level of emissions exhausted by the engine to the following levels:

Nitrogen Oxides (NOx) – 0.2 g/bhp-hr

Particulate Matter (PM) – .01 g/bhp-hr

To meet EPA guidelines, engines that are compliant with EPA10 and newer regulations use an ATS that has, in addition to a DOC/DPF device like that used in an EPA07 ATD, a Selective Catalytic Reduction (SCR) device to reduce NOx downstream of the engine. After exhaust gases leave the DPF, a controlled quantity of diesel exhaust fluid (DEF) is injected into the exhaust stream. In the presence of heat, DEF is converted to ammonia gas, which reacts with NOx in the selective catalyst chamber to yield nitrogen and water vapor, which exit through the tailpipe.

13.02.03 Regeneration

General Information

The harder an engine works, the better it disposes of soot. If the exhaust temperature is high enough, a process called **passive regeneration** (regen) occurs as the vehicle is driven normally. However, if the engine isn't running hot enough, the electronic controls may initiate an **active regen**, whereby extra fuel is injected into the exhaust stream to superheat and reduce the soot trapped in the DPF to ash. Active regen happens only when the vehicle is moving above a certain speed, determined by the engine manufacturer. See your engine operation manual for complete details. Both active and passive regen happen automatically, without driver input.



WARNING:

Active regeneration can occur automatically anytime the vehicle is moving. The exhaust gas temperature could reach 1500°F (800°C), which is hot enough to cause a fire, heat damage to objects or materials, or personal injury to persons near the exhaust outlet. The exhaust temperature can remain high even after the vehicle has stopped. When stopping the vehicle shortly after an automatic regen, ensure the exhaust outlets are directed away from structures, vegetation, flammable materials, and anything else that may be harmed by exposure to high heat.

See **Regen Switches**, below, for instructions on preventing automatic regen if necessary.

When operating conditions do not allow for ATD filter cleaning by active or passive regen, the vehicle may require a driver-activated **parked regen**. When this occurs, the DPF lamp illuminates, indicating that a regen is required. The driver must either bring the vehicle up to highway speed to increase the load (thus starting an active regen), or park the vehicle and initiate a parked regen. See **Regen Switches**, below, for instructions on initiating a parked regen.


Regen Switches

The regen request switch, located on the dash, is used to initiate a parked regen. See Fig.

192, [Regen Request and Inhibit Switches](#). To access the regen request switch, lift the guard and press the yellow button.

Some vehicles may be equipped with a regen inhibit switch. See Fig. 192, [Regen Request and Inhibit Switches](#). To stop a regen in progress or prevent the start of a regen, press the lower half of the switch. Regen is then delayed until the switch is no longer active.

NOTE: The regen switch can initiate a parked regen only when the DPF lamp is illuminated.

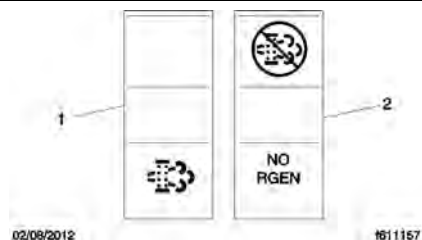

1. Regen Request Switch

2. Regen Inhibit Switch

Fig 192, Regen Request and Inhibit Switches

**WARNING:**

During parked regen, exhaust temperatures are very high and could cause a fire, heat damage to objects or materials, or personal injury to persons near the exhaust outlet.

Before initiating a parked regeneration, make certain the exhaust outlets are directed away from structures, vegetation, flammable materials, and anything else that may be harmed by prolonged exposure to high heat.

To initiate a parked regen, perform the following steps.

1. Park the vehicle away from all flammable materials, put the transmission in neutral, and set the parking brake.
2. Start and warm the engine until the coolant temperature is at least 150°F (66°C).
3. Lift the regen request switch guard and press and hold the yellow button for five seconds. As the regen process is initiated, engine rpm increases and the HEST lamp illuminates to indicate extremely high exhaust temperatures.

IMPORTANT: The driver is responsible for ensuring, during the entire regen cycle, that anything that could be harmed by exposure to high heat does not come in contact with the exhaust gases flowing from the outlets.

4. The regen cycle will finish after 20 to 60 minutes, at which time engine idle speed drops to normal and the vehicle can be driven normally. The HEST lamp is extinguished when vehicle speed exceeds 5 mph (8 km/h) or the system has cooled to normal operating temperature.
5. To stop a parked regen at any time during the process:
 - depress the clutch pedal, brake pedal, or accelerator pedal;
 - press and hold the regen inhibit switch until idle returns to normal;
 - shut down the engine.

13.02.04 ATS Warning Lamps

There are three warning lamps that alert the driver of high exhaust temperature, the need to perform a parked regen or service the DPF, or of an engine fault that affects emissions. A decal attached to the driver's sun visor explains the ATS warning lamps. See Fig. 193, [Warning Lamp Decal, Sun Visor](#).

See Fig. 194, [ATS Warning Lamps](#) for an explanation of the ATS warnings, and actions required to avoid engine protection sequences.

Malfunction Indicator Lamp (MIL)

A steadily illuminated yellow malfunction indicator lamp (MIL) indicates an engine fault that affects emissions. See Fig. 195, [Malfunction Indicator Lamp \(MIL\)](#).

DPF Status Lamp

When soot accumulates in the DPF and the DPF status lamp illuminates, see Fig. 196, [DPF Status Lamp](#), perform a parked regen or bring the vehicle up to highway speed to increase the load (thus starting an active regen).

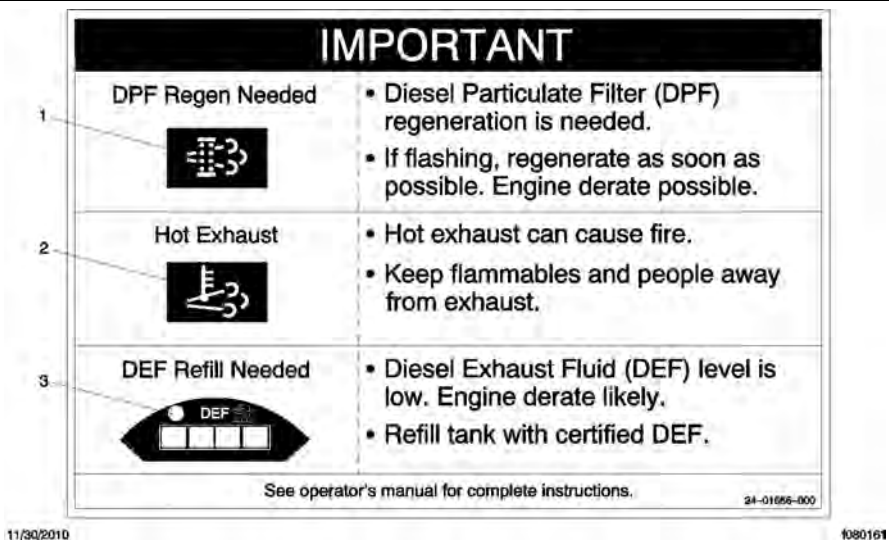


Fig 193, Warning Lamp Decal, Sun Visor

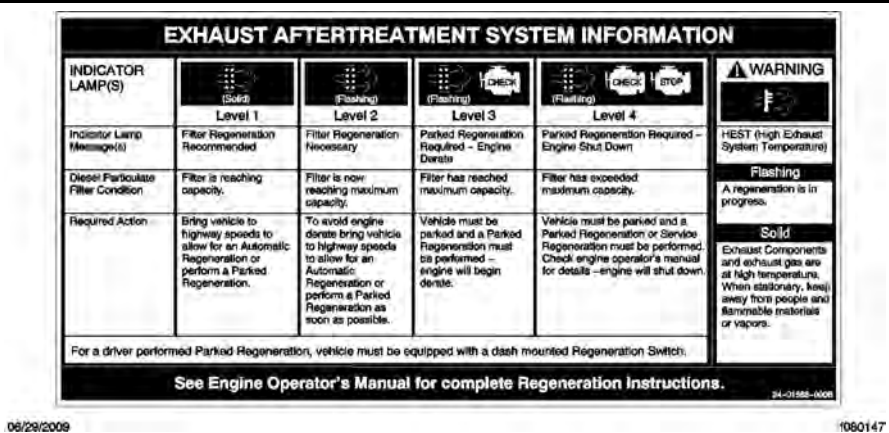


Fig 194, ATS Warning Lamps


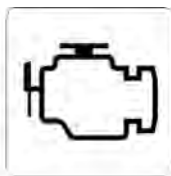


Fig 195, Malfunction Indicator Lamp (MIL)

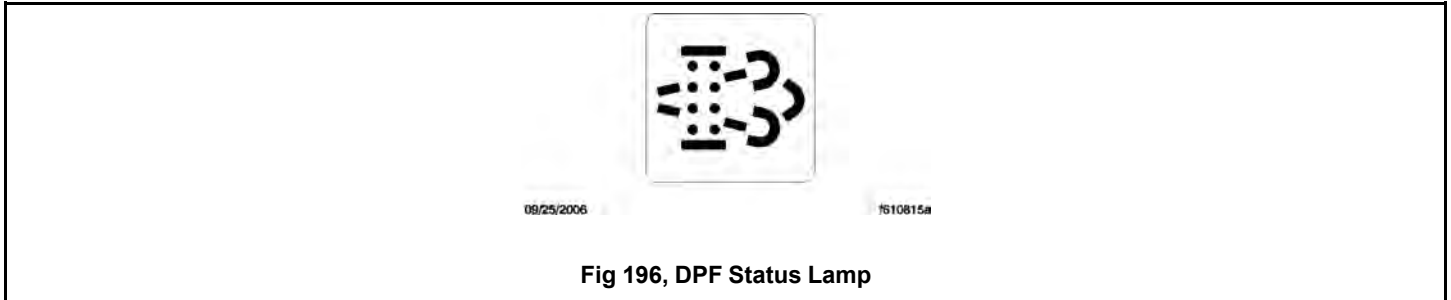


If the DPF status lamp blinks while the CHECK engine lamp is illuminated, initiate a parked regen immediately in order to prevent an engine derate.

If the red STOP engine lamp illuminates with the blinking DPF lamp and the CHECK engine lamp, begin a parked regen in order to prevent an engine shutdown. Park the vehicle and perform a parked regen.

High Exhaust System Temperature (HEST) Lamp

Slow (10-second) flashing of the high exhaust system temperature (HEST) lamp indicates that a parked regen is in progress, and the engine's high idle speed is being controlled by the engine software, not the vehicle driver.

Steady illumination of the HEST lamp alerts the driver of high exhaust temperature during the regen process if the vehicle speed is below 5 mph (8 km/h), or during a parked regen. See Fig.197, [HEST Lamp](#).

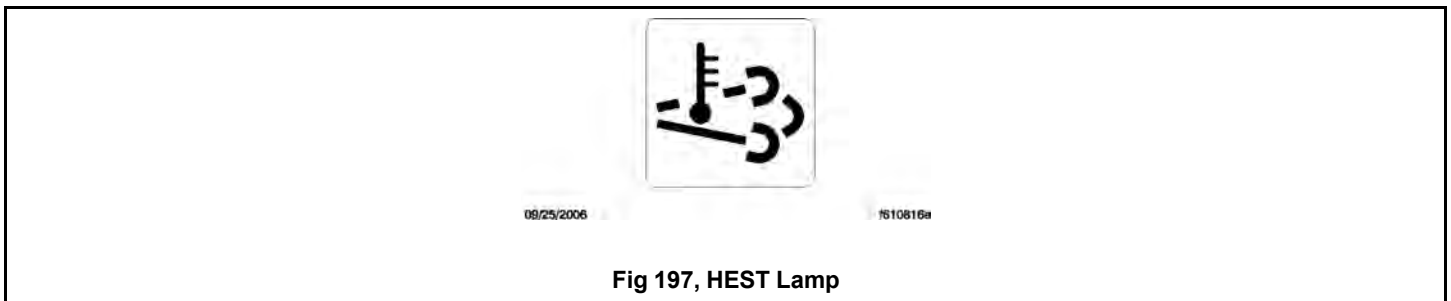

13.02.05 Maintenance

Authorized service facilities must perform any DPF service. For warranty purposes, maintain a record that includes:

- date of cleaning or replacement;
- vehicle mileage;
- particulate filter part number and serial number.

13.03 Diesel Exhaust Fluid and Tank, EPA10 and Newer Engines

13.03.01 Diesel Exhaust Fluid

Diesel exhaust fluid (DEF) is used in the ATS to lower NOx in the exhaust stream. DEF is colorless and close to odorless (it may have a slightly pungent odor similar to ammonia). It is nontoxic, nonflammable, and biodegradable. It is mildly corrosive to aluminum, but does not affect the strength or structure of the aluminum.

White crystals may be noticeable around components that come into contact with DEF. The crystals are easily removed with water.

DEF consumption varies depending on ambient conditions and vehicle application.

Freezing Conditions



DEF freezes to slush at around 12°F (-11°C). It is not damaged or destroyed if frozen, and is fully usable when thawed. The DEF in the tank is allowed to freeze while a vehicle is non-operational. At start-up, normal operation of the vehicle is not inhibited if the DEF is frozen; an immersion heater with engine coolant flowing through it warms the DEF once the engine is running, allowing the SCR system to operate.

Pre-2013 DEF supply lines are electrically-heated and are purged when the engine is shut down; complete purging of the DEF lines requires approximately five minutes after the engine is shut down.

DEF supply lines with engine model year 2013 and newer are designed to survive freezing conditions while containing DEF, so purging is not required.

13.03.02 DEF Tank


Engines that are compliant with EPA10 and newer regulations are equipped with a DEF tank located on the driver's side of the vehicle behind the battery box or forward of the fuel tank. See Fig.198, [DEF Tank Located Behind the Battery Box](#) and Fig.199, [DEF Tank Located Forward of the Fuel Tank](#). The DEF tank has a 19 mm filler neck inlet that prevents the hose from a diesel outlet from being inserted, and has a blue cap for easy identification.

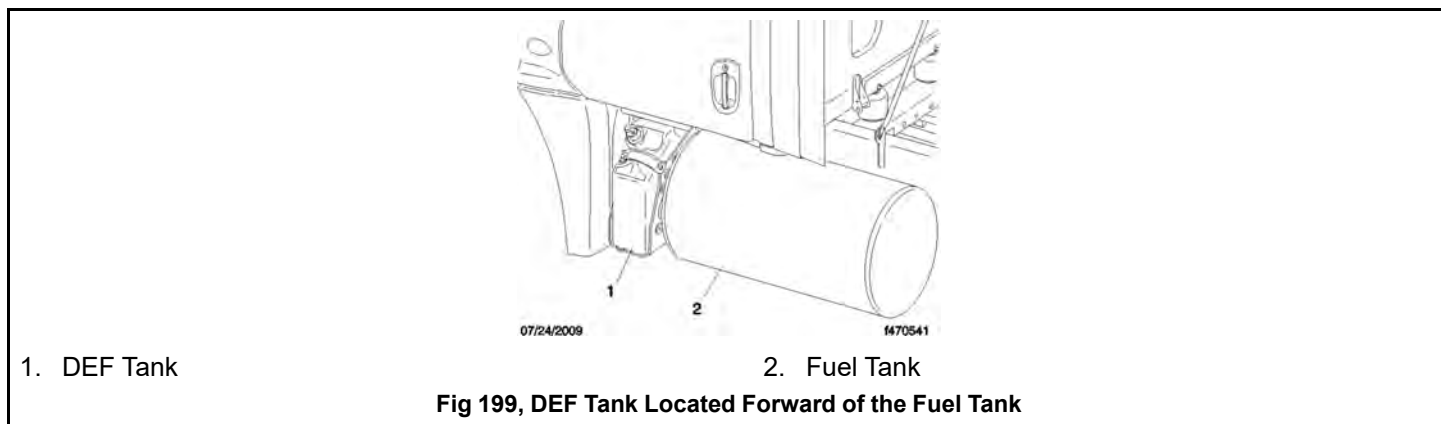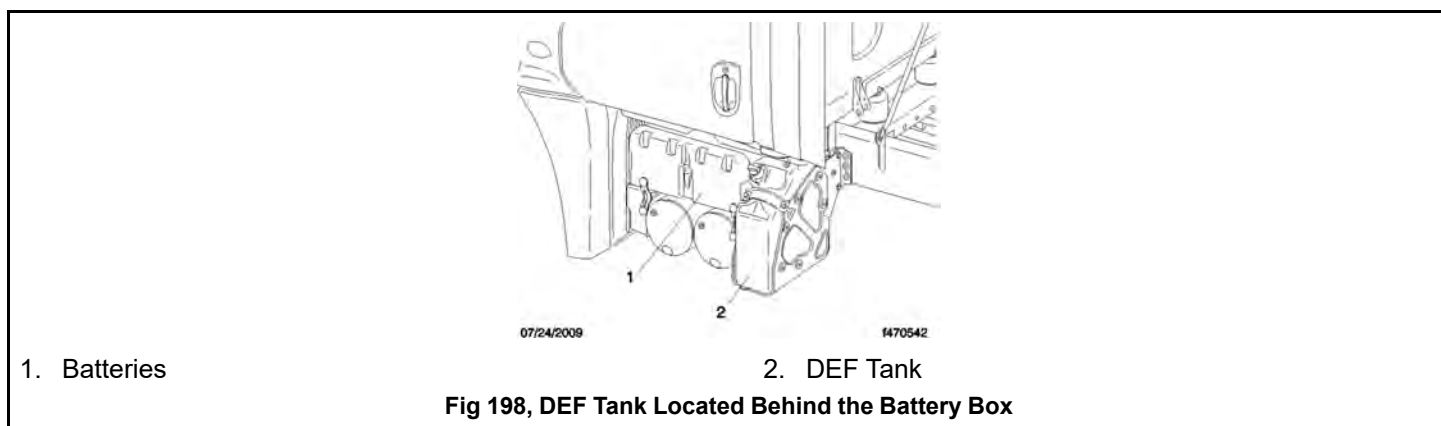

13.03.03 Fuel/DEF Gauge

The diesel fuel and DEF levels are measured in a dual-purpose gauge. See Fig.200, [Fuel/DEF Gauge](#).

Fuel level is indicated at the top of the gauge. Below the fuel level, a low fuel warning lamp illuminates amber when the fuel level drops below 1/8th of the capacity.

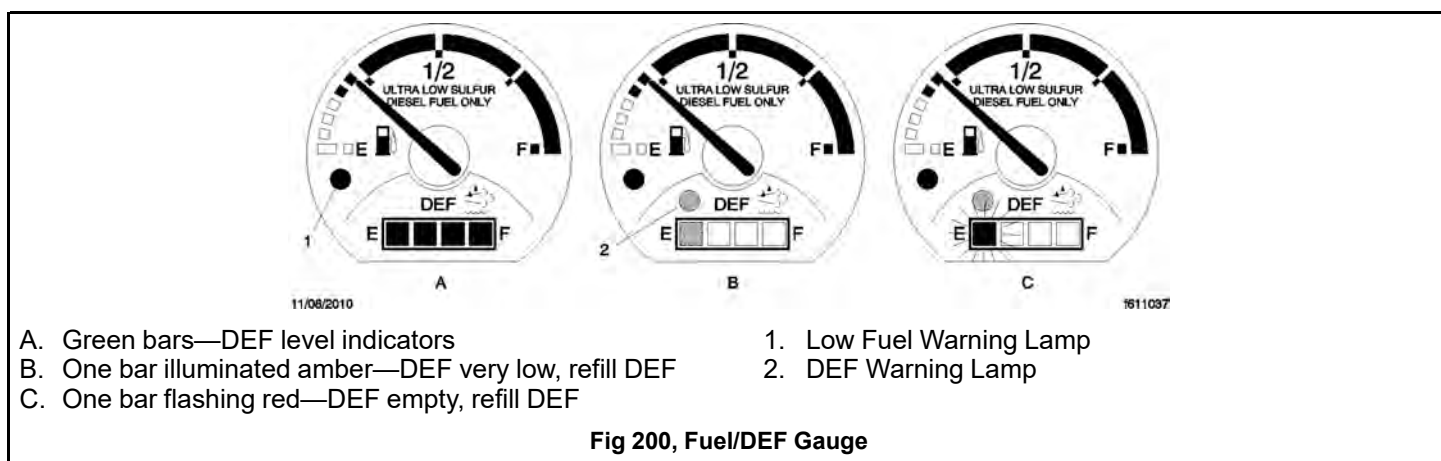

The lower portion of the gauge has a DEF warning lamp that illuminates amber when the DEF tank is near empty, and a lightbar that indicates the level of DEF in the tank. The DEF light bar illuminates as follows.

- Four bars illuminated green—Between 75% and 100% full
- Three bars illuminated green—Between 50% and 75% full
- Two bars illuminated green—Between 25% and 50% full
- One bar illuminated green—Between approximately 10% and 25% full
- One bar illuminated amber—DEF very low, refill DEF
- One bar flashing red—DEF empty, refill DEF


13.03.04 DEF Warnings and Engine Limits

IMPORTANT: Ignoring the DEF warning lights results in limited engine power, with the application of a 5 mph (8 km/h) speed limit.

DEF Level Low—Initial Warning

When the DEF level is low, the following lamps notify the driver. See Fig.. Refill the DEF tank in order to cancel the warning sequence.

- One bar of the DEF level indicator illuminates amber—DEF very low, refill DEF.
- The DEF warning lamp illuminates solid amber.

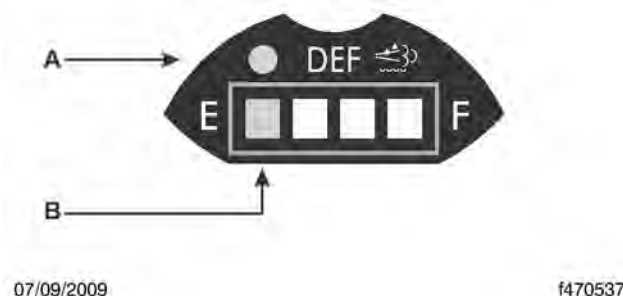

A. DEF Warning Lamp (illuminated)

B. DEF Lightbar (one bar amber)

Fig 201, DEF Level Low Initial Warning


DEF Empty

When the DEF level reads empty, the following lamps notify the driver. See Fig.202, [DEF Empty Warning](#).

- One bar of the DEF level indicator flashes red—DEF empty, refill DEF.
- The DEF warning lamp flashes amber.
- The MIL lamp illuminates.

Pre-2013 Detroit engines: Power is limited, with a 55 mph (90 km/h) speed limit.

Cummins and 2013 Detroit engines: Power is limited with progressively harsher engine power limits applied.

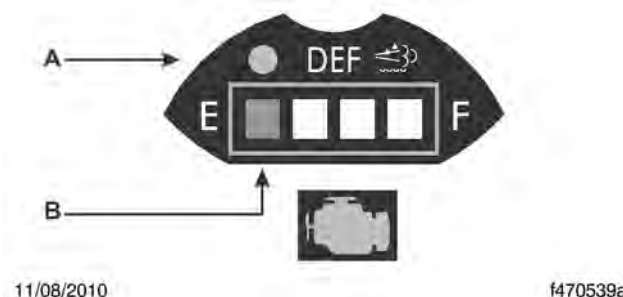

NOTE: MIL illuminates. CHECK engine lamp illuminates if Cummins ISB or ISC/L engine. Engine power is limited.

A. DEF Warning Lamp (flashing)

B. DEF Lightbar (one bar flashing red)


Fig 202, DEF Empty Warning

DEF Tank Empty and Ignored

If the empty warning is ignored and the DEF tank is not refilled, the red STOP engine lamp illuminates in addition to the MIL lamp and CHECK engine lamp (on vehicles with a Cummins ISB or ISC/L engine.) See Fig.

203, [DEF Empty and Ignored Warning](#).

If the DEF is not refilled, a 5 mph (8 km/h) speed limit is applied after the next engine shutdown, while parked and idling, or if a fuel refill is detected.

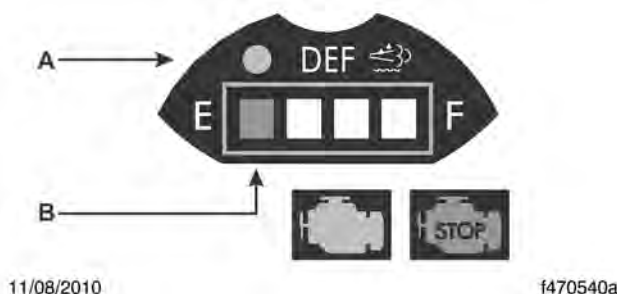

NOTE: STOP engine light and MIL illuminate, engine power is limited, speed limit of 5 mph (8 km/h)

A. DEF Warning Lamp (flashing)

B. DEF Lightbar (one bar flashing red)

Fig 203, DEF Empty and Ignored Warning

DEF Contamination or SCR Tampering



NOTICE:

Once contaminated DEF or tampering has been detected, the vehicle must be taken to an authorized service facility to check the SCR system for damage and to deactivate the warning lights and engine limits.

If contaminated DEF or tampering with the ATS is detected, the DEF warning light flashes and the MIL lamp illuminates to warn the driver. The CHECK engine lamp also illuminates on vehicles with a Cummins ISB or ISC/L engine. See Fig. 203, [DEF Empty and Ignored Warning](#).

- Detroit engines: Engine power is limited with progressively harsher limits applied. If the fault is not corrected, the STOP engine light illuminates and a 5 mph (8 km/h) speed limit is applied after the next engine shutdown, while parked and idling, or if a fuel refill is detected.
- Cummins engines: Engine power is limited with progressively harsher limits applied. If the fault is not corrected, the STOP engine light illuminates and a 5 mph (8 km/h) speed limit is applied after the next engine shutdown, or while parked and idling.

14.01 Air Brake System..... 208

 14.01.01 Brake System General Information 208

 14.01.02 Brake System Components 208

 14.01.03 Brake System Operation..... 209

 14.01.04 Automatic Slack Adjusters 211

14.02 Meritor WABCO® Antilock Braking System 211

 14.02.01 General Information 211

 14.02.02 Trailer ABS Compatibility 212

 14.02.03 Automatic Traction Control..... 212

 14.02.04 ECAS Automatic Load Transfer (ECAS only)..... 212

14.03 Engine Brake 213

 14.03.01 General Information 213

 14.03.02 Engine Brake Operation 215

14. Brake Systems

14.01 Air Brake System

14.01.01 Brake System General Information

A dual air brake system consists of two independent air systems that use a single set of brake controls. Each system has its own reservoirs, plumbing, and brake chambers. The primary system operates the service brakes on the rear axle; the secondary system operates the service brakes on the front axle. Service brake signals from both systems are sent to the trailer.

**WARNING:**

Do not operate the vehicle with the front brakes backed off or disconnected. Backing off or disconnecting the front brakes will not improve vehicle handling and may lead to loss of vehicle control, resulting in property damage or personal injury.

14.01.02 Brake System Components

A warning and buzzer activates if air pressure drops below approximately 70 psi (483 kPa) in either system. If this happens, check the air pressure gauges to determine which system has low air pressure. Although the vehicle's speed can be reduced using the foot brake control pedal, either the front or rear service brakes will not be operating at full capacity, causing a longer stopping distance. Bring the vehicle to a safe stop and have the air system repaired before continuing.

IMPORTANT: In the event of a total loss of service brakes with full system air pressure, use the parking brake control valve (yellow knob) to bring the vehicle to a complete stop in the safest location possible.

Before a vehicle with insufficient system air pressure can be moved, the spring parking brakes must be released by applying an external air source at the gladhands, or by manually caging the parking brake springs.

**WARNING:**

Do not release the spring parking brakes and then drive the vehicle. There would be no means of stopping the vehicle, which could result in serious personal injury or vehicle damage. Before releasing the spring parking brakes, make the connection to a towing vehicle or chock the tires.

After correcting the brake system problem, uncage the spring parking brakes before resuming normal vehicle operation.

Primary Air Brake System

Loss of air pressure in the primary air system causes the rear service brakes to become inoperative. The secondary air system will continue to operate the front brakes and the trailer brakes (if equipped).

Secondary Air System

Loss of air pressure in the secondary air system causes the front axle brakes to become inoperative. The primary air system will continue to operate the rear service brakes and the trailer brakes (if equipped).

14.01.03 Brake System Operation

Before driving your vehicle, allow time for the air compressor to build up a minimum of 100 psi (689 kPa) pressure in both the primary and secondary systems. Monitor the air pressure system by observing the air pressure gauges and the low-air-pressure warning and buzzer. A warning light and buzzer, or ICU message (ICU4Me), shuts off when air pressure in both systems reaches approximately 70 psi (483 kPa).

IMPORTANT: Before driving the vehicle, secure all loose items in the cab so that they will not fly forward during a full brake application. Make sure all passengers are wearing seat belts.

During normal brake stops, depress the foot brake control pedal until braking action slows down the vehicle. Increase or decrease the pressure on the pedal so that the vehicle comes to a smooth, safe stop. Apply the spring parking brakes if the vehicle is to be parked.

IMPORTANT: An air brake proportioning system may be used in tractor air brake systems when the vehicle is not equipped with antilock braking system (ABS). When operating in bobtail mode, the rear brake chambers (on which the axle load has been greatly reduced) receive reduced (proportional) air pressure, while the front axle brake chambers receive full (normal) air pressure. This results in a different brake pedal "feel," as the pedal seems to require more travel and/or effort to slow or stop the vehicle. However, the air brake proportioning system actually improves vehicle control when the tractor is in bobtail mode. When the tractor is towing a trailer, the rear brake chambers will receive full (normal) application air pressure.

When parking a vehicle attached to a trailer that does not have spring parking brakes, apply the tractor parking brakes. Chock the trailer tires before disconnecting the vehicle from the trailer.

**WARNING:**

If a trailer or combination vehicle is not equipped with spring parking brakes, do not park it by pulling out only the trailer air supply valve knob. This would apply only the trailer service brakes. If air were to bleed from the trailer brake system, the trailer brakes would release, possibly causing an unattended runaway vehicle.

**NOTICE:**

Never apply the service and spring parking brakes simultaneously. To do so transmits excessive input force to the brake components, which could damage or cause eventual failure of brake actuating components.

Brake Controls

The trailer brake lever (hand control valve) is used for applying the trailer brakes without applying the truck or tractor service brakes. It is usually mounted on the right-hand control panel. See Fig.205, [Brake Valve Knobs](#). The valve can be partially or fully applied, but in any partially on position it will be overridden by a full application of the service brake pedal. Moving the lever down applies the trailer brakes, while moving it up releases the trailer brakes. The lever will automatically return to the up position when it is released.


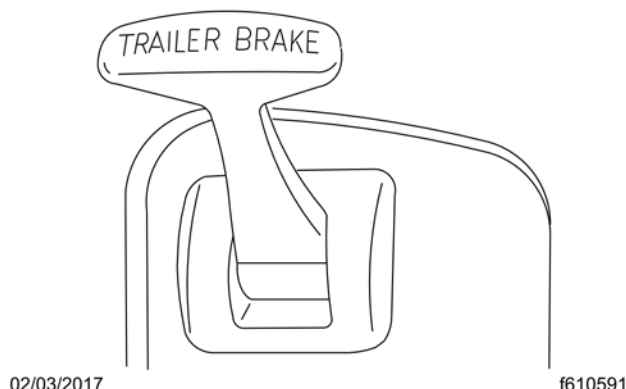


Fig 204, Trailer Brake Lever

The red octagonal-shaped knob in the control panel actuates the trailer air supply valve. See Fig.205, [Brake Valve Knobs](#). After the vehicle's air hoses are connected to a trailer and the pressure in both air systems is at least 65 psi (448 kPa), the trailer air supply valve must be pushed in. It should stay in to charge the trailer air supply system and to release the trailer spring parking brakes.

Pull the trailer air supply valve out before disconnecting a trailer or when operating a vehicle without a trailer.

If pressure in both air systems drops to 20 to 45 psi (138 to 310 kPa), the red trailer air supply valve and yellow parking brake valve automatically pop out, applying both the tractor and trailer spring parking brakes. If the trailer is not equipped with spring parking brakes, the trailer service brakes are applied.

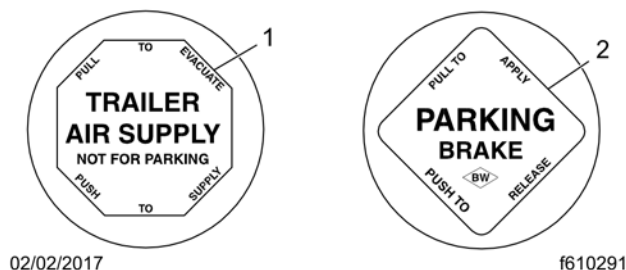

1. Trailer Air-Supply-Valve Knob

2. Parking-Brake-Valve Knob

Fig 205, Brake Valve Knobs

The yellow diamond-shaped knob in the control panel actuates the parking brake valve. See Fig.205, [Brake Valve Knobs](#). Pulling out the parking brake valve applies both the tractor and trailer spring parking brakes and automatically causes the trailer air supply valve to pop out. Pushing in the parking brake valve releases the tractor parking brakes.

**NOTICE:**

Do not use the spring parking brakes if the service brakes are hot, such as after descending a steep grade. To do so could damage the brakes. Allow hot brakes to cool before using the spring parking brakes.

Do not use the spring parking brakes during freezing temperatures if the service brakes are wet. To do so could cause them to freeze. If the brakes are wet, drive the vehicle in low gear and lightly apply the brakes to heat and dry them.

If the trailer is not equipped with spring parking brakes, pulling out the parking brake valve applies the tractor spring parking brakes and the trailer service brakes. When the tractor and trailer parking brakes (or trailer service brakes) are both applied,

the trailer brakes are released by pushing in the trailer air supply valve, leaving the tractor parking brakes applied. Air pressure in the primary or secondary reservoir must be at least 65 psi (447 kPa) before the tractor spring parking brakes, or the trailer service or spring parking brakes, can be released.

14.01.04 Automatic Slack Adjusters

Automatic slack adjusters should never be manually adjusted except during routine maintenance of the foundation brakes (e.g., replacing shoes), during slack adjuster installation, or in an emergency situation.

When the brake pushrod stroke exceeds the legal brake adjustment limit on a vehicle, there is likely a mechanical problem with the foundation brake components or the adjuster is improperly installed.

Visit a repair facility as soon as possible when brakes equipped with automatic slack adjusters are determined to be out of adjustment.



WARNING:

Manually adjusting an automatic slack adjuster to bring the pushrod stroke within legal limits is likely masking a mechanical problem. Adjustment is not a repair. Before adjusting an automatic slack adjuster, troubleshoot the foundation brake system and inspect it for worn or damaged components. Improperly maintaining the vehicle braking system may lead to brake failure, resulting in property damage, personal injury, or death.

14.02 Meritor WABCO® Antilock Braking System

14.02.01 General Information

The Meritor WABCO Antilock Braking System (ABS) is an electronic wheel speed monitoring and control system that works with the standard air brake system. ABS passively monitors vehicle wheel speed at all times, and controls wheel speed during emergency stops.

IMPORTANT: For proper ABS system operation, do not change tire sizes. The sizes of the tires installed during production are programmed into the electronic control unit. Installing different-sized tires could result in a reduced braking force, leading to longer stopping distances.

ABS includes signal-generating tone wheels and sensors located in the wheel hubs of each sensed wheel. The sensors transmit vehicle wheel speed information to an electronic control unit (located behind the center dash). The control unit's main circuit interprets the speed sensor signals and calculates wheel speed, wheel retardation, and a vehicle reference speed. If the calculations indicate wheel lockup, the main circuit signals the appropriate modulator valve to reduce braking pressure. During emergency braking, the modulator valve alternately reduces, increases, or maintains air pressure supply in the brake chamber to prevent front and rear wheel lockup.

The electronic control unit (ECU) also has a safety circuit that constantly monitors the wheel sensors, traction control valve (if equipped), modulator valves, and the electrical circuitry.

The Meritor WABCO ABS combines one front-axle control channel with one rear-axle control channel to form one control circuit. For example, the sensor and modulator valve on the left-front axle form a control circuit with the sensor and modulator valve on the right-rear axle. If, during vehicle operation, the safety circuit senses a failure in any part of the ABS, the tractor warning lamp (TRACTOR ABS) illuminates and the control circuit where the failure occurred is switched to normal braking action. The remaining control circuit will retain the ABS effect. Even if the ABS is completely inoperative, normal braking ability is maintained. An exception would be if a modulator valve (or combination modulator valve) is damaged and inoperative. As these components are an integral part of the air brake system, normal braking may be impaired or inoperative.

During emergency or reduced-traction stops, fully depress the brake pedal until the vehicle comes to a safe stop. *Do not pump the brake pedal*. With the brake pedal fully depressed, the ABS will control all wheels to provide steering control and a reduced braking distance.

Although the ABS improves vehicle control during emergency braking situations, the driver still has the responsibility to change driving styles depending on existing traffic and road conditions. For example, the ABS cannot prevent an accident if the driver is speeding or following too closely.

14.02.02 Trailer ABS Compatibility

The Meritor WABCO ABS is designed to communicate with a trailer ABS, if they are compatible. Compatibility will result in the illumination of the TRAILER ABS lamp during vehicle start-up and fault detection.

The TRAILER ABS lamp will not illuminate unless a compatible trailer is connected to the tractor. The dash-mounted lamp will operate as follows when a compatible trailer is properly connected to the tractor:

- When the ignition key is turned to the ON position, the TRAILER ABS lamp will illuminate momentarily, then turn off.
- If the lamp illuminates momentarily during vehicle operation, then shuts off, a fault was detected and corrected.
- If the lamp illuminates and stays on during vehicle operation, there is a fault with the trailer ABS. Repair the trailer ABS system immediately to ensure full antilock braking capability.

IMPORTANT: If a compatible trailer is connected, and the lamp is not illuminating momentarily when the ignition key is turned to the ON position, it is possible that the lamp is burnt out.

14.02.03 Automatic Traction Control

Vehicles with electronic engines and ABS may have Automatic Traction Control (ATC). On these vehicles, the ATC system automatically limits wheel spin during reduced-traction situations. In normal braking applications, the standard air brake system is in effect.

An additional solenoid valve is installed. During reduced-traction situations, the ATC solenoid valve controls air pressure to the modulator valves and they in turn increase, hold, or reduce pressure to the appropriate brake chambers to provide better traction whenever wheel spin occurs.

When the ATC system is in the NORMAL mode, it will apply gentle braking to the spinning wheel, to feed power to the wheel(s) with better traction. If both wheels are spinning, the system will signal the engine to reduce power.

ATC includes a deep snow and mud option to increase available traction on extra soft surfaces like snow, mud, or gravel. A rocker switch labeled ATC will be located on the dash. Pressing the switch will temporarily allow more drive wheel spin. The activation of the deep snow and mud option is indicated by a flashing WHEEL SPIN lamp. Pressing the switch again will cycle the system back to normal operation.

**NOTICE:**

The deep snow and mud option is intended to be used under specific slippery conditions that require momentary increased wheel spin. Using this option for an extended period of time may damage the vehicle brake system.

After the ignition switch is turned on, the TRACTOR ABS lamp and the WHEEL SPIN indicator lamp come on for about three seconds. After three seconds, the warning lights go out if all of the tractor's ABS components are working.

IMPORTANT: If any of the ABS warning lights do not work as described above, or come on while driving, repair the ABS immediately to ensure full antilock braking capability.

14.02.04 ECAS Automatic Load Transfer (ECAS only)

On vehicles equipped with Electronically Controlled Air Suspension (ECAS), ECAS works in conjunction with ABS. When wheel slippage is detected by the ABS, the ECAS system transfers weight from the tag axle to the drive axle by changing air pressures in the suspension air bellows, increasing drive wheel traction.

The ECAS Load Transfer feature is optimized to apply the maximum available vehicle load on the drive axle, up to the maximum allowable limit, determined by the gross axle weight rating (GAWR). In bobtail or with a loaded trailer less than the GAWR, the tag axle supports a negligible load while the drive axle supports nearly the full weight. Above the GAWR, the drive axle is loaded with approximately the maximum allowable load and the tag supports the remainder.

On vehicles equipped with the ICU4Me, when Load Transfer mode is active, "Load Transfer" will display in the message field of the driver message center. See Fig.206, [Load Transfer Notification, ICU4Me Only](#).

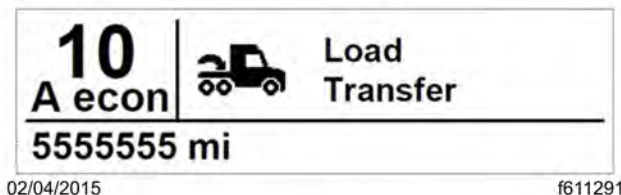


Fig 206, Load Transfer Notification, ICU4Me Only

Load transfer mode will automatically deactivate when the vehicle reaches 45 mph (72 kmh).

14.03 Engine Brake

14.03.01 General Information

Each engine manufacturer uses a specific engine brake for their engine. Regardless of the manufacturer, the engine brake is operated with the principles outlined in here. Refer to the engine manufacturer's operation manual for details of their particular engine brake product.




WARNING:

To avoid injury from loss of vehicle control, do not activate the engine brake system under the following conditions:

- on wet or slippery pavement, unless the vehicle is equipped with antilock braking system (ABS) and you have had prior experience driving under these conditions;
- when driving without a trailer or pulling an empty trailer;
- if the tractor drive wheels begin to lock, or there is fishtail motion after the engine brake is activated.

NOTE: When the engine brake is enabled, the engine brake lamp illuminates in the ICU. See Fig. 207, [ICU3 Message Center \(typical\)](#), Item 1.

Whenever vehicle braking is required on good road conditions, the engine brake may be used in conjunction with the service brakes. There is no time limit for operation of the engine brake. However, an engine brake does not provide the precise control of, and is not a substitute for, service brakes.

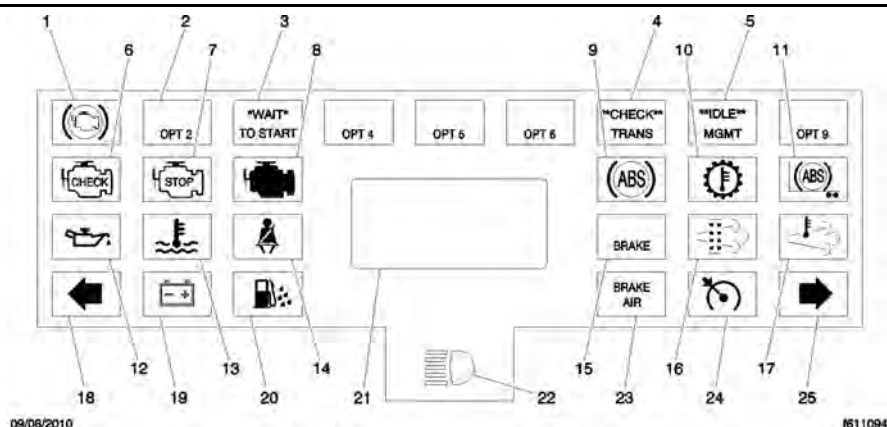

- | | |
|-------------------------------------|--|
| 1. Engine Brake | 14. Unfastened Seat Belt |
| 2. Optional | 15. Park Brake On |
| 3. Wait To Start | 16. Diesel Particulate Filter (DPF) Status |
| 4. Check Transmission | 17. High Exhaust Temperature (HEST) |
| 5. Optimized Idle | 18. Left-Turn Signal |
| 6. CHECK Engine | 19. Low Battery Voltage |
| 7. STOP Engine | 20. Water In Fuel |
| 8. Malfunction Indicator Lamp (MIL) | 21. Driver Message Center |
| 9. Vehicle ABS | 22. High Beams On |
| 10. Transmission Overheat | 23. Brake Air |
| 11. Trailer ABS | 24. Cruise Control On |
| 12. Low Engine Oil Pressure | 25. Right-Turn Signal |
| 13. High Coolant Temperature | |

Fig 207, ICU3 Message Center (typical)

**WARNING:**

Usage of the engine brake as the primary braking system can cause unpredictable stopping distances, that could result in personal injury or property damage. Service brakes are the primary vehicle braking system.

Since the engine brake is most effective at rated engine speed, gear selection is very important. Gearing down the vehicle within the limits of the rated engine speed makes the engine brake more effective. Recommended engine braking speed is above 1800 rpm and below the rated speed.

**WARNING:**

The engine brake must be disengaged when shifting gears using the clutch pedal. If the engine brake is engaged when the transmission is in neutral, the braking power of the engine brake can stall the engine, which could result in loss of vehicle control, possibly causing personal injury and property damage.

"Control speed" is the speed at which the engine brake performs 100 percent of the required downhill braking, resulting in a constant speed of descent. The control speed varies, depending on vehicle weight and the downhill grade.

For faster descent, select a higher gear than that used for control speed. Service brakes must then be used intermittently to prevent engine overspeed and to maintain desired vehicle speed.

For slower descent, select a lower gear, being careful not to overspeed the engine. Occasional deactivation of the engine brake may be necessary to maintain the designated road speed under these conditions.

If the engine is equipped with both cruise control and an engine brake, the engine brake can operate automatically while cruise control is activated. The maximum amount of braking is selected with the engine brake control. When the vehicle returns to the set cruise speed, the engine brake will turn off.

The engine brake will only operate when the accelerator and clutch pedals are fully released.

Vehicles equipped with ABS have the ability to turn the engine brake off if wheel slip is detected. The engine brake will automatically turn back on once wheel slip is no longer detected.

14.03.02 Engine Brake Operation

**NOTICE:**

Do not allow the engine to exceed its governed speed, or serious engine damage could result.

NOTE: Depending on the brake type, the engine brake may be disabled when engine temperature falls below a set level.

The engine brake control depends on vehicle configuration. On some vehicles, there is an engine brake (ENG BRK) switch located in the right-hand pod on the steering wheel that is used to turn the engine brake on and off, and an engine brake level switch on the dash used to set the intensity—high, medium, or low. See Fig.208, [Steering Wheel Switches](#) and Fig. 209, [Engine Brake Level Switch](#).

On vehicles equipped with a column-mounted Detroit multifunction control, the engine brake is controlled by the lever position, see Fig.210, [Engine Brake Positions, Detroit Multifunction Control](#). At the top position, the engine brake is off, and at the three lower positions, the engine brake is on and the intensity (low, medium, high) increases with each step down.

NOTE: On vehicles equipped with a Detroit multifunction control, setting the engine brake with the cruise control set activates Deceleration Mode. Setting the cruise control while the engine brake is on activates Descent Control Mode. For information on these modes, see "Cruise Control" in [6.01 Ignition Switch and Key](#).

On vehicles equipped with an engine brake switch in the right-hand pod on the steering wheel, operate the engine brake after the engine is warmed up and the vehicle is in motion, as follows:

1. Remove feet from both the clutch and accelerator pedals.
2. Press the upper half of the on/off switch (see Fig.208, [Steering Wheel Switches](#)) to turn the engine brake on. The engine brake will engage at the rate last set on the engine brake intensity switch and the engine brake lamp will illuminate.
3. Press the upper or lower half of the intensity switch (see Fig.209, [Engine Brake Level Switch](#)) to select the desired braking intensity.

Use the intensity switch set at the LOW position when driving on flat, open stretches of road. If the service brakes are still required to slow down on a grade, switch to a higher setting on the dash switch to maintain constant speed of descent. Grade descent speed should be such that the service brakes are used infrequently and remain cool, thus retaining their effectiveness.

4. For maximum retarding, maintain the top governed speed of the engine through the appropriate selection of gears. When shifting gears, the engine brake will disengage when the clutch pedal is depressed, then engage when the clutch pedal is released.
5. To cancel the engine brake application, press the lower half of the on/off switch.

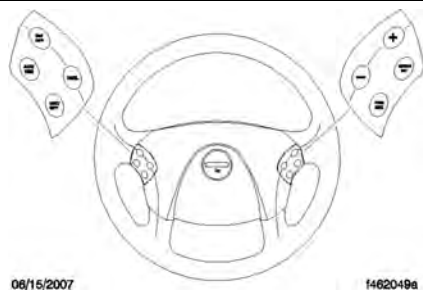


Fig 208, Steering Wheel Switches


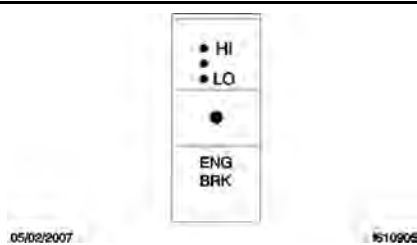


Fig 209, Engine Brake Level Switch

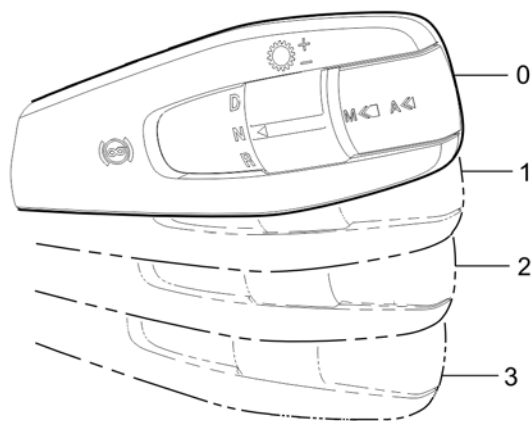

- 1. Off
- 2. Low

- 3. Medium
- 4. High

Fig 210, Engine Brake Positions, Detroit Multifunction Control

15.01 Eaton Fuller 13-Speed and 18-Speed Splitter and Range-Shift Transmissions	218
15.01.01 General Information, Eaton Fuller Splitter and Range-Shift.....	218
15.01.02 Operation, Eaton Fuller Splitter and Range-Shift	219
15.01.03 Upshifting	219
15.01.04 Downshifting	221
15.02 Eaton Fuller 10-Speed Range-Shift Transmissions	222
15.02.01 General Information, Eaton Fuller Range-Shift	222
15.02.02 Operation, Eaton Fuller Range-Shift	222
15.02.03 Upshifting	223
15.02.04 Downshifting	224
15.03 Clutch.....	224
15.03.01 General Information	224
15.03.02 Clutch Operation	224
15.03.03 Clutch Maintenance	226

15. Manual Transmissions and Hydraulic Clutch

15.01 Eaton Fuller 13-Speed and 18-Speed Splitter and Range-Shift Transmissions

15.01.01 General Information, Eaton Fuller Splitter and Range-Shift


Refer to the Eaton website for additional information, [\[Missing cross reference text\]](#).

Combination splitter and range-shift transmissions allow the choice of two splitter ratios in each lever position as well as the additional ratio provided in each lever position after shifting to the other range.

IMPORTANT: Not all lever positions are used in each range and the shift patterns vary between transmissions. Be sure to read the shift pattern decal on the dash for the operating instructions for the specific transmission installed in your vehicle.

13-Speed RTLO Models

Eaton Fuller 13-speed transmissions have thirteen forward speeds and two reverse speeds. Each transmission consists of a 5-speed front section, and a 3-speed auxiliary section. The auxiliary section contains low- and high-range ratios, plus an overdrive splitter gear. See Fig.211, [Eaton Fuller 13-Speed Transmission Shift Pattern](#) for the shift pattern.

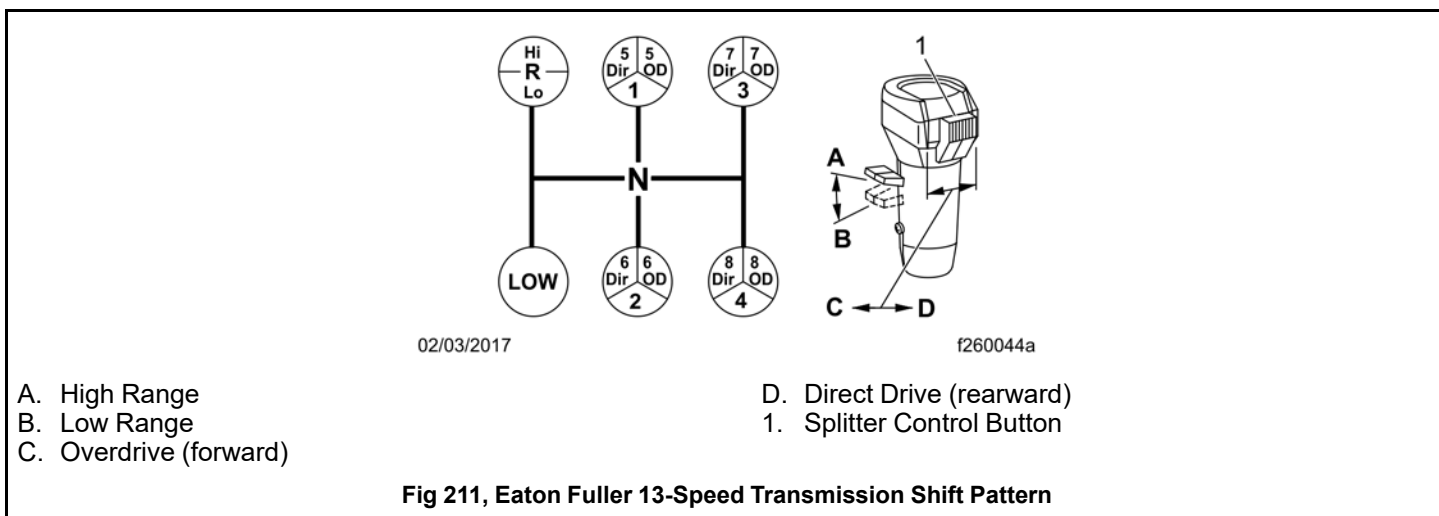

All of the 13 speeds are controlled with one shift lever. A range preselection lever and a splitter control button are built into the shift knob. The range preselection lever controls range selection and the splitter control button (located on the side of the shift knob) controls gear splits.

Low gear in the front section is used only as a starting ratio. The remaining four forward positions are used once in the low range and once in the high range. However, each of the four high range gear positions can be split with the underdrive ratio (RT models), or overdrive ratio (RTO models) of the splitter gear. Ratios cannot be split while the transmission is in low range.

18-Speed RTLO Splitter and Range-Shift Models

Eaton Fuller 18-speed transmissions have 18 forward speeds and four reverse speeds. These transmissions consisting of a 5-speed front section and a 3-speed auxiliary section. The auxiliary section contains low and high range ratios, plus an overdrive splitter gear.

One ratio in the front section (low) is used as a starting ratio; it is never used when the transmission is in high range. Low gear can be split to provide both a direct and an overdrive ratio.

The other four ratios in the front section are used once in low range and once again in high range; however, each of the five ratios (low–1–2–3–4) in low range and each of the four ratios (5–6–7–8) in high range can be split with the overdrive splitter gear.

All of the 18 speeds are controlled with one shift lever. A range preselection lever and a splitter control button are built into the shift knob. The range preselection lever controls range selection and the splitter control button (located on the side of the shift knob) controls gear splits.

15.01.02 Operation, Eaton Fuller Splitter and Range-Shift

IMPORTANT: The shifter knob has an interlock feature that prevents the splitter control button from being moved forward when the range preselection lever is down (in low range); when in high range and the splitter control button is in the forward position, the range preselection lever cannot be moved down.

1. When operating off-road, or under adverse conditions, always use low gear when starting to move the vehicle forward.

When operating on-highway, with no load, or under ideal conditions, use 1st gear when starting to move the vehicle forward.

For all conditions, use the highest gear that is still low enough to start the vehicle moving with the engine at or near idle speed, and without slipping the clutch excessively.

2. Use the clutch brake to stop gear rotation when shifting into low (or 1st) or reverse when the vehicle is stationary. The clutch brake is actuated by depressing the clutch pedal all the way to the floor.

For normal upshifts and downshifts, only a partial disengagement of the clutch is necessary to break engine torque.

3. Use double-clutching between all upshifts and downshifts that require movement of the shift lever. Splitting of the high range gears does not require movement of the shift lever.
4. Never move the shift lever into low gear while in high range.
5. Never move the splitter control button while in neutral.
6. Do not preselect with the splitter control button; after moving the control button, complete the shift immediately.
7. Except when downshifting from 5th direct to 4th gear, never push the range preselection lever down into low range while operating in high range—the splitter will become inoperative.
8. Do not shift from high range to low range at high vehicle speeds.
9. Do not make range shifts with the vehicle moving in reverse gear.
10. Never attempt to move the range preselection lever with the gear shift lever in neutral while the vehicle is moving. Preselection with the range preselection lever must be made prior to moving the shift lever out of gear into neutral.
11. After your shifting ability improves, you may want to skip some of the ratios. This may be done *only* when operating conditions permit, depending on the load, grade, and road speed.

15.01.03 Upshifting

1. Position the gear shift lever in neutral. Start the engine, and bring the air system pressure up to 100 to 120 psi (689 to 827 kPa).
2. Position the range preselection lever down, into low range. See Fig. 213, [Eaton Fuller 18-Speed Transmission Shift Pattern](#).

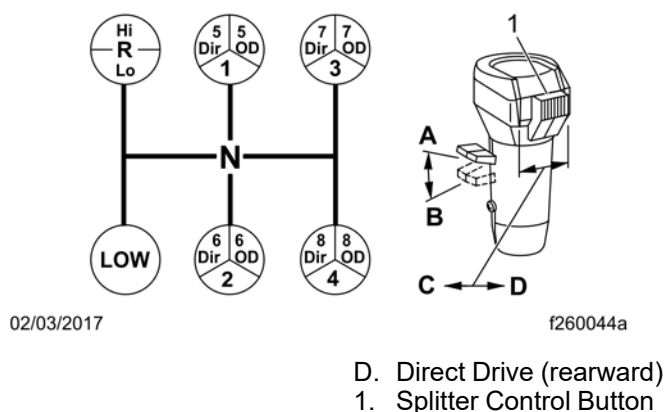


Fig 212, Eaton Fuller 13-Speed Transmission Shift Pattern

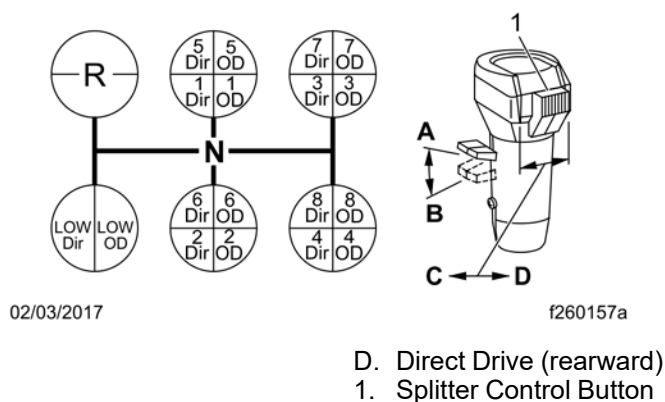


Fig 213, Eaton Fuller 18-Speed Transmission Shift Pattern

3. Make sure the splitter control button is in the direct (rearward) position. See Fig. 213, [Eaton Fuller 18-Speed Transmission Shift Pattern](#).
4. For 13-speed transmissions:
Press the clutch to the floor, shift into low or 1st gear; then engage the clutch, with the engine at or near idle speed, to start the vehicle moving. Accelerate to 80 percent of engine governed speed.
For 18-speed transmissions:
Press the clutch to the floor, shift into low; then engage the clutch, with the engine at or near idle speed, to start the vehicle moving.
To shift from low direct to low overdrive, move the splitter control button into the overdrive (forward) position, then immediately release the accelerator. Press and release the clutch pedal. After releasing the clutch, accelerate again.
5. For 13-speed transmissions:
Shift upward from low to 1st gear, 2nd, etc. until 4th gear, double-clutching between shifts, and accelerating to 80 percent of engine governed speed. See Fig. 212, [Eaton Fuller 13-Speed Transmission Shift Pattern](#).
For 18-speed transmissions:

Shift upward from low overdrive to 1st direct by first moving the splitter control button into the direct (rearward) position (see Fig.213,[Eaton Fuller 18-Speed Transmission Shift Pattern](#)). Move the shift lever, double-clutching, to the 1st gear position.

Continue upshifting through the shift pattern. Double-clutch during lever shifts (1st to 2nd to 3rd to 4th); single-clutch during split shifts (1st direct to 1st overdrive, etc.).

6. When in 4th gear (13-speed transmissions) or 4th overdrive (18-speed transmissions) and ready to shift up to 5th gear, use the range shift lever as follows:

For 13-speed transmissions:

While in 4th gear, pull the range shift preselection lever up, into high range. The transmission will automatically shift from low to high range as the shift lever passes through neutral. Then, disengage the clutch; double-clutch through neutral; move the shift lever to 5th gear; engage the clutch, and accelerate the engine.

For 18-speed transmissions:

While in 4th overdrive, pull the range shift preselection lever up, into high range. The transmission will automatically shift from low to high range as the shift lever passes through neutral.

Move the shift lever, double-clutching, to the 5th gear position. Just before making final clutch engagement, move the splitter control button to the direct (rearward) position; then engage the clutch and accelerate. Do not move the control button while the shift lever is in neutral.

7. Shift up through the high range gears as follows:

For 13-speed transmissions:

To shift from 5th direct to 5th overdrive, move the splitter control button (see Fig. 212,[Eaton Fuller 13-Speed Transmission Shift Pattern](#)) into the overdrive (forward) position, then immediately release the accelerator. Press and release the clutch pedal. After releasing the clutch, accelerate again.

Continue upshifting through the shift pattern. Double-clutch during lever shifts (6th to 7th to 8th); single-clutch during split shifts (6th direct to 6th overdrive, etc.).

For 18-speed transmissions:

To shift from 5th direct to 5th overdrive, move the splitter control button (see Fig. 213,[Eaton Fuller 18-Speed Transmission Shift Pattern](#)) into the overdrive (forward) position, then immediately release the accelerator. Press and release the clutch pedal. After releasing the clutch, accelerate again.

Continue upshifting through the shift pattern. Double-clutch during lever shifts (6th to 7th to 8th); single-clutch during split shifts (6th direct to 6th overdrive, etc.).

15.01.04 Downshifting

1. Downshift from 8th overdrive to 8th direct without moving the shift lever. Flip the splitter control button to the direct (rearward) position, then immediately release the accelerator, and disengage the clutch. Engage the clutch, and accelerate the engine only after the transmission has shifted.
2. Start the downshift from 8th direct to 7th overdrive by flipping the splitter control button to the overdrive (forward) position; then, immediately double-clutch through neutral, moving the shift lever from 8th to 7th gear.
3. Shift downward through each of the high range gears, alternating the procedures in steps 1 and 2, above, until reaching 5th direct.
4. While in 5th direct and ready for the downshift to 4th (13-speed transmissions) or 4th overdrive (18-speed transmissions), push the range preselection lever down. Then, double-clutch through neutral and move the shift lever to the 4th gear position. On 18-speed transmissions, move the splitter control button to the overdrive (forward) position *before* engaging the clutch. Do not move the control button while the shift lever is in neutral.
5. Continue downshifting from 4th to 1st as follows:

For 13-speed transmissions:

Downshift through the low range gears as conditions require.

For 18-speed transmissions:

Continue downshifting from 4th overdrive to 4th direct, then 4th direct to 3rd overdrive, 3rd overdrive to 3rd direct, etc. Single-clutch when split shifting (direct to overdrive, overdrive to direct). Double-clutch when making lever shifts (4th to 3rd, 3rd to 2nd, etc.).

IMPORTANT: Never use the clutch brake when downshifting, or as a brake to slow the vehicle.

15.02 Eaton Fuller 10-Speed Range-Shift Transmissions

15.02.01 General Information, Eaton Fuller Range-Shift

Refer to the Eaton website for additional information, [\[Missing cross reference text\]](#).


To operate a range-shift transmission, move the shift lever through all the low gear positions and then activate a range switch to provide an additional set of ratios in the high range. Using the same shift lever positions as in low range, move the shift lever through each position as before. On some models, the initial low gear is often used only in low range.

IMPORTANT: Not all lever positions are used in each range and the shift patterns vary between transmissions. Be sure to read the shift pattern decal on the dash for the operating instructions for the specific transmission installed in your vehicle.

10-Speed FR/FRO and RT/RTO/RTX Models

10-Speed FR/FRO and RT/RTO/RTX Models

Eaton Fuller 10-speed transmissions have 10 selective, evenly spaced forward ratios. Each transmission has a 5-speed front section and a 2-speed rear range section. The 10 forward speeds are obtained by twice using a 5-speed shift pattern: the first time in low range, the second time in high range. See Fig.214, [Eaton Fuller 10-Speed Transmission Shift Patterns](#) for the shift patterns.

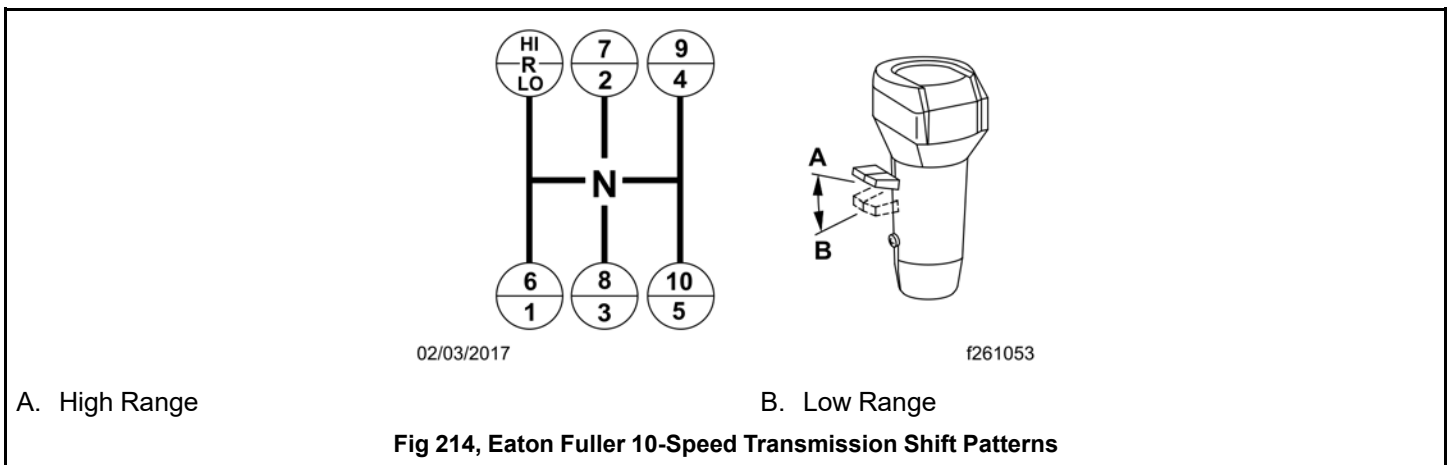

NOTE: The 4th/9th and the 5th/10th shift positions in the RT (direct ratio) and RTX (overdrive ratio) transmissions are directly opposite in the RTO (overdrive ratio) transmissions

15.02.02 Operation, Eaton Fuller Range-Shift

1. When operating off-highway, or under adverse conditions, always use low gear (if so equipped) when starting to move the vehicle.

When operating on-highway, with no load, or under ideal conditions, use 1st gear when starting to move the vehicle (except when equipped with a 9-speed RTO transmission, then always start in low gear).

For all conditions, use the highest gear that is still low enough to start the vehicle moving with engine idling, and without slipping the clutch excessively.

2.
- Use the clutch brake to stop gear rotation when shifting into low (or 1st) or reverse when the vehicle is stationary. The clutch brake is actuated by depressing the clutch pedal all the way to the floor.

For normal upshifts and downshifts, only a partial disengagement of the clutch is necessary to break engine torque.

3.
- Do not make range shifts with the vehicle moving in reverse gear.
4.
- Never attempt to move the range preselection lever with the gear shift lever in neutral while the vehicle is moving. Preselection with the range preselection lever must be made prior to moving the shift lever out of gear into neutral.
5.
- Do not shift from high range to low range at high vehicle speeds.
6.
- Double-clutch between all upshifts and downshifts.
7.
- After your shifting ability improves, you may want to skip some of the ratios. This may be done *only* when operating conditions permit, depending on the load, grade, and road speed.

15.02.03 Upshifting

1.
- Position the gear shift lever in neutral. Start the engine, and bring the air system pressure up to 100 to 120 psi (689 to 827 kPa).
2.
- Position the range preselection lever down, into low range.
3.
- Press the clutch pedal to the floor; shift into low or 1st gear (see Table.18,[Eaton Fuller Shift Progressions](#)), then engage the clutch, with the engine at or near idle speed, to start the vehicle moving. Accelerate to 80 percent of engine governed speed.

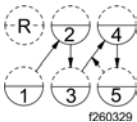
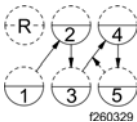
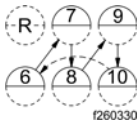
Eaton Fuller Shift Progressions			
TRANS. MODEL	LOW RANGE		HIGH RANGE
	Off-Highway	On-Highway	
10-Speed Direct or Overdrive (RT or RTX)	 Fig 215,	 Fig 216,	 Fig 217,

Table 14, Eaton Fuller Shift Progressions

4.
- Shift progressively upward from low or 1st gear, to the top gear in low range (see Table.18,[Eaton Fuller Shift Progressions](#)), double-clutching between shifts, and accelerating to 80 percent of engine governed speed.
5.
- While in the top gear of the low range shift pattern, and ready for the next upshift, flip the range preselection lever up into high range. Double-clutch through neutral, and shift into the bottom gear in high range (see Table.18,[Eaton Fuller Shift Progressions](#)). As the shift lever passes through neutral, the transmission will automatically shift from low range to high range.
6.
- With the transmission in high range, shift progressively upward through each of the high range gears (see Table.18, [Eaton Fuller Shift Progressions](#)), double-clutching between shifts.

15.02.04 Downshifting

1. With the transmission in high range, shift progressively downward to the bottom gear in high range, double-clutching between shifts.
2. When in the bottom gear of the high range shift pattern, and ready for the next downshift, push the range preselection lever down into low range. Double-clutch through neutral, and shift into the top gear of the low range shift pattern. As the shift lever passes through neutral, the transmission will automatically shift from high range to low range.
3. With the transmission in low range, downshift through the low range gears as conditions require.

IMPORTANT: Never use the clutch brake when downshifting, or as a brake to slow the vehicle.

15.03 Clutch

15.03.01 General Information

The hydraulic clutch control system consists of a pedal unit and a secondary cylinder, connected by a hydraulic hose and fastened with quick-disconnect clamps. The components of the system have been specially designed to use DOT 4 brake fluid. The pedal unit includes a hydraulic subassembly, composed of the main cylinder and reservoir, which can be removed from the pedal unit for service purposes. When the clutch pedal is depressed, the fluid in the main cylinder is forced through a hydraulic line to the secondary cylinder. The fluid pressure moves the secondary cylinder piston, pushing the plunger rod and clutch release lever, which disengages the clutch. The hydraulic system is self-adjusting.

Clutches are designed to absorb and dissipate more heat than encountered in typical operation. The temperatures developed in typical operation will not break down the clutch friction surfaces. However, if a clutch is slipped excessively, or asked to do the job of a fluid coupling, high temperatures develop quickly and destroy the clutch. Temperatures generated between the flywheel, driven discs, and pressure plates can be high enough to cause the metal to flow and the friction facing material to char and burn.

Heat and wear are practically nonexistent when a clutch is fully engaged. But during the moment of engagement, when the clutch is picking up the load, it generates considerable heat. An improperly adjusted or slipping clutch will rapidly generate sufficient heat to destroy itself.

To ensure long service life of the clutch; start in the right gear, be alert to clutch malfunctions, and know when to adjust the clutch.

15.03.02 Clutch Operation

Clutch Break-In

With a new or newly installed clutch, the clutch may slip for a short time while the friction surfaces break-in. However, allowing the clutch to slip for more than two seconds can severely damage the clutch disc, pressure plate, and the flywheel.

During initial operation of a new vehicle or a vehicle with a new clutch, check for clutch slippage during acceleration. If the clutch slips, decelerate until the clutch does not slip. Allow the clutch to cool 15 to 30 seconds, and then gradually accelerate again. If the clutch continues to slip, repeat the procedure. If necessary, repeat the procedure up to five times. If the clutch slips after five attempts, stop the vehicle. Allow the clutch to cool for at least one hour. Notify your Freightliner dealer of the problem.

Moving the Vehicle in the Proper Gear

An empty truck can be started in a higher transmission gear than can a partially or fully loaded truck. A good rule of thumb for the driver to follow is to select the gear combination that allows the vehicle to start moving with an idling engine, or, if necessary, just enough throttle to prevent stalling the engine. After the clutch is fully engaged, the engine can be accelerated to the correct rpm for the upshift into the next higher gear.

Gear Shifting Techniques

Shift into the next higher gear when the vehicle speed allows the transmission input shaft speed to match the flywheel speed when engaging the clutch. This technique results in the smallest speed difference between the clutch disc and the flywheel and causes the least heat and wear on the clutch assembly. When downshifting, the input shaft speed must be increased by slightly revving the engine to match the flywheel speed for smooth clutch engagement. For transmission operating instructions, refer to the transmission headings in this manual.

Vehicle Loading

Clutches are designed for specific vehicle applications and loads. These weight limitations should not be exceeded.

**CAUTION:**

Exceeding vehicle load limits can not only result in damage to the clutch, but can also damage the entire powertrain.

Using the Clutch

The clutch pedal must be used only to start the vehicle moving or while shifting. To start the vehicle moving, depress the clutch pedal all the way to the floor plate (see "Using the Clutch Brake") and shift from neutral to a low gear. Slowly raise your foot until the clutch starts to engage. In this position the clutch is starting to connect the transmission input shaft to the flywheel and is causing the most heat and wear. Slightly increase the engine speed and smoothly allow the clutch pedal to return to its at rest position. Do not allow the clutch to remain in the partially engaged position any longer than necessary to obtain a smooth start.

To shift gears while the vehicle is moving, push the clutch pedal most of the way (but not all of the way) to the floor plate. Shift the transmission into neutral and fully release the clutch pedal. If upshifting, wait long enough for the engine speed to decrease to the road speed. If downshifting, increase the engine speed to match the road speed. Again, push down the clutch pedal part way and then move the shift lever to the next gear position. Fully release the clutch pedal after completing the shift.

Slightly depressing the clutch pedal while driving is damaging to the clutch, because partial clutch engagement causes slip-page and heat. Resting your foot on the clutch pedal will also put a constant thrust load on the release bearing, thinning the bearing lubricant and increasing the wear on the bearing.

Using the Clutch Brake

The clutch brake is applied by depressing the clutch pedal past the fully released clutch position, almost to the floor plate. The last part of the clutch pedal travel will compress the clutch brake plates together, stopping the transmission input shaft. The purpose of the clutch brake is to stop the transmission gears from rotating in order to quickly engage a transmission gear after idling in neutral.

**CAUTION:**

Never apply the clutch brake when the vehicle is moving. If the clutch brake is applied when the vehicle is moving, the clutch brake will try to stop or decelerate the vehicle, causing rapid wear of the clutch brake friction discs. Considerable heat will be generated, causing damage to the release bearings and the transmission front bearings.

Holding the Vehicle on an Incline

Always use the vehicle service brakes to prevent the vehicle from rolling backwards while stopped on a hill. Slipping the clutch on a hill to maintain the vehicle position will quickly damage the clutch assembly.

Coasting

Coasting with the clutch pedal depressed and the transmission in a low gear can cause high driven disc speed. The clutch speed can be much higher under these conditions than when the engine is driving the clutch. This condition creates a hazardous situation due to the lack of vehicle control and due to the high clutch disc speed. Engaging the clutch under these conditions can cause component damage because of the shock loads to the clutch and drivetrain.

**WARNING:**

Always shift into the gear that is correct for the traveling speed of the vehicle and engage the clutch. Coasting with the clutch disengaged can prevent engagement of the correct transmission gear which can cause loss of vehicle control, possibly resulting in personal injury or property damage.

High clutch disc speeds while coasting can also cause the clutch facing to be thrown off the disc. Flying debris from the clutch can cause injury to persons in the cab.

15.03.03 Clutch Maintenance

Clutch Adjustment

Eaton Fuller Solo clutches are adjustment-free. As the clutch wears, its wear-adjusting technology monitors clutch components and makes any necessary adjustments. The wear adjusting technology comes from two sliding cams, which rotate to maintain the proper adjustment. Atop the upper cam, a wear indicating tab mirrors the cam's movement, letting you know when it's time to replace the clutch.

**CAUTION:**

Operating the vehicle with incorrect free pedal could result in clutch damage.

Hydraulic Clutch Fluid Reservoir Checking

Make sure that the clutch fluid reservoir is full. See Fig.215, [Clutch Fluid Reservoir](#). The reservoir is full when the fluid level is up to the "max" mark. The fluid level must always be above the "min" mark. Use only heavy-duty brake fluid, DOT 4, in the clutch hydraulic system.

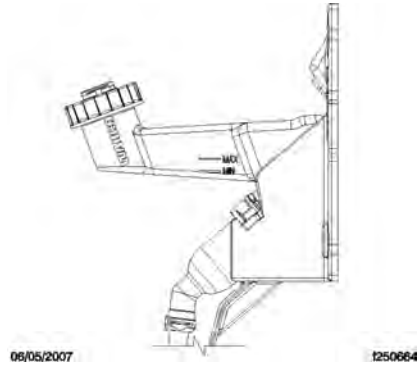


Fig 218, Clutch Fluid Reservoir

16.01 Eaton Fuller UltraShift PLUS	231
16.01.01 Power Up	231
16.01.02 Power Down	232
16.01.03 Reverse (R)	232
16.01.04 Automatic Mode (AUTO)	232
16.01.05 Manual Mode (MAN)	232
16.01.06 Low (L)	233
16.01.07 Clutch Abuse Protection	233
16.01.08 Creep Mode	234
16.01.09 Hill Start Aid	234
16.01.10 Engine Overspeed Protection	234
16.01.11 Shuttle Shifting	234
16.01.12 Auto Start Gear Selection and Override	234
16.01.13 Skip Shifting	234
16.01.14 Auto Neutral	235
16.01.15 Automatic Traction Control	235
16.01.16 Load-Based Shifting	235
16.01.17 Coasting	235
16.02 Detroit™ Automated Transmissions	235
16.02.01 Detroit™ Multifunction Control	235
16.02.02 Power Up and Shift into Gear	238
16.02.03 Gear Display Window	238
16.02.04 Driving Modes	238
16.02.05 Selected Gear	238
16.02.06 Suggested Shift	238
16.02.07 eCoast	239
16.02.08 Creep Mode	239
16.02.09 Clutch Abuse Protection	240
16.02.10 Engine Overspeed Alerts	241
16.02.11 Low Transmission Air Warning	241
16.03 Freightliner SmartShift Shift Control	241


16.04 Eaton Fuller AutoShift Automated Transmissions	242
16.04.01 General Information, AutoShift	242
16.04.02 Operation, AutoShift with SmartShift	244
16.05 Eaton Fuller UltraShift PLUS	247
16.05.01 Power Up	247
16.05.02 Power Down	248
16.05.03 Reverse (R)	249
16.05.04 Automatic Mode (AUTO)	249
16.05.05 Manual Mode (MAN)	249
16.05.06 Low (L)	250
16.05.07 Clutch Abuse Protection	250
16.05.08 Creep Mode	251
16.05.09 Hill Start Aid	251
16.05.10 Engine Overspeed Protection	251
16.05.11 Shuttle Shifting	251
16.05.12 Auto Start Gear Selection and Override	251
16.05.13 Skip Shifting	251
16.05.14 Auto Neutral	252
16.05.15 Automatic Traction Control	252
16.05.16 Load-Based Shifting	252
16.05.17 Coasting	252
16.05.18 Ultrashift Diagnostics	252

16. Automated Transmissions

16.01 Eaton Fuller UltraShift PLUS

16.01.01 Power Up

Eaton Fuller UltraShift PLUS automated transmissions use shift selection software and electric clutch actuation; a clutch pedal is not needed to operate the vehicle. These transmissions use the four-position SmartShift control (see Fig. 216, [SmartShift Control \(Eaton Fuller UltraShift PLUS, and AutoShift Transmissions\)](#)) on the steering column to select mode, direction, neutral, low, and to make manual shifts. To know what gear the transmission is in, see the current gear indicator on the dash. Forward shifts can be made either manually or automatically.

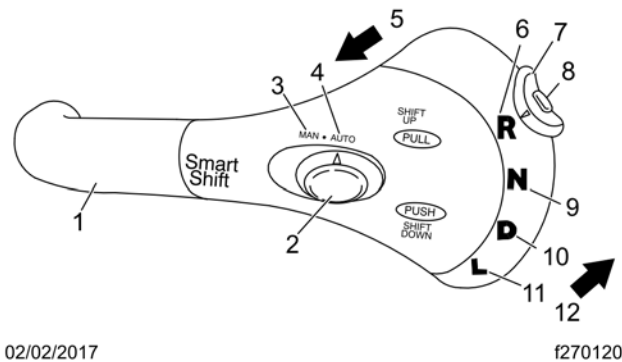

NOTE: To upshift manually, pull the lever up (towards you). To downshift manually, push the lever down (away from you).

- | | |
|---|--|
| 1. SmartShift Control Lever | 7. Selector Switch |
| 2. Slide Switch (forward driving mode switch) | 8. Neutral Lock Button |
| 3. MAN Mode (of slide switch) | 9. Neutral Position (of selector switch) |
| 4. AUTO Mode (of slide switch) | 10. Drive Position (of selector switch) |
| 5. Upshift Direction | 11. Low Position (of selector switch) |
| 6. Reverse Position (of selector switch) | 12. Downshift Direction |

Fig 219, SmartShift Control (Eaton Fuller UltraShift PLUS, and AutoShift Transmissions)

NOTE: Engine cranking is delayed until the transmission power-up is complete and the gear display shows a solid "N".

1. With the parking brake set, turn the ignition switch to the ON position.
2. Start the engine.
3. Apply the service brake.

NOTE: If the service brake is not applied while selecting a starting gear, the initial start gear will not be found and the driver will need to select Neutral and press the service brake while selecting the desired mode.

4. Select the desired mode and starting gear. (Inappropriate start gear selections are ignored to avoid damaging the transmission.)
5. Release the parking brake.
6. Release the service brake and apply the accelerator.

16.01.02 Power Down

NOTE: If the gear display does not show a solid "N", neutral has not yet been obtained. Neutral should always be reached before powering down an UltraShift PLUS, except in cases of emergency.

1. Select Neutral on the shift control.
2. Set the parking brake.
3. Turn off the ignition, and shut down the engine.

16.01.03 Reverse (R)

NOTE: If attempting to select a non-Neutral mode without applying the service brakes, the transmission will not shift into gear. To shift into gear, select Neutral, apply the service brakes, and select the desired mode again. Also, the vehicle will not engage reverse above 2 mph (3 km/h).

Reverse (R) is at the upper end of the four-position selector switch located at the end of the SmartShift control. To select R, press in the neutral lock button and move the selector switch to the position above neutral. The default Reverse gear is engaged.

**NOTICE:**

Avoid launching the vehicle in high range. Launching the vehicle in high range increases the likelihood of clutch abuse and could be detrimental to clutch life.

16.01.04 Automatic Mode (AUTO)

In automatic drive mode (AUTO), upshifts and downshifts are made by the UltraShift PLUS without driver intervention. Press in the neutral lock button, move the selector switch to Drive (D), and press down on the throttle pedal. The transmission will shift automatically.

NOTE: If attempting to select a non-Neutral mode without applying the service brakes, the transmission will not shift into gear. To shift into gear, select Neutral, apply the service brakes, and select the desired mode again.

In Drive, the start gear is automatically selected. The selected start gear can vary depending on several vehicle inputs such as load, grade, and axle/transmission ratio. The start gear can be changed using the SmartShift control, provided the selected gear would allow the vehicle to launch without damaging the transmission. If the start gear is changed using the SmartShift control, it will be the default until the vehicle is powered down or the selection is changed again manually.

IMPORTANT: Prior to ascending a steep grade, either reduce the default start gear by one (using the SmartShift control) or apply full throttle for the duration of the grade so the vehicle maintains the proper engine and vehicle speed during the entire grade.

In Drive, the transmission automatically performs upshifts and downshifts. However, when the transmission is near the shift point, the shift can be forced using the upshift or downshift function of the SmartShift control.

NOTE: The transmission may deny a shift while ascending or descending a grade if the load of the vehicle and grade of the terrain in combination with the drivetrain ratio and engine torque fall outside of the acceptable range to perform a shift. If the shift is denied, a tone will sound.

16.01.05 Manual Mode (MAN)

In manual mode (MAN), the driver selects upshifts and downshifts instead of letting the UltraShift PLUS select them automatically. Manual shifting may be helpful when traversing a work site, railroad tracks, or steep grades, for example. To drive forward, press in the neutral lock button, move the selector switch to Drive (D), and press down on the throttle pedal. To shift up, pull the lever up (towards you); to shift down, push the lever down (away from you). The system holds the current gear unless a shift is requested or if the system initiates a manual mode override.

NOTE: The transmission may deny a shift while ascending or descending a grade if the load of the vehicle and grade of the terrain in combination with the drivetrain ratio and engine torque fall outside of the acceptable range to perform a shift. If the shift is denied, a tone will sound.

NOTE: If attempting to select a non-Neutral mode without applying the service brakes, the transmission will not shift into gear. To shift into gear, select Neutral, apply the service brakes, and select the desired mode again.

Manual Mode Override

The system is equipped with a manual mode override function. If the vehicle is being "back driven" (for example, descending a grade and vehicle speed exceeds engine speed) and the engine speed is excessively high, the system will upshift automatically. Also, if the start gear is changed and it causes the engine to lug at takeoff, the system will override the current position and select the best available gear.

16.01.06 Low (L)

Low (L) is at the lower end of the four-position selector switch located at the end of the SmartShift control. Use Low when wanting to maximize engine braking and minimize the use of the brake pedal—for example, when driving down long grades or when coming to a stop. To select Low, press in the neutral lock button and move the selector switch to the L position. The lowest available start gear will be selected (the starting gear cannot be changed in Low).

If Low is selected while moving, the transmission will not upshift (unless the system initiates a Low override). The system will downshift at the earliest opportunity to provide maximum engine braking.

If attempting to select a non-Neutral mode without applying the service brakes, the transmission will not shift into gear. To shift into gear, select Neutral, apply the service brakes, and select the desired mode again.

Low Override

The system is equipped with a Low override function. If the vehicle is being "back driven" (for example, descending a grade and vehicle speed exceeds engine speed) and the engine speed is excessively high, the system will upshift automatically. Also, if the start gear is changed and it causes the engine to lug at takeoff, the system will override the current position and upshift.

16.01.07 Clutch Abuse Protection

Although a vehicle equipped with an UltraShift PLUS uses an automated clutch, the clutch can still overheat and slip with improper use. The clutch abuse protection feature helps protect the clutch if the automated clutch starts to overheat. When the clutch abuse protection feature initiates and sounds a warning tone, full clutch actuation must be completed quickly. If it is not completed quickly enough, the system will either open the clutch (if the throttle pedal is not being pressed) or close the clutch (if the throttle pedal is being pressed). If the abuse continues, the system will open the clutch and take away throttle control briefly to allow the clutch to cool down.

To protect the clutch:

- Select the lowest possible start gear for the application.
- Use Creep Mode when appropriate.
- Use the service brakes and the Hill Start Aid when launching on a grade.
- Minimize the time it takes to engage the clutch from rest.
- Do not use the throttle to hold the vehicle on a grade; use the service brakes.
- Do not use the throttle to stop roll back on an incline after Hill Start Aid disengages; use the service brakes, and then relaunch.
- Do not continually start and stop, especially when loaded; use a lower gear or Creep Mode.

16.01.08 Creep Mode

The Creep Mode function allows the vehicle to maintain a constant speed at engine idle without the driver holding the throttle pedal position. This mode is useful for very low-speed maneuvering and applications where steady vehicle speed is required. The vehicle speed is determined by the selected gear ratio operating at governed low engine idle speed. Any available gear may be selected, though the transmission will downshift or exit Creep Mode to prevent stalling if the engine lugs due to load conditions.

By default, Creep Mode can be activated while in Manual Mode or Low. Eaton's ServiceRanger diagnostic software can be used to enable Creep Mode in Automatic Mode and/or Reverse.

Engaging Creep Mode

To engage Creep Mode:

1. Select Low or Manual Mode and the desired gear (while stopped or moving).
2. Apply the throttle pedal to accelerate the vehicle until the clutch is closed (engaged).
3. Release the throttle pedal. The vehicle will continue moving at governed low engine idle speed.

Exiting Creep Mode

To exit Creep Mode, apply the throttle pedal to accelerate temporarily, or select a higher gear in Manual Mode. (Creep Mode can be resumed in the selected gear by releasing the throttle pedal.)

NOTE: The transmission will exit Creep Mode if the engine lugs 150 rpm below the governed low engine idle speed. In this case, a lower gear should be selected if available.

16.01.09 Hill Start Aid

UltraShift PLUS transmissions are equipped with a Hill Start Aid (HSA) feature to prevent the vehicle from rolling while on grades steeper than 3% and allow for a controlled launch. A grade sensor is used to determine when to engage the feature.

HSA is "on" by default. It can be turned off by pressing and releasing the override switch on the dash (see [6.01 Ignition Switch and Key](#)). HSA will turn back on after the first successful launch.

When the vehicle is stopped on a grade greater than 3% and in a forward mode or reverse, depress the service brakes then release them. The vehicle will begin to move after 3 seconds, and the clutch will perform partial engagements to slow the vehicle motion. Either step on the brake or apply the throttle to continue negotiating the grade.

16.01.10 Engine Overspeed Protection

The system will upshift if necessary to prevent engine overspeed in Drive, Manual, and Low.

16.01.11 Shuttle Shifting

Shuttle shifting from reverse to any forward mode is only allowed if the vehicle speed is approximately zero.

16.01.12 Auto Start Gear Selection and Override

The UltraShift PLUS system uses various inputs to automatically select the best start gear in Drive and Manual. This selection can be changed using the SmartShift control; however, if the selection requested could cause damage or engine lugging, the request will be denied and a tone will sound.

16.01.13 Skip Shifting

When appropriate, the UltraShift PLUS system may skip shift in Drive. When prevailing conditions like load and grade allow, skip shifts can be performed in Manual mode using the SmartShift control.

16.01.14 Auto Neutral

The UltraShift PLUS system will automatically shift to neutral if the vehicle is left in Drive and the parking brake is set. "AN" will show on the gear display. To re-engage the transmission, select Neutral and then either Drive or Reverse on the shift control (it will re-engage regardless of whether the parking brake is released).

16.01.15 Automatic Traction Control

The UltraShift PLUS system requires the Automatic Traction Control (ATC) option to be enabled when driving in soft soil/sand to prevent wheel slippage and shifting issues. The ATC system has two modes: "normal" (for sand and loose road surface) and a mud/snow setting.

ATC Normal Mode

In normal mode, the system will engage the brakes on the wheel or side that the wheel slip is occurring to help the vehicle gain traction. The point at which the traction control will actuate the braking system increases with throttle: low throttle allows the system to brake the wheels earlier; heavy/full throttle raises the point of the acceptable wheel slip.

Adhere to the following points when driving in ATC normal mode:

- If using Automatic mode in soft soil and/or sand, maintain the engine speed between 1000 and 1300 rpm to prevent unnecessary upshifting.
- If using Manual mode in soft soil and/or sand, do not attempt an upshift and try to maintain the current gear.
- If the vehicle comes to a stop in the sand it may be necessary to back up prior to attempting forward movement.

ATC Mud/Snow Mode

To select the mud/snow mode, depress the ATC switch (see [6.01 Ignition Switch and Key](#)). This mode raises the wheel slip speed that is allowed before the traction control activates. The point at which the traction control will actuate the braking system increases with throttle: low throttle allows the system to brake the wheels earlier; heavy/full throttle raises the point of the acceptable wheel slip.

16.01.16 Load-Based Shifting

The UltraShift PLUS system is adaptive and will change the shift points based on grade, engine RPM, throttle position, and vehicle load. After changing loads or powering up, the system needs to relearn these inputs for the first few shifts to make the proper adjustments.

16.01.17 Coasting

When coasting to a stop on level terrain, the UltraShift PLUS system may not downshift into the lower gears. It will select a gear after the throttle is applied.


16.02 Detroit™ Automated Transmissions

16.02.01 Detroit™ Multifunction Control

Detroit transmissions have twelve forward gears and up to four reverse gears that can be shifted automatically or manually. Shifting and clutch actuation are computer controlled, and there is no clutch pedal needed to operate the vehicle. Automatic shifts are selected for fuel economy or engine power. Manual shifts can be requested with the shift control and the transmission ECU grants them when conditions permit. In all cases, shifts depend on the following factors: engine speed, accelerator pedal position, service brake usage, engine brake operation, vehicle load status, and road conditions.

To avoid potential engine stall risk or unexpected shifting, use the interaxle differential lock when the vehicle is operated in slippery conditions. See [17.01.01 Tandem Drive Axles with Interaxle Differential Lock](#) for information about the interaxle differential lock.

Vehicles with Detroit transmissions use the control see Fig.217, [Detroit Multifunction Control](#). This control can be used to request manual shifts, change driving mode, and set engine brake levels. See Table.19, [Functionality, Detroit Multifunction Control](#) for an overview of control functionality.

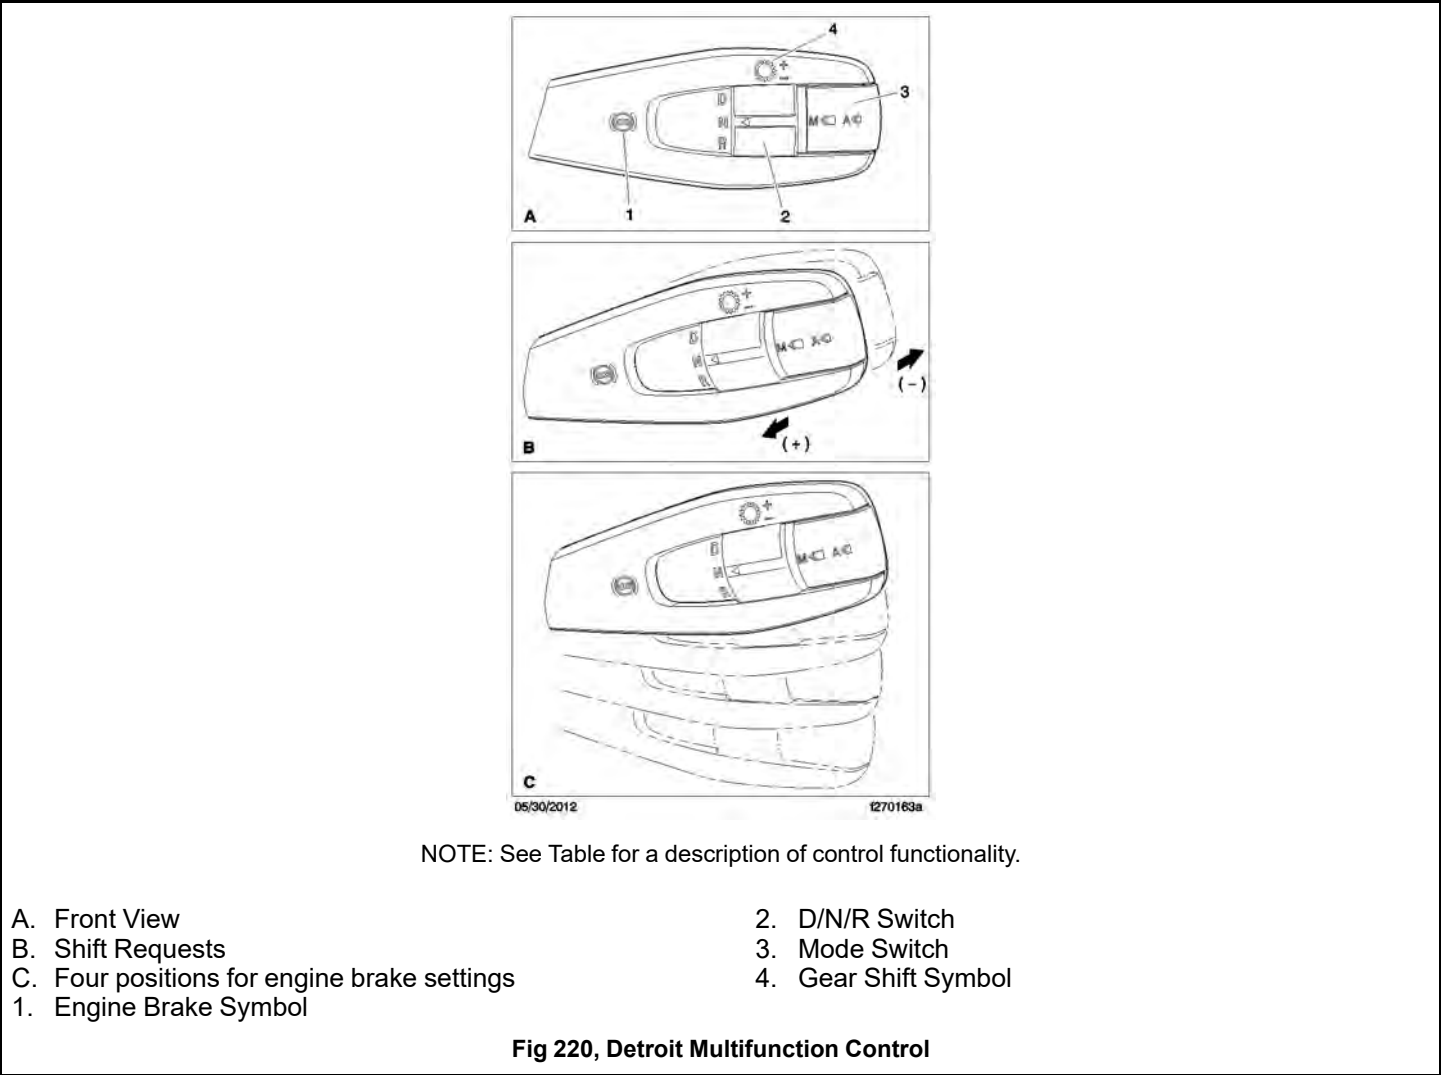

D/N/R Switch

Use the "D/N/R Switch" to request drive (D), neutral (N), or reverse (R).

Mode Switch

The driving mode can be changed using the Mode switch on the shift control (see Fig.217, [Detroit Multifunction Control](#)). To activate the manual drive mode, press and hold the switch briefly. Press the switch quickly to activate the automatic drive mode or change between Automatic Economy and Automatic Performance modes.

Upshifting and Downshifting

Gear shifts can be requested manually; push the lever away to request a downshift, or pull the lever toward you to request an upshift. See Table.19, [Functionality, Detroit Multifunction Control](#) for more information about upshift and downshift requests.

Functionality, Detroit Multifunction Control		
Function/Switch	Action/Position	Request
D/N/R	D	Forward gears
	N	Neutral
	R	Reverse gears
Mode	Depress switch and release it quickly	Activate the automatic drive mode, or switch between Automatic Economy and Automatic Performance.
	Depress switch and hold it briefly	Activate the manual drive mode.
Upshifting and Downshifting	Pull the lever toward you momentarily	Upshift, single gear
	Pull the lever toward you in quick repetitions	Upshift, multiple gears
	Push the lever away momentarily	Downshift, single gear
	Push the lever away in quick repetitions	Downshift, multiple gears
Engine Brake*	Lever at position 0 (top)	Engine brake off
	Lever at position 1	Low intensity
	Lever at position 2	Medium intensity
	Lever at position 3 (bottom)	High intensity

Table 15, Functionality, Detroit Multifunction Control

* For functions with cruise control active, see [6.01 Ignition Switch and Key](#).

Engine Brake

The engine brake is controlled by the lever position (see Fig.217, [Detroit Multifunction Control](#), Ref. C). At the top position, the engine brake is off, and at the three lower positions, the engine brake is on and the intensity (low, medium, high) increases with each step down. For more information about using the engine brake, see [14.01.01 Brake System General Information](#).


Using the engine brake with cruise control can be used to activate Descent Control Mode or Deceleration Mode. For more information, see "Cruise Control" in [6.01 Ignition Switch and Key](#).

16.02.02 Power Up and Shift into Gear

1. With the parking brake set and Neutral (N) selected on the shift control, turn the ignition switch to the ON position.
2. Start the engine.
3. Apply the service brake.
4. Select the desired starting gear.
5. Release the parking brake.
6. Release the service brake and apply the accelerator.

16.02.03 Gear Display Window

The gear display window shows the current transmission gear and driving mode. See Fig.218, [Gear Display Window](#).

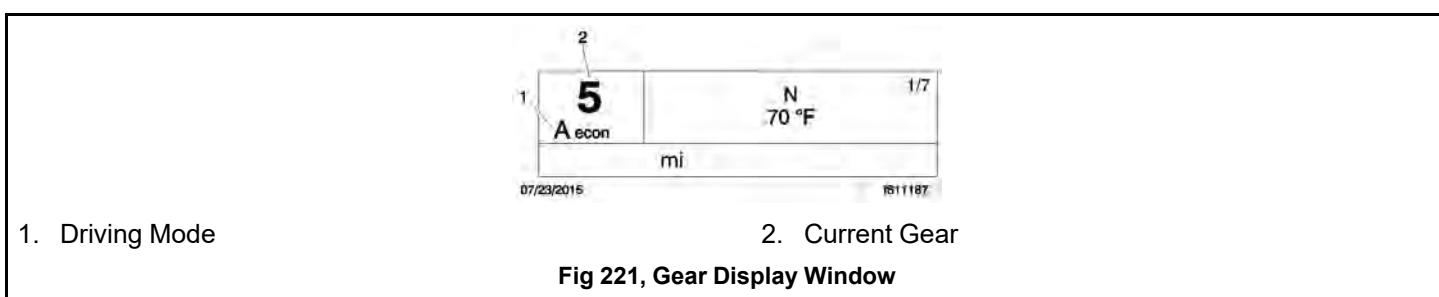

16.02.04 Driving Modes


There are three driving modes: Manual, Automatic Economy, and Automatic Performance.

In Automatic Economy mode, gear shifts are designed for saving fuel. In Automatic Performance mode, gear shifts are designed for higher performance and are made at higher engine speeds. In manual mode, gear shifts are requested manually. See [6.01 Ignition Switch and Key](#) for more information about upshifting and downshifting using the control.

NOTE: In Automatic Performance mode, the transmission will automatically change to Automatic Economy mode if it hasn't received a request for more power in several minutes, unless current road conditions require higher engine performance.


16.02.05 Selected Gear

If the selected gear is different than the current gear for longer than a half second, the current gear display will flash and the selected gear value will be shown. Once the current gear and selected gear match, the selected gear display disappears and the current gear display stops flashing. See Fig.219, [Selected Gear Display](#).

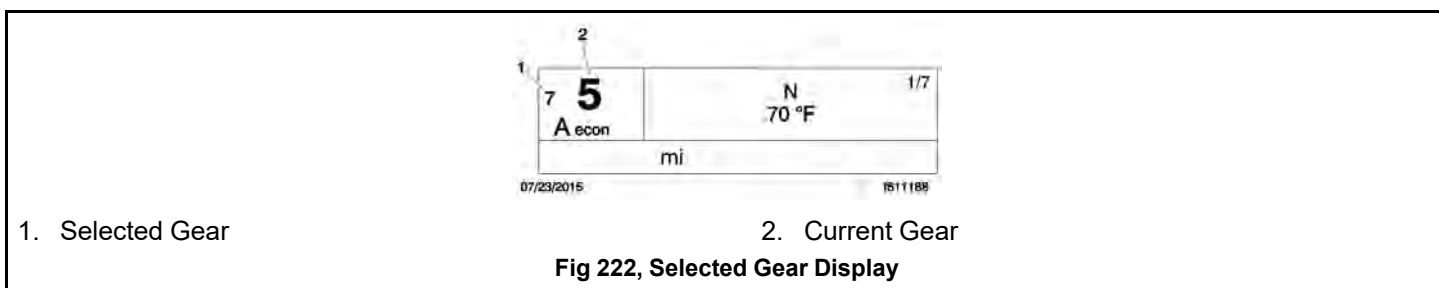

16.02.06 Suggested Shift

In Manual mode only, a suggested shift is displayed to indicate the most economical gear available. The suggested shift is the number of up or down arrows from the current gear with a maximum of three up or down arrows. See Fig. 220, [Suggested Shift](#).

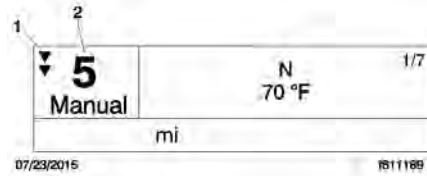

1. Suggested Shift Arrows

2. Current Gear

Fig 223, Suggested Shift**16.02.07 eCoast**


The eCoast feature can improve driving economy. When conditions permit, the transmission control automatically shifts the transmission to neutral to coast at speeds between approximately 22 - 55 mph (35 - 88.5 km/h), and above depending on specific programming. An "E" shows in the gear display window when eCoast is in effect. See Fig.221, [eCoast Display](#).

The eCoast function is not active when any of the following occur:

- the accelerator pedal is pressed.
- vehicle acceleration rate is exceeded.
- the service brake pedal is pressed.
- the engine brake is in use.
- cruise control brakes or accelerates.
- vehicle speed exceeds the cruise control set speed by more than approximately 4 mph (6 km/h).
- the speed limiter is active and the maximum speed set is exceeded.
- diesel particulate filter (DPF) regeneration occurs.

The eCoast function cannot be deactivated when the Automatic Economy mode is active.

NOTE: To disable eCoast, see an authorized Freightliner service facility.

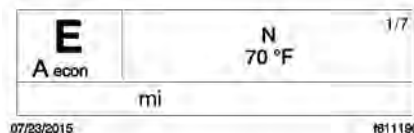

NOTE: Upshift and downshift arrows are not shown when "E" is shown in the gear display window.

Fig 224, eCoast Display**16.02.08 Creep Mode**

Creep mode allows the vehicle to be maneuvered at very slow speeds. To activate Creep mode for the first time within the current driving cycle, press the accelerator pedal to launch the vehicle, thereby fully engaging the clutch. Following this and for the duration of the current driving cycle, Creep mode is active.

Once the vehicle is stopped via the service brakes, the vehicle will begin to creep again, without the accelerator pedal actuation, as soon as the service brakes are released.

To begin using Creep mode (once active) from a parked position, shift from neutral to either drive or reverse, release the service brakes, and briefly depress the accelerator pedal. The vehicle's urge to move can then be felt.

If creep is active and no acceleration is achieved within five seconds, then Creep mode will abort. A display message notifies the operator when Creep mode is about to be aborted.

IMPORTANT: When slowing down from higher speeds in drive or reverse, remember that Creep mode will be in effect at lower speeds. Use the service brakes to stop the vehicle.

16.02.09 Clutch Abuse Protection

A vehicle equipped with a Detroit transmission does not have a clutch pedal, but still has a clutch that is operated automatically and can be damaged by abusive driver actions. To protect the clutch, the vehicle has a clutch abuse protection system that alerts the driver and restricts functionality when needed. Extended periods in Creep Mode, slipping the clutch (using the accelerator pedal to hold the vehicle on a hill, for example), and high clutch temperatures can activate the clutch abuse protection system. A display message notifies the operator when the protections are needed.



NOTICE:

To hold the vehicle stationary on an uphill slope, use the service brakes, not the accelerator pedal. Using the accelerator pedal can overheat and damage the clutch. To start moving, use the accelerator pedal and release the brakes as the vehicle begins to move.

There are three clutch abuse protection levels. At each, the driver is alerted and functionality is modified; see Table.20, [Clutch Abuse Alerts and Protections](#).

- To avoid clutch overheating, follow these tips:
- To hold the vehicle stationary on an uphill slope, use the service brakes, not the accelerator pedal.
- To start moving on an uphill slope, use the accelerator pedal and release the brakes as the vehicle begins to move.
- When hooking up to a trailer, ensure the trailer is high enough to back under, and use first gear reverse.
- Avoid starting in higher gears, and start in first gear when a trailer is attached.
- Ensure trailer brakes have had time to completely release prior to starting.
- Do not use Creep mode for an extended period. Stop or adjust the vehicle speed when warned to deactivate Creep mode.

Clutch Abuse Alerts and Protections				
Alert Level	Alert	Protections		
		Highest Start Gear	Creep Mode	Clutch Function
1	Heavy clutch load message	1	No restriction	Normal function
2	Heavy clutch load message	1	Disabled	Normal function
3	Clutch overload message and buzzer	1	Disabled	If the accelerator pedal is depressed, the clutch closes at fixed rate. If the accelerator pedal is released, the clutch opens at fixed rate.

Table 16, Clutch Abuse Alerts and Protections

16.02.10 Engine Overspeed Alerts

To help protect the engine, the system has display messages to notify the operator when the engine has exceeded certain thresholds and needs to be slowed down before significant engine damage occurs. There are two warnings, one at about 2400 rpm and another at 2500 rpm, indicated with messages and a fault code.

16.02.11 Low Transmission Air Warning

Pneumatic controls are used to shift the transmission. If there is inadequate air pressure, a warning is displayed and the quality of gear shifts may be degraded. Wait for air pressure to build before operating the vehicle.

IMPORTANT: If the low transmission air warning indicator appears while the vehicle is in operation, safely pull the vehicle off the road, and correct the problem.

Clutch Abuse Alerts and Protections				
Alert Level	Alert	Protections		
		Highest Start Gear	Creep Mode	Clutch Function
1	Heavy clutch load message	1	No restriction	Normal function
2	Heavy clutch load message	1	Disabled	Normal function
3	Clutch overload message and buzzer	1	Disabled	If the accelerator pedal is depressed, the clutch closes at fixed rate. If the accelerator pedal is released, the clutch opens at fixed rate.

Table 17, Clutch Abuse Alerts and Protections

16.03 Freightliner SmartShift Shift Control

General Information, SmartShift

The SmartShift transmission control is an electronic transmission control device. It is installed with the following transmissions:

- Eaton Fuller UltraShift™ PLUS
- Eaton Fuller AutoShift™

It replaces the typical floor-mounted shift lever or dash-mounted push button control.

SmartShift accepts driver requests for transmission functions and transmits them through hard wiring to the transmission control unit (TCU). SmartShift is a true shift-by-wire system.


SmartShift offers two main advantages over conventional transmission control devices. Without a floor-mounted shift control, usable cab space is increased. The SmartShift control mounts to the right-hand side of the steering column and is operated by the fingers of the driver's right hand, allowing both hands to remain on the steering wheel.

A two-position slide switch (see Fig.222, [SmartShift Control \(Eaton Fuller UltraShift PLUS, and AutoShift Transmissions\)](#)) is mounted on the body of the control lever just before the paddle widens out. The slide switch allows the driver to choose automatic (AUTO) or manual (MAN) mode.

In AUTO mode, gears shift automatically, without driver interaction. Manual gearshifts are accomplished by a momentary pull or push on the control in the plane perpendicular to the steering wheel. Pull upward (toward you) on the control to upshift and push downward (away from you) to downshift. The control is spring-loaded and returns to mid-position when released after an upshift or downshift.

For Eaton Fuller UltraShift PLUS, and AutoShift transmissions (see Fig.

222, [SmartShift Control \(Eaton Fuller UltraShift PLUS, and AutoShift Transmissions\)](#)), a four-position (R, N, D, L) selector switch is located at the end of the lever.

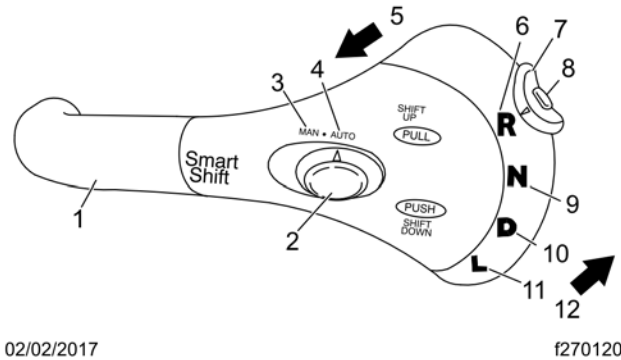

NOTE: To upshift manually, pull the lever up (towards you). To downshift manually, push the lever down (away from you).

- | | |
|---|--|
| 1. SmartShift Control Lever | 7. Selector Switch |
| 2. Slide Switch (forward driving mode switch) | 8. Neutral Lock Button |
| 3. MAN Mode (of slide switch) | 9. Neutral Position (of selector switch) |
| 4. AUTO Mode (of slide switch) | 10. Drive Position (of selector switch) |
| 5. Upshift Direction | 11. Low Position (of selector switch) |
| 6. Reverse Position (of selector switch) | 12. Downshift Direction |

Fig 225, SmartShift Control (Eaton Fuller UltraShift PLUS, and AutoShift Transmissions)

Embedded in the selector switch is a small neutral lock button to prevent accidental shifts into gear from neutral. Any time you shift through N, press down on the neutral lock button to move the switch from neutral (N) to another gear, such as drive (D), low (L), or reverse (R). When shifting to N, it is not necessary to press the neutral lock button.

16.04 Eaton Fuller AutoShift Automated Transmissions

16.04.01 General Information, AutoShift

10-Speed RT/RTO Models

Refer to the Eaton website for additional information, [\[Missing cross reference text\]](#).

Eaton Fuller 10-speed AutoShift transmissions have 10 forward speeds and two reverse speeds. The transmission consists of a 5-speed front section and a 2-speed rear section. The driver must use the clutch to start and stop the vehicle.


The driver does not need to break torque or increase or decrease engine speed to synchronize the shift. The transmission signals the engine controller when to break torque and the engine controller automatically increases or decreases engine speed. When engine speed is correct, the transmission engages the next gear and signals the engine controller to resume operation.

**WARNING:**

When starting or stopping on hills and grades, use extra care to prevent the vehicle from rolling back. A rollback accident could cause death, serious personal injury, or property damage.

The AutoShift system consists of the following components:


- The SmartShift control paddle on the steering column. See Fig. 223, [SmartShift Control \(Eaton Fuller UltraShift PLUS, and AutoShift Transmissions\)](#).
- The gear display module (see Fig. 224, [Gear Display Module](#)) mounted on the dashboard indicates the current gear position or transmission status. The display also flashes the next gear to be engaged while the transmission is in neutral during a gear change.

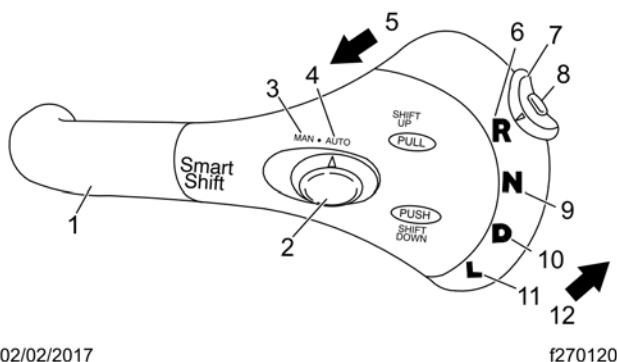

NOTE: To upshift manually, pull the lever up (towards you). To downshift manually, push the lever down (away from you).

- | | |
|---|--|
| 1. SmartShift Control Lever | 7. Selector Switch |
| 2. Slide Switch (forward driving mode switch) | 8. Neutral Lock Button |
| 3. MAN Mode (of slide switch) | 9. Neutral Position (of selector switch) |
| 4. AUTO Mode (of slide switch) | 10. Drive Position (of selector switch) |
| 5. Upshift Direction | 11. Low Position (of selector switch) |
| 6. Reverse Position (of selector switch) | 12. Downshift Direction |

Fig 226, SmartShift Control (Eaton Fuller UltraShift PLUS, and AutoShift Transmissions)

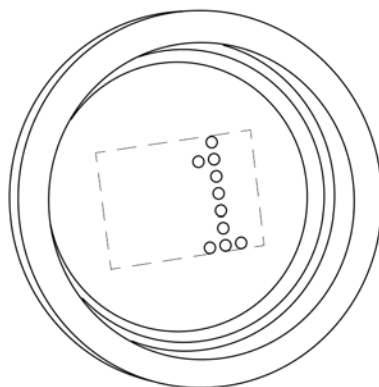

03/29/2017

f610680

NOTE: The gear indicator displays the current gear. In this example it displays first gear.

Fig 227, Gear Display Module


- The shifter mechanism performs shifts at the front portion of the transmission. It preselects the shift to neutral and completes the gear change after driver input.
- The Electronic Control Unit (ECU) includes two controllers: a transmission ECU and a system ECU. The transmission ECU controls all transmission shift functions and the system ECU manages all vehicle interfaces for transmission shift functions.
- An electronic range valve, controlled by the transmission ECU, is used to perform range shifts.

16.04.02 Operation, AutoShift with SmartShift

Automatic and Manual Modes

A two-position slide switch (forward driving mode switch) is located near the end of the control (see Fig. 225, [SmartShift Control \(Eaton Fuller UltraShift PLUS, and AutoShift Transmissions\)](#)). The switch positions are labelled MAN (manual shift mode) and AUTO (automatic drive mode).

NOTE: In automatic drive mode, upshifts and downshifts require no driver interaction. Move the selector switch to the drive (D) position, disengage the clutch to engage the gear selected, engage the clutch and drive the vehicle. In manual shift mode, upshifts and downshifts require either a pull upward or push downward on the control.

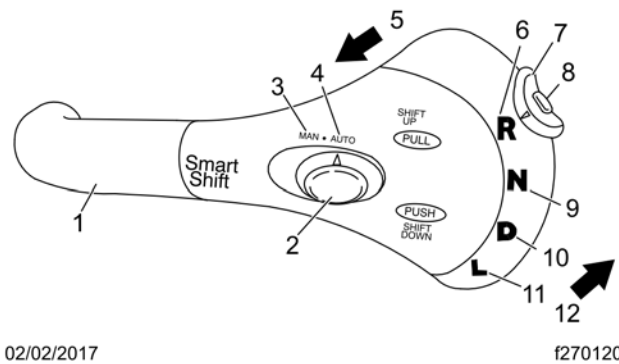

NOTE: To upshift manually, pull the lever up (towards you). To downshift manually, push the lever down (away from you).

- | | |
|---|--|
| 1. SmartShift Control Lever | 7. Selector Switch |
| 2. Slide Switch (forward driving mode switch) | 8. Neutral Lock Button |
| 3. MAN Mode (of slide switch) | 9. Neutral Position (of selector switch) |
| 4. AUTO Mode (of slide switch) | 10. Drive Position (of selector switch) |
| 5. Upshift Direction | 11. Low Position (of selector switch) |
| 6. Reverse Position (of selector switch) | 12. Downshift Direction |

Fig 228, SmartShift Control (Eaton Fuller UltraShift PLUS, and AutoShift Transmissions)

Driver Message Center

Gear information is presented to the driver on the dash display. In automatic drive mode, the number of the forward gear currently engaged appears continually on the message display screen when in drive (D). In manual shift mode, the current gear is displayed until a new gear is requested. When neutral (N) is engaged, "N" will appear on the message display screen. When reverse (R) is engaged, either "RL" or "RH" will appear on the message display screen.

IMPORTANT: The information shown on the message display screen indicates the state of the transmission only, not the state of the SmartShift control.

Neutral Position

Select neutral by sliding the selector switch to the "N" position.

NOTE: Neutral is always available during operation. When in neutral, upshift and downshift requests are ignored. If the mode selector switch is moved from neutral (N) to drive (D) while the vehicle is moving, the transmission will shift into a gear causing the engine to go to a high torque level, under the engine's rated torque.



WARNING:

Do not coast in neutral. Coasting in neutral can cause an accident, possibly resulting in severe personal injury or death.

Selecting a Starting Gear

1. In automatic mode, select drive (D) by sliding the selector switch downward to the next position below the neutral position.
2. Disengage the clutch to engage the gear selected. Engage the clutch and drive the vehicle.

Changing the Default Starting Gear

1. Make sure the vehicle is stopped and in drive.

2. In either automatic or manual mode, pull upward on the control (to increase), or push downward (to decrease). Each pull upward on the control increases the starting gear by one gear, but no higher than fourth gear.

NOTE: The transmission may also be programmed so that it is not possible to select a starting gear other than the preprogrammed default starting gear.

3. The number of the gear selected will flash on the message display screen until the driver engages the clutch. This gear will be stored in memory as the default starting gear until either a different starting gear is selected by the driver or the engine is shut down.

Upshifting

NOTE: With the transmission in drive (D) in the automatic mode, upshifts require no driver interaction.

1. With the transmission in drive in the manual mode, request an upshift by pulling upward on the control. If the requested gear is available, the transmission will upshift.

NOTE: A single, momentary pull upward on the control selects the next higher gear when it is available. Two consecutive, momentary upward pulls will cause a skip shift when the next two higher gears are available and conditions are right.

2. To skip shift, move the control two times in less than 1/2 second. The number of the gear engaged will appear on the message display screen.

NOTE: The Eaton Fuller AutoShift 18-speed transmission is able to perform triple upshifts when the next three higher gears are available and conditions are right. To triple-shift this transmission, move the control three times in less than 1/2 second.

If a requested gear is not available, an audible warning will sound and the gear display module will indicate that the gear is not available. An unavailable requested upshift is not stored in memory. The upshift must be requested again.

Downshifting

NOTE: With the transmission in drive (D) in the automatic mode, upshifts require no driver interaction.

1. With the transmission in drive in the manual mode, request a downshift by pushing downward on the control. If the requested gear is available, the transmission will downshift.

NOTE: A single, momentary pull upward on the control selects the next higher gear when it is available. Two consecutive, momentary upward pulls will cause a skip shift when the next two higher gears are available and conditions are right.

2. To skip shift, move the control two times in less than 1/2 second. The number of the gear engaged will appear on the message display screen.

NOTE: The Eaton Fuller AutoShift 18-speed transmission is able to perform triple upshifts when the next three higher gears are available and conditions are right. To triple-shift this transmission, move the control three times in less than 1/2 second.

If a requested gear is not available, an audible warning will sound and the gear display module will indicate that the requested gear is not available. Unlike upshifting, an unavailable requested downshift is stored in memory and the shift will be made when the gear is available. The time limit for this memory is a programmable parameter.

Start-Up

1. With the parking brake applied, press the clutch all the way down to the floor.
2. Start the engine.
3. Check to make sure the transmission is in neutral.
4. With the transmission in neutral, release the clutch.

NOTE: This allows the speed sensor on the input shaft to get a reading.

5. Press down on the clutch again and release the parking brake.
6. Select the desired starting gear.
7. Release the clutch.

Reverse

NOTE: AutoShift 10- and 18-speed transmissions have a dual-range reverse. Reverse low (RL) is the default reverse gear.

1. To engage reverse (R), slide the selector switch upward to the next position above the neutral position and disengage the clutch.
2. Select reverse high (RH) by pulling upward on the control.

NOTE: Reverse may be engaged below a programmable forward speed in order to rock the vehicle. If reverse is selected above the programmed forward speed, an audible warning will sound and a message indicating that the gear is not available will appear on the message display screen.

Low Gear Operation

Use low (L) when descending steep hills and using compression braking. Engine speed will be increased by 200 rpm and shift points will be offset by 200 rpm. The efficiency of the exhaust brake will be maximized.

Using the Clutch


Use the clutch to start and stop the vehicle.

16.05 Eaton Fuller UltraShift PLUS

16.05.01 Power Up

Eaton Fuller UltraShift PLUS automated transmissions use shift selection software and electric clutch actuation; a clutch pedal is not needed to operate the vehicle. These transmissions use the four-position SmartShift control (see Fig.

226, [SmartShift Control \(Eaton Fuller UltraShift PLUS, and AutoShift Transmissions\)](#)) on the steering column to select mode, direction, neutral, low, and to make manual shifts. To know what gear the transmission is in, see the current gear indicator on the dash. Forward shifts can be made either manually or automatically.

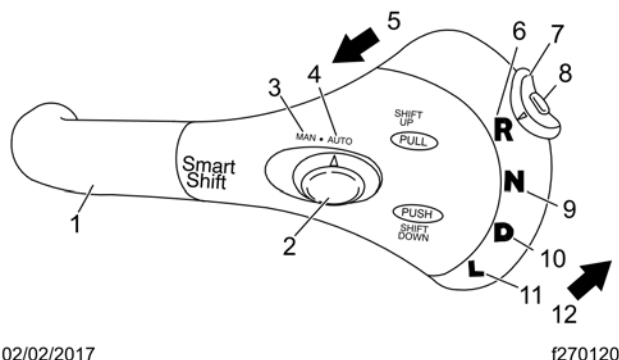

NOTE: To upshift manually, pull the lever up (towards you). To downshift manually, push the lever down (away from you).

- | | |
|---|--|
| 1. SmartShift Control Lever | 7. Selector Switch |
| 2. Slide Switch (forward driving mode switch) | 8. Neutral Lock Button |
| 3. MAN Mode (of slide switch) | 9. Neutral Position (of selector switch) |
| 4. AUTO Mode (of slide switch) | 10. Drive Position (of selector switch) |
| 5. Upshift Direction | 11. Low Position (of selector switch) |
| 6. Reverse Position (of selector switch) | 12. Downshift Direction |

Fig 229, SmartShift Control (Eaton Fuller UltraShift PLUS, and AutoShift Transmissions)

NOTE: Engine cranking is delayed until the transmission power-up is complete and the gear display shows a solid "N".

1. With the parking brake set, turn the ignition switch to the ON position.
2. Start the engine.
3. Apply the service brake.

NOTE: If the service brake is not applied while selecting a starting gear, the initial start gear will not be found and the driver will need to select Neutral and press the service brake while selecting the desired mode.

4. Select the desired mode and starting gear. (Inappropriate start gear selections are ignored to avoid damaging the transmission.)
5. Release the parking brake.
6. Release the service brake and apply the accelerator.

16.05.02 Power Down

1. Select Neutral on the shift control

NOTE: If the gear display does not show a solid "N", neutral has not yet been obtained. Neutral should always be reached before powering down an UltraShift PLUS, except in cases of emergency.

2. Set the parking brake.
3. Turn off the ignition, and shut down the engine.

16.05.03 Reverse (R)

NOTE: If attempting to select a non-Neutral mode without applying the service brakes, the transmission will not shift into gear. To shift into gear, select Neutral, apply the service brakes, and select the desired mode again. Also, the vehicle will not engage reverse above 2 mph (3 km/h).

Reverse (R) is at the upper end of the four-position selector switch located at the end of the SmartShift control. To select R, press in the neutral lock button and move the selector switch to the position above neutral. The default Reverse gear is engaged.



NOTICE:

Avoid launching the vehicle in high range. Launching the vehicle in high range increases the likelihood of clutch abuse and could be detrimental to clutch life.

16.05.04 Automatic Mode (AUTO)

In automatic drive mode (AUTO), upshifts and downshifts are made by the UltraShift PLUS without driver intervention. Press in the neutral lock button, move the selector switch to Drive (D), and press down on the throttle pedal. The transmission will shift automatically.

NOTE: If attempting to select a non-Neutral mode without applying the service brakes, the transmission will not shift into gear. To shift into gear, select Neutral, apply the service brakes, and select the desired mode again.

In Drive, the start gear is automatically selected. The selected start gear can vary depending on several vehicle inputs such as load, grade, and axle/transmission ratio. The start gear can be changed using the SmartShift control, provided the selected gear would allow the vehicle to launch without damaging the transmission. If the start gear is changed using the SmartShift control, it will be the default until the vehicle is powered down or the selection is changed again manually.

IMPORTANT: Prior to ascending a steep grade, either reduce the default start gear by one (using the SmartShift control) or apply full throttle for the duration of the grade so the vehicle maintains the proper engine and vehicle speed during the entire grade.

In Drive, the transmission automatically performs upshifts and downshifts. However, when the transmission is near the shift point, the shift can be forced using the upshift or downshift function of the SmartShift control.

NOTE: The transmission may deny a shift while ascending or descending a grade if the load of the vehicle and grade of the terrain in combination with the drivetrain ratio and engine torque fall outside of the acceptable range to perform a shift. If the shift is denied, a tone will sound.

16.05.05 Manual Mode (MAN)

In manual mode (MAN), the driver selects upshifts and downshifts instead of letting the UltraShift PLUS select them automatically. Manual shifting may be helpful when traversing a work site, railroad tracks, or steep grades, for example. To drive forward, press in the neutral lock button, move the selector switch to Drive (D), and press down on the throttle pedal. To shift up, pull the lever up (towards you); to shift down, push the lever down (away from you). The system holds the current gear unless a shift is requested or if the system initiates a manual mode override.

NOTE: The transmission may deny a shift while ascending or descending a grade if the load of the vehicle and grade of the terrain in combination with the drivetrain ratio and engine torque fall outside of the acceptable range to perform a shift. If the shift is denied, a tone will sound.

NOTE: If attempting to select a non-Neutral mode without applying the service brakes, the transmission will not shift into gear. To shift into gear, select Neutral, apply the service brakes, and select the desired mode again.

Manual Mode Override

The system is equipped with a manual mode override function. If the vehicle is being "back driven" (for example, descending a grade and vehicle speed exceeds engine speed) and the engine speed is excessively high, the system will upshift automatically. Also, if the start gear is changed and it causes the engine to lug at takeoff, the system will override the current position and select the best available gear.

16.05.06 Low (L)

Low (L) is at the lower end of the four-position selector switch located at the end of the SmartShift control. Use Low when wanting to maximize engine braking and minimize the use of the brake pedal—for example, when driving down long grades or when coming to a stop. To select Low, press in the neutral lock button and move the selector switch to the L position. The lowest available start gear will be selected (the starting gear cannot be changed in Low).

If Low is selected while moving, the transmission will not upshift (unless the system initiates a Low override). The system will downshift at the earliest opportunity to provide maximum engine braking.

NOTE: If attempting to select a non-Neutral mode without applying the service brakes, the transmission will not shift into gear. To shift into gear, select Neutral, apply the service brakes, and select the desired mode again.

Low Override

The system is equipped with a Low override function. If the vehicle is being "back driven" (for example, descending a grade and vehicle speed exceeds engine speed) and the engine speed is excessively high, the system will upshift automatically. Also, if the start gear is changed and it causes the engine to lug at takeoff, the system will override the current position and upshift.

16.05.07 Clutch Abuse Protection

Although a vehicle equipped with an UltraShift PLUS uses an automated clutch, the clutch can still overheat and slip with improper use. The clutch abuse protection feature helps protect the clutch if the automated clutch starts to overheat. When the clutch abuse protection feature initiates and sounds a warning tone, full clutch actuation must be completed quickly. If it is not completed quickly enough, the system will either open the clutch (if the throttle pedal is not being pressed) or close the clutch (if the throttle pedal is being pressed). If the abuse continues, the system will open the clutch and take away throttle control briefly to allow the clutch to cool down.

To protect the clutch:

- Select the lowest possible start gear for the application.
- Use Creep Mode when appropriate.
- Use the service brakes and the Hill Start Aid when launching on a grade.
- Minimize the time it takes to engage the clutch from rest.
- Do not use the throttle to hold the vehicle on a grade; use the service brakes.
- Do not use the throttle to stop roll back on an incline after Hill Start Aid disengages; use the service brakes, and then relaunch.
- Do not continually start and stop, especially when loaded; use a lower gear or Creep Mode.

16.05.08 Creep Mode

The Creep Mode function allows the vehicle to maintain a constant speed at engine idle without the driver holding the throttle pedal position. This mode is useful for very low-speed maneuvering and applications where steady vehicle speed is required. The vehicle speed is determined by the selected gear ratio operating at governed low engine idle speed. Any available gear may be selected, though the transmission will downshift or exit Creep Mode to prevent stalling if the engine lugs due to load conditions.

By default, Creep Mode can be activated while in Manual Mode or Low. Eaton's ServiceRanger diagnostic software can be used to enable Creep Mode in Automatic Mode and/or Reverse.

Engaging Creep Mode

To engage Creep Mode:

1. Select Low or Manual Mode and the desired gear (while stopped or moving).
2. Apply the throttle pedal to accelerate the vehicle until the clutch is closed (engaged).
3. Release the throttle pedal. The vehicle will continue moving at governed low engine idle speed.

Exiting Creep Mode

To exit Creep Mode, apply the throttle pedal to accelerate temporarily, or select a higher gear in Manual Mode. (Creep Mode can be resumed in the selected gear by releasing the throttle pedal.)

NOTE: The transmission will exit Creep Mode if the engine lugs 150 rpm below the governed low engine idle speed. In this case, a lower gear should be selected if available.

16.05.09 Hill Start Aid

UltraShift PLUS transmissions are equipped with a Hill Start Aid (HSA) feature to prevent the vehicle from rolling while on grades steeper than 3% and allow for a controlled launch. A grade sensor is used to determine when to engage the feature.

HSA is "on" by default. It can be turned off by pressing and releasing the override switch on the dash (see [6.01 Ignition Switch and Key](#)). HSA will turn back on after the first successful launch.

When the vehicle is stopped on a grade greater than 3% and in a forward mode or reverse, depress the service brakes then release them. The vehicle will begin to move after 3 seconds, and the clutch will perform partial engagements to slow the vehicle motion. Either step on the brake or apply the throttle to continue negotiating the grade.

16.05.10 Engine Overspeed Protection

The system will upshift if necessary to prevent engine overspeed in Drive, Manual, and Low.

16.05.11 Shuttle Shifting

Shuttle shifting from reverse to any forward mode is only allowed if the vehicle speed is approximately zero.

16.05.12 Auto Start Gear Selection and Override

The UltraShift PLUS system uses various inputs to automatically select the best start gear in Drive and Manual. This selection can be changed using the SmartShift control; however, if the selection requested could cause damage or engine lugging, the request will be denied and a tone will sound.

16.05.13 Skip Shifting

When appropriate, the UltraShift PLUS system may skip shift in Drive. When prevailing conditions like load and grade allow, skip shifts can be performed in Manual mode using the SmartShift control.

16.05.14 Auto Neutral

The UltraShift PLUS system will automatically shift to neutral if the vehicle is left in Drive and the parking brake is set. "AN" will show on the gear display. To re-engage the transmission, select Neutral and then either Drive or Reverse on the shift control (it will re-engage regardless of whether the parking brake is released).

16.05.15 Automatic Traction Control

The UltraShift PLUS system requires the Automatic Traction Control (ATC) option to be enabled when driving in soft soil/sand to prevent wheel slippage and shifting issues. The ATC system has two modes: "normal" (for sand and loose road surface) and a mud/snow setting.

ATC Normal Mode

In normal mode, the system will engage the brakes on the wheel or side that the wheel slip is occurring to help the vehicle gain traction. The point at which the traction control will actuate the braking system increases with throttle: low throttle allows the system to brake the wheels earlier; heavy/full throttle raises the point of the acceptable wheel slip.

Adhere to the following points when driving in ATC normal mode:

- If using Automatic mode in soft soil and/or sand, maintain the engine speed between 1000 and 1300 rpm to prevent unnecessary upshifting.
- If using Manual mode in soft soil and/or sand, do not attempt an upshift and try to maintain the current gear.
- If the vehicle comes to a stop in the sand it may be necessary to back up prior to attempting forward movement.

ATC Mud/Snow Mode

To select the mud/snow mode, depress the ATC switch (see [6.01 Ignition Switch and Key](#)). This mode raises the wheel slip speed that is allowed before the traction control activates. The point at which the traction control will actuate the braking system increases with throttle: low throttle allows the system to brake the wheels earlier; heavy/full throttle raises the point of the acceptable wheel slip.

16.05.16 Load-Based Shifting

The UltraShift PLUS system is adaptive and will change the shift points based on grade, engine RPM, throttle position, and vehicle load. After changing loads or powering up, the system needs to relearn these inputs for the first few shifts to make the proper adjustments.

16.05.17 Coasting

When coasting to a stop on level terrain, the UltraShift PLUS system may not downshift into the lower gears. It will select a gear after the throttle is applied.

16.05.18 Ultrashift Diagnostics

System Problem

In the event of a problem, do the following steps.

1. Note the driving conditions at the time the problem occurred.
2. Record the status of the transmission at the time of the problem (AUTO or MAN mode, gear setting R, N, D, or L, current gear, engine speed, etc.)
3. Reset the system, using the procedure below.

Reset Procedure

Transmission operation can sometimes be restored by doing the following reset procedure:

1. Stop the vehicle when it is safe to do so. Set the parking brake.
2. Place the selector switch in neutral and turn off the ignition.
3. Check all harness connectors as described in [22.01 Safety Precautions](#).
4. Wait at least two minutes with the engine shut down.
5. Restart the engine.

If the problem continues, contact an authorized Freightliner or Eaton service facility.

17.01 Differential Locks.....	256
17.01.01 Tandem Drive Axles with Interaxle Differential Lock	256
17.01.02 Driver-Controlled Differential Lock (DCDL).....	256
17.01.03 Single Drive Axles with Traction Equalizer.....	258
17.02 Axle Shift	258

17. Drive Axles

17.01 Differential Locks

17.01.01 Tandem Drive Axles with Interaxle Differential Lock

An interaxle differential lock is standard on vehicles equipped with tandem drive axles. It is driver-actuated by means of a LOCK/UNLOCK control valve switch located on the dash in the cab (see [6.01 Ignition Switch and Key](#) for more information about the switch). Engagement can be at any speed, provided the wheels are not slipping or spinning. A red indicator illuminates when the interaxle differential lock is engaged.

In the UNLOCK position, there is differential action between the two axles. The differential compensates for different wheel speeds and variations in tire size. Keep the interaxle differential unlocked for normal driving on roads where traction is good.

In the LOCK position, the interaxle differential is locked out and the driveshaft becomes a solid connection between the two axles. Power entering the forward axle is also transmitted straight through to the rear axle, so both axles turn together at the same speed. The LOCK position should be used when the vehicle encounters poor traction conditions; however, it also increases drivetrain and tire wear and should be used only when improved traction is required.

Interaxle Differential Lockout Operation

**NOTICE:**

Do not actuate the interaxle differential control valve while the tires are slipping. Do not operate the vehicle continuously with the interaxle differential locked during extended good road conditions. Using the IAD lock when wheels have good traction can harm the axle, wear the tires excessively, and increases fuel consumption. Release the IAD lock as soon as road conditions permit it.

To lock the interaxle differential and achieve maximum pulling power when approaching slippery or poor road conditions, move the lockout control valve to LOCK while maintaining vehicle speed, before encountering the poor road conditions. Let up momentarily on the accelerator to engage the differential lock. Proceed over poor road conditions with caution. Do not wait until traction is lost and the tires are spinning before locking the interaxle differential.

To unlock the interaxle differential, move the lockout control valve to UNLOCK while maintaining vehicle speed, after leaving the poor road conditions. Let up momentarily on the accelerator to allow the shift, then resume driving at normal speed.

17.01.02 Driver-Controlled Differential Lock (DCDL)

Some vehicles are equipped with a driver-controlled differential lock (DCDL) that is operated by a dash switch in the cab (see [6.01 Ignition Switch and Key](#) for more information about the switch). The differential lock provides maximum traction for slippery conditions by forcing the wheels on a drive axle to rotate together. The differential lock should be engaged when the vehicle is stopped or moving at a low, constant speed and the wheels are not spinning, slipping, or losing traction. Do not exceed 25 mph (40 km/h) when the differential lock is engaged.

On tandem axles there are three possible DCDL options:

- Forward-rear carrier only
- Rear-rear carrier only
- Both rear carriers.

An indicator light comes on when the DCDL is engaged. An optional buzzer can also be used to indicate DCDL engagement.

The DCDL provides maximum traction under slippery conditions. When the DCDL is engaged, the clutch collar completely locks the differential case, gearing, and axle shafts together, maximizing traction of both wheels and protecting against

spinout. Under normal traction conditions, do not engage the DCDL; operate the axle with differential action between both wheels.



WARNING:

Be especially careful when driving under slippery conditions with the differential locked. Though forward traction is improved, the vehicle can still slip sideways, causing possible loss of vehicle control, personal injury, and property damage.

Main Differential Lock Operation



NOTICE:


The differential lock should be engaged when the vehicle is stopped or moving at a low, constant speed and the wheels are not spinning, slipping, or losing traction. Engagement at high speed or power can damage the axle(s).

Do not permit rear wheels to spin freely for more than ten seconds when traction is lost. Shift into LOCK to prevent damage to interaxle and main differentials.

To lock the main differential and obtain maximum traction under slippery conditions, move the control switch to the lock position.

NOTE: On some vehicles, the differential lock system is connected through the low speed range of the transmission. If this system is used, the transmission must be in the low speed range for the differential to fully lock.

If the vehicle is moving, maintain a constant vehicle speed while engaging the differential lock. Briefly let up on the accelerator to relieve torque on the gearing, allowing the differential to fully lock. The indicator light should come on and the buzzer should sound on vehicles so equipped. When the differential is fully locked, the turning radius will increase because the vehicle understeers. See Fig.227, [Turning Radius](#). Drive cautiously and do not exceed 25 mph (40 km/h).

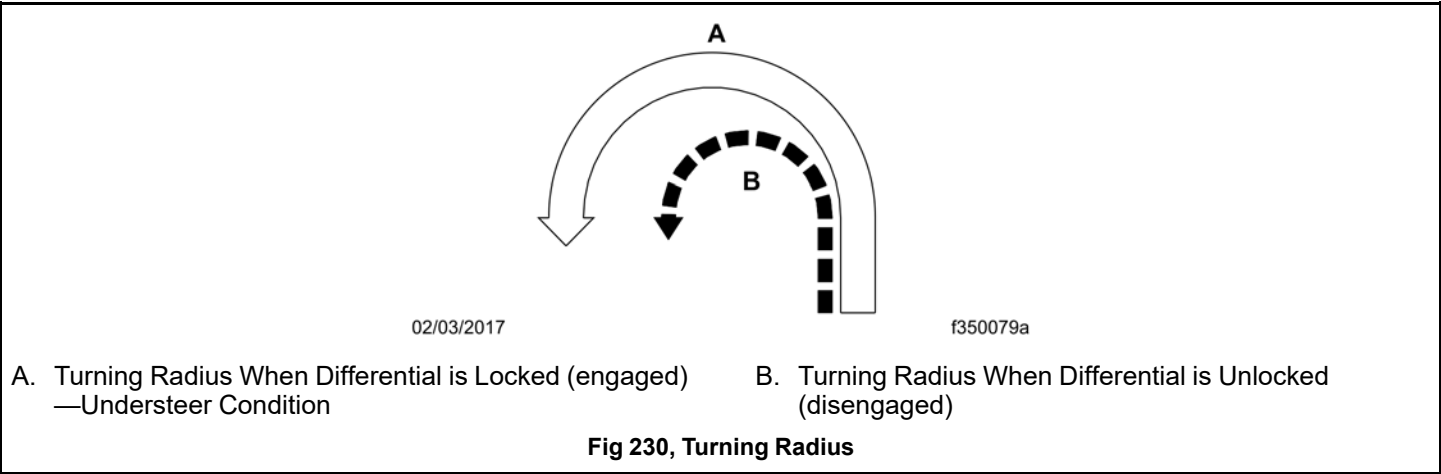

To unlock the main differential, move the control switch to the unlock position. Briefly let up on the accelerator to relieve torque on the gearing, allowing the differential to fully unlock.

NOTE: If the differential lock system is connected through the low speed range of the transmission, shifting out of low speed range will also unlock the differential.

When the differential lock disengages, the indicator light will go off and the buzzer will stop.

17.01.03 Single Drive Axles with Traction Equalizer

Some single drive axles are equipped with a traction equalizer that is a load-sensing, self-actuating feature. A traction equalizer provides normal differential action where traction is good. When one wheel begins to spin faster than the other, clutch plates in the differential housing automatically engage, delivering power to both wheels. There is no operator control with this feature.

A traction equalizer occasionally tends to slip in a jerking motion, producing irregular intervals of sharp noises. This generally occurs when the vehicle is operating at low speeds on fairly sharp turns. This condition is corrected by adding a friction modifier to the axle lubricant. This additive tends to reduce the static coefficient of friction to a value equal to, or lower than, the sliding coefficient.

See **Group 35** of the *Cascadia™ Maintenance Manual* for additional information on friction modifiers and when to add them to axle lubricants.



CAUTION:

Tire sizes on both rear wheels should be the same on axles equipped with a traction equalizer. If not, excessive wear may occur in the traction equalizer.

17.02 Axle Shift



CAUTION:


To prevent transmission and axle damage, make sure the automatic transmission is in high range when performing an axle shift with the vehicle moving.

Axle shift is a function installed on vehicles with two-speed axles to allow the use of the low speed range when greater traction and maximum pulling power is needed at low engine speed (rpm).

Under normal operating conditions, the vehicle is operated using the high-speed gear ratios of the axle. Under extreme weather or off-road conditions, at low speed and rpm and/or to pull heavy loads, the vehicle must be operated using the low-speed, or reduction, gear ratios of the axle.

Axle Shift Switch

The axle shift switch is a two-position rocker switch (see Fig.228,[Axle Shift Switch](#)) installed on vehicles with two-speed axles.

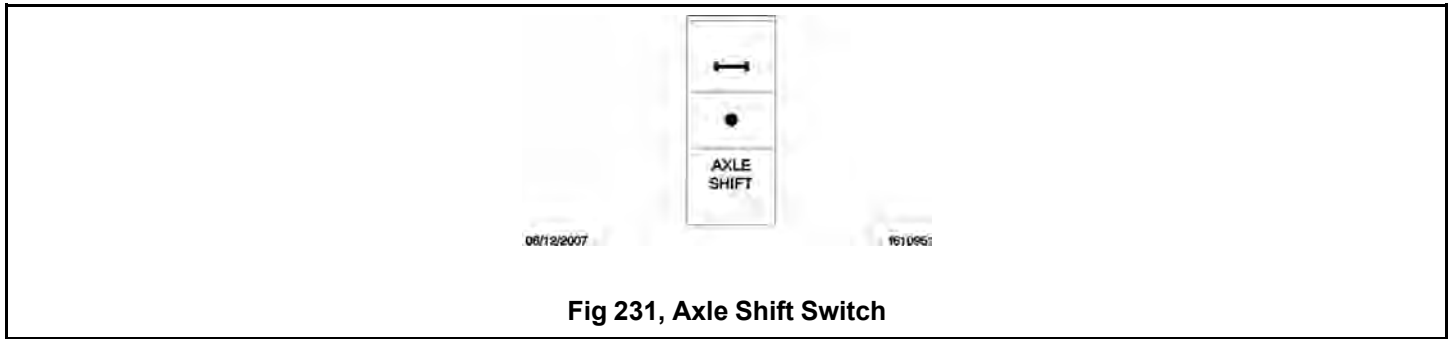

To shift the axle from low speed to high speed, press the top of the switch. To turn the axle shift off (switch from high speed back to low speed), press the bottom of the switch. When the axle has shifted speed, the LED turns off.

When the panel lights are on, the AXLE SHIFT legend is backlit in green.

IMPORTANT: If the LED in the switch begins to blink during normal operation, when the switch has not been activated, this indicates an error condition. Bring the vehicle to an authorized Freightliner service facility as soon as possible.

When the axle shift switch is pressed, three responses are possible: a normal response, a slow response, and an abnormal response.

Normal Response: The LED in the switch blinks until the axle shifts speed. At this point, the LED comes on steady and stays illuminated. In normal operation, the axle may shift so quickly that the blinking of the switch is barely noticeable.

If operation of the switch is not possible for any reason (interaxle lock is on, ignition is turned off, etc.), the LED will stop blinking and turn off.

Slow Response: If operation of the switch is slowed for any reason (by cold weather, low air pressure, etc.), the switch will continue to blink until the axle shifts. As in the normal response, the LED comes on steady and stays illuminated.

Abnormal Response: If the LED blinks for more than 30 seconds, the axle shift function/mechanism may not be operating correctly. Bring the vehicle to an authorized Freightliner service facility for testing.

Axle Switch Interlock

NOTE: On vehicles with tandem drive axles, there is an interlock that prevents an axle from shifting speed whenever the interaxle lock is on.

If the axle shift switch is pressed when the interaxle lock is on, the axle shift will not be completed. The LED does the following:

- If the LED is off, the LED comes on briefly and turns off again.
- If the LED is on, it stays on.


To complete the axle shift, turn off the interaxle lock and press the axle shift switch again. If still needed, the interaxle lock can then be reactivated.

18.01 Power Steering System	262
18.02 Power Steering Systems	262
18.02.01 Steering Gear System	262
18.02.02 Rack and Pinion Steering System	263

18. Steering System

18.01 Power Steering System

When there is no load on the vehicle, and the front tires are pointed straight ahead, the steering wheel spokes should be centered, ± 10 degrees, as shown in Fig. 229, [Proper Steering Wheel Position \(with tires pointed straight ahead\)](#). See **Group 46** of the *Cascadia™ Workshop Manual* for steering adjustment procedures.

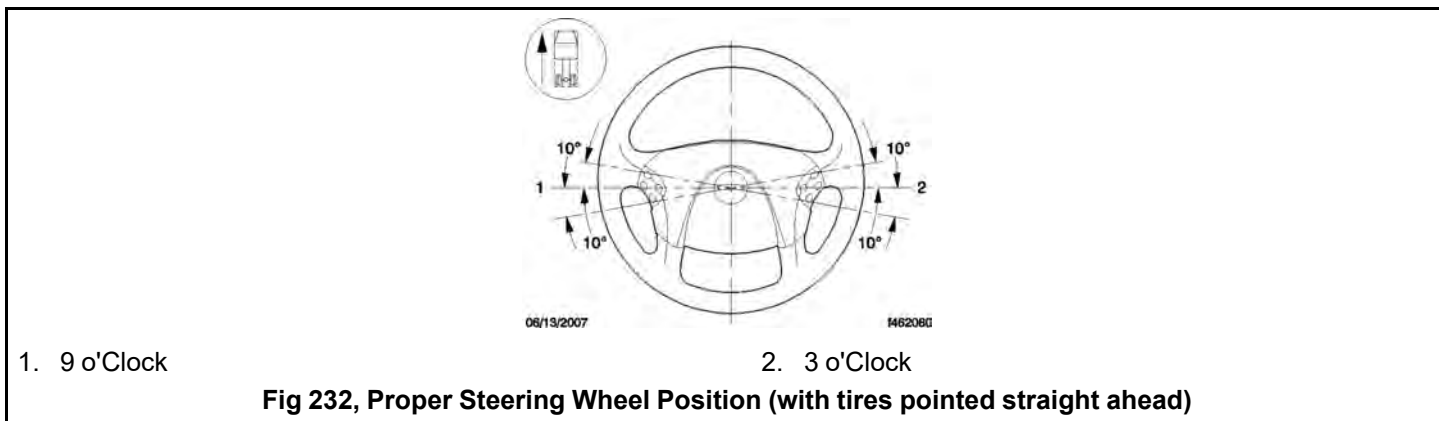

CAUTION

**CAUTION:**

Never steam clean or high-pressure wash the steering gear. Internal damage to gear seals, and ultimately the steering gear, can result.

**WARNING:**

Driving the vehicle without the power-assist feature of the steering system requires much greater effort, especially in sharp turns or at low speeds, which could result in an accident and possible injury.

Drivers should carefully use the power available with a power steering system. If the front tires become lodged in a deep chuckhole or rut, drive the vehicle out, instead of using the steering system to lift the tires from the hole. Also, avoid turning the tires when they are against a curb, as this places a heavy load on steering components and could damage them.

18.02 Power Steering Systems

18.02.01 Steering Gear System

The steering gear system includes the power steering gear, hydraulic hoses, power steering pump, reservoir, and other components. Some models are also equipped with a separate hydraulic power cylinder on the right side of the front axle, or a right-hand secondary gear (such as the TRW RCH-45). The power steering pump, driven by the engine, provides the power assist for the steering system. If the engine is not running, there is no power assist. If the power-assist feature does not work due to hydraulic fluid loss, steering pump damage, or some other cause, bring the vehicle to a safe stop. Do not drive the vehicle until the cause of the problem has been corrected.

18.02.02 Rack and Pinion Steering System

The rack and pinion steering gear is mounted to the front axle with two brackets, and connected by tie-rod ends to the axle steering arms. When the steering wheel is turned, the intermediate steering shaft turns the input shaft, rotating the torsion bar and the valve. When the valve turns, power steering fluid is redirected and provides power assist to turn the pinion gear meshed with the rack teeth, moving the rack left or right. The rack, with a tie-rod at each end, then moves the steering arms on the axle, and pivots the wheels.

This design provides drivers with more responsive steering, with increased performance and “road feel.” It virtually eliminates steering issues when the driver hits a bump (bumpsteer), and significantly reduces roll steer when a vehicle goes into a curve. Wandering is significantly reduced as well, so the vehicle tends to drive straight on the highway. It has a lower steering ratio, which means drivers don't have to turn the steering wheel as much to get the wheels to turn a given distance. Overall, rack and pinion steering greatly improves steering response, and reduces driver effort and fatigue.

19.01 Fifth Wheels, General Information.....	266
19.01.01 Air-Suspension Dump Valve.....	266
19.01.02 Fifth Wheel Lubrication	266
19.02 Fifth Wheel Coupling	267
19.02.01 Fontaine and Holland Fifth Wheels Coupling	267
19.02.02 Jost Fifth Wheel Coupling	271
19.03 Fifth Wheel Uncoupling.....	274
19.03.01 Manual Uncoupling	274
19.03.02 Air-Actuated Uncoupling	277
19.04 Fifth Wheel Slide	278
19.04.01 General Description, Fifth Wheel Slide.....	278
19.04.02 Operation of Manual Slide.....	279
19.04.03 Operation of the Air Slide	281

19. Fifth Wheels

19.01 Fifth Wheels, General Information

19.01.01 Air-Suspension Dump Valve

**WARNING:**

Do not use any fifth wheel that fails to operate properly. Doing so may cause loss of vehicle control, possibly resulting in severe personal injury or death.

The air-suspension dump valve may be used to adjust the tractor height to aid with coupling to or uncoupling from a trailer. See Fig.230, [Air-Suspension Dump Valve](#). When the switch is set to LOWER, the air-suspension dump valve deflates the air springs to lower the rear of the vehicle. In the AUTO position, the automatic ride-control valves operate for normal driving.

**WARNING:**

Never exhaust air from the suspension while driving. The suspension will not absorb road shocks, possibly damaging components, and vehicle handling may be compromised. This could result in loss of vehicle control, possibly resulting in severe personal injury or death.

**NOTICE:**

Do not operate the vehicle over uneven ground such as ramps, speed bumps, curbs, etc. with the air springs deflated. Doing this may lead to air bag separation from the piston, preventing the suspension air springs from inflating.

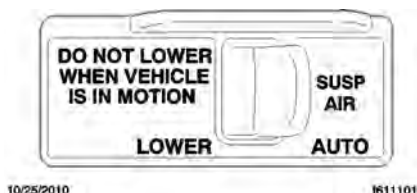


Fig 233, Air-Suspension Dump Valve

19.01.02 Fifth Wheel Lubrication

**WARNING:**

A standard fifth wheel plate must be kept lubricated to prevent binding between the tractor and trailer. A binding fifth wheel could cause erratic steering and loss of vehicle control, possibly resulting in personal injury or death.

The standard fifth wheel plate must be kept well lubricated with chassis grease to prevent friction and binding between the tractor fifth wheel plate and the trailer.

For a low-lube fifth wheel plate, inspect the condition of the low-lube pads. There should be no damaged or missing pieces. Slight puckering at the outside edges is normal.

For lubrication instructions, see **Group 31** of the *Cascadia® Maintenance Manual*.

19.02 Fifth Wheel Coupling

19.02.01 Fontaine and Holland Fifth Wheels Coupling


Fifth wheel coupling is activated with the lock control handle located on either the right side or left side of the fifth wheel. Coupling has successfully occurred when the kingpin has been forced into the jaws and the lock control handle has moved to the locked position.



NOTICE:

Some fifth wheels may be mounted on sliding rails. Before attempting to couple a trailer to a sliding fifth wheel, the slide feature must be locked to prevent the top plate from sliding rapidly forward or rearward, causing damage to the fifth wheel or kingpin.

1. Chock the front and rear of the trailer tires to prevent the trailer from moving.
2. Ensure the fifth wheel jaw is fully open and the operating rod is in the unlocked position. See Fig. 231, [Fontaine Locking Mechanism](#) or Fig. 232, [Holland Simplex SE Locking Mechanism](#).

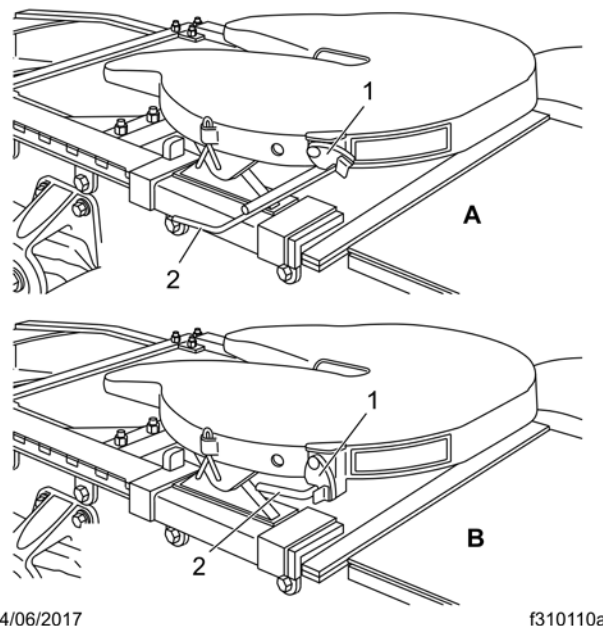

04/06/2017


f310110a

NOTE: Make sure the safety latch is down when the control handle is locked.

A. Unlocked
B. Locked

1. Safety Latch
2. Lock Control Handle

Fig 234, Fontaine Locking Mechanism

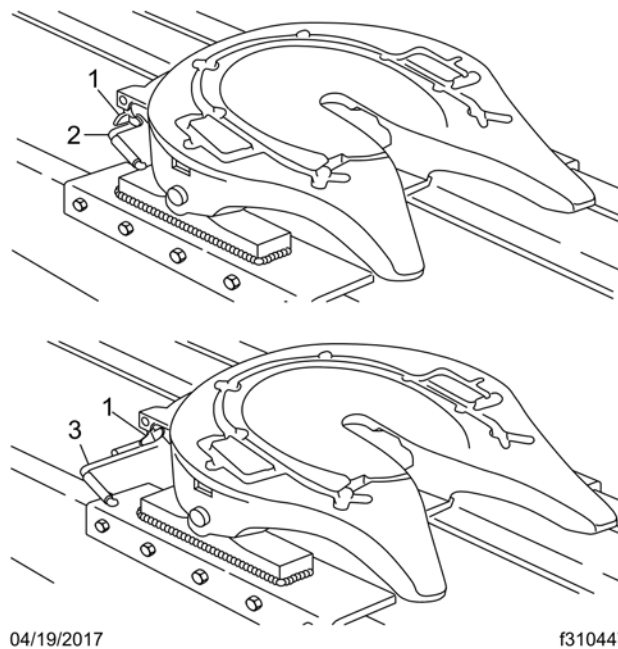

- 1. Safety Latch
- 2. Operating Rod (locked)

- 3. Operating Rod (unlocked)

Fig 235, Holland Simplex SE Locking Mechanism

- 3. Make sure the fifth wheel top plate is tilted so the ramps are as low as possible.
- 4. Position the tractor so that the center of the fifth wheel is in line with the trailer kingpin. The kingpin should be in a position to enter the throat of the locking mechanism.




NOTICE:

Attempting to couple at the wrong height may cause improper coupling, which could result in damage to the fifth wheel or kingpin.

- 5. Adjust the trailer height if required.

For a standard fifth wheel plate, the trailer should contact the fifth wheel approximately 4 to 8 inches (10 to 20 cm) behind the fifth wheel pivot. See Fig.233, [Trailer Connection Point, Standard Fifth Wheel](#).

For a low-lube fifth wheel plate, the fifth wheel must slide freely under the trailer, and the trailer should contact the fifth wheel at the pivot. See Fig.234, [Trailer Connection Point, Low-Lube Fifth Wheel](#).

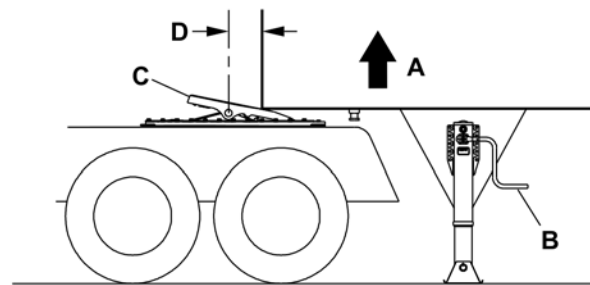

04/28/2017


f311124

A proper connection for a standard fifth wheel trailer is ensured by ALL of the following:

- A. The fifth wheel is lifting the trailer.
- B. The trailer height is adjusted with the crank.
- C. The ramps are tilted down.
- D. The trailer is connected 4 to 8 inches behind the fifth wheel pivot.

Fig 236, Trailer Connection Point, Standard Fifth Wheel

A proper connection for a standard fifth wheel trailer is ensured by ALL of the following:

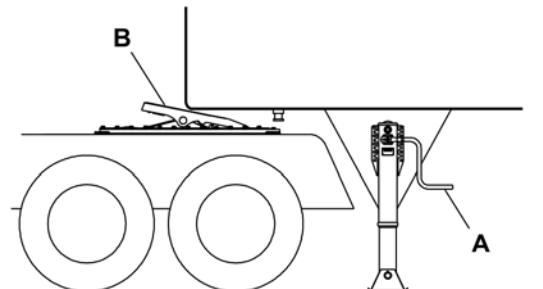

04/28/2017

f311125

A proper connection for a low-lube fifth wheel trailer is ensured by both of the following:

- A. The trailer height is adjusted with the crank.
- B. The ramps are tilted down.

Fig 237, Trailer Connection Point, Low-Lube Fifth Wheel

A proper connection for a low-lube fifth wheel trailer is ensured by both of the following:

6. With the fifth wheel lock opening aligned with the trailer kingpin, back the tractor slowly toward the trailer. After sliding under the trailer, STOP to prevent from hitting the kingpin too hard, then resume backing slowly until the fifth wheel locks.

On a standard fifth wheel, the fifth wheel must lift the trailer.

On a low-lube fifth wheel, do not lift the trailer as this may damage the fifth wheel plate.


7. Apply the tractor parking brakes.

**WARNING:**

A visual inspection is required by law. Some improper couplings can pass a pull test. Sound is not reliable. Get out of the cab and look. Incorrect coupling could cause the trailer to disconnect, possibly resulting in serious personal injury or death.

8. Perform a coupling inspection, checking that there is no gap between the bottom of the trailer and the fifth wheel, and that the kingpin is securely locked. See Fig.235, [Coupling Inspection](#).

When lockup has occurred, the fifth wheel control handle moves to the locked position. Make sure that the safety latch is down over the lock control handle to hold the control handle in the locked position. (The safety latch will only rotate down if the operating rod is fully retracted in the locked position.) See Fig.231, [Fontaine Locking Mechanism](#) for Fontaine fifth wheels. See Fig.232, [Holland Simplex SE Locking Mechanism](#) for Holland fifth wheels.

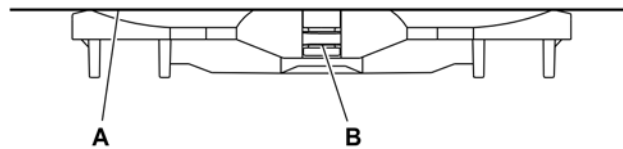

04/28/2017

f311126

A successful inspection of the trailer coupling requires both of the following:

- A. There is no gap between the trailer and fifth wheel. B. The kingpin is securely locked.

Fig 238, Coupling Inspection

A successful inspection of the trailer coupling requires both of the following:

9. Release the tractor parking brakes. Test for kingpin lockup slowly inching the tractor forward, pulling on the trailer against the chocks.
10. After lockup is completed, connect the tractor-to-trailer air system lines and the electrical cable to the trailer. Take care to prevent dirt or foreign material from entering the air system lines.

**NOTICE:**

Always make sure the connection hanger keeps the trailer air hoses and electrical cables positioned so that they do not rub on anything. Rubbing may wear through hoses or cables, resulting in air leaks, or exposed or broken wires, potentially affecting trailer brake or electrical systems.

11. Charge the air brake system with air, checking that the air connections do not leak.

**WARNING:**

Incorrect fifth wheel lock adjustment could cause the trailer to disconnect, possibly resulting in serious personal injury or death.

12. With the trailer wheels chocked and the brakes set, check for clearance between the kingpin and the fifth wheel jaws by moving the tractor forward and backward against the locked kingpin. If slack is present, uncouple the trailer and have the fifth wheel inspected and adjusted by a certified technician.


19.02.02 Jost Fifth Wheel Coupling

Fifth wheel coupling is activated with the lock control handle located on either the right side or left side of the fifth wheel. Coupling has successfully occurred when the kingpin has been forced into the jaws and the lock control handle has moved to the locked position.

**NOTICE:**

Some fifth wheels may be mounted on sliding rails. Before attempting to couple a trailer to a sliding fifth wheel, the slide feature must be locked to prevent the top plate from sliding rapidly forward or rearward, causing damage to the fifth wheel or kingpin.

1. Tilt the ramp down.
2. Open the kingpin locks. See Fig.236, [Jost Release Handle Unlocked](#).

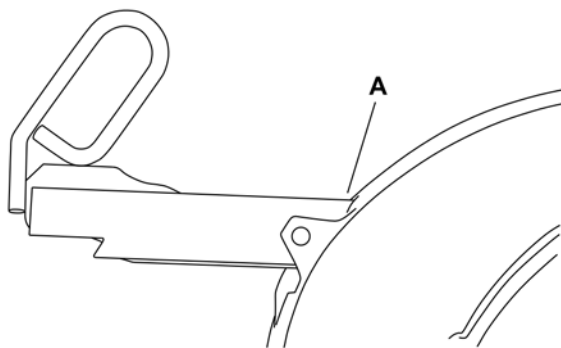

- A. When the kingpin locks are opened, they will be held open by the catch mechanism.

Fig 239, Jost Release Handle Unlocked

3. Back the vehicle close to the trailer, centering the kingpin on the fifth wheel.
4. Chock the trailer wheels.
5. Connect the air lines and electrical cable.
6. Ensure that the red trailer air supply valve (trailer brake) is pulled out, and that the trailer parking brakes are set. See in this manual for operation of the dash-mounted brake controls.


**NOTICE:**

Attempting to couple at the wrong height may cause improper coupling, which could result in damage to the fifth wheel or kingpin.

7. Adjust the trailer height (if required).

For a standard fifth wheel plate, the trailer should contact the fifth wheel approximately 4 to 8 inches (10 to 20 cm) behind the pivot. See Fig.237, [Trailer Connection Point, Standard Fifth Wheel](#).

For a low-lube fifth wheel plate, the fifth wheel must slide freely under the trailer, and the trailer should contact the fifth wheel at the pivot. See Fig.238, [Trailer Connection Point, Low-Lube Fifth Wheel](#).

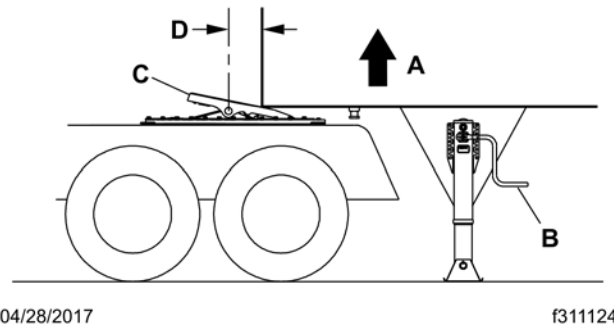


A proper connection for a standard fifth wheel trailer is ensured by all of the following:

- | | |
|---|---|
| A. The fifth wheel is lifting the trailer. | D. The trailer is connected 4 to 8 inches behind the fifth wheel pivot. |
| B. The trailer height is adjusted with the crank. | |
| C. The ramps are tilted down. | |

Fig 240, Trailer Connection Point, Standard Fifth Wheel

A proper connection for a standard fifth wheel trailer is ensured by all of the following:

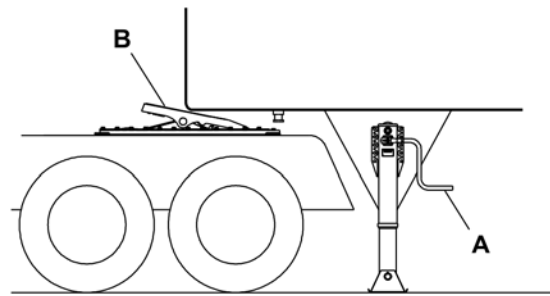

04/28/2017

f311125

A proper connection for a low-lube fifth wheel trailer is ensured by both of the following:

- A. The trailer height is adjusted with the crank. B. The ramps are tilted down.

Fig 241, Trailer Connection Point, Low-Lube Fifth Wheel

A proper connection for a low-lube fifth wheel trailer is ensured by both of the following:


8. Back the tractor under the trailer.
On a standard fifth wheel, the fifth wheel must lift the trailer.
On a low-lube fifth wheel, do not lift the trailer as this may damage the fifth wheel plate.
9. After sliding under the trailer, STOP to prevent from hitting the kingpin too hard, then resume backing slowly until the fifth wheel locks.



WARNING:

A visual inspection is required by law. Some improper couplings can pass a pull test. Sound is not reliable. Get out of the cab and look. Incorrect coupling could cause the trailer to disconnect, possibly resulting in serious personal injury or death.

10. Apply the tractor parking brake, then perform a physical check for positive kingpin lockup, and that there is no gap between the trailer and the fifth wheel. See Fig.239, [Coupling Inspection](#).

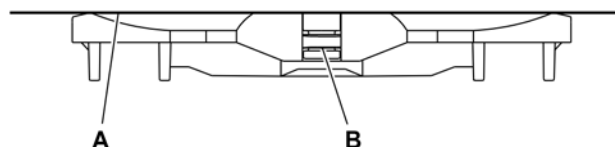

04/28/2017

f311126


A successful inspection of the trailer coupling requires both of the following:

- A. There is no gap between the trailer and fifth wheel. B. The kingpin is securely locked.

Fig 242, Coupling Inspection

A successful inspection of the trailer coupling requires both of the following:

11. Ensure that the release handle is in the locked position adjacent to the casting. See Fig. 240, [Jost Release Handle Locked](#).

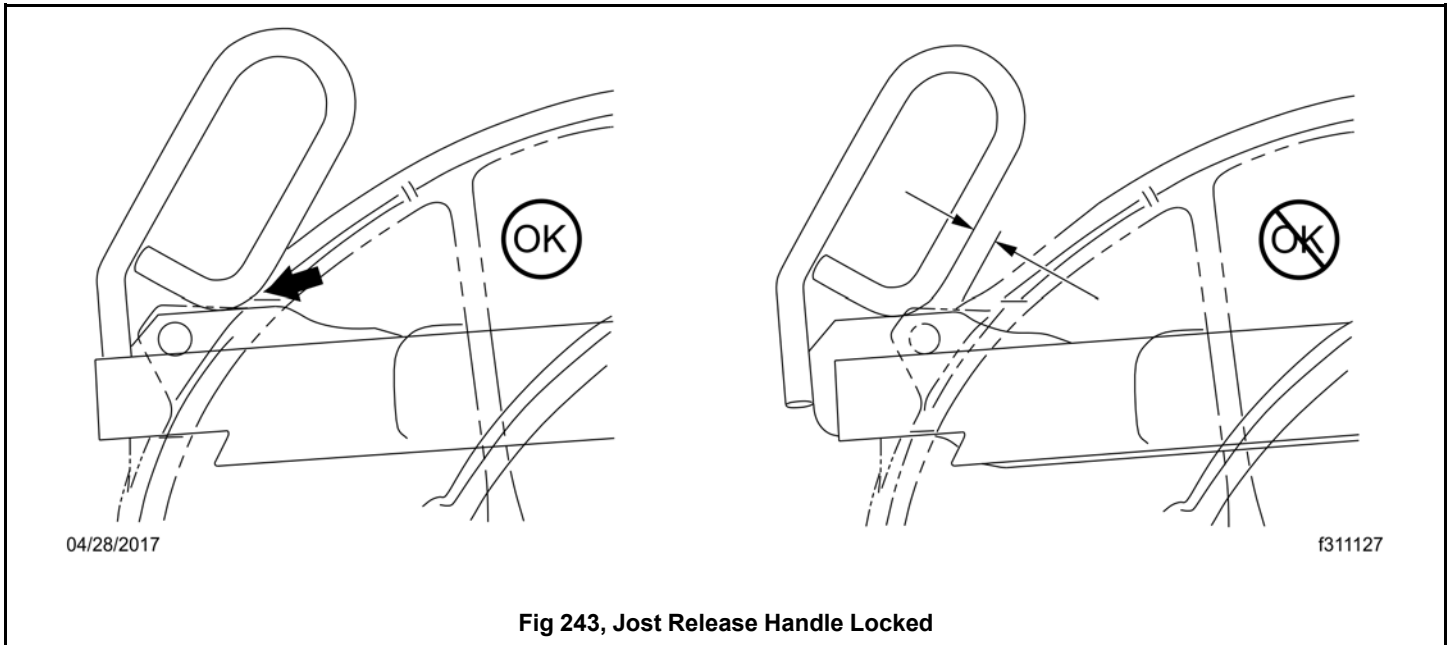


12. Release the tractor parking brakes and test for kingpin lockup by slowly moving the tractor forward, pulling on the trailer against the chocks.

19.03 Fifth Wheel Uncoupling

19.03.01 Manual Uncoupling

1. Apply the tractor and trailer parking brakes.
2. Chock the trailer rear wheels.
3. Lower the trailer landing gear until the weight is removed from the fifth wheel.
4. Disconnect the tractor-to-trailer air system lines and electrical cable. Plug the air lines to prevent dirt or foreign material from entering the lines.
5. Verify that both the yellow parking-brake and red trailer-air-supply knobs are out, the tractor and trailer parking brakes are set, and that the trailer is prepared for uncoupling.
6. Release the kingpin locking mechanism following the instructions for each manufacturer below.
 - 6.a **Fontaine:** Lift the safety latch and pull the lock control handle to the unlocked position. See Fig. 241, [Fontaine Locking Mechanism](#).

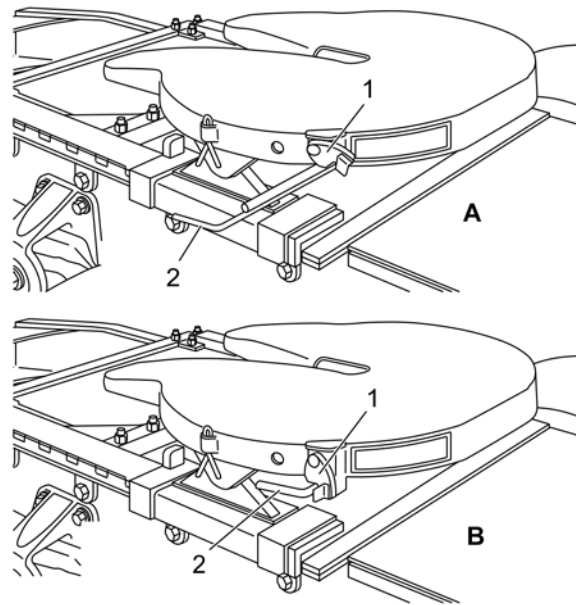

04/06/2017

f310110a

NOTE: Make sure the safety latch is down when the control handle is locked.

- A. The Fontaine locking mechanism in the **unlocked** position.
- B. The Fontaine locking mechanism in the **locked** position.
1. Safety Latch
2. Lock Control Handle


Fig 244, Fontaine Locking Mechanism

6.b **Holland:** In the locked position the safety indicator swings freely over the operating rod. See Fig. 242, [Holland Kingpin Locking Mechanism](#), View A.

To unlock the mechanism, manually rotate the safety indicator toward the rear of the fifth wheel. See Fig. 242, [Holland Kingpin Locking Mechanism](#), View B.

Pull the operating rod out. When the upper operating rod shoulder is outside the slot, raise the handle and place the shoulder of the upper rod against the plate casting, above the slot. See Fig. 242, [Holland Kingpin Locking Mechanism](#), View C.

The fifth wheel is now in the lockset position and is ready for uncoupling. As the tractor pulls away from the trailer the kingpin forces the jaw to rotate, contacting the lock. Continued rotation of the jaw forces the lock to move outward, and drops the upper rod back into the slot. See Fig. 242, [Holland Kingpin Locking Mechanism](#) View D. The wheel is now ready for coupling.

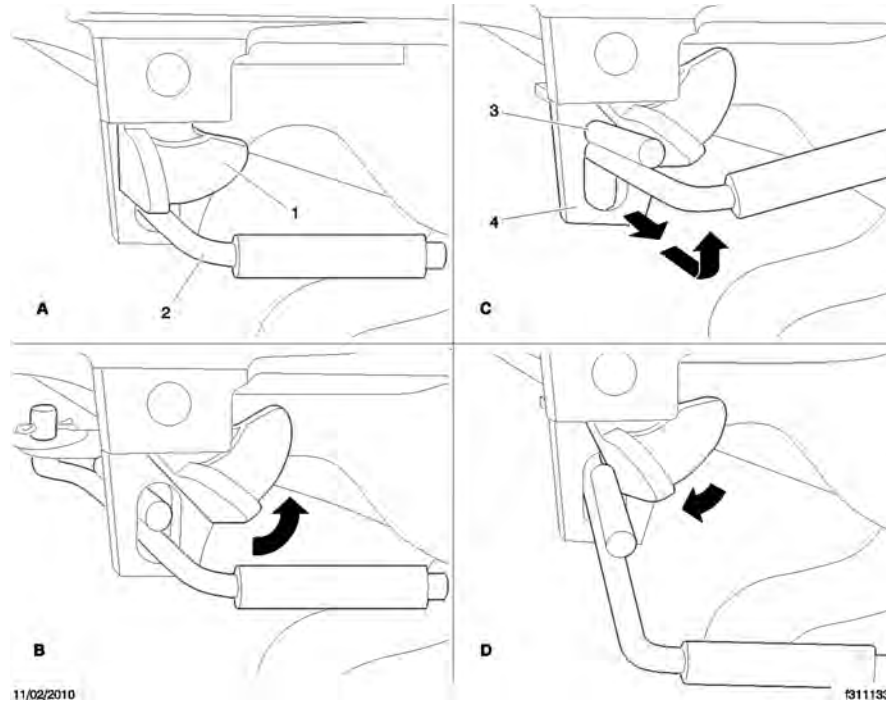

A. The Holland kingpin locking mechanism in the **locked position**.

B. The Holland kingpin locking mechanism in the **Unlatched Position** (the safety indicator rotated towards the rear of the fifth wheel).


C. The Holland kingpin locking mechanism in the **Lockset Position** (the upper rod resting against casting above slot).

D. The Holland kingpin locking mechanism in the **Open Position** (ready for recoupling).

1. Safety Indicator
2. Operating Rod
3. Upper Rod
4. Plate Casting

Fig 245, Holland Kingpin Locking Mechanism

6.c **Jost:** Pull the retractable handle out, then secure it in the open position with the catch. See Fig. 243, [Jost Release Handle Unlocked](#).

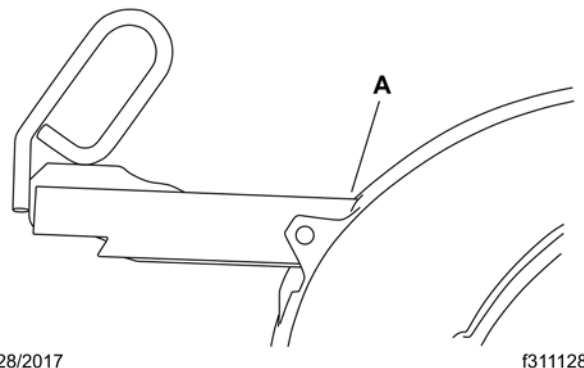

A. The Jost release handle is held open by catch a mechanism.

Fig 246, Jost Release Handle Unlocked

7. Release the tractor parking brake then drive out slowly, allowing the trailer to slide down the fifth wheel and pick-up ramps.

19.03.02 Air-Actuated Uncoupling

General Description

A dash-mounted kingpin release switch (if equipped) may be used to uncouple the trailer. See Fig. 244, [Air-Actuated Kingpin Release Valve](#).



NOTE: In the event of an air system failure, air-actuated kingpins can be manually released following the instructions for manual unlocking.

**WARNING:**

Once the kingpin release switch has been pushed, the kingpin lock is released. The vehicle **MUST NOT** be driven with the trailer until the trailer has been uncoupled and coupled again. Failure to do so may result in separation of the trailer from the tractor, possibly causing serious personal injury or death.

Preparing the Trailer for Uncoupling

Before using the air valve to unlock a fifth wheel kingpin, prepare the trailer as follows.

1. Apply the tractor and trailer parking brakes.
2. Chock the trailer rear wheels.
3. Lower the trailer landing gear until the weight is removed from the fifth wheel.
4. Disconnect the tractor-to-trailer air lines and electrical cable. Plug the air lines to prevent dirt or foreign material from entering the lines.

Fontaine and Holland Fifth Wheels Air-Activated Kingpin Unlock

1. Verify that both the yellow parking-brake and red trailer-air supply knobs are out, the tractor and trailer parking brakes are set, and that the trailer is prepared for uncoupling.

NOTE: On Fontaine and Holland fifth wheels, if the tractor parking brake is not set, the air-actuated kingpin-release valve will not activate.

2. Pull and hold the kingpin release valve (see Fig.245, [Air-Actuated Kingpin Release Valve](#)) until the kingpin lock mechanism opens and locks in place.
3. Release the pull valve.

4. Release the tractor parking brake.
5. Drive out from under the trailer.



Fig 248, Air-Actuated Kingpin Release Valve

Jost Fifth Wheels Air-Activated Kingpin Unlock

1. Verify that both the yellow parking-brake and red trailer-air-supply knobs are out, the tractor and trailer parking brakes are set, and that the trailer is prepared for uncoupling.

NOTE: With Jost fifth wheels, if the trailer parking brake is not set the air-actuated valve will not activate.

2. Release the tractor parking brake.
3. Pull and hold the kingpin release valve, then drive forward slowly.
4. After the trailer has slid down the fifth wheel and pick-up ramps, release the pull valve.

19.04 Fifth Wheel Slide

19.04.01 General Description, Fifth Wheel Slide



WARNING:

Adjust the fifth wheel slide correctly, and do not overload any tractor axle by incorrectly loading the trailer. Incorrect slide adjustment or improper axle loading could cause erratic steering and loss of vehicle control, possibly resulting in serious personal injury or death.

On sliding fifth wheel assemblies, the fifth-wheel plate is attached to rails that allow forward and rearward movement of the fifth wheel to optimally distribute the load across the axles. Slots are evenly spaced along the slide rails, and retractable wedges are positioned through the slots to hold the fifth wheel in the desired position.

The amount of load distribution on the front steering axle and rear drive axle(s) will have a direct effect on the steering control of the vehicle. Determine the front and rear axle weights by weighing the vehicle on scales designed for this purpose.

The maximum axle weight ratings are shown on the Federal Motor Vehicle Safety Standard (FMVSS) label or Canadian Motor Vehicle Safety Standard (CMVSS) label attached to the left rear door post of the tractor. The desired load on the axle is no less than 80 percent of the maximum axle weight rating, but in no instances should the axle load exceed the maximum axle weight rating given on the FMVSS or CMVSS label.

19.04.02 Operation of Manual Slide

The manual slide feature is operated from the fifth wheel plate with a manual release handle using the following procedure. See Fig.246,[Manual Release Sliding Fifth Wheel \(Fontaine shown\)](#).

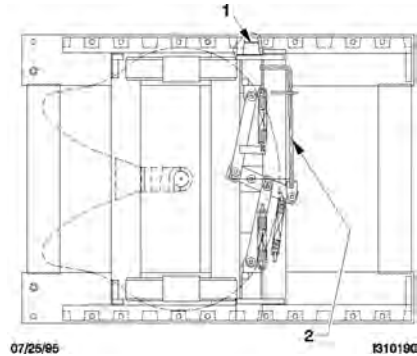


Fig 249, Manual Release Sliding Fifth Wheel (Fontaine shown)

1. Locking Wedge
2. Slide Release Pull Handle
 1. Stop the tractor and trailer in a straight line on level ground. Pull the red trailer air supply knob to apply the trailer parking brakes.
 2. Apply the tractor parking brake, then release the sliding mechanism using the appropriate method for the fifth wheel manufacturer.
 - 2.a **Fontaine:** Lift the slide release pull handle to disengage it from the guide plate. Then, pull out the handle until it is in the unlocked position and can be positioned against the guide plate to hold it out. The handle will stay in the unlocked position until it is manually disengaged from the guide plate. See Fig. 247,[Releasing the Sliding Fifth Wheel, \(Fontaine\)](#).


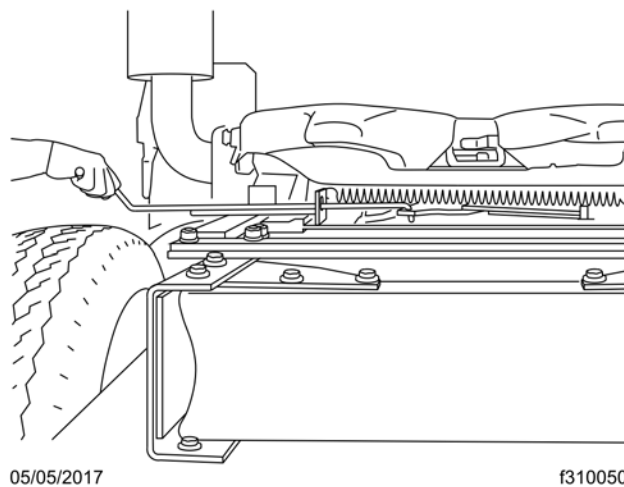


Fig 250, Releasing the Sliding Fifth Wheel, (Fontaine)

- 2.b **Holland:** Pull the operating rod out. Make sure both side plungers have released. See Fig. 248, [Sliding Fifth Wheel Manual Release, \(Holland Simplex\)](#).

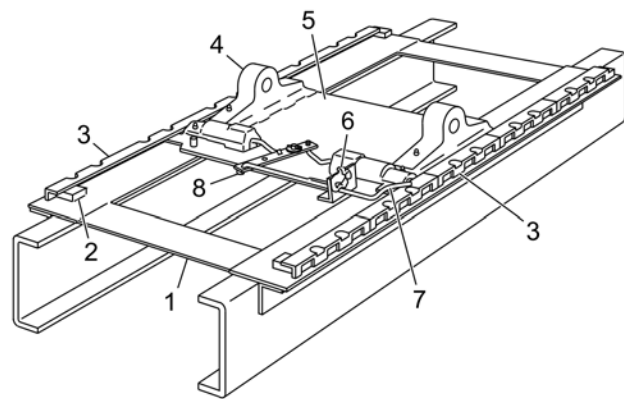

- | | |
|----------------------|------------------------|
| 1. Baseplate | 5. Slider Saddle Plate |
| 2. Bolted Stop | 6. Safety Latch |
| 3. Baseplate Rail | 7. Operating Rod |
| 4. Fifth Wheel Mount | 8. Operating Lever |

Fig 251, Sliding Fifth Wheel Manual Release, (Holland Simplex)

3. Lower the trailer landing gear just enough to remove the weight from the tractor.
4. Chock the front and rear of the trailer tires to prevent the trailer from moving.
5. Release the tractor parking brakes, then slowly move the tractor forward or backward until the fifth wheel is in the desired location.

**WARNING:**

Check that the locking wedges have seated in the slots. Failure to achieve complete lockup may allow disengagement of the tractor from the trailer, possibly resulting in serious personal injury or death.

**NOTICE:**


When moving the fifth wheel to the desired position, be sure the trailer landing gear will not at any time come in contact with the tractor frame or other components. Make sure that the front of the trailer will not come in contact with the rear of the cab or with other components if they extend beyond the rear of the cab.

6. Apply the tractor parking brakes, then lock the sliding member in position using one of the following methods:
 - 6.a **Fontaine:** Disengage the slide release pull handle from the guide plate. The slide release pull handle is spring-loaded in the locked position and will seek the locked position when disengaged from the guide plate. After the slide release pull handle returns to the fully locked position, visually and physically check the locking wedges to make sure they are fully inserted into the slots in the slide rails. Make sure the handle is locked in position against the guide plate.
 - 6.b **Holland:** Raise the operating rod so that it is free to move inward. Make sure that the lock pins have seated in the base plate rail holes and the operating rod moves into the locked position.

NOTE: The fifth wheel may need to be moved slightly to enable the locking wedges to enter the fully locked position.

19.04.03 Operation of the Air Slide


The slide feature may be operated with an air switch mounted in the dash, that operates an air cylinder that locks and unlocks the slide. See Fig.249, [Air-Slide Switch](#).

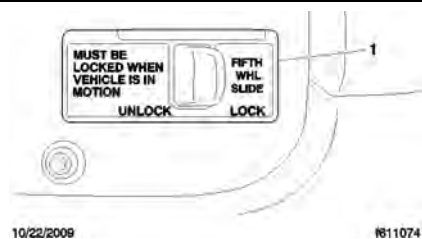

1. Fifth Wheel Air-Slide Switch

Fig 252, Air-Slide Switch


1. Set the air-slide switch (see Fig.249, [Air-Slide Switch](#)) to SLIDE.
Ensure the locking plungers have released. See Fig.250, [Air-Operated Sliding Fifth Wheel \(Fontaine shown\)](#).
For Jost fifth wheels, the mechanism activates as shown in Fig.251, [Jost Sliding Fifth Wheel](#).

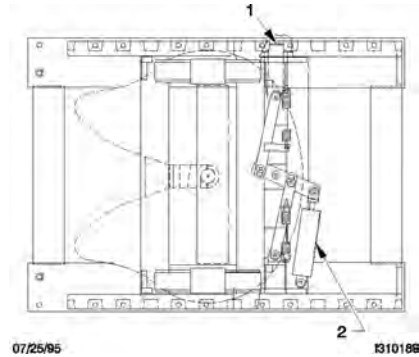

1. Locking Wedge

2. Air Cylinder

Fig 253, Air-Operated Sliding Fifth Wheel (Fontaine shown)

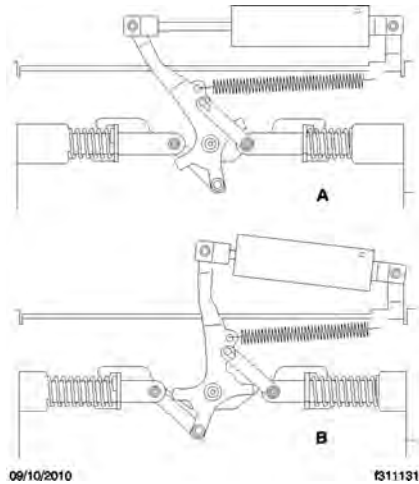

A. Unlocked

B. Locked

Fig 254, Jost Sliding Fifth Wheel

2. Lower the trailer landing gear just enough to remove the weight from the tractor.
3. Pull the red trailer-air-supply knob to set the trailer-parking brakes.
4. Slowly move the tractor forward or backward until the fifth wheel is in the desired location.



NOTICE:

Ensure the trailer landing gear does not come in contact with the tractor frame or other components, and that the front of the trailer will not come in contact with the rear of the cab or other components if they extend beyond the rear of the cab.

5. Apply the tractor parking brakes.

**WARNING:**

Check that the locking wedges have seated in the slots. Failure to achieve complete lockup may allow disengagement of the tractor from the trailer, possibly resulting in serious personal injury or death.

6. Set the air-slide switch to LOCK. Visually inspect the locking wedges or plungers to make sure that they are fully inserted in the slide rail slots. Verify that the plungers have engaged by tugging the tractor forward while the trailer brakes are locked and the wheels are chocked.

NOTE: The fifth wheel may need to be moved slightly to enable the locking wedges to fully lock.

20.01 Air-Suspension Dump Valve	286
20.02 Holland Trailer Coupling.....	286
20.02.01 General Information	286
20.02.02 Operation of the Trailer Hookup.....	286
20.02.03 Operation of the Trailer Release.....	287

20. Trailer Couplings

20.01 Air-Suspension Dump Valve

The air-suspension height switch may be used to aid in connecting or disconnecting from a trailer. When the switch is set to LOWER, the air-suspension dump valve deflates the air springs to lower the rear of the vehicle. In the AUTO position, the automatic ride-control valves operate for normal driving.

NOTICE



NOTICE:

Do not operate the vehicle over uneven ground such as ramps, speed bumps, curbs, etc. with the air springs deflated. Doing this may lead to air bag separation from the piston, preventing the suspension air springs from reinflating.




NOTICE:

Never exhaust air from the suspension while driving. When the air is exhausted, the suspension will not absorb road shocks, and components may be damaged.

20.02 Holland Trailer Coupling

20.02.01 General Information

The Holland PH-10RP41 trailer coupling is designed for use with trailers having a maximum gross weight of 10,000 lb. See 252, [Holland Trailer Coupling with FastLatch](#). It is a rigid-type pintle hook, used only on tractor applications, and is fastened to the rear closing crossmember of the vehicle. It is a non-air-adjusted coupling.

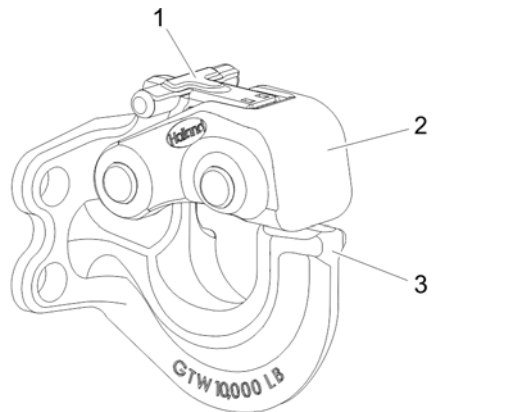

01/12/2016

f311187

- 1. Lock
- 2. Latch

- 3. Pintle Hook

Fig 255, Holland Trailer Coupling with FastLatch

20.02.02 Operation of the Trailer Hookup

1. Chock the front and rear tires of the trailer.
2. Lift the lock and raise the latch.
3. Back up the vehicle, until the drawbar eye is over the pintle hook.
4. Lower the trailer, until the drawbar eye rests on the pintle hook.
5. Close the latch.

**NOTICE:**

Always make sure the connection hanger keeps the trailer air hoses and electrical cables positioned so that they do not rub on anything. Rubbing may wear through hoses or cables, resulting in air leaks, or exposed or broken wires, potentially affecting trailer brake or electrical systems.

6. Hook up the trailer electrical and air lines.
7. Remove the chocks from the trailer's tires.

20.02.03 Operation of the Trailer Release

1. Apply the tractor and trailer parking brakes.

**WARNING:**

Do not use the trailer air supply for parking trailers not equipped with spring parking brakes. This applies the trailer service brakes only. As air bleeds from the trailer brake system, brake application is lost. This could allow the unattended vehicle to roll away, possibly resulting in serious personal injury or death.

2. Chock the front and rear tires of the trailer.
3. Disconnect the trailer air and electrical lines. Plug the air lines to keep out dirt.
4. Take the weight of the trailer drawbar off the pintle hook.
5. Open the latch by lifting up the lock and raising the latch.
6. Slowly drive the vehicle away from the trailer.

21.01 Periodic Inspections and Maintenance, General Information	290
21.02 Checklists	290
21.02.01 Daily Pretrip Inspection Checklists.....	290
21.02.02 Weekly Post-trip Inspection Checklist	292
21.02.03 Monthly Post-trip Inspection Checklists.....	293
21.03 Fluids Added.....	294

21. Pre- and Post-Trip Checklists

21.01 Periodic Inspections and Maintenance, General Information

Regulations in Canada and the U.S. clearly indicate that it is the driver's responsibility to perform an inspection, and ensure the complete road-worthiness of a vehicle, before placing it into service. Commercial vehicles may be subject to inspection by authorized inspectors, and an unsafe vehicle can be taken "out of service" until the driver or owner repairs it.

Use the following checklists to ensure that vehicle components are in good working condition before each trip. Careful inspections eliminate stops later to fix overlooked or forgotten items.

The checklists in this chapter can be copied and kept as a record that the procedures have been completed. For details on how to inspect each item on the checklists, see the corresponding procedure (step number) in [26.01 Natural Gas Vehicles, General Information](#).

21.02 Checklists

21.02.01 Daily Pretrip Inspection Checklists

NOTE: Checklists in this chapter correspond with the procedures and steps in [26.01 Natural Gas Vehicles, General Information](#), **Pre- and Post-Trip Inspections and Maintenance**. Your vehicle may not be equipped with all components listed below.

See the following tables for a list of procedures that should be performed daily, before the first trip. Place a check mark in the complete (**Comp.**) column to indicate a procedure has been performed.

Inspector	Date

Suspension and Slack Adjusters		Com- p.
1	Suspension components	
2	Slack adjusters	

Wheels and Tires		Com- p.
1	Wheel covers	
2	Tire condition	
3	Tire inflation	
4	Rims and wheel components	
5	Wheel bearing oil seals and lubrication levels	
6	Mud Flaps	

Saddle Tank Areas		Com- p.
1	Drain air reservoirs (without automatic drain valves)	
2	Fuel tank(s) secure	
3	Frame rails and crossmembers	
4	Visible exhaust components	

Engine Compartment		Com- p.
1	Leakage under engine	
2	Air intake system	
3	Engine oil level	
4	Power steering reservoir level	
5	Engine coolant level	
6	Visible engine wiring	
7	Frame rails	

Cab		Com- p.
1	Reset dash-mounted air intake restriction indicator (if equipped)	
2	Air pressure warning systems	
3	Air governor cut-in and cut-out pressures	
4	Air pressure build-up time	
5	Air system leakage	
6	Air pressure reserve	
7	Mirrors, windows, windshield	
8	Horn, windshield wipers, windshield washers	
9	Heater and defroster	
10	Interior lights	
11	Exterior lights	

Cab		Com- p.
12	Seat belts and tether belts	
13	Fuel level	
14	Mirror adjustment	
15	Service brakes	
16	Backup alarm	

Natural Gas Fuel System		Comp.
1	Fuel tanks	
2	Required decals	
3	Vent caps	
4	Plumbing components, fuel fill fitting, fuel lines	
5	Fuel gauge components, fuel level sender cable, LNG fuel tank pressure	
6	Coolant hoses	
7	LNG fuel tank pressure	
8	LNG vaporizer	
9	Low pressure filter drain	

21.02.02 Weekly Post-trip Inspection Checklist

NOTE: Checklists in this chapter correspond with the procedures and steps in the chapter titled **Pre- and Post-Trip Inspections and Maintenance**. Your vehicle may not be equipped with all components listed below.

See the following table for procedures that should be performed weekly, post-trip. Place a check mark in the complete (**Comp.**) column to indicate a procedure has been performed.

Inspector	Date

Engine Compartment		Comp.
1	Windshield washer reservoir level	
2	Air intake restriction indicator	
3	Water evacuation components	

Engine Compartment		Comp.
4	Automatic transmission fluid level	
5	Water in fuel/water separator	
6	Steering components	
7	Serpentine drive belts	

21.02.03 Monthly Post-trip Inspection Checklists

NOTE: Checklists in this chapter correspond with the procedures and steps, see [22.01 Safety Precautions](#), **Pre- and Post-Trip Inspections and Maintenance**. Your vehicle may not be equipped with all components listed below.

See the following tables for procedures that should be performed monthly, post-trip. Place a check mark in the complete (**Comp.**) column to indicate a procedure has been performed.

Inspector	Date

Brake Components		Comp.
1	Brake system components	
2	Brake chambers	
3	Air brake lines	
4	Flex air hoses	
5	Brake linings and brake drums	
6	Brake lining thickness	

Saddle Tank Areas		Comp.
1	Drain air reservoirs (with automatic drain valves)	
2	Batteries (location may vary)	
3	Aerodynamic components	

Engine Compartment		Comp.
1	Hood and bumper	
2	Hydraulic clutch reservoir	

Engine Compartment		Comp.
3	Radiator and heater hoses	
4	Steering wheel play	

21.03 Fluids Added

Use the following table to note any fluids that were added during the inspection and maintenance procedures.

Fluid	Amount Added
Wheel Bearing Lubricant	
Engine Oil	
Power Steering Fluid	
Engine Coolant	
Windshield Washer Fluid	
Automatic Transmission Fluid	
Hydraulic Clutch Fluid (DOT 4 brake fluid)	

22.01 Safety Precautions	296
22.02 Daily Pretrip Inspections and Maintenance	296
22.02.01 General Information	296
22.02.02 Inspection of the Suspension and Slack Adjuster	296
22.02.03 Inspection of the Wheel and Tire	298
22.02.04 Inspection of the Saddle Tank Areas	301
22.02.05 Inspection of the Engine Compartment	302
22.02.06 Inspection of the Cab	304
22.02.07 Inspection of the Natural Gas Fuel System	309
22.03 Weekly Post-Trip Inspections and Maintenance	312
22.03.01 Inspection of the Engine Compartment	312
22.04 Monthly Post-Trip Inspections and Maintenance	319
22.04.01 Inspection of the Brake Component	319
22.04.02 Inspection of the Saddle Tank Areas	320
22.04.03 Inspection and Adjustments of the Engine Compartment	321

22. Pre- and Post-Trip Inspections and Maintenance

22.01 Safety Precautions

**DANGER:**

When working on the vehicle, shut down the engine, set the parking brake, and chock the tires. before working under the vehicle, always place jack stands under the frame rails to ensure the vehicle can not drop. Failure to follow these steps could result in serious personal injury or death.

22.02 Daily Pretrip Inspections and Maintenance

22.02.01 General Information

Complete the following inspection and maintenance procedures to ensure that vehicle components are in good working condition before each trip. A driver who is familiar with the vehicle and drives it regularly can perform the daily inspections, then add the weekly and monthly post-trip inspections as scheduled.

If the driver does not operate the vehicle on a consistent basis, all daily, weekly, and monthly inspection and maintenance procedures should be performed before the trip.


IMPORTANT: The pre- and post-trip checklists, inspections, and maintenance procedures detailed in this chapter are **not all-inclusive**. Refer to other component and body manufacturers' instructions for specific inspection and maintenance instructions, as well as local, state, and federal guidelines.

NOTE: If any system or component does not pass this inspection, it must be corrected before operating the vehicle. Whenever equipment requires adjustment, replacement, and/or repair, see the **Cascadia Workshop Manual** for procedures and specifications.

22.02.02 Inspection of the Suspension and Slack Adjuster

Walk around the vehicle and visually inspect suspension and slack adjuster components.


1. Inspect the following suspension components for signs of structural damage, cracks, or wear.
 - springs
 - spring hangers
 - shocks
 - suspension arms
 - suspension brackets
 - axle seats
 - bushings
2. Inspect slack adjusters for signs of damage. See Fig.253, [Gunite Automatic Slack Adjuster](#), Fig. 254, [Haldex Automatic Slack Adjuster](#), or Fig.255, [Meritor Automatic Slack Adjuster](#).

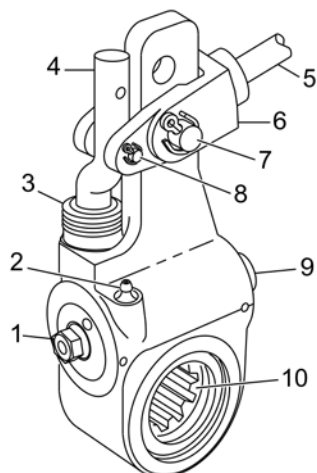

02/03/2017

f421398

- | | |
|-----------------------------|---------------------------|
| 1. 7/16-inch Adjusting Nut | 6. Clevis |
| 2. Grease Fitting | 7. 1/2-inch Clevis Pin |
| 3. Boot | 8. 1/4-inch Clevis Pin |
| 4. Link | 9. Grease Relief Opening |
| 5. Brake Chamber Piston Rod | 10. Slack Adjuster Spline |

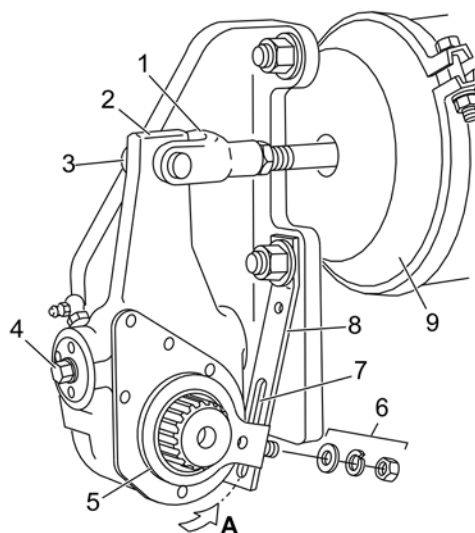
Fig 256, Gunit Automatic Slack Adjuster

02/03/2017

f421397

- | | |
|-------------------------|--------------------------------|
| 1. Clevis | 6. Control-Arm Washers and Nut |
| 2. Slack Adjuster | 7. Anchor Strap Slot |
| 3. Clevis Pin | 8. Anchor Strap |
| 4. Manual Adjusting Nut | 9. Brake Chamber |
| 5. Control Arm | |

Fig 257, Haldex Automatic Slack Adjuster

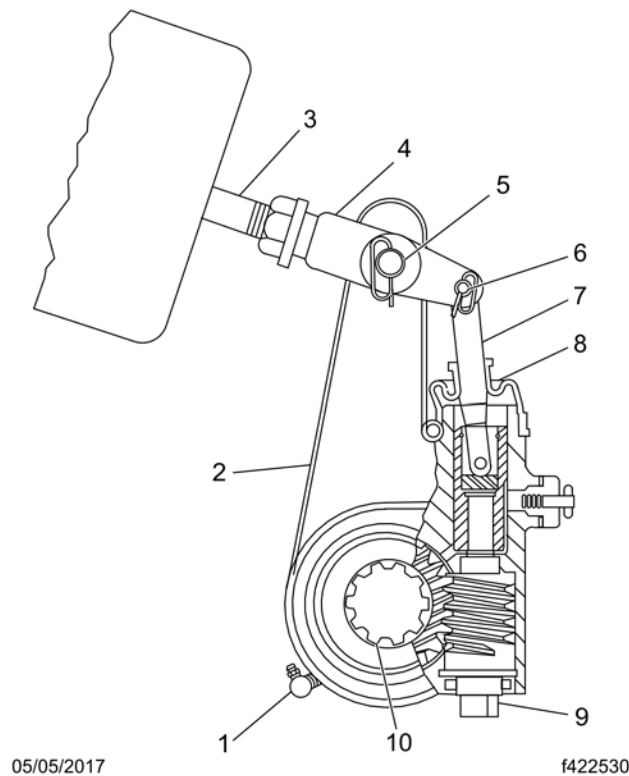

- | | |
|---------------------------------|-------------------------|
| 1. Grease Fitting (if equipped) | 6. Clevis Pin (small) |
| 2. Slack Adjuster Housing | 7. Actuator Rod |
| 3. Brake Chamber Pushrod | 8. Boot |
| 4. Clevis | 9. Manual Adjusting Nut |
| 5. Clevis Pin (large) | 10. Camshaft Splines |

Fig 258, Meritor Automatic Slack Adjuster

- Inspect slack adjuster boots, if equipped, for cuts or tears.
- Inspect anchor straps, if equipped, for damage.
- Look for worn clevis pins on brake chamber pushrods.
- Look for missing or damaged cotter pins on the clevis pins.
- Ensure chamber piston rods are in line with the slack adjusters.

22.02.03 Inspection of the Wheel and Tire

Walk around the vehicle and visually inspect each wheel and tire assembly.

IMPORTANT: Wheel covers decrease drag force as a vehicle moves, thereby improving fuel efficiency. If replacement of a wheel cover is necessary, the replacement cover must meet or exceed the drag reduction performance of the originally installed cover in order to maintain compliance with greenhouse gas and fuel efficiency regulations (GHG14).

1. If the vehicle was originally equipped with wheel covers, ensure all wheel covers are present. Inspect wheel covers for damage or wear. Remove wheel covers from rear drive wheels, if equipped, prior to inspecting the tires and wheel components.

NOTE: During wheel cover installation, ensure the V-notch in the liner inner retaining ring is centered on the valve stem. The inner and outer retaining rings should be uniformly aligned to each other and to the wheel rim. The outer retaining ring of the liner is equipped with two canvas flaps. When installing the face cover, make sure the cover retaining ring is inserted between the two canvas flaps on the liner outer retaining ring so that the Velcro strips line up between the face cover and the liner. Make certain the detachable view cover is centered on the face cover, and the Velcro strips are pressed firmly in place.

2. Inspect each tire for the following:

- valve stem caps on every tire, screwed on finger-tight
- bulges, cracks, cuts, and penetrations
- oil contamination (petroleum derivatives will soften the rubber and destroy the tire)
- tread depth—if tread is less than 4/32 inch (3 mm) on any front tire, or less than 2/32 inch (1.5 mm) on any rear tire, replace the tire
- debris lodged between dual tire sets

IMPORTANT: Low-rolling resistance (LRR) tires minimize wasted energy as a tire rolls, thereby decreasing rolling effort and improving fuel efficiency. If tire replacement is necessary, replacement tires must meet or have less rolling resistance than the originally installed tires in order to maintain compliance with greenhouse gas and fuel efficiency regulations. Contact your tire manufacturer/supplier to determine the rolling resistance of the originally installed tires. Visit www.epa.gov/smartway for additional information and resources.

3. Check tire inflation.

For inflation pressures and maximum loads, see the tire manufacturer's guidelines. Inflate the tires to the applicable pressures if needed.

If a tire has been run flat or under-inflated, check the wheel and tire for damage before adding air.

Keep compressed air reservoirs and lines dry during tire inflation. Use well-maintained inline moisture traps and service them regularly.

**WARNING:**

Do not operate the vehicle with underinflated or overinflated tires. Incorrect inflation can stress the tires and make the tires and rims more susceptible to damage, possibly leading to rim or tire failure and loss of vehicle control, resulting in serious personal injury or death.

IMPORTANT: The load and cold inflation pressure must not exceed the rim or wheel manufacturer's recommendations, even though the tire may be approved for a higher load inflation. Consult the rim or wheel manufacturer for the correct tire inflation pressure for the vehicle load.

**NOTICE:**

A weekly pressure loss of 4 psi (28 kPa) or more in a tire may indicate damage. The tire should be inspected and, if necessary, repaired or replaced by a qualified tire service facility.

4. Examine each rim and wheel component.
 - 4.a Remove all dirt and debris from the assembly. Rust streaks or metal build-up around stud holes, or out-of-round or worn stud holes, may be caused by loose wheel nuts.

**WARNING:**


Have any worn or damaged wheel components replaced by a qualified person using the wheel manufacturer's instructions and the wheel industry's standard safety precautions and equipment. Otherwise a vehicle or workshop accident could occur, possibly resulting in serious personal injury or death.

- 4.b Inspect for broken, cracked, badly worn, bent, rusty, or sprung rings and rims.

**NOTICE:**

Use the recommended torque values and follow the proper tightening sequence. Insufficient wheel nut torque can cause wheel shimmy, resulting in wheel damage, stud breakage, and extreme tire tread wear. Excessive wheel nut torque can break studs, damage threads, and crack discs in the stud hole area.

- 4.c Make sure all wheel nuts are tightened. If tightening is necessary, use the tightening pattern in Fig. 256, [Tightening Pattern, 10-Hole Wheels](#) to initially tighten the flange nuts to 50 to 100 lbf·ft (68 to 136 N·m). Then tighten the flange nuts to 450 to 500 lbf·ft (610 to 678 N·m).

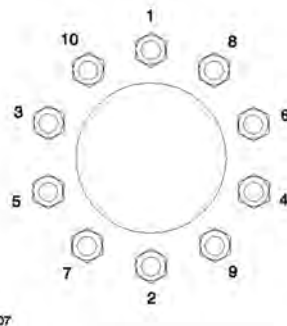**Fig 259, Tightening Pattern, 10-Hole Wheels**

5. Inspect the outboard side of all wheel hubs and the hub oil seal area on the inboard side of each wheel for signs of oil leakage. If any oil is found on wheel and tire or brake components, remove the vehicle from service until the leak has been fixed.

If needed, fill the hubs to the level indicated on the hub cap. See **Group 35** of the **Cascadia Maintenance Manual** for recommended lubricants.

6. Check that mud flaps are undamaged and hang 10 inches (25.4 cm) or less from the ground.

22.02.04 Inspection of the Saddle Tank Areas

**WARNING:**

When draining the air reservoir, do not look into the air jets or direct them toward anyone. Dirt or sludge particles may be in the airstream and could cause injury.

**NOTICE:**

If the water drained from the air reservoirs is cloudy or oily, it may indicate a problem with the compressor. If oil is allowed to contaminate the air dryer, it will not remove the water from the air brake system, which could adversely affect braking.

1. Drain the brake system air reservoirs (reservoirs without automatic drain valves only).

**WARNING:**

Never operate the engine with the fuel tank shutoff valves partially closed. This could damage the fuel pump, causing sudden loss of engine power, possibly resulting in serious personal injury due to reduced vehicle control.

2. Ensure fuel tanks are secured to their mounting brackets and that the mounting brackets are secured to the frame.
If equipped with fuel tank shutoff valves, be sure the valves are fully open.

3. Inspect visible frame rails for missing bolts, shiny areas, or rust streaks. Check all visible crossmembers for damage or signs of looseness.
4. Inspect visible components of the exhaust system to ensure connections are tight.

Inspect upstream of the aftertreatment device (ATD), if equipped, for cracking or signs of leaks, such as soot trails. Inspect downstream of the ATD for signs of exhaust leaks, such as blistering or warping of nearby components.

22.02.05 Inspection of the Engine Compartment

1. Check the ground underneath the engine for fuel, oil, or coolant leaks.
2. Inspect the air intake system for leaks or damage.

**NOTICE:**

Failure to maintain a sealed air intake system could allow the entry of dirt and contaminants into the engine. This could adversely affect engine performance and result in engine damage.

- 2.a Push the reset button on the air intake restriction indicator located on the air cleaner, if equipped.
- 2.b Check the air intake duct from the air cleaner to the engine intake. Make sure the duct components are secure and airtight.
3. Check the engine oil level.

**NOTICE:**

Operating the engine with the oil level below the minimum fill (or "add") mark or above the maximum fill (or "full") mark could result in engine damage.

- 3.a Check the oil level with the vehicle parked on a level surface. See the engine manufacturer's guidelines for engine shutdown time requirements prior to checking the oil level.

IMPORTANT: Use only approved engine lube oil. For lists of engine oils approved for Detroit Diesel engines, refer to the Engine Operator Manual, accessible on Lubricants, Fuels & Coolants on the DTNA Portal. For third party engines, please refer to the engine manual.

- 3.b If the oil level is at or below the minimum fill (or "add") mark on the dipstick, add enough oil to maintain the level between the minimum and maximum fill marks. See the engine operation manual for recommended lubricants.

For natural gas vehicles, use only Exxon Busgard® Geo 15W-40 natural gas engine oil.

4. Check the power steering reservoir fluid level.

The power steering fluid level should be between the MIN COLD mark and the middle mark just above it. See Fig. 257, [Power Steering Fluid Reservoir](#). If needed, fill the reservoir with automatic transmission fluid that meets Dexron III or TES-389 specifications.



05/21/2007

1462079

NOTE: Typical reservoir shown; configurations may vary.

1. Filler Cap

Fig 260, Power Steering Fluid Reservoir


IMPORTANT: The surge tank must be cool to check the coolant level.



NOTICE:

Low coolant could result in engine overheating, which could cause engine damage.

5. Check the engine coolant level in the radiator surge tank. See Fig.258, [Coolant Surge Tank](#).

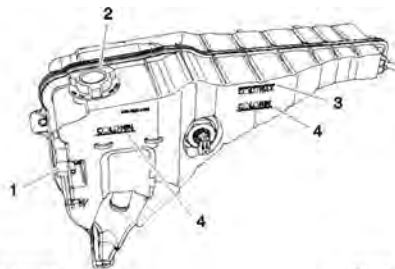

06/13/2007

1500390

1. Pressure Relief Cap
2. Filler Cap
3. COLD MAX Fill Line

4. COLD MIN Fill Line
5. Coolant Level Sensor

Fig 261, Coolant Surge Tank

**NOTICE:**

Coolant must be filled to the COLD MAX line of the surge tank. Low coolant could result in engine overheating, which could cause engine damage.

- 5.a If the coolant is low, fill the surge tank to the MAX line with a 50/50 mixture of water and the type of antifreeze currently installed in your vehicle.

For natural gas vehicles, use only Fleetguard ES Compleat™ EG Premix 50/50 engine coolant.

- 5.b If the surge tank was empty, start the engine after refilling and check the level again when the engine is at operating temperature.
6. Inspect visible engine wiring for damage or looseness. Check for loose wiring, chafed insulation, and damaged or loose hold-down clamps.
7. Inspect visible frame rails for missing bolts, shiny areas, or rust streaks.

22.02.06 Inspection of the Cab

1. Push the reset button on the dash-mounted air intake restriction indicator, if equipped.
2. With the ignition switch in the OFF position, check the air-pressure warning system.
 - 2.a If not previously drained, drain the air reservoirs using moderate brake applications until pressure in both reservoirs is less than 70 psi (483 kPa).

NOTE: On the ICU3, ICU3S, and ICU4 ICUs, low air pressure is indicated by the low air pressure telltale and a buzzer. On the ICU4Me, low air pressure is indicated by a message on the ICU and a buzzer.

- 2.b Turn the ignition to the ON position. The ICU will complete a full gauge sweep and bulb check, and an audible warning will sound. Ensure the low air pressure indicator remains on and an audible warning continues to sound after the gauge sweep is complete.
3. Check air governor cut-in and cut-out pressures.
 - 3.a Start the engine and ensure the BRAKE AIR lamp goes out and the buzzer silences when pressure reaches approximately 70 psi (483 kPa) in both air reservoirs.

The air governor should cut out at approximately 120 psi (827 kPa). For vehicles with an optional dryer reservoir module (DRM), the cut-out pressure is approximately 130 psi (896 kPa).
 - 3.b With the engine idling, apply the brake pedal several times. The air governor should cut in when pressure in the primary air reservoir (top air gauge) reaches approximately 100 psi (689 kPa).
4. Check air pressure build-up time.
 - 4.a With the air system fully charged, make one full brake application and note the air pressure reading on the primary air gauge.
 - 4.b Further reduce air pressure using moderate brake applications, then run the engine at governed rpm.
 - 4.c Note the time that the pressure reaches the previously noted reading on the primary air gauge, then note the time that the air pressure reaches cut-out pressure.

- 4.d If it takes longer than 30 seconds to reach cut-out pressure after the primary air gauge passes the previously noted pressure (noted after one full brake application), eliminate any leaks or replace the air compressor before operating the vehicle.
5. Check air leakage in the system.
 - 5.a With the parking brake applied, the transmission out of gear, and the air system fully charged, release the service brakes and shut down the engine.
 - 5.b Wait one minute and note the air pressure drop in psi (kPa) per minute from the primary air reservoir.
If the pressure drop exceeds the limits shown in Table.23, [Maximum Allowable Air Leakage](#), eliminate any leaks before operating the vehicle.
6. Check the air pressure reserve.

With the engine still off, make one full brake application and observe the pressure drop on the primary air gauge. If pressure drops more than 25 psi (172 kPa), eliminate any leaks before operating the vehicle.

Maximum Allowable Air Leakage		
Description	Pressure Drop: psi (kPa) Per Minute	
	Re- leased	Applied
Truck or Tractor Only	2 (14)	3 (21)
Truck or Tractor w/Single Trailer	3 (21)	4 (28)
Truck or Tractor w/Two Trailers	5 (35)	6 (42)

Table 18, Maximum Allowable Air Leakage





WARNING:

When cleaning windshields and windows, always stand on the ground or on a secure ladder or platform. Use a long-handled window cleaner. Do not use the cab steps, tires, fenders, fuel tanks, engine, or under-hood components to access the windshield or windows. Doing so could cause a fall and result in an injury.

7. Inspect the mirrors, window glass, and windshield for cracks or other damage.
8. Ensure that the horn, windshield wipers, and windshield washers are operating properly. These devices must be in good working order for safe vehicle operation.
9. Ensure the heater and defroster are operating properly.
10. Check the operation of all interior lights.
 - 10.a Turn on the headlamps and leave them on. If equipped, ensure all gauge bulbs illuminate. If equipped, ensure ICU screens illuminate.
 - 10.b Ensure all equipped driver control switches illuminate and verify the interior cab lights controlled by these switches illuminate.
 - 10.c Ensure both turn signal indicators illuminate when the turn signal switch is activated.

11. Check the operation of all exterior lamps manually or, if equipped, by using the LIGHT TEST switch on the dash. See Fig.259, [Pretrip Light Test Switch](#).

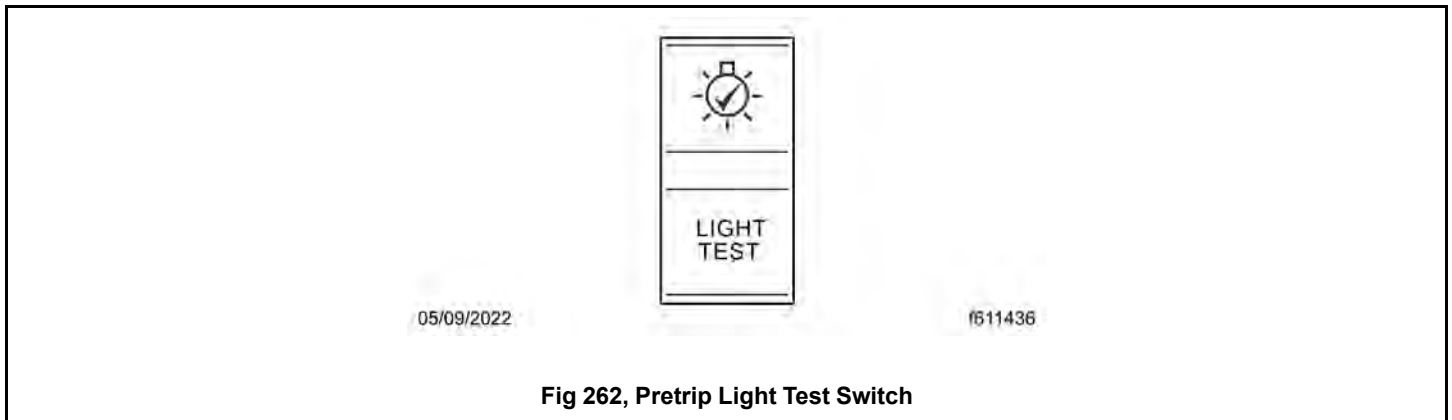

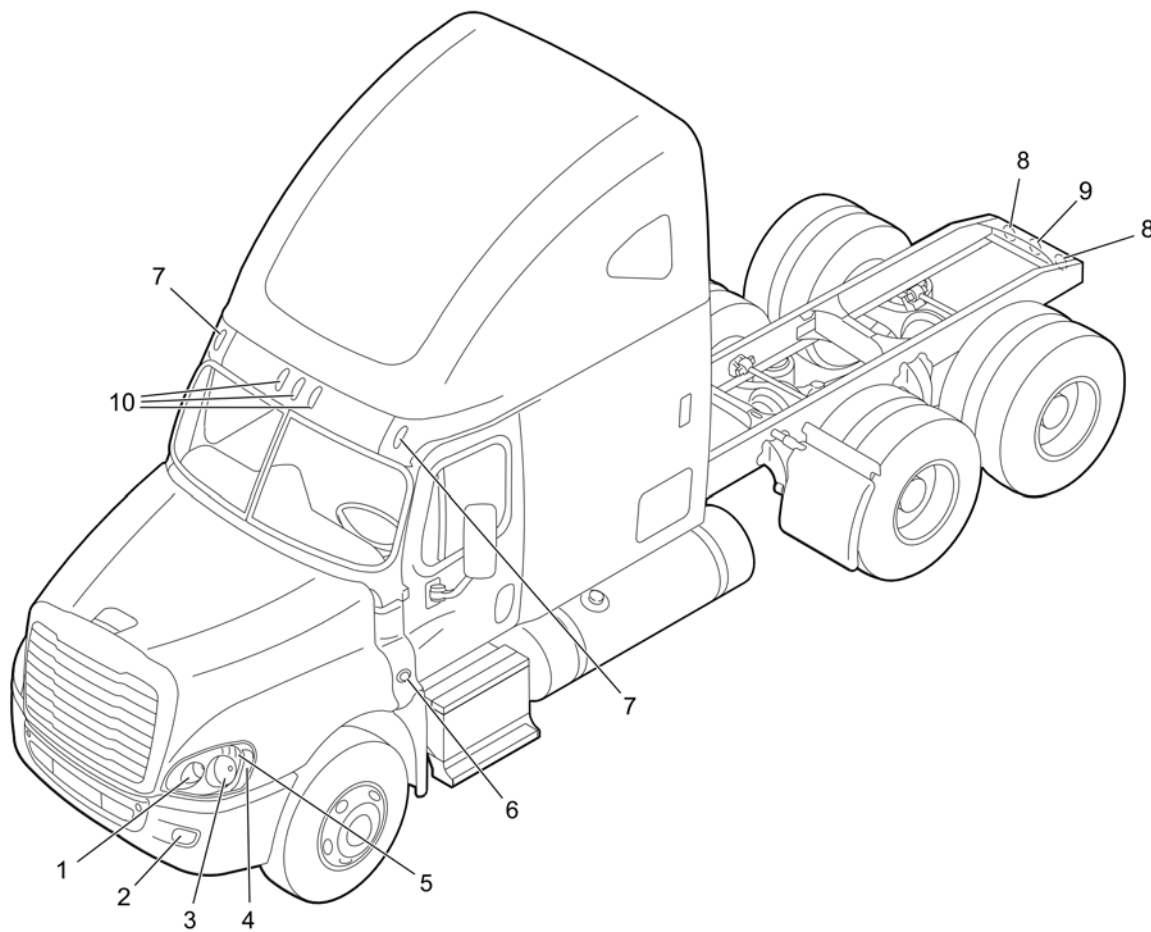

02/02/2017

f544971

- | | |
|---|---|
| 1. High-Beam Headlamp | 6. Side Turn Signal and Marker Lamp |
| 2. Fog Lamp (or Auxiliary High-Beam Lamp) | 7. Clearance Lamp |
| 3. Low-Beam Headlamp | 8. Stop Lamps, Tail lamps, Turn Signals |
| 4. Marker Lamp | 9. Back-Up Lamps |
| 5. Turn Signal | 10. Identification Lamps |

Fig 263, Exterior Lamps

12. To check exterior lamps manually:
 - 12.a Turn the ignition switch to the ACC or ON position.
 - 12.b Make certain the parking brake is set.
 - 12.c Activate the high-beam headlamps and hazard warning lamps.
 - 12.d Exit the cab and check that all exterior lamps and reflectors are clean and intact.
 - 12.e Check that the brake lamps, tail lamps, headlamps, turn signals, marker lamps, identification lamps, and clearance lamps are working properly.
13. To check the exterior lamps using the dash LIGHT TEST switch:
 - 13.a Make sure the parking brake is set.

NOTE: Factory settings have groups of lamps activate sequentially up to 100 times or until manually stopped.

- 13.b Press the LIGHT TEST switch to begin the pretrip light inspection. If equipped, groups of lamps will cycle on and off in the following sequence:
- Group 1: Always ON: marker lamps, clearance lamps, tail lamps, licence plate lamp
 - Group 2: Low beam headlamps
 - Group 3: High beam headlamps and stop lamps
 - Group 4: Backup lamps and daytime running lamps
 - Group 5: Front and rear fog lamps
 - Group 6: Turn signals and utility lamps

NOTE: LED accent lighting turns off when the high beam headlamps turn on.

13.c Walk around the truck and check that the lamps are working properly.

13.d Verify that all exterior lights and reflectors are clean and intact.

13.e The pretrip light inspection can be stopped by:

- releasing the parking brake;
- or pressing either the LIGHT TEST switch on the dash.

14. Inspect the seat belts and tether belts.



WARNING:

Inspect and maintain seat belts. When any part of a seat belt system needs replacement, the entire seat belt must be replaced, both retractor and buckle side. Any time a vehicle is involved in an accident, and the seat belt system was in use, the entire vehicle seat belt system must be replaced before operating the vehicle. Do not attempt to modify the seat belt system; doing so could change the effectiveness of the system. Failure to replace worn or damaged seat belts, or making any modifications to the system, may result in personal injury or death.

- 14.a Check the web for fraying, cuts, extreme dirt and dust, or for severe fading from exposure to sunlight, especially near the buckle latch plate and in the D-loop guide area.
- 14.b Check operation of the buckle, latch, Komfort Latch or Sliding Komfort Latch (if equipped), web retractor, and upper seat belt mount on the door pillar. Check all visible components for wear or damage.
- 14.c Check the seat belt and tether belt connection points and tighten any that are loose.

**WARNING:**

Never fill fuel tanks to more than 95 percent of their liquid capacity. This could make them more likely to rupture from impact, possibly causing fire and resulting in serious personal injury or death by burning.

Do not mix gasoline or alcohol with diesel fuel. This mixture could cause an explosion, possibly resulting in serious personal injury or death. Do not fill the fuel tanks in the presence of sparks, open flames, or intense heat. These could ignite the fuel, possibly causing severe burns.

IMPORTANT: On engines that comply with EPA07 or newer regulations, use ultralow-sulfur diesel (ULSD) with 15 ppm sulfur content or less. Failure to use ULSD fuel may void the warranty on emission components.

15. Check the fuel level in the fuel tank(s). To keep condensation to a minimum, fuel tanks should be filled at the end of each day.
16. Adjust the rearview and down view mirrors as necessary.
17. Test the service brakes.
 - 17.a With the engine running and air system fully charged, set the parking brake.
 - 17.b Put the vehicle in the lowest gear and gently attempt to move it forward. The vehicle should not move.
If the vehicle moves, the parking brakes are not operating correctly and must be repaired before the vehicle is operated.
18. Test the backup alarm.
 - 18.a Release the parking brake and put the transmission in reverse.
 - 18.b Move the vehicle slightly backward to ensure that the backup alarm is operating correctly.

22.02.07 Inspection of the Natural Gas Fuel System

**WARNING:**

As with all pressure vessels, CNG/LNG storage and fuel delivery systems are inherently dangerous and should be treated as such. Beyond the visual inspections listed below, all maintenance and repairs to compressed natural gas (CNG) or liquified natural gas (LNG) systems should be performed by trained personnel. Individuals who are not trained in all aspects concerning CNG/LNG fuel delivery systems are not permitted to service, maintain, test, or inspect a system in any way. Failure to comply with safety regulations may lead to fire or explosion, resulting in property damage, personal injury, or death.

1. Inspect fuel tanks for dents, scratches, gouges, or other signs of damage. Inspect the fuel lines and connections for leaks.

Check that the fuel tanks are securely mounted. Look for signs of abrasion between components.

CNG Fuel System : Ensure that the CNG fuel cylinder storage box is secured to the frame. Inspect for signs of looseness.

(LNG Fuel System : Ensure that the LNG fuel tank is secured to the mounting brackets and that the mounting brackets are secured to the frame. Ensure all rubber isolator straps are secure around the LNG fuel tank.

2. Check for the presence of all required decals present in the following locations:
 - Gas detection system overhead console;
 - Above the door handle on both doors;
 - Left front bumper;
 - End-of-frame crossmember;
 - LNG fuel tank fill port (maximum psi), if equipped.
3. Check for the presence of vent caps on pressure relief valves and devices. See Fig.261, [CNG Vent Line Caps](#). If any caps are missing, have the fuel system inspected by a qualified technician.

CNG Fuel System : Each fuel cylinder should have two caps (one on each end), which are visible on the back of the CNG fuel cylinder storage box. One additional cap is located on the pressure relief valve on the inboard side of the CNG fuel box, next to the fuel outlet line. If equipped with saddle tanks, there are also two vent tubes with caps between the back of the cab and the back-of-cab fuel tanks.

LNG Fuel System : A red cap should be present on the secondary relief valve. See Fig. 262, [LNG Tank Plumbing Components](#).



Fig 264, CNG Vent Line Caps

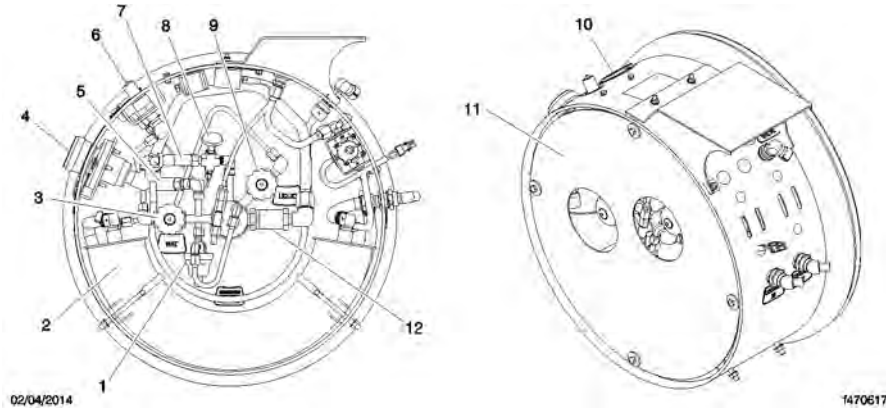


Fig 265, LNG Tank Plumbing Components

4. Inspect all plumbing components, including the fuel shutoff valve(s), primary and secondary relief valves, and the LNG vapor shutoff and excess flow valves, if equipped, for signs of damage or leaks. See Fig. 262, [LNG Tank Plumbing Components](#) or see Fig. 263, [CNG Fuel Panel](#).

Inspect the fuel fill fitting for signs of damage or leaks.

Inspect all lines for signs of leaks or damage, and check all threaded connections.

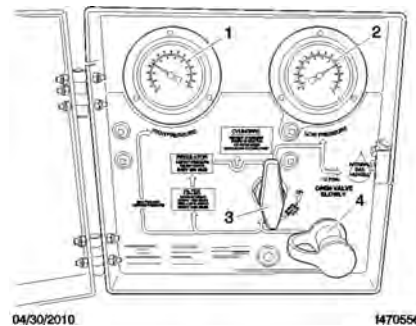


Fig 266, CNG Fuel Panel

5. Inspect all fuel gauge components for signs of leaks or damage. Inspect the fuel level sender cable and wiring.
6. Inspect all coolant hoses for signs of chafing, kinks, or leaks. The CNG fuel system utilizes coolant hoses between the engine and the pressure regulator inside the fuel panel. The LNG fuel system utilizes coolant hoses between the engine and the vaporizer.
7. If equipped with an LNG fuel system, check the fuel tank pressure gauge to ensure that pressure is within the normal range of 120 to 150 psi (827 to 1034 kPa). If tank pressure exceeds 230 psi (1586 kPa) and the pressure relief valve does not open automatically, vent the tank immediately.
8. Inspect the LNG vaporizer for signs of damage or leaks. See Fig. 262, [LNG Tank Plumbing Components](#). Inspect the vaporizer mounting brackets for signs of looseness.
9. On CNG systems, check the low pressure fuel filter(s) at the engine for contamination.
 - 9.a Turn the engine off and remove the key from the ignition.
 - 9.b Slowly open the drain petcock and drain any fluid into an appropriate container.
10. When fluid stops, close the drain petcock.

11. Examine the fluid.

If more than approximately one ounce of oil or other contaminants is found, have the system checked at a qualified service center.

22.03 Weekly Post-Trip Inspections and Maintenance

22.03.01 Inspection of the Engine Compartment

**WARNING:**

Washer fluids may be flammable and poisonous. Do not expose washer fluid to an open flame or any burning material, such as a cigarette. Always comply with the washer fluid manufacturer's recommended safety precautions.

1. Check the windshield washer reservoir fluid level. The reservoir is usually located near the right-hand frame rail. See Fig.264, [Windshield Washer Reservoir](#).



04/30/2020

f820442

1. Washer Fluid Filler Cap


Fig 267, Windshield Washer Reservoir

2. After resetting the air intake restriction indicator during the daily pretrip inspection, check the indicator again with the engine off.
 - 2.a Check an indicator with graduations to see if air restriction exceeds the value shown in Table..
Check a go/no-go indicator without graduations to see if the colored bar shows through the clear window.


Air Intake Maximum Restriction Values (inH ₂ O)			
Engine Make	Pre-EPA07 Engines	EPA07 and EPA10 Engines	GHG14 and GHG17 Engines
Cummins	25	25	25
Detroit	20	22	18
Mercedes-Benz	22	22	–

Table 19, Air Intake Maximum Restriction Values (inH₂O)

- 2.b If air restriction exceeds the maximum allowable value, operate the vehicle for one more day, making sure not to run the engine over rated rpm. Refer to the engine operation manual for more information on rated rpm for your engine.
- 2.c If air restriction exceeds the maximum value again, replace the air cleaner. For instructions, refer to **Group 09** of the **Cascadia Workshop Manual**.
3. Inspect water evacuation components.

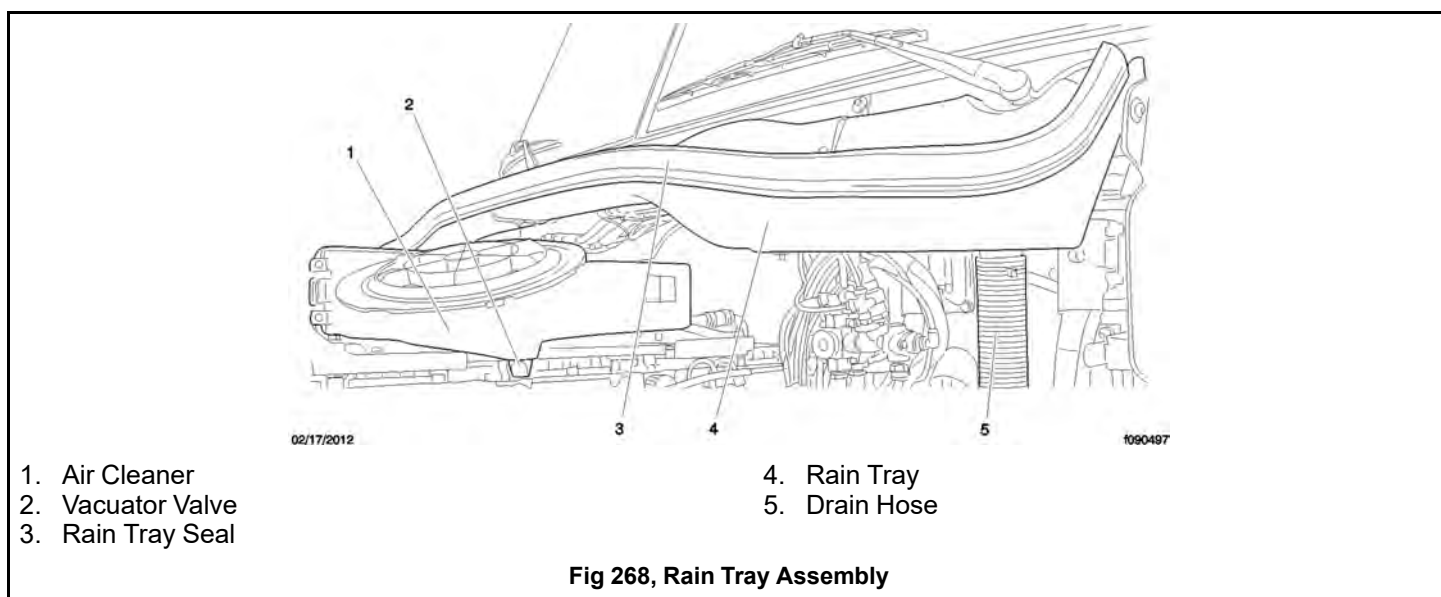


- 3.a Inspect the vacuator valve(s) installed on the hood interior and air cleaner. Make sure the lips of each valve are undamaged and pliable, free of debris, and remain closed during inspection. See Fig.265, [Rain Tray Assembly](#) and Fig.266, [Hood Interior](#).
- 3.b Inspect the rain tray installed at the base of the windshield. Ensure that the seal on the forward edge of the rain tray is in good condition.
- 3.c Inspect the drain hoses installed on the rain tray. Both hoses should be securely attached to the rain tray and direct water down the aft side of the front fenders. See Fig.267, [Drain Hose](#).

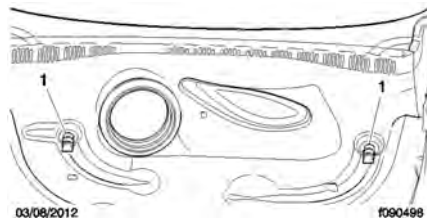

1. Vacuumator Valves

Fig 269, Hood Interior

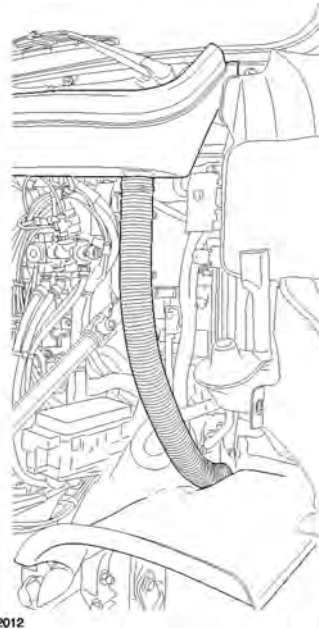

NOTE: Ensure drain hoses are securely attached to the rain tray and drain down the aft side of the front fenders.

Fig 270, Drain Hose

4. If the vehicle is equipped with an Allison automatic transmission, check the automatic transmission fluid level.


IMPORTANT: When draining fluid from a fuel/water separator, drain the fluid into an appropriate container and dispose of it properly. Many jurisdictions now issue fines for draining fuel/water separators onto the ground.

5. Check for water in the fuel/water separator, if equipped.
 - 5.a Place a suitable container under the fuel/water separator.

NOTE: A hose may be used to direct water into the container. On older DAVCO models, the drain valve has a 1/2-inch (12.7-mm) pipe with threads. Use a hose with a 1/2-inch pipe thread to fit correctly and open the drain valve by turning it one-quarter revolution. On new DAVCO models, the drain valve has a 3/4-inch (19-mm) slip-on hose connection; pipe threads are no longer used. Open the drain valve by turning it one to one-and-a-half revolutions.

- 5.b If the engine is equipped with a built-in water separator, loosen the drain valve, and allow the water to run out. Close the drain valve, taking care not to overtighten it.
- 5.c **Detroit/Racor Models:** Turn the drain plug counterclockwise to open it. See Fig. 268, [Alliance Fuel/Water Separator Assembly and Installation](#).


DAVCO Models: Remove the vent cap and open the drain. See Fig. 270, [DAVCO Fuel Pro 487](#) and see Fig. 270, [DAVCO Fuel Pro 487](#).

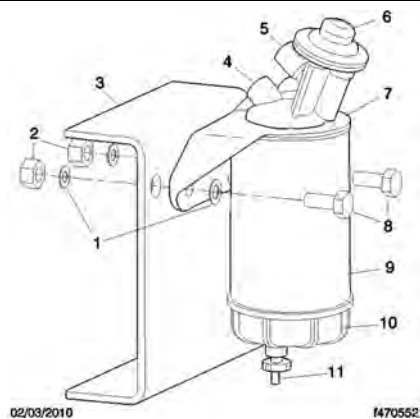

- 1. Washers (qty 2)
- 2. Nuts (qty 2)
- 3. Frame Rail
- 4. Fuel Outlet Port
- 5. Fuel Inlet Port
- 6. Priming Pump

- 7. Mounting Head
- 8. Mounting Bolts (qty 2)
- 9. Filter Element
- 10. Sight Bowl
- 11. Drain Plug


Fig 271, Alliance Fuel/Water Separator Assembly and Installation

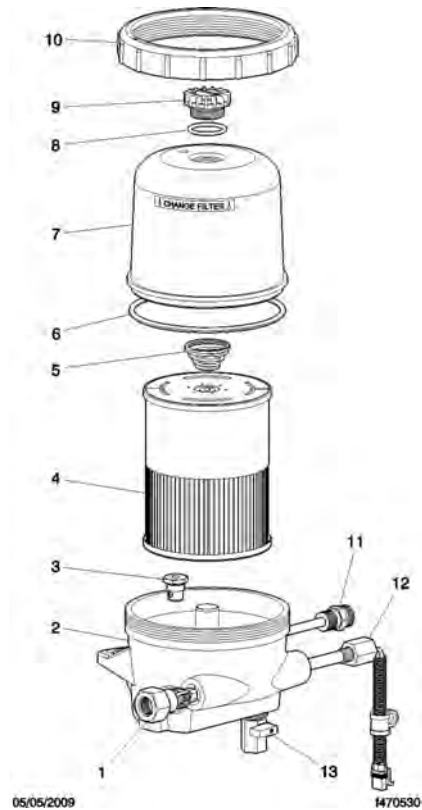

1. Inlet Port/Check Valve
2. Lower Housing
3. Bypass Valve
4. Filter Element
5. Spring
6. Cover O-Ring
7. Clear Cover

8. Vent Cap O-Ring
9. Vent Cap
10. Collar
11. 120VAC Pre-Heater
12. 12VDC Pre-Heater
13. Drain Valve

Fig 272, DAVCO Fuel Pro 482

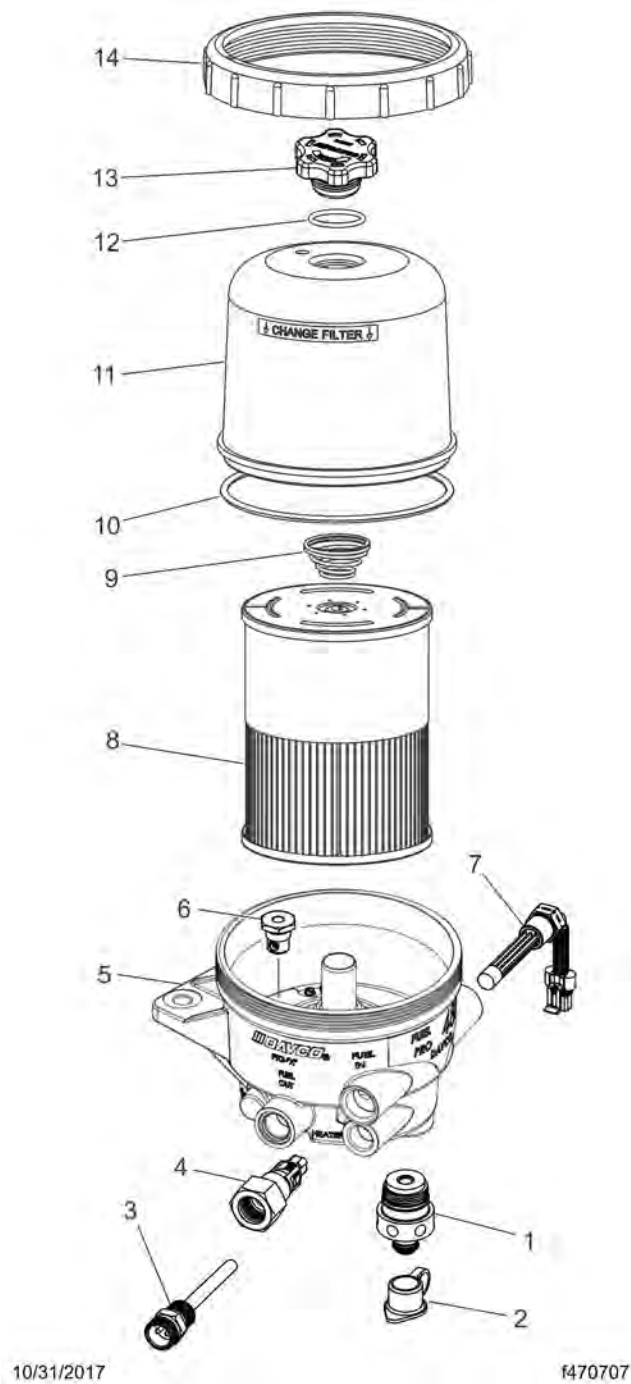

- | | |
|---------------------------|---------------------|
| 1. Drain Valve | 8. Filter Element |
| 2. Drain Valve Cap | 9. Spring |
| 3. 120VAC Pre-Heater | 10. Cover O-Ring |
| 4. Inlet Port/Check Valve | 11. Clear Cover |
| 5. Lower Housing | 12. Vent Cap O-Ring |
| 6. Bypass Valve | 13. Vent Cap |
| 7. 12VDC Pre-Heater | 14. Collar |

Fig 273, DAVCO Fuel Pro 487


5.d Stop draining fluid when fuel begins to drain out.


Detroit/Racor Models: turn the drain plug clockwise to close it.

DAVCO Models: close the drain valve. Install and hand-tighten the vent cap.

6. Inspect the steering components.

- 6.a Inspect tie rods, steering arms, and the drag link for signs of looseness (i.e., shiny spots or rust tracks). See Fig.271, [Rack and Pinion Steering Gear Assembly](#) for a rack and pinion steering gear; see Fig. 272, [Integral Steering Gear Fasteners](#) for an integral steering gear.

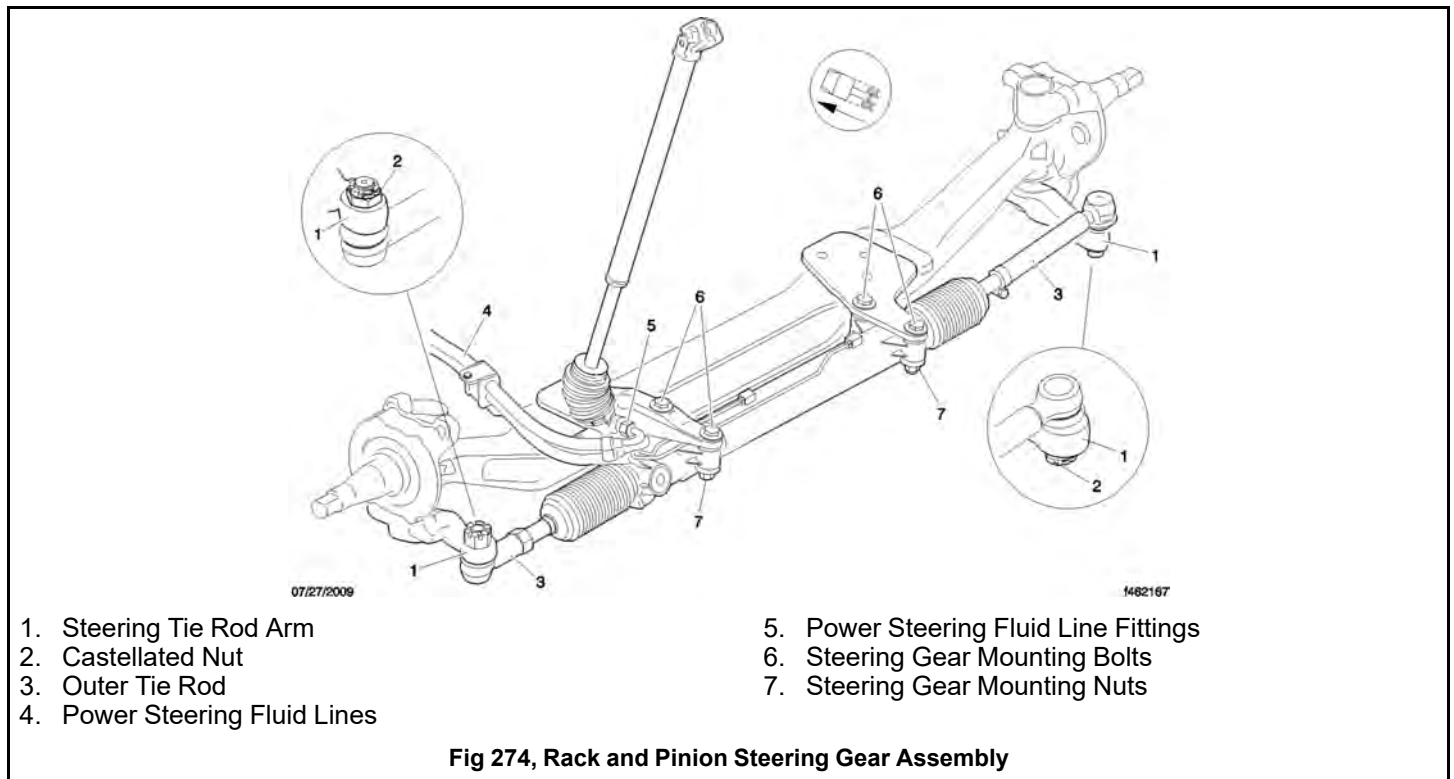

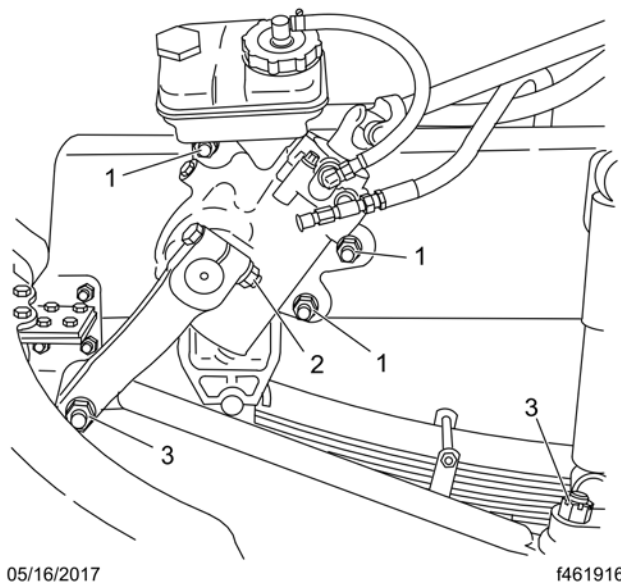

- 1. Steering Gear Mounting Bolts
- 2. Pitman Arm Pinch Bolt Nut

- 3. Drag Link Nut

Fig 275, Integral Steering Gear Fasteners

- 6.b Check the steering gear mounting bolts and pitman arm nut, if equipped, for signs of looseness.
- 6.c Check the drag link nuts for missing cotter pins.
- 6.d Inspect the steering intermediate shaft and end yokes for excessive looseness or other damage.



NOTICE:

Do not drive with a drive belt that is visibly worn or damaged. If it fails, the lack of coolant flow could rapidly cause damage to engine components.

- 7. Inspect the serpentine drive belts for signs of glazing, frayed edges, breaks, cracks, or oil contamination.

22.04 Monthly Post-Trip Inspections and Maintenance

22.04.01 Inspection of the Brake Component

Walk around the vehicle and inspect brake system components for visible damage.

NOTE: Some vehicles may be equipped with a brake check valve on the dash, which allows the driver to set the service brakes and exit the vehicle to check the brake system for leaks. The parking brakes must be applied before the brake check valve will function.

- 1. Inspect all visible brake system components for missing fasteners or signs of looseness, such as rust tracks.

**NOTICE:**

If the external breather tube or breather cap is missing or incorrectly installed, road dirt and debris can adversely affect the operation of the brake chamber. Once inside of the chamber, dirt and debris can cause the internal parts of the chamber to deteriorate faster.

2. Inspect the exterior surfaces of brake chambers for damage. Make sure that breather holes are open and free of debris.

NOTE: Do not route air brake lines on top of anything likely to be stepped on.

3. Inspect air brake lines for dents, swelling, kinks, twisting, abrasion, and damage, especially near moving parts.
4. Inspect flex air lines for deterioration or signs of abrasion.
5. Inspect for cracked, worn, or oil-contaminated brake linings and brake drums (or rotors).
6. Check the thickness of the brake linings. Replace brake linings on all brake assemblies on the axle if any brake linings are worn to less than approximately 1/4 inch (6.4 mm) at the thinnest point.

22.04.02 Inspection of the Saddle Tank Areas

**WARNING:**

When draining the air reservoir, do not look into the air jets or direct them toward anyone. Dirt or sludge particles may be in the airstream and could cause injury.

**NOTICE:**

If the water drained from the air reservoirs is cloudy or oily, it may indicate a problem with the compressor. If oil is allowed to contaminate the air dryer, it will not remove the water from the air brake system, which could adversely affect braking.

1. Drain the brake system air reservoirs (reservoirs with automatic drain valves only).

NOTE: Battery locations vary between vehicles.

2. Inspect the batteries.

**WARNING:**

Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. To prevent possible personal injury, always wash your hands after handling battery parts and related accessories.

- 2.a Remove the battery box cover and inspect all visible battery cables for loose wiring or damage.
- 2.b Check that the battery hold-down is secure.

IMPORTANT: Aerodynamic components decrease drag force as a vehicle moves, thereby improving fuel efficiency. If replacement of an aerodynamic component is necessary, replacement components must meet or exceed the drag reduction performance of the originally installed component in order to maintain compliance with greenhouse gas and fuel efficiency regulations.

3. Inspect the following aerodynamic components, if equipped, for structural damage, cracks, or wear.
 - Chassis fairings
 - Roof fairing/deflector
 - Side skirts
 - Cab/sleeper extenders
 - Battery access cover

22.04.03 Inspection and Adjustments of the Engine Compartment

IMPORTANT: If replacement of the hood or bumper is necessary, the replacement component must meet or exceed the drag reduction performance of the originally installed item in order to maintain compliance with greenhouse gas and fuel efficiency regulations.

NOTE: Anytime a hood is adjusted, removed, or reinstalled, the headlamp aim should be checked.

1. Inspect the bumper and hood for structural damage, cracks, or wear.
2. Check the hydraulic clutch reservoir, if equipped. If necessary, add DOT 4 brake fluid.
3. Inspect the radiator and heater hoses, including the clamps and support brackets.
 - 3.a Inspect the radiator and charge air cooler for damage and accumulated debris. Straighten bent or damaged fins to permit airflow across all areas of the cores.

NOTE: When traveling through areas of high insect concentration, it may be necessary to clean the exterior of the radiator or the charge air cooler core as often as every 200 miles (320 km).

- 3.b Make sure the radiator inlet and outlet hoses are pliable and are not cracking or ballooning.
 - 3.c Make sure the heater hoses are pliable and are not cracking or ballooning.

- 3.d Tighten hose clamps as necessary.

IMPORTANT: Do not overtighten hose clamps, as hose life can be adversely affected.

- 3.e Ensure hose support brackets are securely fastened. Make sure hoses are not located near sources of wear, abrasion, or high heat.

IMPORTANT: When replacing hoses, install service-type knitted or braided yarn-reinforced neoprene hose. Extended-service-life silicone hoses may also be used. See the Alliance Parts Catalog at www.alliancebrandparts.com or contact your Freightliner Dealer.

4. Check the steering wheel for excessive play.

- 4.a Start the engine. With the front tires straight ahead, turn the steering wheel until motion is observed at the front wheels.
- 4.b Align a reference mark on the steering wheel to a rule, then slowly turn the steering wheel in the opposite direction until motion is again detected at the wheels.
- 4.c Measure the lash (free play) at the rim of the steering wheel. Excessive lash exists if steering wheel movement exceeds 2-1/4 inches (57 mm) with an 18-inch (450-mm) steering wheel.
- 4.d If there is excessive lash, check the steering system for wear or incorrect adjustment before operating the vehicle.

23.01 Cab Washing and Polishing..... 324

23.02 Care of Fiberglass Parts 324

23.03 Care of Chrome Parts 324

23.04 Care of Exterior Lights 325

23.05 Dashboard and Instrument Panel Care 325

23.06 Cleaning the Vinyl Upholstery..... 325

23.07 Cleaning the Velour Upholstery 326

23. Cab Appearance

23.01 Cab Washing and Polishing

IMPORTANT: Carefully read all instructions before using or applying any cleaner or product on the vehicle or components. Failure to follow manufacturers' recommendations can result in damage to the finish.



WARNING:

Do not power wash or steam clean the engine bay in the area of vehicle electrical components, unless specified by vehicle manuals or service literature. Power washing and steam cleaning can cause corrosion, permanently damaging these components, which could result in fire, personal injury, or property damage.

To protect the finish of your new vehicle, follow these guidelines carefully.

- During the first 30 days, rinse your vehicle frequently with water. If the vehicle is dirty, use a mild liquid soap. Do not use detergent.
- During the first 30 days, do not use anything abrasive on your vehicle. Brushes, chemicals, and cleaners may scratch the finish.
- During the first 120 days, do not wax your vehicle.

To extend the life of your vehicle's finish, follow these guidelines.

- Avoid washing your vehicle in the hot sun.
- Always use water. After the cab is completely washed, dry it with a towel or chamois.
- Do not dust painted surfaces with a dry cloth, as this will scratch the paint.
- Do not remove ice or snow from a painted surface with a scraper of any sort.
- To prevent damage to the finish, wax it regularly. Before waxing, if the finish has become dull, remove oxidized paint using a cleaner specifically designed for this purpose. Remove all road tar and tree sap before waxing. Freightliner recommends that a quality brand of cleaner or cleaner-polish and polishing wax be used.
- Do not let diesel fuel or antifreeze stand on a painted surface. If either should occur, rinse the surface off with water.
- To prevent rust, have any nicks or other damage on the finish touched up as soon as possible.
- Park your vehicle in a sheltered area whenever possible.

To prevent delamination and deterioration of labels and stickers on the cab, follow these guidelines carefully:

- Do not pressure wash the label or sticker or surfaces near it.
- Do not use strong alkaline soaps on or near the label or sticker.

23.02 Care of Fiberglass Parts

Wash unpainted fiberglass air fairings and shields monthly with a mild detergent, such as dishwashing liquid. Avoid strong alkaline cleansers.

Apply a wax specifically designed for fiberglass.

23.03 Care of Chrome Parts

To prevent rust, keep chrome parts clean and protected at all times. This is especially important during winter driving and in coastal areas where there is exposure to salt air.

When cleaning chrome parts, use clean water and a soft cloth or sponge. A mild detergent may also be used.

Sponge gently, then rinse. If necessary, use a nonabrasive chrome cleaner to remove stubborn rust or other material. Do not use steel wool.

To help protect the chrome after cleaning, apply a coat of polishing wax to the surface. Never use wax on parts that are exposed to high heat, such as exhaust pipes.

23.04 Care of Exterior Lights

Clean the headlight lenses by hand only, using a flannel cloth with mild, non-caustic soap or detergent, and water.

**NOTICE:**

Do not use a power buffer, paper towels, chemical solvents, or abrasive cleaners on the headlight lens, all of which can remove the UV coating from the surface, and result in yellowing of the lens.

23.05 Dashboard and Instrument Panel Care

**NOTICE:**

When cleaning the dashboard, instrument panel, or gauge lens covers, do not use Armor-All Protectant®, STP Son-of-a-Gun®, window cleaner, or other equivalent treatments. These cleaners contain vinyl plasticizers which can cause stress crazing in the interior plastic panels and can result in cracking of the panels. Some cleaners can also have an adverse effect on the clear plastic of instrument panels and gauge lens covers, resulting in a foggy or cloudy appearance. This type of damage is not covered by vehicle warranty.

To clean the dashboard, instrument panel, and gauge lens covers, use a cloth dampened with warm soapy water. Make certain to wring the cloth out well before cleaning, as excess water will damage the electrical components.

23.06 Cleaning the Vinyl Upholstery

To prevent soiling, frequent vacuuming or light brushing to remove dust and dirt is recommended. Harsh cleaning agents can cause permanent damage to vinyl upholstery. To preserve the upholstery and prevent damage, carefully review the following sections for recommended cleaning procedures. Waxing or refinishing improves soil resistance and cleanability for all vinyls. Any hard wax, such as that used on automobiles, may be used.

Ordinary Dirt

Wash the upholstery with warm water and mild soap, such as saddle or oil soap. Apply soapy water to a large area and allow to soak for a few minutes, then rub briskly with a cloth to remove the dirt. This can be repeated several times, as necessary.

If dirt is deeply imbedded, use a soft bristle brush after applying the soap.

If dirt is extremely difficult to remove, wall-washing preparations normally found around the home can be used. Powdered cleaners, such as those used for sinks and tiles, are abrasive and must be used with caution as they can scratch the vinyl or give it a permanent dull appearance.

Chewing Gum

Harden the gum with an ice cube wrapped in a plastic bag, then scrape it off with a dull knife. Any remaining traces of gum can be removed with an all-purpose light oil (peanut butter will also work) and wiped off.

Tars, Asphalts, and Creosote

Each of these items stains vinyl after prolonged contact. They should be wiped off immediately and the area carefully cleaned, using a cloth dampened with naphtha.

Paint, Shoe Heel Marks

Paint should be removed immediately. Do not use paint remover or liquid-type brush cleaner on vinyl. An unprinted cloth, dampened with naphtha or turpentine may be used. Use care to prevent contact with parts of the upholstery that are not vinyl.

Sulfide Stains

Sulfide compounds, such as those found in eggs and some canned goods, can stain after prolonged contact with vinyl. These stains can be removed by placing a clean, unprinted piece of cloth over the spotted area and pouring a liberal amount of 6 percent hydrogen peroxide onto the cloth. Allow the saturated cloth to remain on the spot for 30 to 60 minutes. For stubborn spots, allow the hydrogen-peroxide saturated cloth to remain on the area overnight. Use caution to prevent the solution from seeping into the seams, or it will weaken the cotton thread.

Nail Polish and Nail Polish Remover

Prolonged contact with these substances causes permanent damage to vinyl. Careful blotting immediately after contact minimizes damage. Do not spread the liquid during removal.

Shoe Polish

Most shoe polishes contain dyes which penetrate vinyl and stain it permanently. Shoe polish should be wiped off as quickly as possible using naphtha or lighter fluid. If staining occurs, try the procedure used for sulfide stains.

Ball Point Ink

Ball point ink can sometimes be removed if rubbed immediately with a damp cloth, using water or rubbing alcohol. If this does not work, try the procedure used for sulfide stains.

Miscellaneous

If stains do not respond to any of the treatments described above, it is sometimes helpful to expose the vinyl to direct sunlight for up to 30 hours. Mustard, ball point ink, certain shoe polishes, and dyes often bleach out in direct sunlight, leaving the vinyl undamaged.

23.07 Cleaning the Velour Upholstery

To prevent soiling, frequent vacuuming or light brushing to remove dust and dirt is recommended. Spot clean with a mild solvent or an upholstery shampoo, or the foam from a mild detergent. When using a solvent or a dry-cleaning product, follow the instructions carefully, and clean only in a well-ventilated area. Avoid any product that contains carbon tetrachloride or other toxic materials. With either method, pretest a small area before proceeding. Use a professional upholstery cleaning service when extensive cleaning is needed.

Grease and Oil-Based Stains

Dampen a small absorbent cloth with dry-cleaning solvent or spot remover. Apply the cloth carefully to the spot from the outer edge to the center. Pat and blot the spot with a clean, dry cloth. Repeat several times, as necessary, turning the cloths so that the stain does not redeposit on the fabric.

Sugar and Water-Based Stains

Apply water-based detergent or cleaner, working in circular motions. Pat and blot as dry as possible. Repeat, if necessary, before drying thoroughly.

Chewing Gum or Wax

Harden the gum or wax with an ice cube wrapped in a plastic bag, then scrape it off with a dull knife. Excess wax can be absorbed by placing a thick white blotter over the wax and heating with a warm (not hot) iron. Remove the remainder by using the procedure for grease and oil-based stains.

Mildew

Brush the dry fabric with a soft brush. Sponge with detergent, and blot. If the fabric is colorfast, dilute a teaspoon of bleach in one quart (one liter) of cool water. Apply with a swab, directly on the mildew stain. Dab repeatedly with clear, cool water, and blot dry.

24.01 Preliminary Checks	330
24.02 Checking the Headlight Aim	330
24.03 Adjusting the Headlight Aim	332

24. Headlight Aiming


24.01 Preliminary Checks

Before checking or adjusting the headlight aim, do the following: Check that the hood is closed and latched.

- Remove any large amounts of mud or ice from the underside of the fenders.
- Check the springs for sagging or broken leaves.
- Check the suspension for proper functioning of the leveling mechanism. On cabs with air suspensions, make sure that the height is properly adjusted.
- Check for damage to the hood and hinge assembly. Repair as necessary.
- With the vehicle unloaded, check that the tires are inflated to the recommended air pressure.
- Clean the headlight lenses. Use a soft cloth with mild, non-caustic soap or detergent, and water.


24.02 Checking the Headlight Aim

1. Park the vehicle on a level surface, 25 ft (7.6 m) away from, and perpendicular to, a vertical screen or wall. Shut down the engine and set the parking brake. Chock the tires.
2. Each headlight has a height adjusting dot. See Fig. 273, [Headlight Beam Height Adjusting Dot](#). Measure the distance from the ground to the height adjusting dot on each headlight. Note those distances. See Fig. 274, [Headlight Aiming Screen/Wall](#), ref. A.

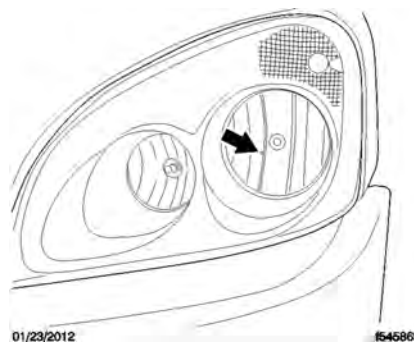

NOTE: Measure beam height from the ground to the small dot roughly in the center of the headlight lens.


Fig 276, Headlight Beam Height Adjusting Dot

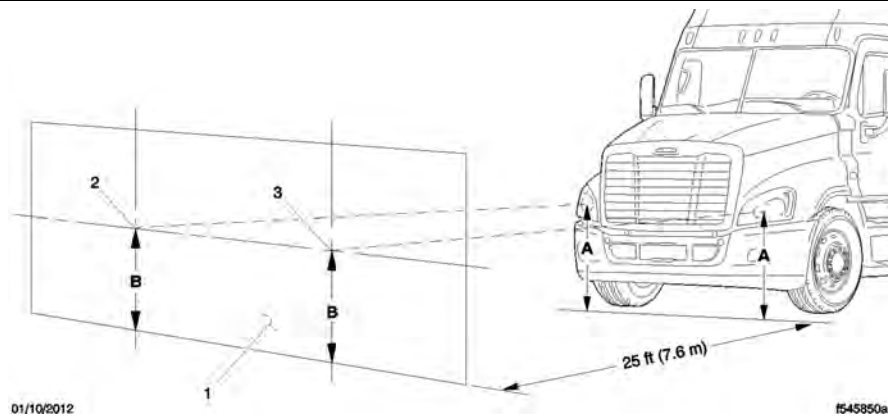

- A. Measure the distance from the ground to the center of each headlight bulb.
- B. Mark where the center of each headlight projection should appear.
1. Screen or Wall
2. Center of Right-Hand Headlight Projection
3. Center of Left-Hand Headlight Projection

Fig 277, Headlight Aiming Screen/Wall

3. Mark the vertical distances found in step 2 on the screen or wall, directly in front of the headlights. These marks represent the desired locations of each headlight bulb center in the following steps. See Fig. 274, [Headlight Aiming Screen/Wall](#), items 2 and 3.
4. Turn on the low-beam headlights.
5. Check the vertical adjustment of the low beams. The center of each beam projection should fall on or near the marks made during step 3. See 275, [Vertical Low-Beam Headlight Variation Limits](#).

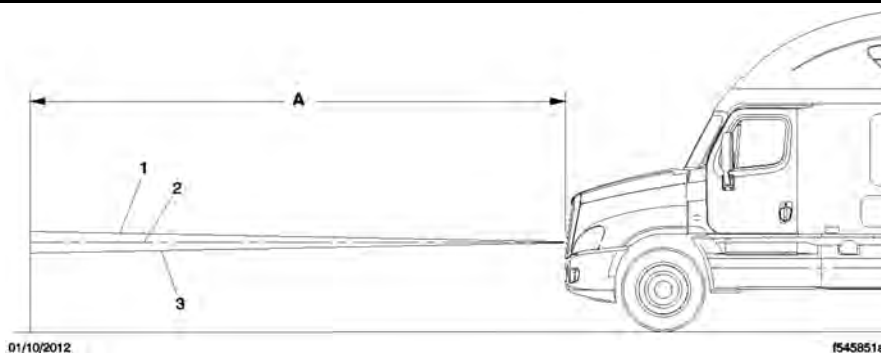

1. Low-Beam Angle Upper Limit
2. Ideal Low-Beam Projection
3. Low-Beam Angle Lower Limit

Fig 278, Vertical Low-Beam Headlight Variation Limits

6. Use Table.25, [Vertical Low-Beam Headlight Variation Limits](#) to determine the maximum vertical distance allowable between the marks on the wall and the center of each low-beam projection.

If the distance between either projection center and the mark made on the wall or screen is greater than the maximum distance given in see 25, [Vertical Low-Beam Headlight Variation Limits](#), adjust the vertical positioning of that headlight.

Vertical Low-Beam Headlight Variation Limits			
Distance Between Ground and Headlight: in (mm)	Desired Variation (see Fig., item 2): in (mm)	Upper Limit (see Fig., item 1): in (mm) up	Lower Limit (see Fig., item 3): in (mm) down
22–36 (560–900)	0	3.9 (100)	3.9 (100)
36–48 (900–1200)	2 (50) down	2 (50)	6 (150)
48–54 (1200–1400)	4 (101.6) down	1.6 (40)	6.5 (165)

24.03 Adjusting the Headlight Aim

NOTE: Freightliner vehicles are offered with various headlight assembly options. Because of the various options, the location of adjustment screws on your vehicle's headlight assembly may vary from what is shown here.

The adjusting screw is located on the lower outside corner of the headlight assembly. See Fig.276, [Headlight Adjusting](#). Turn the adjusting screw clockwise to raise the beam and counterclockwise to lower it, until the beam pattern meets the acceptable standard.


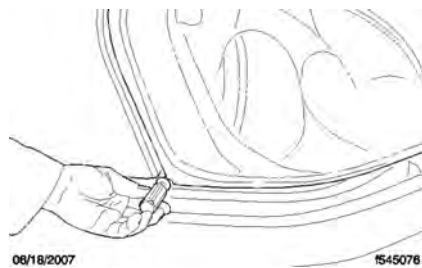


Fig 279, Headlight Adjusting

Vertical Low-Beam Headlight Variation Limits			
Distance Between Ground and Headlight: in (mm)	Desired Variation (see Fig., item 2): in (mm)	Upper Limit (see Fig., item 1): in (mm) up	Lower Limit (see Fig., item 3): in (mm) down
22–36 (560–900)	0	3.9 (100)	3.9 (100)
36–48 (900–1200)	2 (50) down	2 (50)	6 (150)
48–54 (1200–1400)	4 (101.6) down	1.6 (40)	6.5 (165)

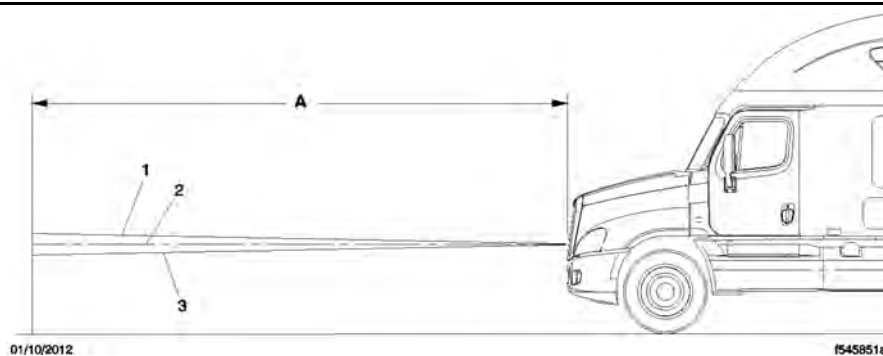

- 1. Low-Beam Angle Upper Limit
- 2. Ideal Low-Beam Projection

- 3. Low-Beam Angle Lower Limit

Fig 280, Vertical Low-Beam Headlight Variation Limits


25.01 Hazard Warning Lights	336
25.02 Fire Extinguisher	336
25.03 Fire in the Cab	336
25.04 Emergency Kit, Optional	336
25.05 Emergency Filter Replacement, Davco	337
25.06 Emergency Starting With Jumper Cables	339
25.07 Raising and Lowering a Vehicle	341
25.07.01 Raising a Vehicle with Air Suspension	341
25.07.02 Lowering a Vehicle with Air Suspension	342
25.07.03 Raising a Vehicle without Air Suspension	342
25.07.04 Lowering a Vehicle without Air Suspension	343
25.08 Front Towing Hookup With Removable Tow Hooks	344

25. In an Emergency

25.01 Hazard Warning Lights

The hazard warning light switch is located on the dash in what is referred to as the master module. See Fig. 278, [Main Module](#). The hazard lights can be activated regardless of the ignition switch position.

To activate the hazard lights, push the center of the switch once. The switch will blink at the same rate that the hazard lights flash. Push the switch again to turn them off. All the turn signal lights on the vehicle and trailer, as well as the turn signal indicators in the ICU, flash simultaneously when the hazard lights are activated.

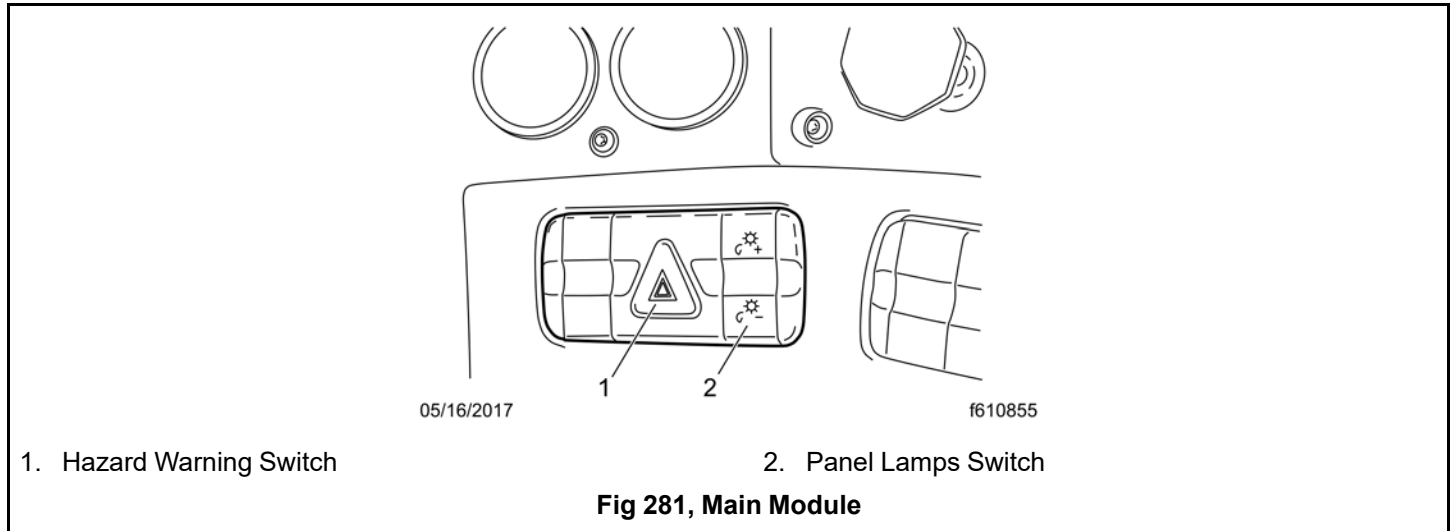

25.02 Fire Extinguisher

A fire extinguisher is located either in the cab by the driver's door, or in the baggage compartment.

25.03 Fire in the Cab

The incidence of fire in heavy and medium-duty trucks is rare, according to data from the National Highway Traffic Safety Administration. Federal Motor Vehicle Safety Standard #302 limits the flammability of specified materials used inside the cab but, despite this, most materials can burn.



WARNING:

Do not allow flames, sparks, or any other heat sources (such as cigarettes or light bulbs) to contact materials in the cab. Any materials in the cab in contact with such heat sources could cause serious personal injury as well as damage to the vehicle.

In Case of a Cab Fire

As quickly as possible, bring the vehicle to a safe stop, apply the parking brake, turn off the ignition, and get out of the vehicle.

25.04 Emergency Kit, Optional

An optional emergency kit is located in the cab. The kit includes one or more of the following: a first aid kit, a reflective vest, a triangular reflector, a flare kit, and (on vehicles with a Davco fuel/water separator) a spin-on fuel filter element.

If there is an emergency while driving, cautiously pull off the road. Turn on the hazard warning lights. Place the flares and reflector along the side of the road to alert other drivers that an emergency situation exists.

**WARNING:**

Use extreme care when placing flares in emergency situations that involve exposure to flammable substances such as fuel. An explosion or fire could occur causing serious personal injury.

25.05 Emergency Filter Replacement, Davco

If the filter cover on the Davco fuel/water separator is broken, it will not be possible to operate the vehicle. A standard spin-on filter will correct this problem.


Refer to the Davco web site for additional information, www.davco.com.

To replace the filter on all Davco fuel/water separators, follow these procedures:

1. Shut down the engine, apply the parking brake, and chock the tires.

NOTE: The drain valve on the Fuel Pro 382 has a 1/2-inch (12.7-mm) opening; use a hose with a 1/2-inch pipe thread to fit correctly. Open the drain valve by turning it one-quarter revolution.

2. Put a clean receptacle under the fuel/water separator and attach a piece of hose to the drain valve, to direct fuel into the receptacle.
3. Drain the fuel until it is below the level of the collar. See Fig.279, [Davco Model 382 Fuel/Water Separator](#) for the model 382 fuel/water separator.

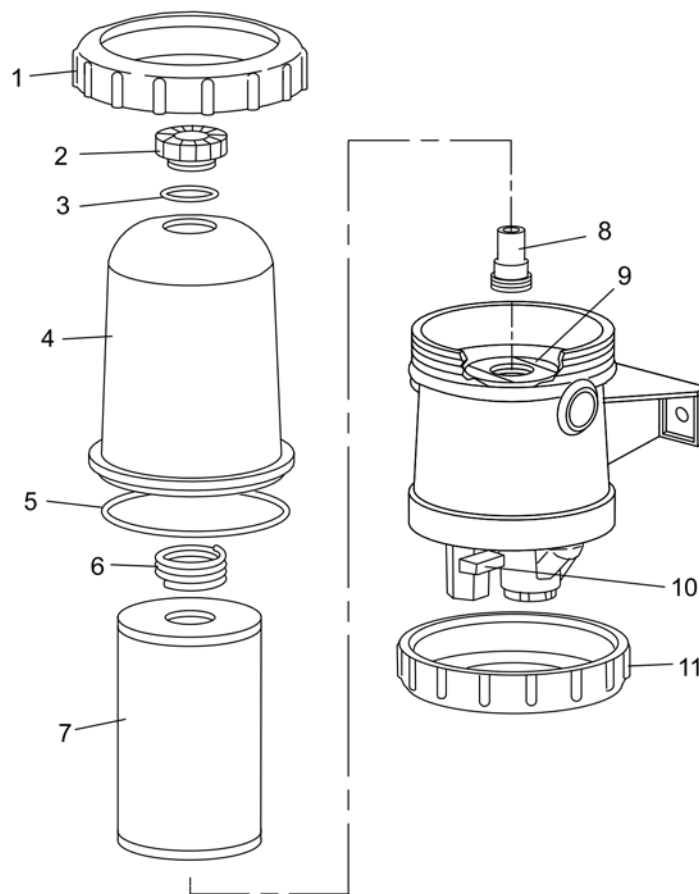

05/16/2017

f470417

1. Filter Collar
2. Filter Vent
3. Filter Vent Seal
4. Filter Cover
5. Filter Cover Seal
6. Spring


7. Filter Element
8. Threaded Stud
9. Fuel Port
10. Drain
11. Bottom Plate Collar

Fig 282, Davco Model 382 Fuel/Water Separator

4. Remove the vent and seal.

NOTE: The vent and seal are not needed in the emergency replacement. They should be retained for later installation at the time when the cover is replaced.

5. Using a DAVCO collar wrench, remove the collar. See Fig.280, [DAVCO Collar Wrench](#). Do not use pliers or channel-lock pliers.

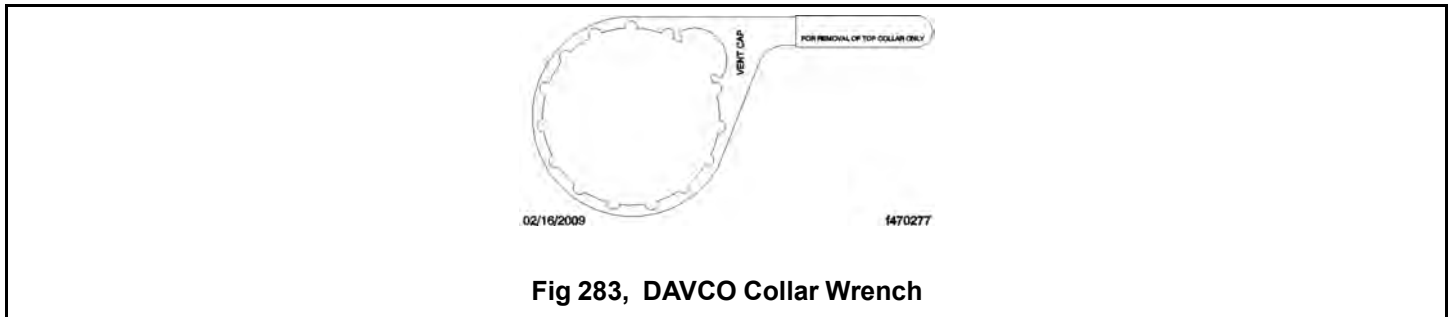

6. Remove the cover, cover seal, and spring. Retain them for later assembly.
7. Remove the filter element and dispose of it properly.

NOTE: Remove the rubber grommet from the stud.

8. Install the standard engine spin-on filter (included in the emergency kit) on the threaded stud.
9. Install the cover, cover seal, and spring, as removed.
10. Install the filter collar over the filter cover. Simultaneously apply downward pressure to the top of the clear cover until it is seated on the body of the lower housing and hand tighten the collar until it no longer spins freely. Using the collar wrench, tighten the cover 18 lbf·ft (24 N·m). This is equivalent to rotating the collar clockwise two or three additional ribs, depending on the specific filter model.
11. Start the engine and run it at increased rpm for one minute to purge air from the fuel lines.

25.06 Emergency Starting With Jumper Cables

When using jumper cables, follow the instructions below.



WARNING:

Batteries release explosive gas. Do not smoke when working around batteries. Put out all flames and remove all sources of sparks or intense heat in the vicinity of the battery. Do not allow the vehicles to touch each other. Do not lean over the batteries when making connections, and keep all other persons away from the batteries. Failure to follow these precautions could lead to severe personal injury as a result of an explosion or acid burns.



CAUTION:

Make sure both electrical systems are the same voltage. Electronic devices on both vehicles can be damaged when connected to a vehicle with a different operating voltage.

NOTE: On vehicles equipped with optional underhood jump start posts, connect to these posts instead of the batteries.

1. Apply the parking brakes and turn off the lights and all other electrical devices.
2. Remove the battery box cover by pulling on the end of each hold-down latch until the end clears the catch, then pivoting the latches out of the way, and lifting off the cover. See 281, [Battery Compartment](#).


**CAUTION:**

Always connect the battery, jumper cables, and charger correctly (positive-to-positive and negative-to-negative). Connecting a charging device backwards (positive-to-negative) can severely damage the vehicle electrical content and cause non-warrantable failures.

3. Connect the positive (+) jumper cable to the positive battery post on the Cascadia needing the jump start, then connect the other end of the positive jumper cable to the positive battery or jump start post of the vehicle providing the jump. See Fig.282, [Jumper Connections](#).



Fig 284, Battery Compartment

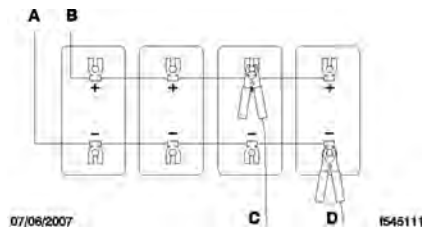

- A. – Battery Cable to Vehicle
B. + Battery Cable to Vehicle

- C. + Jumper Cable (connect first and disconnect last)
D. – Jumper Cable (connect last and disconnect first)

Fig 285, Jumper Connections

**WARNING:**

Do the next step exactly as instructed and do not allow the clamps of one cable to touch the clamps of the other cable. Otherwise, a spark could occur near a battery, possibly resulting in severe personal injury from explosion or acid burns.

4. Connect one end of the second jumper cable to the negative terminal of the booster battery, and connect the other end of the cable to the negative battery post of the Cascadia needing the jump start.
5. Start the engine of the vehicle with the booster batteries, and let the engine run a few minutes to charge the batteries of the other vehicle.
6. Attempt to start the engine of the vehicle with the batteries receiving the charge. Do not operate the starter longer than 30 seconds, and wait at least two minutes between starting attempts to allow the starter to cool.
7. When the engine starts, let it idle a few minutes.

**WARNING:**

Do the next step exactly as instructed and do not allow the clamps of one cable to touch the clamps of the other cable. Otherwise, a spark could occur near a battery, possibly resulting in severe personal injury from explosion or acid burns.

8. Disconnect the grounded cable from the frame or other non-battery location, then disconnect the other end of the cable.
9. Disconnect the remaining cable from the newly charged battery (or jump-start post if equipped) first, then disconnect the other end.
10. Install the cover; be sure it is positioned properly before fastening the latches.

25.07 Raising and Lowering a Vehicle

25.07.01 Raising a Vehicle with Air Suspension

1. Park the vehicle on a level surface, set the parking brakes, and shut down the engine. Chock the tires.

**WARNING:**

Remove the air from the suspension. Failure to remove the air from the suspension may cause the vehicle to move or shift on the jack stands as air pressure drains from the system; this could cause the vehicle to fall, resulting in damage to the vehicle, serious injury, or death.

2. Exhaust all air from the air suspension.

**WARNING:**

Do not use bottle jacks to raise the vehicle. Always use floor jacks. Bottle jacks can slip, allowing the vehicle to fall, which could result in damage to the vehicle, serious injury, or death.

IMPORTANT: Only lift unloaded vehicles and vehicles disconnected from trailers. Unload vehicles with bodies (drilling rigs, mixers) as much as possible.

3. Place a floor jack under the axle housing, the clamp group, or the frame rail.

**NOTICE:**

Do not place jack stands under any of the suspension components; doing so could cause suspension component damage. Jack stands can be placed at any point below the axle, including the differential area.

4. Raise the vehicle. Add additional jack stands, as needed, under the axles to support the vehicle.

25.07.02 Lowering a Vehicle with Air Suspension

**WARNING:**

Do not use bottle jacks to raise the vehicle. Always use floor jacks. Bottle jacks can slip, allowing the vehicle to fall, which could result in damage to the vehicle, serious injury, or death.

**NOTICE:**

Do not place jack stands under any of the suspension components; doing so could cause suspension component damage. Jack stands can be placed at any point below the axle, including the differential area.

1. Using the floor jack, raise the vehicle to remove any jack stands used to support the vehicle.
2. Slowly lower the vehicle to the ground.
3. Inflate the air suspension, and check for proper operation. Refer to **Group 32** in the *Cascadia Workshop Manual* for instructions.

25.07.03 Raising a Vehicle without Air Suspension

1. Park the vehicle on a level surface, set the parking brakes, and shut down the engine. Chock the tires.

**WARNING:**

Do not use bottle jacks to raise the vehicle. Always use floor jacks. Bottle jacks can slip, allowing the vehicle to fall, which could result in damage to the vehicle, serious injury, or death.

IMPORTANT: Only lift unloaded vehicles and vehicles disconnected from trailers. Unload vehicles with bodies (drilling rigs, mixers) as much as possible.

2. Place a floor jack under the axle housing, the clamp group, or the frame rail.

**NOTICE:**

Do not place jack stands under any of the suspension components; doing so could cause suspension component damage. Jack stands can be placed at any point below the axle, including the differential area.

3. Raise the vehicle. Add additional jack stands, as needed, to support the vehicle.

25.07.04 Lowering a Vehicle without Air Suspension

**WARNING:**

Do not use bottle jacks to raise the vehicle. Always use floor jacks. Bottle jacks can slip, allowing the vehicle to fall, which could result in damage to the vehicle, serious injury, or death.

**NOTICE:**

Do not place jack stands under any of the suspension components; doing so could cause suspension component damage. Jack stands can be placed at any point below the axle, including the differential area.

1. Using the floor jack, raise the vehicle to remove any jack stands used to support the vehicle.
2. Slowly lower the vehicle to the ground.

25.08 Front Towing Hookup With Removable Tow Hooks

**NOTICE:**

Towing the truck from the front and removing all of the drivelines is the approved method for towing DTNA products. Towing any other way is not preferred.

**DANGER:**

When working on the vehicle, shut down the engine, set the parking brake, and chock the tires. Before working under the vehicle, always place jack stands under the frame rails to ensure the vehicle can not drop. Failure to follow these steps could result in serious personal injury or death.

**WARNING:**


Do not tow an unbraked vehicle if the combined weight of both vehicles is more than the sum of the gross axle weight ratings (GAWR) of the towing vehicle. Otherwise brake capacity will be inadequate, which could result in personal injury or death.

Use of Tow Hooks

Tow hooks are not designed for on-road towing of the vehicle, but to recover and move the vehicle to a position where it can be hooked up properly for front towing.

**NOTICE:**

When using tow hooks to move the vehicle, do not pass a sling (for example, a rope or chain) from one hook to another. Known as reeving, this practice is **not permissible in most industrial applications of towing and hoisting. Reeving can overload the hooks and result in damage to the vehicle.** See Fig. 283,, page 345 .

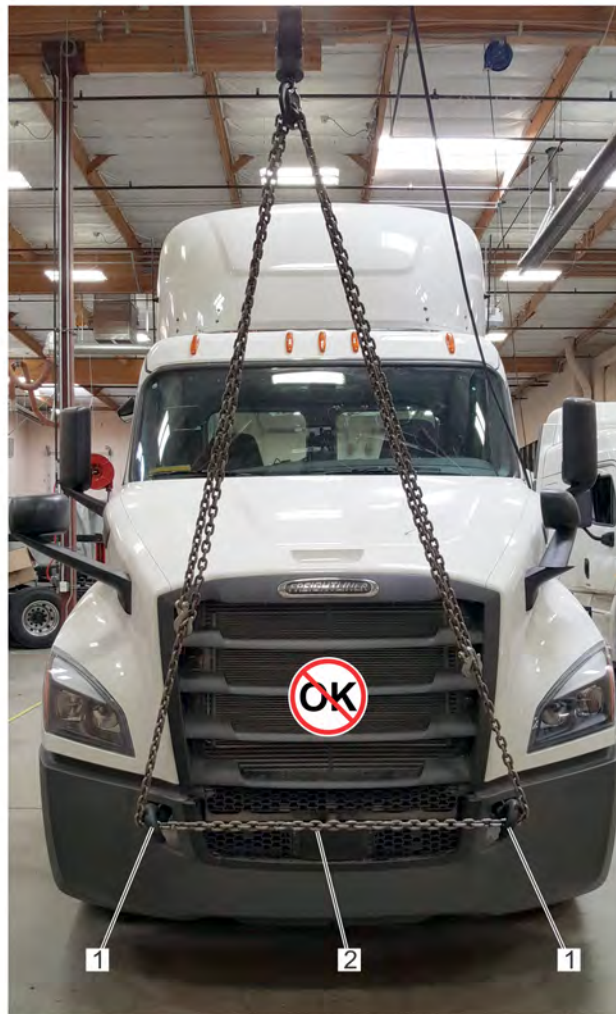

09/21/2017

f311215

IMPORTANT: Do not reeve when towing.

1. Tow Hook

2. Chain

Fig 286, Reeving

1. Disconnect the battery ground cables.



NOTICE:

Failure to protect the frame rails from the chains could cause damage, leading to eventual frame failure.

2. On dual drive axles, if the vehicle is to be lifted and towed, chain the forward rear-axle assembly to the vehicle frame. Use protection to keep the chains from damaging the frame.
3. Open the hood. Remove the tow hooks, located behind the driver's-side bumper. See Fig. 284, [Tow Hooks](#). Close and latch the hood.

**Fig 287, Tow Hooks****NOTICE:**

New or ungreased tow hooks may be hard to install. Tow hooks that are not properly installed may be damaged or break.

4. Install the tow hooks onto the tow hook receivers through the tow hook holes in the bumper, rotating the hooks so the hook opening faces down. See Fig. 285, [Tow Hooks Installed, Facing Down](#). Pull the tow hooks to ensure they are securely engaged in the tow hook receivers.

**Fig 288, Tow Hooks Installed, Facing Down**

5. Lower the stinger assembly so that it is level and approximately 1 inch (0.3 cm) off the ground. Back the tow truck so that the crossbar with lift adaptors is within 6 inches (15 cm) of the Aero bumper. See Fig. 286, [Positioning the Stinger Assembly](#).



Fig 289, Positioning the Stinger Assembly



NOTICE:

When using tow hooks to move the vehicle, do not pass a sling (for example, a rope or chain) from one hook to another. Known as reeving, this practice is **not permissible in most industrial applications of towing and hoisting**. Reeving can overload the hooks and result in damage to the vehicle.

- Pull the tow cables out of the tow truck and connect the tow cable lifting hooks onto the tow hooks, then extend the recovery boom within 4 to 6 inches (10 to 15 cm) of being vertical of the tow hooks. See Fig. 287, [Tow Cables Connected to the Tow Hooks](#).



Fig 290, Tow Cables Connected to the Tow Hooks

- Lift the front of the truck until there is enough clearance for the stinger and crossbar to pass under the bumper. See Fig. 288, [Moving the Stinger and Crossbar Under the Bumper](#).



06/14/2017

f130151

Fig 291, Moving the Stinger and Crossbar Under the Bumper

If enough clearance cannot be gained with a single lift, jack stands or other means capable of supporting the weight on the front axle must be used while the cables are shortened to allow a second lift.

**WARNING:**


Failure to chock the tires or connect the tow truck's air brake system before releasing the spring parking brakes could allow the disabled vehicle to suddenly roll. This could cause property damage or personal injury.

8. Chock the rear tires.

**NOTICE:**

Reference the applicable axle manufacturer's information to avoid damaging the axle when towing the truck.

9. Use mid-rise or high-rise forks, or lift adaptors (part number 0200020) on the crossbar to provide clearance for the aerodynamic bumper. See Fig. 289, [Lift Adaptors Installed on the Crossbar](#) and Fig. 290, [Backing the Tow Truck with Lift Adaptors on the Crossbar](#).

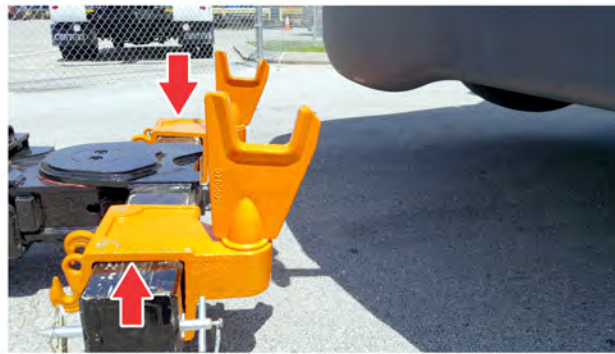

06/14/2017

f130152


Fig 292, Lift Adaptors Installed on the Crossbar

06/14/2017

f130153

Fig 293, Backing the Tow Truck with Lift Adaptors on the Crossbar

10. Extend the stinger and place the lift adaptors under the axle. Make certain the lift adaptors are under the front suspension springs between the U-bolts. See Fig. 291, [Positioning the Stinger with Lift Adaptors Under the Axle](#) and Fig. 292, [Stinger with Lift Adaptors Under the Axle \(tow truck shown\)](#).

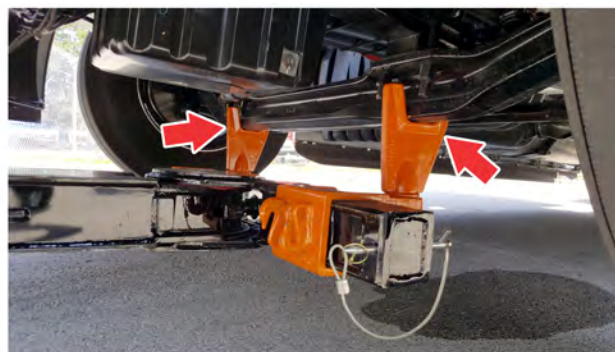

06/14/2017

f130154

Fig 294, Positioning the Stinger with Lift Adaptors Under the Axle



Fig 295, Stinger with Lift Adaptors Under the Axle (tow truck shown)

11. Secure the axle to the crossbar with a chain or ratchet strap.



NOTICE:

Failure to remove the driveline(s) or the drive axle shafts when towing the vehicle with the rear wheels on the ground could result in damage to the transmission and other parts.

12. Use a paint pen to mark the drivelines in as built condition, and then remove the driveline, the interaxle driveline (if equipped), for each axle that may touch the ground during the towing process. Store the drivelines and U-joints in a secure location so they will not come off during transport.
13. Remove the tow cables from the tow hooks and retract the recovery boom. See Fig. 293, [Retracting the Recovery Boom](#).



Fig 296, Retracting the Recovery Boom

14. Remove the tow hooks from the bumper.

IMPORTANT: On trucks equipped with a front air suspension, either air pressure must be supplied to the secondary air system or the front suspension must be blocked to operating height with wooden spacers and the axle chained to the frame to prevent damage to the truck.

15. Connect the air and electrical supply lines from the tow truck to the truck being towed.
16. Connect the clearance lights, taillights, and signal lights. Connect any special towing lights required by local regulations.
17. Release the park brake and remove the chocks from the rear tires.
18. Use the stinger to pull the truck close to the back of the tow truck for final towing position. See Fig. 294, [Final Towing Position](#).



Fig 297, Final Towing Position

19. Connect the safety chains. See Fig. 295, [Safety Chains Connected on the Towed Vehicle](#).



Fig 298, Safety Chains Connected on the Towed Vehicle

26.01 Natural Gas Vehicles, General Information	354
26.02 Natural Gas Vehicles, Safety Precautions	356
26.02.01 Safety Precautions	356
26.02.02 In Case of Emergency	356
26.03 Natural Gas Fuel Tank Filling Procedures.....	357
26.03.01 CNG Vehicle Fueling	357
26.03.02 LNG Vehicle Fueling.....	360
26.04 Natural Gas Detection System.....	360
26.04.01 General Description	360
26.04.02 Alarm Procedure	360
26.04.03 Sensors.....	362
26.04.04 Overhead Console	362
26.04.05 Testing	364
26.05 Natural Gas Vehicles, Engine Starting.....	366
26.06 Major Repair and Replacement of the Natural Gas Components	367

26. Natural Gas Vehicle

26.01 Natural Gas Vehicles, General Information

The vehicle can be equipped with a compressed natural gas (CNG) fuel system, or a liquefied natural gas (LNG) fuel system. CNG is made by compressing natural gas to less than 1% of its volume at standard atmospheric pressure. LNG is created by condensing natural gas into a liquid by cooling it to approximately -259°F (-162°C).

When vaporized at ambient temperatures, natural gas is less dense than air, and it rises and disperses. However, LNG is initially heavier than air due to its cryogenic temperature. When released in large amounts, it may drop or pool on the ground before its temperature rises enough to vaporize. Cold atmospheric conditions may prevent natural gas from dispersing quickly when released in large amounts.

Natural gas is nontoxic, but it can cause asphyxiation if present in very large concentrations.

CNG often contains an odor-producing chemical, while LNG does not have any odor. Users of natural-gas-fueled vehicles should never expect to detect natural gas leaks by scent.

For natural gas to burn, it must first vaporize, then mix with air in the proper proportions (flammable range is 5 to 15% by volume in air), and then be ignited.

A typical natural gas fuel system consists of:

- Fuel supply cylinders that store compressed gas at high pressure (CNG), or a tank that stores liquefied gas at an extremely low temperature (LNG).
- A vaporizer or heat exchanging device that changes LNG to gaseous form (LNG fuel systems only).
- Pressure relief and manual fuel shutoff valves.
- A filling connection with a check valve that prevents the gas from flowing back out of the fuel filling line.
- High-pressure and low-pressure fuel filters.
- A pressure control regulator that reduces the high fuel tank or cylinder pressure to the lower pressure needed for the engine.
- A fuel contents gauge that indicates the fuel supply in the tank or cylinders.

See Fig.296,[CNG Component Locations](#) the locations of various components of a CNG installation.



26.02 Natural Gas Vehicles, Safety Precautions

26.02.01 Safety Precautions

**DANGER:**

Natural gas is highly flammable. Failure to observe the following safety precautions could lead to the ignition of the natural gas, which could cause serious bodily injury or death.

CNG systems should be maintained and inspected exclusively by trained personnel with certifications in accordance with the applicable codes. As with all pressure vessels, CNG storage and fuel delivery systems are inherently dangerous and should be treated as such. Individuals involved in any aspect of CNG fuel system maintenance, emergency response, servicing, or testing must be properly trained and certified. Individuals who are not trained and certified in all aspects concerning CNG fuel delivery systems are not permitted to service, maintain, test, or inspect a system in any way.

Follow these safety precautions when operating or repairing a natural gas vehicle.

- Only certified LNG personnel can fuel LNG trucks.
- Do not start the engine if a natural gas leak is detected.
- Transferring fuel is only allowed as long as a non-static hose is used. If a non-approved hose is used, static can build up and ignite the fuel. A correct hose can be obtained through Agility fuel systems.
- Do not attempt to cut any fuel supply piping components.
- Avoid open flames or sparks near a natural gas vehicle.
- Cover eyes and exposed skin when working on a natural gas fuel system or fueling a natural gas vehicle.
- Permit no smoking or other ignition sources in, or within thirty feet of, a natural gas vehicle.
- Have CO₂ fire extinguishers (ABC minimum) located in a highly visible and easily accessible location.
- Use Purple-K powder (PKP) or a similar dry powder to extinguish an LNG fire. Do not attempt use water around an LNG fire.
- Always purge the fuel lines before performing maintenance or repairs on a natural gas fuel system. Refer to the system manufacturer's service manual or the vehicle's workshop manuals for the proper purging procedure.
- Always use a natural gas detector to test the system for leaks, whether an odor is present or not. Routinely inspect the fuel filtering and regulating mechanisms, and the fuel lines. An approved natural gas bubble solution can be used to pinpoint the exact location of leaks. Do not use soap and water. Soap and water can cause premature failure of the O-rings in the system.
- Make sure black caps are always on the PRD vent lines to reduce water build up in lines.
- Do not store a natural gas vehicle indoors for any extended period of time. Do not bring a natural gas vehicle indoors unless the workshop is equipped with a methane detection and ventilation system.

26.02.02 In Case of Emergency

If a vehicle has sustained damage or a leak has been discovered:

1. Turn the ignition switch off, set the parking brake, and disconnect the battery.
2. Exit the vehicle leaving as many doors and windows open as possible. Get at least 30 feet from the vehicle, and allow it to vent until it is safe to do the steps below.
3. Remove all ignition sources from the area surrounding the vehicle.
4. If it is safe to do so, close all fuel shutoff valves.
5. Use a natural gas detector, or approved NG bubble solution, to identify leaks in the fuel system.

26.03 Natural Gas Fuel Tank Filling Procedures

26.03.01 CNG Vehicle Fueling

CNG is moved from the fuel station storage tanks to the vehicle cylinders through a metered dispenser. During fueling, as pressure inside of the vehicle cylinders increases, so does the temperature. The dispenser shuts off when it determines the CNG cylinders are full.

CNG fuel cylinders cannot be filled to their full capacity of 3600 psi (24 800 kPa) in cooler weather. Since temperature change causes gas to expand and contract, less pressure in the cylinders on a cold day is equal to the same amount of gas at a higher pressure on a warm day. The fuel station dispenser has a temperature-pressure compensating device, which accounts for ambient temperature during fueling. See Table 27, [CNG Temperature/Pressure Compensation Values](#) for approximate full cylinder pressures at various temperatures.

CNG Temperature/Pressure Compensation Values		
Temperature: °F (°C)	Fill Station Pressure Set Point	
	3000 psi (20 684 kPa) Set Point	3600 psi (24 821 kPa) Set Point
100 (37.8)	3415 (23 546)	4086 (28 172)
90 (32.2)	3276 (22 587)	3909 (26 952)
80 (26.7)	3138 (21 636)	3754 (25 883)
70 (21.1)	3000 (20 684)	3600 (24 821)
60 (15.6)	2861 (19 726)	3445 (23 752)
50 (10)	2723 (18 774)	3288 (22 670)
40 (4.4)	2584 (17 816)	3131 (21 587)
30 (-1.1)	2446 (16 865)	2973 (20 498)
20 (-6.7)	2307 (15 906)	2814 (19 402)
10 (-12.2)	2169 (14 955)	2655 (18 306)
0 (-17.8)	2031 (14 003)	2495 (17 202)
-10 (-23.3)	1893 (13 052)	2336 (16 106)
-20 (-28.9)	1755 (12 100)	2180 (15 031)
-30 (34.4)	1616 (11 142)	2024 (13 955)
-40 (-40)	1477 (10 184)	1868 (12 879)

Table 20, CNG Temperature/Pressure Compensation Values

Use the following steps to fuel a CNG vehicle.

1. Shut down the engine and apply the parking brake.


**WARNING:**

Natural gas fuel tanks, lines, and valves are always pressurized. Always observe safety precautions. Failure to do so could lead to loss of control over a filling hose or to ignition of the natural gas, which could cause serious bodily injury, death, or severe property damage.

IMPORTANT: Close all windows and doors during the fueling process. Keeping windows and doors closed allows for easier leak detection inside the cab after fueling.

NOTE: If the fuel system has only back of cab tanks, the fuel fill is located behind the fuel access panel on the lower part of the cabinet, or below the tank cabinet in a separate box. If truck has saddle mount tanks, the fuel panel is located on the back end of the left side tank. Vehicles with back-of-cab cabinets and saddle tanks are have the fuel fill panel on the back end of the left side tank. See Fig.298,, page 359 for side tanks, or see Fig.298,, page 359 for back-of-cab cabinet mounted fuel panel.


2. Ensure all fuel cylinder shutoff valves are open. See Fig.298,[CNG Under Cabinet Fuel Panel \(under cabinet shown\)](#).

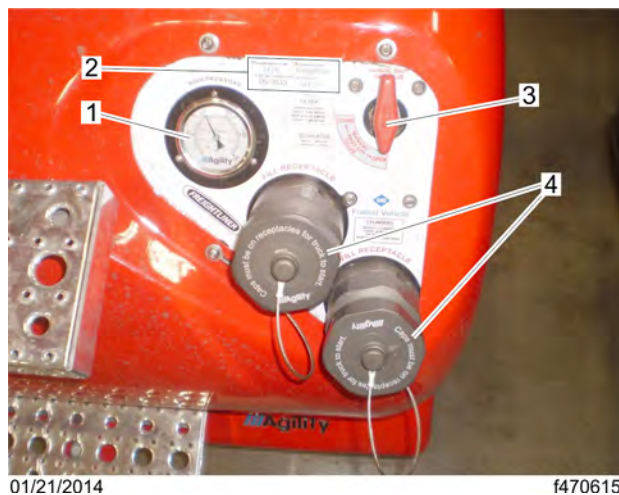

1. High-Pressure Gauge
2. Fuel Cylinder Information Sticker

3. Manual Shutoff Valve
4. Fuel Fill Port

Fig 300, CNG Fuel Cylinder Fill Panel (side tank shown)

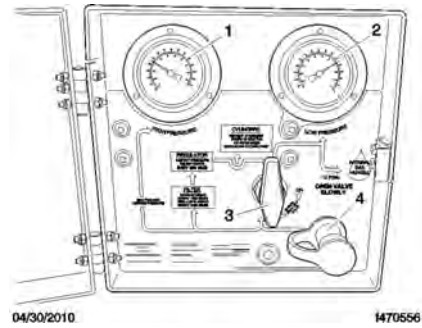

1. High Pressure Gauge
2. Low Pressure Gauge

3. Manual Fuel Shutoff Valve
4. Fuel Fill Port and Dust Cap

Fig 301, CNG Under Cabinet Fuel Panel (under cabinet shown)

3. Ensure the vehicle fuel system main shutoff valve is open.
4. Open the CNG fuel panel access door and remove the dust cap from the vehicle fuel fill port.
5. Ensure the O-ring is present inside the fuel fill port. If the O-ring has been dislodged or is missing, the station dispensing nozzle will not connect securely to the fill port.
6. Turn the selector knob on the service pump to the VENT position, if equipped.
7. Connect the quick coupling on the dispensing nozzle securely to the vehicle fuel fill port.
8. Turn the selector knob on the service pump to the FILL position, if equipped.

IMPORTANT: If at any time the service pump or vehicle begins to vent CNG uncontrollably, notify a station attendant or activate the service station emergency shut-off switch to cease the flow of CNG.

9. Switch on the service pump. A slight hissing noise may be heard as the fuel cylinders fill.
10. Watch the pressure gauge on the service pump. When the gauge reads approximately 3600 psi (24 800 kPa), or when the fill pressure stops climbing, the CNG cylinders are full. The service pump will shut itself down automatically. See Table.27, [CNG Temperature/Pressure Compensation Values](#) for pressure compensation values based on ambient temperatures.
11. Move the selector knob on the service pump to the VENT position, if equipped. A short hiss will be heard as a small amount of natural gas is vented into the hose.



WARNING:

Do not attempt to remove the fill station nozzle from the tank fill fitting until venting of pressure is noted. If no venting occurs, ask for assistance from the station attendant. Removing an unvented coupling could result in an uncontrolled hose, which could lead to property damage or personal injury.

12. Remove the station dispensing nozzle from the vehicle fill port.
13. Install the dust cap on the vehicle fuel fill port and close the fuel panel access door.

NOTE: Some fill ports and dust caps contain a magnetic start interrupt sensor to prevent a truck from being started and driven away with the fill hose connected. These caps must be installed correctly or vehicle will not start.

26.03.02 LNG Vehicle Fueling

Only certified LNG fueling personnel are authorized to fuel an LNG vehicle.

26.04 Natural Gas Detection System

26.04.01 General Description

A gas detection system is standard equipment in all Daimler Truck natural-gas-fueled vehicles. This system has a sensor in the engine compartment and one in the cab, both situated in high areas to detect natural gas buildup as a result of leaks.


The AMGaDS III Plus is a natural gas detection system. This device is meant to serve as a supplemental warning only. It is not intended to replace standard safety practices that should be conducted around flammable gases.

IMPORTANT: To function properly, the gas detection system must be powered at all times. The gas detection system is directly powered by the batteries, and can only be powered off by disconnecting the batteries. When servicing a natural-gas-fueled vehicle, disconnect the batteries only when necessary, and do not leave the batteries disconnected for extended periods of time.

The lower flammability limit (LFL) is the smallest amount of the gas that supports a flame when mixed with oxygen and ignited. Zero percent (0%) LFL indicates a gas-free atmosphere. One hundred percent (100%) LFL indicates that gas concentration has reached its lower flammability limit (5% gas in air by volume). The red warning light and audible alarm located in the overhead console activate when a sensor detects gas fumes in concentrations above 50% LFL, and should allow ample time to utilize safety procedures. However, individuals with special needs should review the system with a professional safety engineer.

26.04.02 Alarm Procedure


Before operating the vehicle, the driver must be familiar with the procedures as shown on the interior sticker on the overhead panel (see Fig.299,[Interior Warning Sticker](#)) and the exterior sticker on the door (see Fig. 300,[Exterior Warning Sticker](#)).

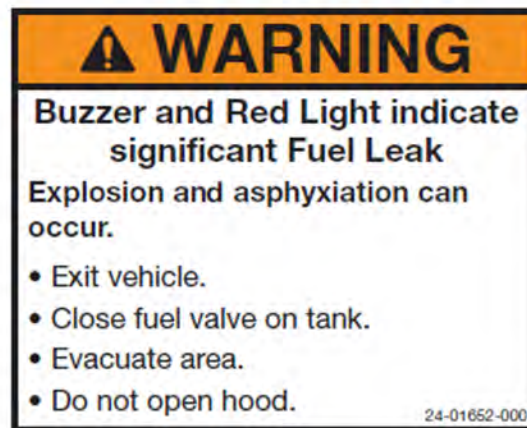

10/22/2021

f080157

Fig 302, Interior Warning Sticker

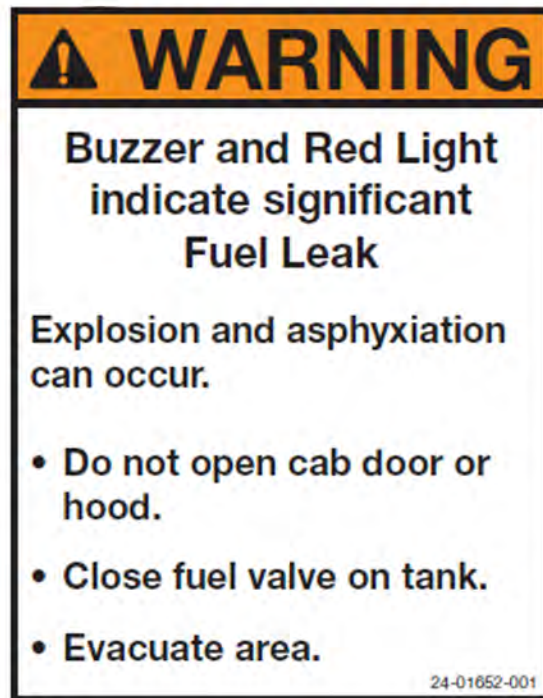

10/22/2021

f080158

Fig 303, Exterior Warning Sticker

IMPORTANT: If an audible alarm activates, do not operate any electrical switch, including lights. Avoid causing sparks and stay away from arcing switches and equipment. Do not use a telephone, including cellular phones or any types of portable communication or electronic devices that have a battery.

If the vehicle is in motion when the audible alarm activates, bring it to a safe stop, shut down the engine, and exit the vehicle. *Do not open the hood.*

If outside the vehicle when the audible alarm activates, *do not open the cab door or hood.*

In the event of an audible alarm, immediately follow these procedures, as allowed by conditions:

1. Immediately shut off all engines. Extinguish any cigarettes, pilot lights, flames, or other sources of ignition in the area and adjacent areas.
2. Exit the vehicle leaving as many doors and windows open as possible, and move at least 30 feet away from vehicle. If the vehicle is parked, stay at least 30 feet away until it is safe to do the following.
3. Manually close all fuel shutoff valves, including those on the LNG tank or CNG cylinders.
4. If the vehicle is indoors (as in a service shop), immediately open windows and doors to provide extra ventilation to the area. Do not start the engine or any other type of equipment until the gas leak is corrected and the area cleared of natural gas.
5. Evacuate the area.
6. After the area is cleared of natural gas and the alarm is no longer active, have the vehicle inspected by a qualified technician.

IMPORTANT: Do not consider the area clear until all alarm indicators are off, and the alarm panel light returns to green.

26.04.03 Sensors

Gas detection sensors are located on the cab overhead console (zone 1), in the engine compartment on the frontwall (zone 2), and in the sleeper, if equipped (zone 3). The sensors are located in high areas, where rising gas vapors will pass by or accumulate. On some vehicles, there is a sensor located under the cab floor (zone 4). Zone 4 is not used on DTNA vehicles.

If the system detects that one of the sensors has been disconnected or has malfunctioned, the sensor fault light for that zone will illuminate. A failed sensor may trigger and lock on an alarm. If this happens have a qualified technician troubleshoot the system and make appropriate repairs.

The sensors are sensitive to all hydrocarbon vapors. An alarm may be triggered by the use of chemicals such as cleaners, paint, polish, lacquer, gasoline, silicone, silicone spray, or other harsh chemicals. The sensors will also detect hydrogen fumes from an overcharged battery. If a sensor sends an alarm, but no gas fumes are present, check for recent use of chemicals or a battery charger.

**NOTICE:**

Silicone-based chemicals and cleaners will permanently disable the sensors. When cleaning the vehicle, cover the sensors with a plastic covering. Keep the sensors covered until the area has been cleared of any cleaning fumes.

Harsh chemicals, including some high alcohol cotenant washer fluids, and extremely high temperatures may damage the sensor.

Puncture of or damage to the seal located inside the sensor housing will significantly shorten the sensor life.

Frequent exposure to high concentrations of gas will accelerate sensor deterioration.


26.04.04 Overhead Console

The overhead console consists of an alarm panel on the right side and the control module on the left side.

The alarm panel has a green light, a red light, a buzzer, and a sensor. See Fig.301, [AMGaDS III Overhead Console](#). It is located within view from outside of the vehicle. The large green light is continuously illuminated during normal operating conditions.

Before entering the vehicle, always verify that the green light is illuminated. If the green light is not illuminated, do not enter the vehicle. Complete the alarm procedure previously outlined.

The alarm panel meets the California Highway Patrol Title 13-2008 and NFPA 52 2010 requirements. All drivers and technicians using it should be trained regarding the red and green lights, and the audible warning.

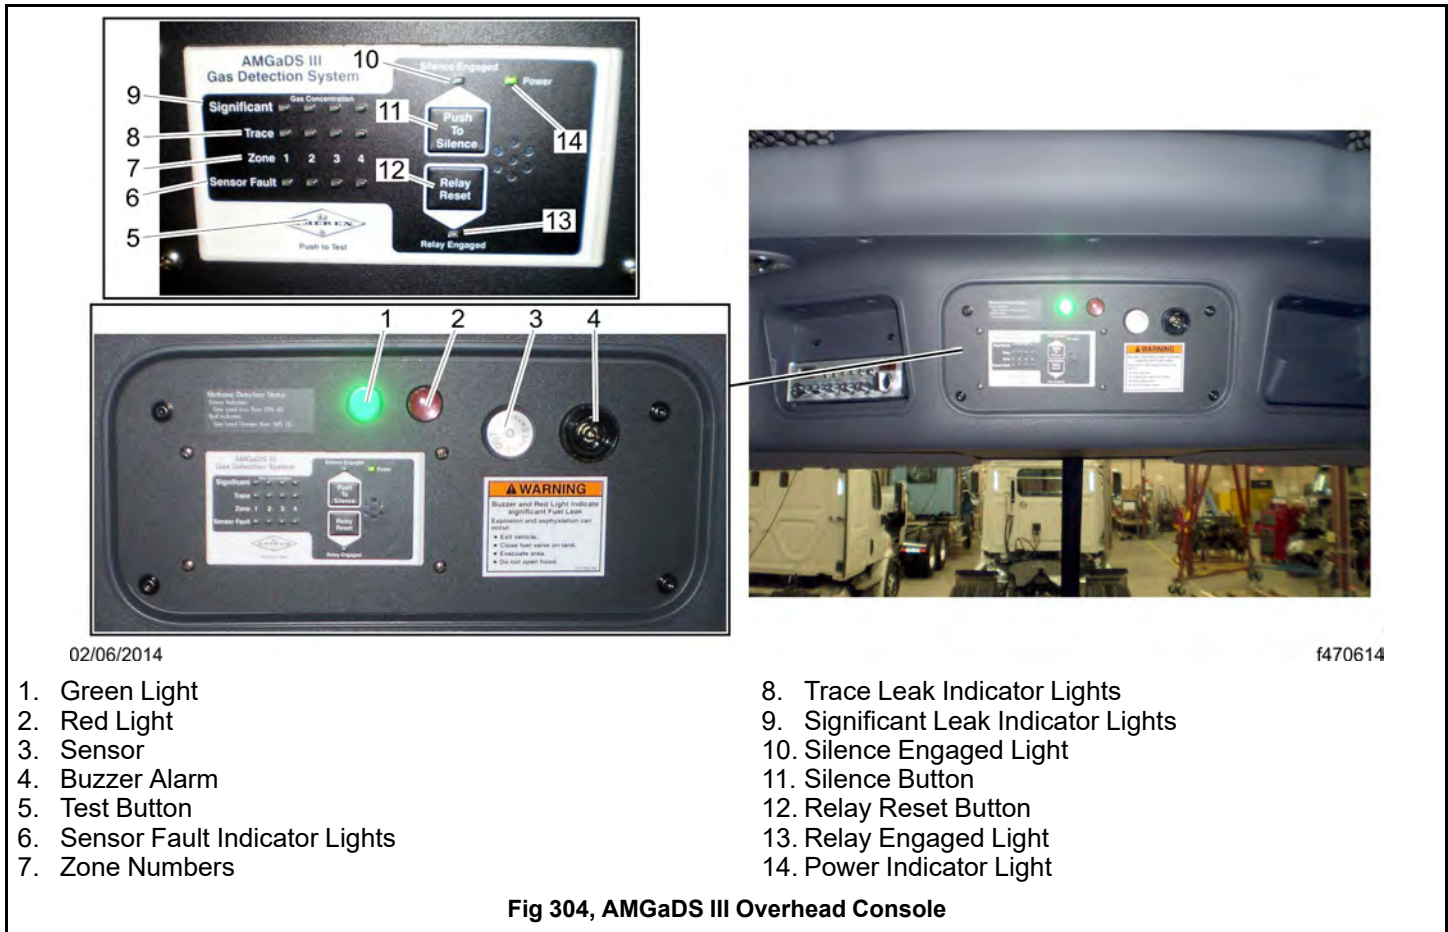

The control module, located on the center of the overhead console, contains the status lights and control buttons for the system. The areas that the sensors monitor are defined as Zone 1 (cab), Zone 2 (engine compartment), and Zone 3 (sleeper, if equipped). The control module has lights assigned to each zone that will illuminate if a sensor detects a trace level leak (between 20% and 30% LFL), a significant level leak (above 50% LFL), or if a sensor is disconnected or malfunctioning.

- **Trace Level:** If either sensor detects gas fumes at a concentration greater than 20% to 30% LFL (1% gas in air by volume), the amber light next to the *Trace* indicator for that zone will flash. There is no buzzer alarm for a trace level detection, and the large green light on the alarm panel will remain illuminated.
- **Significant Level:** If either sensor detects gas fumes at a concentration greater than 50% to 60% LFL (2.5% gas in air by volume), the small red light next to the *SIGNIFICANT* indicator for that zone will flash. After approximately 15 seconds, the large green light on the alarm panel will switch off, the red light will illuminate, and the buzzer will sound. All alarm indicators will remain on as long as fumes are detected.
- **Sensor Fault:** If the system detects that either of the sensors has been disconnected or has malfunctioned, an amber light next to the *Sensor Fault* indicator for that zone will illuminate.

The control module also has buttons used to test or reset the the control module after an alarm. Red lights next to each button indicate when they are engaged.

- **Shutdown Reset:** If an alarm has been activated and the *Relay Engaged* light is illuminated, the *Shutdown Reset* button will reset the internal relay. Press the *Shutdown Reset* button only after the gas has cleared, the buzzer has turned off, and the alarm panel light has returned to green.
- **Push To Silence:** If an alarm has been activated, the *Push To Silence* button will silence the buzzer.

See 28, [Control Module Functions](#) for the functions of all lights and buttons on the overhead console.

Control Module Functions			
Item	Display	Function	Action Required
Green Power Light	Illuminated	System is on.	None required.
	Unlit	Detection system is not functioning.	Ensure the batteries are connected and replace any blown fuses. If the gas detection system is still not functioning, replace the system immediately.
SIGNIFICANT Gas Concentration Lights	Red (illuminated)	Dangerous gas concentration detected.	Suspend vehicle operation immediately and follow alarm procedures.
Trace Gas Concentration Lights	Amber (flashing)	Minor gas concentration detected.	Suspend vehicle operation immediately and follow alarm procedures.
Sensor Fault Lights	Off	Sensor is functioning properly.	None required.
	On	Sensor has malfunctioned.	Replace the sensor immediately.
Shutdown Reset Button	—	Resets the system after an alarm activation.	Press to reset the system only after the gas has cleared, the buzzer has turned off, and the alarm panel light has returned to green.
Relay Engaged Light	On	Relay is engaged and test or alarm is being cleared.	Press the <i>Shutdown Reset</i> button.
	Off	Normal condition.	None required.
Test Button	—	Tests the overhead console operation and circuitry.	Press and hold for one minute to activate a test of all overhead console components.
Silence Button	—	Silences the alarm buzzer.	Press to silence the alarm buzzer.
Silence Engaged Light	On	Indicates the buzzer is active but silenced.	Suspend vehicle operation immediately and follow alarm procedures.
	Off	Normal condition.	None required.

Table 21, Control Module Functions

26.04.05 Testing

Daimler Truck North America strongly recommends that all operators follow California Code of Regulations (CCR) inspection requirements, regardless of where the vehicle is operated. Per Title 13 CCR § 935 (2), gas detection systems should be tested three times per calendar year at equal intervals. The testing procedure should simulate the same operating environment in which the vehicle is used, with the same gaseous fuel.

Control Module Functions			
Item	Display	Function	Action Required
Green Power Light	Illuminated	System is on.	None required.
	Unlit	Detection system is not functioning.	Ensure the batteries are connected and replace any blown fuses. If the gas detection system is still not functioning, replace the system immediately.
SIGNIFICANT Gas Concentration Lights	Red (illuminated)	Dangerous gas concentration detected.	Suspend vehicle operation immediately and follow alarm procedures.
Trace Gas Concentration Lights	Amber (flashing)	Minor gas concentration detected.	Suspend vehicle operation immediately and follow alarm procedures.
Sensor Fault Lights	Off	Sensor is functioning properly.	None required.
	On	Sensor has malfunctioned.	Replace the sensor immediately.
Shutdown Reset Button	—	Resets the system after an alarm activation.	Press to reset the system only after the gas has cleared, the buzzer has turned off, and the alarm panel light has returned to green.
Relay Engaged Light	On	Relay is engaged and test or alarm is being cleared.	Press the <i>Shutdown Reset</i> button.
	Off	Normal condition.	None required.
Test Button	—	Tests the overhead console operation and circuitry.	Press and hold for one minute to activate a test of all overhead console components.
Silence Button	—	Silences the alarm buzzer.	Press to silence the alarm buzzer.
Silence Engaged Light	On	Indicates the buzzer is active but silenced.	Suspend vehicle operation immediately and follow alarm procedures.
	Off	Normal condition.	None required.

Table 22, Control Module Functions

Test results validating the performance of the gas detection system within the parameters established by the component manufacturer and NFPA 52 2010 should be maintained as a permanent part of the vehicle service records. Use of alcohol, propane, and other harsh liquids or gases are not acceptable methods for testing.

Always test the system and sensors after any component has been replaced, or if the vehicle has been involved in an accident or fire. Ensure that the gas detection system is wired directly to the battery.

It is recommended that the highest level of safety validation be utilized if there are multiple validation requirements in the state or locality where the vehicle is operated or domiciled.

Overhead Console Test

Press and hold the *Push To Test* button for one minute. The system will proceed with a self-diagnostic test that will include illumination of the *Trace* and *Significant* gas concentration lights, and the sensor fault lights. Verify the large red light and buzzer activate, and that all lights illuminate or flash to ensure that all bulbs are operational.

Sensor Test

The gas detection system sensors must be tested using qualified test gas, which can be purchased as part of a test kit. Testing with alcohol or heavy gases such as butane or propane does not satisfy CCR § 935 (2) or NFPA 52 regulations.

Expose each sensor to qualified test gas for at least 30 seconds. The system will proceed through the alarm procedure consistent with a significant leak and the buzzer will sound after approximately 15 seconds. If a sensor fails to respond after exposure to the test gas, replace the sensor.

26.05 Natural Gas Vehicles, Engine Starting

NOTE: Before starting the engine, read for detailed information on how to read the instruments and for detailed information on how to operate the controls. Read the operating instructions in the engine manufacturer's operation manual before starting the engine.

1. Before engine start-up, complete the engine pretrip and post-trip inspections and maintenance procedures in .
2. Ensure the fuel shutoff valve is open.
3. Set the parking brake.
4. Ensure that the transmission shift control is in Neutral (N), Park (P), or the Park Brake (PB) position.
5. Without starting the engine, turn the ignition switch to the ON position (see Fig.302, [Ignition Switch Positions](#)). The electronic gauges on the instrumentation control unit (ICU) will complete a full sweep of their dials, the warning and indicator lights will illuminate, and the buzzer will sound for three seconds.

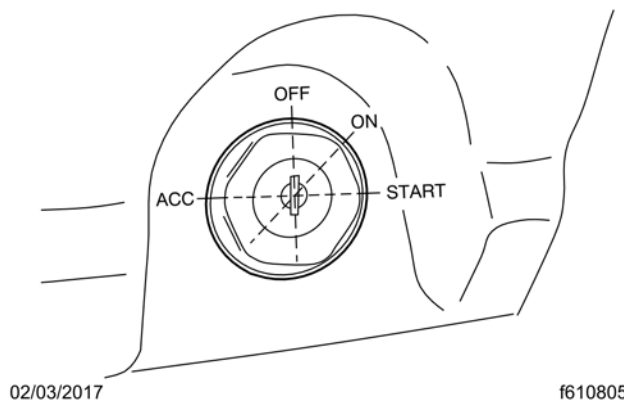


Fig 305, Ignition Switch Positions

6. Turn the ignition switch to the START position.
Press down on the clutch pedal, if equipped, but do not press down on the accelerator pedal.
Release the key the moment the engine starts.

7. Bring the engine up to operating speed gradually as it warms up and develops stable oil pressure. If the vehicle has not been operated previously in a 24-hour period, allow the vehicle to idle for five minutes.

**NOTICE:**

Do not rev the engine if the oil pressure gauge indicates no oil pressure. Shut down the engine within approximately ten seconds to avoid engine damage.

8. Check the oil pressure gauge for any drop in lubricating oil pressure or mechanical malfunction in the lubricating oil system.

26.06 Major Repair and Replacement of the Natural Gas Components

IMPORTANT: All repairs to natural gas system and components must be performed by certified technicians.

If a natural-gas-fueled vehicle is involved in an accident, remove the fuel tank or cylinders from service and have them inspected by a qualified technician. Replace any leaking or damaged fuel tanks/cylinders and fuel lines; repair or replace leaking or damaged fittings. Install parts and components in accordance with the manufacturer's instructions.

27.01 Fuses and Relays.....	370
27.02 Replacement Bulbs	375
27.03 Fluids and Lubricants.....	376

27. Specifications**27.01 Fuses and Relays****WARNING:**

This vehicle may be equipped with a roof-mounted Citizens' Band (CB) antenna. Operation of an amplified CB radio with output power greater than FCC limits (4W AM/12W SSB) is illegal, and may expose vehicle occupants to radio frequency (RF) radiation that exceeds FCC maximum permissible RF exposure limits. Vehicle occupants with electronic medical devices should consult the device manufacturer's user manual or a physician for information on RF radiation exposure limit guidelines.

SAM Cab Fuses		
Part	Name	AMP
F1	Power FD Spare 1 & 3	30
F2	Cab/Slpr HVAC Ctrl Trans Shift Pnl	15
F3	Power FD Spare 2 & 4	30
F4	MSF	15
F5	OBD J1939 OBD DCDI	10
F6	Dash Power Recp 1	15
F7	Dash Power Recp 2	15
F8	Phone/Radio	15
F9	Amplifier Power	20
F10	Cab HVAC Motor	30
F11	Sleeper HVAC Motor	30
F12	Door Controls, L	20
F13	Door Lock Coll Warn Sys	20
F14	Fleet Mgm Sys CB	25
F15	Sleeper Power Recp 3	20

Table 30, SAM Cab Fuses

F16A	Aux Cab Heater Enable	3
F16B	Aux Coolant Heater	20
F17	Power Recp 4	20
F18	GPS Tire Press Monitor Antitheft Warn Auxiliary Telematics	15
F19	Heated Seat	20
F20	CGW	2
F21	Area Light	15
F22	ICU Horn Switch	5
F23	GPS Driver Info Sys Fleet Mgmt Sys Pyrometer, Axle Temp, Eng Oil Temp Gauges	15
F24	Diagnostic Conn ICU	7.5*
F25	Trans Temp Gauge/Shift Select Phone Collision Warn Sys	10†
F26	SRS Airbags	5
F27	Mirror Heat, L	10
F28	Mirror Heat, R	10
F29	SAM Relay Coils	3
F30	Power Recp 6	20
F31	Power Recp 5	20
F32	Power FD Spare 5 & 6	25
F33	Spotlight	20
F34	Baggage Comp Lamp	3
F35	Dome Lamp	15

Table 30, SAM Cab Fuses

F36	Aux Circulation Fan Road Lamps	15
F37	Clock (cab & sleeper) Driver Info Sys CD Player Keyless Entry	15
F38	Door Controls, R	20
F39	Power Window, R	15
F40	Power Window, L	15
F41	Aux Mirror Heat	10

* F24 value on assemblies -005 and lower is 10 amps.

† F25 value on assemblies -005 and lower is 7.5 amps.

SAM Cab Relays		
Position	Function	Source
BR21	Power FD Spare 1 & 3 Dash Power Recp 1	BAT
BR22	Power FD Spare 2 & 4 Slpr Power Recp 3	BAT
R3	Heated Seats	IGN
BR23	Dash Power Recp2 Fleet Mgmt Sys CB Aux Cab Heater Aux Coolant Heater	BAT
R7	GPS Driver Info Sys Fleet Mgmt Sys Pyrometer, Axle Temp, Eng Oil Temp Gauges	IGN
R8	Diagnostic Conn ICU Trans Temp/Shift Select Phone Coll Warn Sys SRS Airbags	IGN

Table 31, SAM Chassis Fuses

R9	Amplifier Power	ACC
R10	Mirror Heat (L, R, & Aux)	ACC
BR24	Power Recp6 Area Lighting Baggage Comp Lamp Dome Lamp	BAT
BR25	Power Recp 4 & 5 Aux Circulation Fan Reading Lamp	BAT
R15	Power Windows	ACC

SAM Chassis Fuses		
Part	Name	AMP
F1	Elec Air Process. Unit (EAPU)	20
F2	Fuel/Water Separator Heat	20
F3	ABS Bat 1	20
F4	ABS Bat 2	10
F5	Trailer Left-Turn Lamp	20
F6	ABS	15
F7	EAPU/WIF Rear Camera	10
F8	Trailer Right-Turn Lamp	20
F9	Trailer Marker Lamps	30
F10	SAM Relay Coils	5
F11	Trailer ABS	30
F12	Trailer Stop Lamps	30
F13	Trailer Tail Lamps	20
F14	Trailer Power	30

SAM Chassis Relays	
Position	Function

R1	Fuel/Water Separator Heat
R2	Trailer Left-Turn Lamp
R3	ABS EAPU/WIM Rear Camera
R4	Trailer Right-Turn Lamp
R5	Trailer Marker Lamps
R6	Trailer ABS
R7	Trailer Stop Lamps
R8	Trailer Power
R9	Trailer Tail Lamps

MEGA Fuse Junction Block (MFJB) Fuses, EPA07 Only		
Part	Name	AMP
F1	Powertrain PDM	175
F2	SAM Cab	175
F3	SAM Chassis	125
F4	Chassis-Mounted Trailer PDM	125
F5	Inverter	200

Powernet Distribution Box (PNDB) Fuses, EPA10 and Newer		
Fuse	Function	AMP
A	Aftertreatment Control Module	30
B	Emergency Power	20
C	Radio/Clock	5
D	Alternator Remote Sense	5
1	Powertrain PDM	175
2	SAM Chassis	125
3	SAM Cab	175

Trailer PDM Fuses and Relays		
Position	Function	AMP
F1	Trailer Power Fuse	30
F2	Taillight Fuse	30
F3	Left-Turn Lamp Fuse	20
F4	Right-Turn Lamp Fuse	20
F5	Marker Lamp Fuse	30
F6	Stop Lamp Fuse	30
R1	Taillight Relay	
R2	Right-Turn Relay	
R3	Stop Lamp Relay	
R4	Trailer Power Relay	
R5	Left-Turn Relay	
R6	Marker Lamp Relay	

27.02 Replacement Bulbs

Replacement Bulbs	
Lamp Assembly	Replacement Bulb
Headlight Hi/Low Beam, Fog light, Driving Light	WEE 12362LLBA (H11)
Turn/Marker Lamp (in headlight assy)	GE 3457
Incandescent Auxiliary Turn (on fender)	GE 2058U
Integral Stop/Tail/Backup Lights	GE 1157/GE 1156
Utility Light	WEE 199
Cab Dome Lamp, Clear, Outboard	GN12 BUL 050 R5WC
Cab Dome Lamp, Clear, Inboard	GN12 BUL 049 R10W
Cab Dome Lamp (Red)	GN12 BUL 050 R5WR

Table 36, Replacement Bulbs

Sleeper Reading Lamp	GRLSAP270
Sleeper Dome Lamp	GRLBUL049R10W
Sleeper Writing Desk Lamp	GRLBUL027578
Sleeper Bunk Lamp	GRLBUL0142112
Footwell Lamp (Red)	GRLBUL042W5W

27.03 Fluids and Lubricants

Use only approved engine lube oil. For lists of engine oils approved for Detroit Diesel engines, refer to the Engine Operator Manual, accessible on Lubricants, Fuels & Coolants on the DTNA Portal. For third party engines, please refer to the engine manual.

28.01 Telematics Information: Terms of Use.....	378
28.01.01 Telematics Information We Collect and Why We Collect It	378
28.01.02 What We Do with Telematics Information and Who We Share It With	379
28.01.03 Collection Method	379
28.01.04 Safeguards.....	379
28.01.05 Your Consent.....	379
28.01.06 Your Rights.....	380
28.01.07 Privacy Statement Changes.....	380

28. Telematics Data

28.01 Telematics Information: Terms of Use

28.01.01 Telematics Information We Collect and Why We Collect It

Your vehicle ("Vehicle") may be equipped with one or more devices that gather information described below regarding the Vehicle and the environment in which it may be operating ("Telematics Information"). The devices may periodically send Telematics Information to Daimler Truck North America LLC ("DTNA"). Additionally, DTNA and its dealers may manually retrieve Telematics Information from the devices for the purposes described below.

The Telematics Information we collect may include, but is not limited to, the following information about the Vehicle:

- performance
- operation
- location
- speed
- trips
- travel history
- stop and idle times
- fuel consumption
- fault codes
- diagnostic information
- steering performance
- braking performance
- air bag deployment
- seatbelt use
- decelerations
- other information relating to the performance, operation, health and safety of the Vehicle.

DTNA gathers this information to improve the performance, operation, health and safety of your Vehicle and other DTNA vehicles and products. Information is gathered:

- **To enable your subscription services.** DTNA and other third party service providers have developed a variety of applications and services that are now available to you to optimize the performance, use, reliability and safe operation of your Vehicle. These services are enabled by the Telematics Information we receive from your Vehicle and will likely be made more effective in the future by the use of that Telematics Information and similar information we receive from other DTNA vehicles.
- **To make your Vehicle safer and to improve its performance.** Depending on the type of device installed on your Vehicle, DTNA may periodically update your Vehicle's on-board software to improve the performance and safe use of the Vehicle. We may need to obtain certain Telematics Information to ensure the effectiveness of these updates.
- **To monitor and manage the health and efficiency of your Vehicle.** Telematics Information from your Vehicle may be used by DTNA and its affiliates, dealers and service providers to diagnose and resolve problems with your Vehicle more effectively and to help you maintain it.
- **To improve your customer service experience.** Telematics Information may be used by DTNA and its affiliates, dealers and service providers to provide you a more efficient and effective customer service experience in conjunction with Vehicle service, maintenance, field service campaigns and recalls.

- **For product development and product improvement.** Telematics Information may be analyzed and used to identify and resolve performance and safety issues and to develop improvements to our products that will benefit you and our future customers.
- **To develop more meaningful product marketing.** Telematics Information may be used to provide more customized and meaningful information to our customers regarding products and services that best satisfy their operational requirements and improve the performance of their businesses.
- **To help match our customers with the right products.** Telematics Information may be used to develop future products and services that best satisfy the operational requirements of our customers.

28.01.02 What We Do with Telematics Information and Who We Share It With

Your vehicle ("Vehicle") may be equipped with one or more devices that gather information described below regarding the Vehicle and the environment in which it may be operating ("Telematics Information"). The devices may periodically send Telematics Information to Daimler Truck North America LLC ("DTNA"). Additionally, DTNA and its dealers may manually retrieve Telematics Information from the devices for the purposes described below.

DTNA may use Telematics Information for any purpose allowed by law, including but not limited to using the information for any of the purposes described in this chapter. DTNA may share Telematics Information with its service providers, affiliates, subsidiaries, dealers and distributors, but only for lawful business purposes. This may include third parties who process information on behalf of DTNA, third parties who you authorize directly to receive information from us, and law enforcement agencies pursuant to applicable law.

DTNA may also combine Telematics Information it obtains from your Vehicle with data from others, anonymize and de-identify that aggregated data ("Aggregated Data"), and use and disclose that Aggregated Data and derivatives of it indefinitely and for any purpose whatsoever, including sharing it with third parties for any purpose without restriction. You will not have any rights in any Aggregated Data or any derivatives or proceeds of it. DTNA will be the exclusive owner of all rights, title and interests in and to all Aggregated Data. DTNA shall not have any obligation to provide any Aggregated Data to you or to compensate you for any use or disclosure of any Aggregated Data.

28.01.03 Collection Method

Your vehicle ("Vehicle") may be equipped with one or more devices that gather information described below regarding the Vehicle and the environment in which it may be operating ("Telematics Information"). The devices may periodically send Telematics Information to Daimler Truck North America LLC ("DTNA"). Additionally, DTNA and its dealers may manually retrieve Telematics Information from the devices for the purposes described below.

The Telematics Information may be transmitted automatically or manually from the devices on your Vehicle to DTNA or Detroit Diesel Corporation (DDC) through diagnostic tools, including but not limited to DDC DiagnosticLink.

28.01.04 Safeguards

Your vehicle ("Vehicle") may be equipped with one or more devices that gather information described below regarding the Vehicle and the environment in which it may be operating ("Telematics Information"). The devices may periodically send Telematics Information to Daimler Truck North America LLC ("DTNA"). Additionally, DTNA and its dealers may manually retrieve Telematics Information from the devices for the purposes described below.

DTNA will use reasonable data security systems and procedures in an effort to protect Telematics Information from unauthorized use, access, disclosure, distribution, loss or alteration. We do this through physical, electronic and procedural safeguards that are designed to protect the confidentiality, integrity and availability of Telematics Information. However, no security system is perfect. DTNA cannot guarantee that Telematics Information will not be hacked, deleted, intercepted or altered.

DTNA will also require other parties to whom Telematics Information is disclosed to take reasonable steps to protect the Telematics Information from unauthorized use, access, disclosure, distribution, loss or alteration.

28.01.05 Your Consent

Your vehicle ("Vehicle") may be equipped with one or more devices that gather information described below regarding the Vehicle and the environment in which it may be operating ("Telematics Information"). The devices may periodically send Telematics Information to Daimler Truck North America LLC ("DTNA"). Additionally, DTNA and its dealers may manually retrieve Telematics Information from the devices for the purposes described below.

By continuing to provide to us, or allowing us to receive or retrieve, Telematics Information through the devices on your Vehicle, you consent to its collection and use as described in this chapter.

Although some information may be transferred to and processed in countries without laws providing the same level of data protection as your country, our use and disclosure of your information is subject to these terms of use regardless of where your information is transferred.

If you have subscribed to a subscription service such as Virtual Technician or Detroit Analytics, the Telematics Terms and Conditions for that service will apply to DTNA's collection, storage, use and sharing of the data covered by those Terms and Conditions.

28.01.06 Your Rights

Your vehicle ("Vehicle") may be equipped with one or more devices that gather information described below regarding the Vehicle and the environment in which it may be operating ("Telematics Information"). The devices may periodically send Telematics Information to Daimler Truck North America LLC ("DTNA"). Additionally, DTNA and its dealers may manually retrieve Telematics Information from the devices for the purposes described below.

You may ask DTNA to discontinue receiving and retrieving Telematics Information from the devices on your Vehicle. If you do so, you will be unable to receive telematics subscription services relating to your Vehicle and unable to remotely receive important Vehicle software updates, among other things. If you are interested in that option, please contact DTNA at: **DetroitConnect@Daimler.com**.

28.01.07 Privacy Statement Changes

Your vehicle ("Vehicle") may be equipped with one or more devices that gather information described below regarding the Vehicle and the environment in which it may be operating ("Telematics Information"). The devices may periodically send Telematics Information to Daimler Truck North America LLC ("DTNA"). Additionally, DTNA and its dealers may manually retrieve Telematics Information from the devices for the purposes described below.

DTNA reserves the right to amend these terms of use from time to time. Changes will be reflected in the online version of this document, which can also be found at: <https://www.dtnatechlit.com/portal-public>. **By continuing to provide to us, or allowing us to receive or retrieve, Telematics Information through the devices on your Vehicle, you consent to and accept those changes.**

NOTE: These terms of use do not apply to aftermarket telematics devices that may be provided by others or configured to send information to someone other than DTNA or its affiliates, dealers or service providers.



CONTACT INFORMATION

For questions, please create a Service Technical Request using the DTTS Application on the DTNA Portal.